

Equipment Specification

The Lucas Equipment shown in the following specifications is that fitted to the vehicles originally. It will be noticed that certain items are starred. These are no longer obtainable, and reference should be made to the Supersession Chart, Section 'T', where a suitable replacement will be found.

A.C. CARS 16 h.p. Saloon 1948-57

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1948-50	*36037A	LAMPS—continued			SWITCHES—continued		
Battery	1948-51	36105A	L.H.D., dip right ..	1948-49	*A50799D	Ignition and lighting ..	1948-49	*34035A
Coil, ignition ..	1948-51	SLT13A	" " " " Later ..	1952-53	*A50445K	Panel	1948-49	*34062A
Control box	1948-51	GT11A	" " " " ..	1954	*50528M	" " " " ..	1948-49	*31285A
Distributor	1948-49	*45020A/B	" " " " ..	1955	*51345A	Solenoid, starting motor ..	1949	*31271A
Fuse box	1952-57	37065E	" " " " ..	1956-57	*51345B/F	Solenoid operating	1950-57	76022B
Generator	1948-49	*37048E	Head, Export Europe ..	1951-52	*B50799D	" " " " ..	1948-49	*76411D/E
Horn	1950-56	40143A/D	(not France)	1952-53	*50961A	Terminal block	1948-53	*31300A
Low note	1951	40143E/F	ditto Later ..	1954-55	51346A	Stop lamp	1948-51	31281B
High note	1948-49	*385211	ditto	1956-57	51346B	Spring	1951-57	315543
" " " " ..	1950-56	*37154A	ditto	1949 &	51346B	Stop lamp Later ..	1951-57	31082D
" " " " ..	1955-57	22428A	Head, Export France ..	1951-52	*50808D	Windshield wiper	1951-57	*31271A
" " " " ..	1948-49	*69021A	" " " " ..	1950	*50790E	" " " " ..	1948-53	37082A
" " " " ..	1950-56	*69011E/J	" " " " Later ..	1952-53	*50978A	Trafficators	1948-50	*37101B
" " " " ..	1957	69046E	" " " " ..	1954-55	51411A	" " " " ..	1951-52	*54018D
" " " " ..	1957	*69022A	" " " " ..	1956-57	51411B	" " " " ..	1953-57	54044D
" " " " ..	1948-49	*69012F/J	Number plate illumination ..	1948-57	*53107A	Warning light (ignition) ..	1948-57	*38013B
" " " " ..	1950-56	69047E	Side	1948	52120B/E	Windshield wipers		
" " " " ..	1950-54	33135B	" " " " ..	1949	*52143A	Motor	1948-49	*75055K
" " " " ..	1955-57	*33116B	" " " " ..	1950-51	52160A	" " " " ..	1950-51	*75055L
LAMPS			Side and flasher	1953-56	*52162E	" " " " Later ..	1951-57	75153B
Fog	1950-51	*55010A	Stop tail	1948	*52162F	Control box	1948-50	72593D
" " " " ..	1952	*55055B	" " " " ..	1949	*53082A	Wheelbox	1948-50	72590A/K
" " " " ..	Later ..	55084A	" " " " ..	1950-55	53178B/D	Crosshead and rack assy. ..	1948-57	72590A/K
" " " " ..	1952-57	*55055D	Stop tail and reflex	1956-57	53330D	Cut to 27 $\frac{1}{2}$ "	1948-49	736177
Head, Home			Stop tail and number plate, ..	1948	*53077A	" " " " 44 $\frac{1}{2}$ "	1950	736364
R.H.D., dip left (L.H.) ..	1948-49	*50799D	Export	1948-52	*53007B	" " " " ..	1951-57	736307
" non-dip (R.H.) ..	1948-49	*50579K	Tail and number plate, ..	1948-52	*53007B	Inner cable rack	1948-50	736024
" dip left (L.H.) ..	1950	*50445K	Export Norway	1951-57	*062553	Outer casing	1948-50	*739832
" non-dip (R.H.) ..	1950	*50446K	Mirror	1951-57	39007A	Motor to control box	1951-57	*739868
" dip left (L.H.) ..	1951-52	*50799D	Panel light	1948-49	*256011	Motor to wheelbox	1951-57	739868
" non-dip (R.H.) ..	1951-52	*50579K	Starting motor	1948-49	*256011	Control box to wheel-	1948-50	*739933
Head, Home and Export			Steering column control ..	1950-57	*25532A/B	boxes	1948-50	*740032
R.H.D., dip left ..	1952-53	*50959A	Suppressor	1948-51	32754A/H	4" nearside wheelbox ..	1948-50	740032
" (R.H. and L.H.) Later ..	1954-55	51344A	" " " " ..	1952-57	32848A/F	Wheelbox to wheelbox ..	1951	*739934
" " " " ..	1956-57	51344B	SWITCHES	1954-57	78114A	ditto Later ..	1951-57	*739979
Head, Export			Dipper	1948-57	31284A	3" offside wheelbox ..	1948-57	740031
R.H.D., dip left ..	1948-49	*50799D	Foglamp	1949-50	*31285A	Ferrule, casing retaining ..	1948-57	738410
" (L.H. and R.H.) ..	1950	*50445K	Knob	1951-57	316231	Arm	1948-50	*735098
" " " " ..	1951-52	*50799D	Foglamp	1951-57	31201B/D	Left hand	1951-57	*737557
" " " " ..	1951-52	*50799D	Knob	—	316231	Right hand	1951-57	*737453
						Blade	1948-50	727759
						" " " " ..	1951-57	*737572

A.C. CARS Invalid Carriage 1947-53

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1947-50	*369001	LAMPS—continued			SWITCHES—continued		
Battery	1951-53	*36151A	Tail and number plate ..	1947-51	*A53007B	Starting motor	1950-53	76427B
Coil, ignition ..	1947-53	SLG11E	Stop tail and number plate ..	1952-53	*53182B	Adaptor plate	—	78275A
Control box	1952-53	*45036A	Starting motor	1947-52	25032A	Stop lamp	1947-53	31281B
Distributor	1947-53	*37054E	" " " " Later ..	1952-53	25037A	Spring	—	*315737
Fuse box	1952-53	40079D	Steering column control ..	1947-51	32831B/F	Trafficator	1952-53	31311A
Generator	1947-53	*385211	SWITCHES			Trafficators	1949-51	*54042A
Junction box	1947-53	*22006B	Dipper	1947-48	31284A	Warning light (ignition) ..	1952-53	54046A/D
LAMPS			Horn push	1949-53	*31254A	" " " " ..	1947-53	*38012B
Head, Home			Ignition and lighting ..	1952-53	76210A	Windshield wipers		
L.H. and R.H. ..	1947-49	*50792B	Solenoid, starting motor ..	1947-48	*34035A	Motor	1949-53	*75127A
" " " " ..	1950-51	50572F	ditto Yoke fixing ..	1949-53	*34075A	Coupling bar	1949-53	*732963
" " " " ..	1952-53	51033A	ditto Flat fixing ..	1949	76022B	Bearing	1949-53	731271
Side	1947-51	*A52157A	Solenoid operating ..	1947-49	*07601A	Arm	1949-50	*735098
" " " " ..	1952-53	*A52040A			*076016	Left hand	1951-57	*737453
					*31071A	Right hand	1951-57	*737453
						Blade	1948-50	727759
						" " " " ..	1951-57	*737572

A.C. CARS 'Petite' 1953-57

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1953-57	GLT7A	LAMPS—continued			SWITCHES—continued		
Control box	1953-57	*37138B/D	Side	1953-55	52139B	Starting motor	1953-57	76423A
Fuse box	1953-57	*37130A	Stop tail and number plate ..	1956-57	52139E	Coupling	1953-57	764428
Generator	1953-55	22258D	Starting motor	1953-57	53244B/D	Stop lamp	1953	31281B
" " " " ..	1956-57	22258E/F	" " " " Later ..	1953	*062567	Spring	1954-57	31082B/E
LAMPS			Reflex reflector	1955-57	57031D	" " " " ..	1953	315543
Head, Home			Starting motor	1953	25034A/B	Trafficator	1953-54	31311A
R.H.D., dip left ..	1953-55	51344A	Suppressor	1953-57	25047A	Trafficators		
" " " " ..	1956-57	51344B	" " " " ..	1953-54	78105A	(De Luxe Model)	1953-54	54044D
Head, Export			SWITCHES			Warning lights		
L.H.D., dip right ..	1953-55	*51345A	Door light	1953	*31222A	Ignition (red glass) ..	1953-57	*38013B
" " " " ..	1956-57	*51345B	Earthing	1953-54	*31071A	Neutral gear (green glass) ..	1953	38054A
Head, Export Europe ..	1953-55	51346A	Lighting and horn push ..	1953-57	34074A	Windshield wipers		
(not France)	1956-57	51346B/E	Panel	1953-54	31201B	Motor	1953-57	*75196A
ditto	1953-55	51411A	Knob	—	316231	Arm	1953-57	*735061
Head, Export France ..	1956-57	51411B				" (De Luxe Model) ..	1953-57	*735077
" " " " ..	1956-57					Blade	1953-57	727803
" " " " ..	1956-57					" (De Luxe Model) ..	1953-57	727759

* See Supersession Chart L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



A.C. CARS 'Ace' Sports: AC Engine 1955-60 and Bristol Engine 1956-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1955-60	*36200A	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
Battery	1955-60	GLT7A	Head, Export			Solenoid, starting motor	1955-60	*76411E
Coil, ignition			L.H.D., dip right ..	1956-60	51972A/D	Solenoid operating ..	1955	31107A
AC engine	1955-57	*45038A	Head, Export Europe			"	1956-60	*31071A
"	1958-60	*45054K	(not France)	1957-60	51534B/E	Stop lamp	1955-60	31082E
Bristol engine ..	1956	*45012B	Head, Export France ..	1957-60	51411B	Windshield wiper ..	1955-56	*31276A
"	1957-60	*45054H/K	Head, Export U.S.A. ..	1959-60	*58499A/B	"	1957-60	31568B
Control box	1955-57	*37138D	Number plate illumination	1955	53093D	Knob	—	*318168
"	1958-60	37182H	"	1956-60	53093H	Warning light (ignition) ..	1955-60	38049A
Distributor			Side and flasher	1955	*52236A	Windshield wipers		
AC engine	1955	40143E	Side flasher	1955-60	*52276A	Motor	1955-56	75144A
"	Later	40462A	Stop tail and reflex ..	1955-60	53305B/D	"	1957	*75236A
Bristol engine ..	1956-60	40551A/B	Mirror	1955-60	062557	"	1958-60	75311A
Flasher unit	1955-57	*35003A	Screenjet (optional) ..	1958-60	077006	Wheelbox	1955-56	72629A
"	1958-60	35010A	Starting motor			"	1957-60	72639A
Flasher relay	1955-60	33117A/D	AC engine	1955-60	*25532B	Crosshead and rack assy.		
Fuse box	1955-60	*37154A	Bristol engine	1956-60	25026B/E	Cut to 44"	1955-56	736307
Generator	1955	22258D	"	1960	25026F/H	"	1957	741264
"	1956-60	22258E/H	Steering column control ..	1955-60	32941A/B	Crosshead and rack assy.	1958-60	744256
Horn			SWITCHES			Outer casing		
Low note	1955	*69011J	Dipper	1955-60	31284A	Motor to wheelbox ..	1955-56	739868
"	Later	69046A/F	Foglamp	1956-60	*31419A	"	1957-60	745387
High note	1955	*69012J	Knob	—	316102	Wheelbox to wheelbox ..	1955-56	*739979
"	Later	69047A/F	Ignition and lighting ..	1955-60	*34018B	"	1957-60	745386
Inspection lamp sockets ..	1955-57	*301186	Main pump	1957-60	*31498A	3", offside wheelbox ..	1955-56	740031
"	1958-60	38604A	Knob	—	*325296	End tube	1957-60	740746
LAMPS			Panel rheostat	1958	78279A	Ferrule, casing retaining	1957-58	740715
Driving (optional) ..	1956-60	55132B	Knob	—	316163	Grommet	1958-60	740811
Fog (optional)	1956-60	55128B	Panel rheostat	Later	*78320A	Arm	1955-56	*742291
Head, Home and Export			Knob	—	769064	"	1957-60	741488
R.H.D., dip left ..	1955-58	51538B	SWITCHES— <i>continued</i>			Blade	1955-60	737681
"	1958-60	51538D/E						

A.C. CARS 'Aceca' Coupé: AC Engine 1955-60 and Bristol Engine 1957-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1955-60	*36200A	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
Battery	1955-60	GLT7A	Head, Export Europe			Solenoid, starting motor	1955-60	*76411E
Coil, ignition			(not France)	1957-60	51534B/E	Solenoid operating ..	1955	31107A
AC engine	1955-57	*45038A	Head, Export France ..	1957-60	51411B	"	1956-60	*31071A
"	1958-60	*45054K	Head, Export U.S.A. ..	1959-60	*58499A/B	Stop lamp	1955-60	31082D/E
Bristol engine ..	1957-60	*45054H/K	Number plate illumination	1958-60	53093H	Windshield wiper ..	1955-56	*31276A
Control box	1955-56	*37138D	Side and flasher	1955-60	*52276A	"	1957-60	31568B
"	1957-60	37182H	Stop tail, flasher and reflex	1955-60	53330D	Knob	—	*318168
Distributor			Mirror	1955-60	062552	Windshield wipers		
AC engine	1955-60	40462A	Screenjet (optional) ..	1958-60	077006	Motor	1955-56	75144A
Bristol engine ..	1957-60	40551A/B	Starting motor			"	1957	*75236A
Flasher unit	1955-57	*35003A	AC engine	1955-60	22532B	"	1958-60	75311A
"	1958-60	35010A	Bristol engine	1957-60	25026D/E	Wheelbox	1955-56	72629A
Flasher relay	1955-60	33117A/D	"	1960	25026F/H	"	1957-60	72639D
Fuse box	1955-60	*37154A	Steering column control ..	1955-60	32941A/B	Crosshead and rack assy.		
Generator	1955	22258D	SWITCHES			Cut to 44"	1955-56	736307
"	1956-60	22258E/H	Dipper	1955-60	31284A	"	1957	741264
Horn			Foglamp	1956-60	*31419A	Crosshead and rack assy.	1958-60	744256
Low note	1955-60	69046A/F	Knob	—	316102	Outer casing		
"	1955-60	69047A/F	Ignition	1955-60	31403B/F	Motor to wheelbox ..	1955-56	739868
Inspection lamp sockets ..	1955-57	301186	Lighting	1955-58	31426B	"	1957-60	745387
"	1958-60	38604A	"	1959-60	31568A	Wheelbox to wheelbox ..	1955-56	*739979
LAMPS			Knob	—	318305	"	1957-60	745386
Driving (optional) ..	1956-60	55132B	Panel	1955-60	*31276A	3", offside wheelbox ..	1955-56	740031
Fog (optional)	1956-60	55128B	rheostat	1958	78279A	End tube	1957-60	740746
Head, Home and Export			Knob	—	316163	Ferrule, casing retaining	1957-58	740715
R.H.D., dip left ..	1955-60	51538B	Panel rheostat	Later	*78320A	Grommet	1958-60	740811
Head, Export			Knob	—	769064	Arm	1955-56	*737529
L.H.D., dip right ..	1956-60	51972A/D	SWITCHES— <i>continued</i>			"	1957-60	745071
						Blade	1955-60	738724

A.F.N. 'Le Mans' 1951-54

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1951-52	*36110A	LAMPS— <i>continued</i>			Steering column control ..	1951-52	*32750A
Battery	1953-54	36099E	Head, Export			"	1953-54	*32829A
Coil, ignition			L.H.D., dip right ..	1951	*A50821D	SWITCHES		
Control box	1951-54	G77A	"	1951	*50775B	Dipper	1951-54	31284A
Distributor	1951-54	*45012A/D	L.H.D., dip right ..	1952	50877B	Flasher	1951-54	31311A
"	Later	40109D	"	1952-54	*51355A	Ignition and lighting ..	1951-54	*34014A
Fuse box	1953-54	40346A	Head, Export Europe			Map light	1951-54	*31276A
Generator	1951-54	*37137A	(not France)	1951	*B50821D	Panel	1951-54	31201B
"	1951-52	*22250E/F	ditto	1951	*50996A	Knob	—	314026
"	Later	22258D	ditto	1952	50986A/D	Solenoid, starting motor	1951-52	76022B
Horn	1951	069344	ditto	1952-54	*51354A	ditto	Later	*76411D
Low note	1952-54	*69011F	Number plate illumination			Solenoid operating ..	1951-54	31258A
High note	1952-54	*69012F	(U.S.A.)	1951-54	53093E	Warning lights		
LAMPS			Side	1951-52	52030A	Ignition	1951-54	*38015B
Dash	1952-54	*56021A	"	1952-54	*52182A/B	Main beam	1951-54	38018B
Head			"	1951-52	52134B	Windshield wipers		
R.H.D., dip left (Home)	1951	*50821D	Stop Tail (U.S.A.) ..	1951-54	53178B/D	Motor	1951-54	75051D
ditto (Home) Later	1951	*50995A	Tail and number plate ..	1951-54	*53140B	Coupling bar	1951-54	732191
ditto (Export) Later	1951-52	*50995A	Panel light bulb holder ..	1951-54	39007A	Bearing, passenger side	1951-54	731721
ditto (Home)	1952	*50895A	Starting motor	1951-52	25006A/D	Arm, left hand	1951-54	*732927
ditto	1953-54	*51353A	"	1952-54	25026A/E	"	1951-54	*732926
						Blade	1951-54	727784

* See Supersession Chart

L.H.D. .. Left hand drive R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



A.F.N. 'Mille Miglia' 1951-54

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1951-52	*36110A	LAMPS—continued			SWITCHES—continued		
"	1953-54	36099E	Number plate illumination	1951-54	53093E	Solenoid, starting motor	1951-52	76022B
Battery	1951-54	CT7A	Side	1951-52	52160A	ditto .. Later	1952-54	*76411D
Coil, ignition	1951-54	*45012A/D	" Later	1952-54	*52182A/B	Solenoid operating ..	1951-54	31258A
Control box	1951-54	37065E	" (U.S.A.)	1951-54	*52162B/D	Windshield wipers		
Distributor	1951-53	40109D	Stop tail	1951-54	53178B/D	Motor	1951	*75084L
" Later	1953-54	40346A	Panel light bulb holder ..	1951-54	39007A	" Later	1951	75143A
Fuse box	1951-54	*37137A	Petrol reserve valve	1951-54	78025A	"	1952-54	75158A
Generator	1951-52	*22250E/H	Starting motor	1951-52	25006A/D	Wheelbox	1951-54	*72548A/K
" Later	1952-54	22258D	" Later	1952-54	25026A/E	Crosshead and rack assy.		
Horn	1951	069344	Steering column control ..	1951-53	*32750A	Cut to 37 1/8"	1951	736177
Low note	1952-54	*69011F	"	1953-54	*32829A	"	1952-54	738499
High note	1952-54	*69012F				Outer casing		
LAMPS			SWITCHES			Motor to wheelbox ..	1951	739870
Dash	1952-54	*56021A	Dipper	1951-54	31284A	"	1952-54	*739832
Head, Home and Export			Flasher	1951-54	31311A	Wheelbox to wheelbox	1951	739932
R.H.D., dip left ..	1951-54	50825A	Ignition and lighting ..	1951-54	*34014A	"	1952-54	739973
Head, Export			Map light	1951-54	*31276A	3", offside wheelbox ..	1951-54	740031
L.H.D., dip right ..	1951-54	*A50825A	Panel	1951-54	31201B	Arm	1951-54	*736418
Head, Export U.S.A. ..	1951-54	50942A	Knob	—	314026	Blade	1951-54	*737653

ALFA ROMEO '1900' 1953-58

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Circuit breaker, windshield wiper	1957-58	78316A	Windshield wipers			Windshield wipers—cont'd		
Fuse box	1953-56	*37137A	Motor	1956-57	75213A/D	Wheelbox to wheelbox	1956-57	744300
Relays, headlamp flasher and horn	1953-58	*33116B	" Later	1957-58	75213F	ditto .. Later	1957-58	744217
SWITCHES			Wheelbox	1956	*72665A	End tube	1956-58	740746
Dipper	1953-58	31284A	"	1957-58	72699A	Ferrule, casing retaining	1956-58	740715
Ignition	1953-54	31187D	Crosshead and rack assy.	1956	*743248	"	1956	741836
Lighting	1953-58	31158A/F	ditto	1957	743254	Arm	1957-58	743527
Panel	1953-54	31201B	ditto .. Later	1957-58	743221	"	1957-58	743527
Solenoid operating ..	1953-54	31279A	Outer casing			Blade	1956	738734
			Motor to wheelbox ..	1956-57	744299	"	1957-58	737897
			" Later	1957-58	744327			

ALFA-ROMEO 'Giulietta' (Sports, 750C 'Berlina') 1955-60: (Sprint, 750B) 1956-60 (t.i. 753) 1958-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Circuit breaker, windshield wiper	1958-60	78316A	LAMPS, Head—continued			SWITCHES—continued		
Coil, ignition	1955	*45012B	Less rim (U.S.A.)	1958-60	51928E	Starting motor	1955-56	76442A/B
Control box	1955-60	*45053F/L	Less rim and adaptor ..			Windshield wipers		
"	1955-56	*37138D	(U.S.A.)	1958-60	58176A	Motor	1958-59	75213D
Distributor	1957-60	37182A/H	Side and flasher	1957-59	52240B/D	"	1960	75213F
"	1955-60	40431A/K	Stop tail and flasher ..	1957-59	53541D	Wheelbox	1958-60	72699B
" Later	1960	40431L	Relays, headlamp flasher and horn	1955-60	*33116B	Crosshead and rack assy.		
Fuse box	1955-56	40649A/E	Starting motor	1955	25300A/F	Cut to 32 3/8"	1958-60	743221
Generator	1955	*37137A	"	1956	25300H/K	Outer casing		
"	1955	22258D	"	1956	25300I/D	Motor to wheelbox ..	1958-60	744327
LAMPS			"	1957-58	25301A/D	Wheelbox to wheelbox	1958-60	744217
Head			"	1959-60	25304A/D	End tube	1958-60	740746
With rim (U.S.A.) ..	1957-60	51504A	SWITCHES			Ferrule, casing retaining	1958-60	740715
Less rim (U.S.A.) ..	1956-60	51928E	Dipper	1955-60	31284A	Arm	1958-60	743527
Less rim and adaptor (U.S.A.) ..	1958-60	51928E	Lighting	1955-60	31158A/F	Blade	1958-60	737897

ALFA-ROMEO 'Giulietta Spyder' 1956-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Circuit breaker, windshield wiper	1957-60	78316A	LAMPS—continued			Windshield wipers—cont'd		
Coil, ignition	1956-60	*45053K/L	Side and flasher	1956-59	52240B/D	Wheelbox	1957-60	72699A/B
Control box	1956	*37138D	Stop tail and flasher ..	1956-59	53541D	Crosshead and rack assy.		
Distributor	1957-60	37182A/H	Relays, headlamp flasher and horn	1956-59	*33116B	Cut to 56 1/8"	1956	*743250
" Later	1956-60	40431A/K	Starting motor	1956-58	25301A/D	" .. 32 3/8"	1957-60	743221
Generator	1960	40431L	"	1959-60	25304A/D	Outer casing		
LAMPS			"			Motor to wheelbox ..	1956	744299
Head			SWITCHES			"	1957-60	744327
With rim (U.S.A.) ..	1958-60	51504A	Dipper	1958-60	31284A	Wheelbox to wheelbox	1956	744300
Less rim (U.S.A.) ..	1956-57	51928A	Lighting	1956-60	31158A/F	"	1957-60	744217
Less rim and adaptor (U.S.A.) ..	1958-60	51928E	Windshield wipers			End tube	1956-60	740746
			Motor	1956	*75238A	Ferrule, casing retaining	1956-60	740715
			"	1957-59	75213A/D	Arm	1956	741836
			"	1960	75213F	"	1957-60	743527
			Wheelbox	1956	*72665A	Blade	1956	*738735
						"	1957-60	737897

ALFA-ROMEO T10 Van (Petrol) 1956-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Circuit breaker, windshield wiper	1958-60	78316A	LAMPS, Head—continued			Windshield wipers		
Coil, ignition	1958-60	45053K/L	Less rim and adaptor ..			Motor	1958-60	75213D
Control box	1958-60	37182H	(U.S.A.)	1958-60	58176A	Wheelbox	1958-60	72699B
Distributor	1958-60	40431K	Side and flasher	1958-60	52240B	Crosshead and rack assy.		
" Later	1960	40431L	Stop tail and flasher ..	1958-60	53541B	Cut to 32 3/8"	1958-60	743221
Generator	1958-60	22258E/H	Relays, headlamp flasher and horn	1956-60	*33116B	Outer casing		
LAMPS			Starting motor	1956	25301A/D	Motor to wheelbox ..	1958-60	744327
Head			"	1958	25300I/D	Wheelbox to wheelbox	1958-60	744217
With rim (U.S.A.) ..	1958-60	51504A	"	1959-60	25304A/D	End tube	1958-60	740746
Less rim (U.S.A.) ..	1958-60	51928E	SWITCHES			Ferrule, casing retaining	1958-60	740715
			Dipper	1958-60	31284A	Arm	1958-60	743527
			Lighting	1957-60	31158A/F	Blade	1958-60	737897

* See Supersession Chart L.H.D. .. Left hand drive R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



ALFA-ROMEO 'Giulietta Sprint Veloce' (750E), 'Giulietta Spyder Veloce' (750F) and 'Giulietta Sprint Speciale' 1958-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Circuit breaker, windshield wiper (except 'Sprint Speciale')	1958-60	78316A	Relays, headlamp flasher and horn	1958-60	*33116B	Windshield wipers—cont'd		
LAMPS			SWITCHES			Crosshead and rack assy. Cut to 29 3/8"	1958-60	743221
Head			Dipper	1958-60	31284A	Outer casing		
With rim (U.S.A.)	1959-60	51504A	Foglamp	1958-60	31158F	Motor to wheelbox	1958-60	744327
Less rim (U.S.A.)	1959-60	51928E	Lighting	1958-60		Wheelbox to wheelbox	1958-60	744217
Less rim and adaptor (U.S.A.)	1959-60	58176A	Windshield wipers			End tube	1958-60	740746
			Motor	1958-59	75213D	Ferrule, casing retaining	1958-60	740715
			Wheelbox	1958-60	72699B	Arm	1958-60	743257
						Blade	1958-60	737897

ALFA-ROMEO '2000' Model 1958-60: '2000' Spyder 1959-60

Relays, headlamp flasher and horn	1958-60	*33116B	Windshield wipers('Spyder')	1958-60	75335A/B	Windshield wipers—cont'd	1958-60	740715
SWITCHES			Motor	1958-60	72705A	Ferrule, casing retaining	1958	*744142
Dipper	1958-60	31284A	Wheelbox	1958-60		Arm, left hand	1959-60	54711211
Foglamp	1959-60	*31515A	Crosshead and rack assy. Cut to 39 3/8"	1958-60	744256	" " ("Spyder")	1959-60	54711212
Lighting	1958-60	31158F	Crosshead and rack assy. ('Spyder') Cut to 32 3/8"	1959-60	744254	" right hand	1958	748853
Panel rheostat	1959-60	78336A	Outer casing			" " ("Spyder")	1959-60	54711201
Windshield wiper	1958	*31427D	Motor to wheelbox	1958-60	54710174	" " ("Spyder")	1959-60	54711202
" "	1959-60	31957A	ditto ('Spyder')	1959-60	54710414A	Blade	1958-59	*737907
			Wheelbox to wheelbox	1959-60	54710173	" "	1960	54711283
			End tube	1958-60	740746			

ALLARD 16 h.p. 1947-49

Ammeter	1947-49	*369001	SWITCHES—continued			Windshield wipers—cont'd		
Battery	1947-49	SLG13E	Ignition and lighting	1947-49	*34026D	Inner cable rack		
Coil, ignition	1947-49	*45033A	Panel	1947-49	*31201B	Sports Saloon	1947-48	736024
Control box	1947-49	*37076A	Knob	1947-48	*314683	Outer casing		
Distributor	1947-49	40223A	"	1949	*314664	Motor to control box		
Fuse box	1947-49	*37137A	Petrol	1947-49	31201B	Sports Saloon	1947-48	*739907
Generator	1947-49	238498	Knob		*314421	Motor to wheelbox		
Horn			Solenoid, starting motor	1947-49	*760080	Sports Saloon	1949	*739907
Low note	1947-49	*69021A	Solenoid operating	1947-49	*31071A	OpenSportsand Coupé		
High note	1947-49	*69022A	Windshield wiper	1948-49	31201B	" Late	1949	*739907
LAMPS			Knob		*314691	4", nearside wheelbox		
Boot	1947-49	56035E	Trafficators	1947-48	*54014D	Sports Saloon	1947-48	740032
Head, Home			"	1949	*54023D	Wheelbox to wheelbox		
R.H.D., dip left (L.H.)	1947-48	*50165A	Windshield wipers			Sports Saloon	1949	*739956
" non-dip (R.H.)	1947-48	*50166A	Motor			OpenSportsand Coupé		
" dip left (L.H.)			Sports Saloon	1947-48	*75055K	" Late	1949	*739956
Later	1948-49	50793B	Open sports and Coupé	1947-49	*75054A	3", offside wheelbox	1947-49	740031
" non-dip (R.H.)	Later	*50362F	ditto	1949	*75063K	Control box to wheelbox (Sports Saloon)	1947-48	740246
Head, Export			Coupling bar	1947-49	727293	Guide tube		
R.H.D., dip left (L.H. and R.H.)	1948-49	*50793B	Open Sports and Coupé	1947-49	731721	Sports Saloon	1947-48	735895
Head, Export U.S.A.	1949	50811A	Bearing, passenger side			Grommet, wheelbox	1947-49	734458
Number plate illumination (4 seater)	1947-49	53093E	Open Sports and Coupé	1947-49		Arm		
(2 seater)	1947-49	*53034A	Control box			Sports Saloon	1947-48	*735098
Reverse, tail and number plate (4 seater)	1947-49	53032B	Sports Saloon	1947-48	72547A	"	1949	*737517
Side (U.S.A.)	1947-49	*52162A	ditto (with switch)	1949	72567A	Open Sports and Coupé (L.H.)	1947-49	*735135
Stop tail and number plate (4 seater)	1947-49	*53027B	ditto (less switch)	1949	72563A	(R.H.)	1947-49	735132
Starting motor	1947-49	*270557	Open Sports and Coupé	1949	72592A/K	" " Later	1949	737517
Steering column control	1947-49	32732B/D	Crosshead and rack assy. Sports Saloon			Blade		
SWITCHES			Cut to 51 1/2"	1947-48	738499	Sports Saloon	1947-48	727707
Foglamp	1947-49	31201B	" 34 3/8"	1949	736177	"	1949	*737516
Knob		*314665	Open Sports and Coupé	1949	738499	Open Sports and Coupé	1947-49	727707
			Cut to 47 3/8" Late			ditto	1949	736414

ALLARD 'J', 'J2' and 'J2X' Models 1949-55

Ammeter	1949-51	*369001	Junction box	1951-55	78266B	LAMPS—continued		
"	1952-55	*36117A	"	1953-55	78265B	Head, Export U.S.A.	1949-51	50897B
Battery	1949-52	SLG13E	"			"	1952-55	50877B
" " Later	1952-55	GT11A	LAMPS			Head, Export Europe (not France)	1951	*B50869D
Coil, ignition	1949-55	*45012A/D	Fog	1951-55	*55055B/D	ditto	1951-55	50986A
ditto (Cadillac eng.)	1951-55	*45039A	Head, Home			ditto (flush fitting)	1955	51535A
Control box	1949-51	*37076A	R.H.D., dip left (L.H.)	1949-51	*50869D	Head, Export France	1951-55	50987A
" " Later	1952-55	*37139D	" non-dip (R.H.)	1949-51	*50870D	Number plate illumination	1949-55	53093E
Distributor	1949-55	40068A/F	Head, Home (alternative)			Side	1949-52	52160A
ditto (Cadillac eng.)	1951-55	40253A	R.H.D., dip left	1950	50825A	"	1953-55	52139B
Fuse box	1949-51	*37137A	ditto	1952-54	51331A	" (U.S.A.)	1949-55	*52162B/D
" " Later	1952-55	033239	ditto (flush fitting)	1955	51336A	" (special orders)	1953-55	*52143A
Generator	1949-50	238498	Head, Export			Stop tail	1949-55	53178B/D
" " Later	1950-52	22443A	R.H.D., dip left (L.H. and R.H.)	1951	*50869D	" (U.S.A.)	1949-50	53173B
"	1952-53	*22465A	Head, Home and Export			Stop tail and reverse (U.S.A.)		
"	1953-55	22478A	R.H.D., dip left (L.H. and R.H.)	1951-55	*50985A	Starting motor	1949-50	*270557
Horn			Head, Export			ditto	1951-55	26060A
Low note	1950-55	*69011F	L.H.D., dip right	1951	*A50869D			
High note	1950-55	*39012F	"	1952-55	50877B			
Alternative	1951-55	*069213						

* See Supersession Chart

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

continued



ALLARD 'J', 'J2' and 'J2X' Models 1949-55—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			Warning lights—continued			Windshield wipers—cont'd		
Horn push and dipper ..	1949-55	31262A	Petrol reserve ..	1951-55	*38042A	Wheelbox to wheelbox ..	1951-53	*739956
Ignition and lighting ..	1949-55	*34018A/B	Windshield wipers ..	1951	*75055L	ditto .. Later	1953	*739979
Oil level indicator ..	1949-55	*31171A	Motor ..	1952-53	75148A	ditto ..	1954-55	*739956
Panel ..	1951-55	31201B/D	" .. Later	1953	75158A	3", offside wheelbox ..	1951-55	740031
Knob ..	—	*314664	Wheelbox (with switch) ..	1951	75148A	Grommet, wheelbox ..	1951-53	734458
Petrol reserve valve ..	1949-55	31201B/D	" (less switch) ..	1951	72567A	ditto .. Later	1953	729423
Knob ..	—	*314421	" ..	1952-55	72568A	ditto ..	1954-55	734458
Solenoid, starting motor ..	1949-55	*76411D/E	Crosshead and rack assy. ..	1951	736177	Arm ..	1951	*737517
Solenoid operating ..	1949-55	*31071A	Cut to 54 $\frac{1}{8}$ " ..	1952-53	738499	" ..	1952-54	*736411
Stop lamp ..	1951-52	31281B	" " 47 $\frac{1}{8}$ " ..	1953	736307	" ..	1955	*737517
" ..	1955	31082D	" " 50 $\frac{1}{8}$ " .. Later	1954-55	738499	Blade ..	1951	*737516
Windshield wiper ..	1951-55	31201B/D	" " 47 $\frac{1}{8}$ " ..	1951-53	*739907	" .. Later	1952	*737482
Knob ..	—	*314691	Outer casing ..	1953	739870	" ..	1953-54	741680
Terminal block ..	1951	37082A	Motor to wheelbox ..	1954-55	*739907	" ..	1955	736414
Warning lights ..	—	—	ditto .. Later	—	—	" ..	—	—
Ignition ..	1949-55	*38013B	ditto ..	—	—	" ..	—	—
Main beam ..	1951-55	38052B		—	—	" ..	—	—

ALLARD 'J2R' Model 1956

Ammeter ..	1956	36117A	LAMPS—continued	1956	50987A	SWITCHES—continued	1956	*31071A
Battery ..	1956	RCPR11A	Head, Export France ..	1956	53093E	Solenoid operating ..	1956	31082E
Control box ..	1956	*37139E	Number plate illumination ..	1956	52139F	Stop lamp ..	1956	31201D
Fuse box ..	1956	033239	Side ..	1956	53178F	Windshield wiper ..	1956	—
Generator ..	1956	*22465A/E	Stop Tail ..	1956	26060A	Knob ..	—	*314691
Horn ..	1956	*069213	Starting motor ..	1956	—	Windshield wipers	—	—
Junction box ..	1956	78265B		—	—	Motor ..	1956	75148A
" ..	1956	78266B		—	—	Wheelbox ..	1956	72592A/K
LAMPS	—	—	SWITCHES	—	—	Crosshead and rack assy. ..	1956	738499
Driving ..	1956	55081A	Horn push and dipper ..	1956	31262A	Cut to 47 $\frac{1}{8}$ " ..	1956	738499
Fog ..	1956	*55055D	Ignition and lighting ..	1956	*34018B	Outer casing ..	1956	*739907
Head, Home and Export ..	1956	*50985A	Oil level indicator ..	1956	*31171A	Motor to wheelbox ..	1956	*739907
R.H.D., dip left ..	1956	50877B	Panel ..	1956	31201D	Wheelbox to wheelbox ..	1956	*739956
Head, Export ..	1956	50877B	Knob ..	1956	*314664	3", offside wheelbox ..	1956	740031
L.H.D., dip right ..	1956	50986A	Petrol gauge ..	1956	31201D	Grommet ..	1956	734458
Head, Export Europe ..	1956	50986A	Knob ..	1956	*314421	Arm ..	1956	*737517
(not France) ..	1956	50986A	Solenoid, starting motor ..	1956	*76411E	Blade ..	1956	736414

ALLARD 'K' and 'L' Models 1949-51

Ammeter ..	1949-51	*369001	LAMPS—continued	1949-51	53093E	SWITCHES—continued	1949-51	31201B
Battery ..	1949-51	SLG13E	Head, Export Europe ..	1949-51	*53034A	Petrol ..	1949-51	—
Coil, ignition ..	1949-51	*45012A/D	(not France) ..	1951	*B50445K	Knob ..	—	*314421
ditto (Cadillac eng.) ..	1951	*45039A	ditto .. Later	1951	*50963A	Solenoid, starting motor ..	1949	*760080
Control box ..	1949-50	*37065E	Head, Export France ..	1951	*50790E	" ..	1950-51	*76417B
" ..	1951	*37076E	" .. Later	1951	*50962A	Solenoid operating ..	1949-51	*31071A
Distributor ..	1949-51	40068A/F	Number plate illumination ..	1949-51	53093E	Stop lamp ..	1949-51	31281B
" (Cadillac eng.) ..	1951	*40253A	'L' Model ..	1949-51	*53034A	Windshield wiper ..	1951	31201B
Fuse box ..	1949-50	*37137A	'K' Model ..	1949-51	—	Knob ..	—	*314691
Generator ..	1949-50	238498	Reverse, tail and number ..	1949-51	53032B	Terminal block ..	1951	37082A
" .. Later	1950-51	22443A	plate ('L' Model) ..	1949-51	52139B	Trafficators ..	1949-51	*54035A
Horn ..	1949	*69021A	Side ..	1951	*52162B/D	Warning lights	—	—
Low note ..	1950-51	*69011F	(U.S.A.) ..	1951	—	Flasher ..	1951	38052B
" ..	1950-51	*69022A	Stop tail and number plate ..	1949-51	*53027B	Ignition ..	1949-51	*38013B
High note ..	1950-51	*69012F	'L' Model ..	1949-51	780060	Main beam ..	1951	38052B
" ..	1949-51	38604A	Petrol reserve valve ..	1949-51	*270557	Windshield wipers	—	—
Inspection lamp sockets ..	1949-51	38604A	Starting motor ..	1949-50	26060A	Motor ..	1949-50	75054A
LAMPS	—	—	ditto ..	1951	32782A/F	" ..	1951	75148A
Fog ..	1949-51	*55055B	Steering column control ..	1949-51	—	Coupling bar ..	1949-50	727293
Head, Home ..	1949-50	50793B	SWITCHES	—	—	Bearing, passenger side ..	1949-50	731721
R.H.D., dip left (L.H.) ..	1949-50	*50362F	Bonnet light ..	1951	31201B	Wheelbox ..	1951	72592A/K
" non-dip (R.H.) ..	1951	*50445K	Knob ..	—	314026	Crosshead and rack assy. ..	1951	738499
" dip left (L.H.) ..	1951	*50446K	Knob ..	1951	*31222A	Cut to 47 $\frac{1}{8}$ " ..	1951	738499
" non-dip (R.H.) ..	1951	*50446K	Door light ..	1951	31201B	Outer casing ..	1951	*739907
Head, Home and Export ..	1951	*50954A	Fog lamp ..	1949-50	31201B	Motor to wheelbox ..	1951	*739956
R.H.D., dip left ..	1949-50	*50793B	Knob ..	1951	*314665	Wheelbox to wheelbox ..	1951	740031
" ..	1951	*50445K	Heater ..	1951	*78262A	3", offside wheelbox ..	1951	734458
L.H.D., dip right ..	1951	*A50445K	Knob ..	1951	768473	Grommet ..	1951	734458
" .. Later	1951	*50804D	Ignition and lighting ..	1949-50	*34026D	Arm, left hand ..	1949-50	735119
			Panel ..	1951	34018A	Arm, right hand ..	1949-50	735118
			Knob ..	1949-51	31201B	Arm ..	1951	*736411
				—	*314664	Blade ..	1949-50	727707
				—	—	" ..	1951	*737482

ALLARD 'K3' Model 1954-55

Ammeter ..	1954-55	*36117A	Horn	1954-55	*69011F/J	LAMPS—continued	1954-55	53093E
Battery ..	1954-55	GT11A	Low note ..	1954-55	*69012F/J	Number plate illumination ..	1954	*52162B/D
Coil, ignition ..	1954-55	*45012A/D	High note ..	1954-55	—	Side ..	1955	52240A
ditto (Cadillac eng.) ..	1954-55	*45039A	LAMPS	—	—	" ..	1955	53184B
Control box ..	1954-55	*37139D/E	Driving (optional) ..	1955	55081A	Stop tail and reverse ..	1955	987
Distributor ..	1954-55	40068F	Fog (optional) ..	1955	*55055D	Panel light bulb ..	1954	26060A
" (Cadillac eng.) ..	1954-55	*40253A	Head, Home and Export ..	1954	*51334A	Starting motor ..	1954-55	32782A/F
Flasher unit ..	1954-55	*35003A	R.H.D., dip left ..	1955	51336A	Steering column control ..	1954	32882D
Fuse box ..	1954-55	033239	" ..	1955	—	" ..	1955	—
Generator ..	1954	22478A	Head, Export ..	1954	*51337A	" ..	1955	—
" ..	1955	22265B	L.H.D., dip right ..	1955	*51337B	" ..	1955	—
			" ..	1955	—	" ..	1955	—

* See Supersession Chart L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



ALLARD 'K3' Model 1954-55—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			SWITCHES—continued			Windshield wipers		
Boot	1955	31201D	Windshield wiper	1954-55	31201B/D	Motor	1954-55	75152A
Knob	—	314026	Knob	—	*314691	Wheelbox	1954-55	72629A/D
Dipper	1954-55	31284A	Terminal block	1954-55	37101A/B	Grommet, wheelbox	1954-55	729423
Heater rheostat	1955	*78262B	Warning lights			Crosshead and rack assy. Cut to 48 #	1954-55	738499
Knob	—	768473	Flasher	1954-55	*38083E	Outer casing		
Ignition and lighting	1954-55	*34018A	Ignition	1954	*38075A	Motor to wheelbox	1954-55	739972
Panel	1954-55	*78237A	1955	*38013B	Wheelbox to wheelbox	1954-55	*739979
Knob	—	*768507	1955	*38052B	3", offside wheelbox	1954-55	740031
Solenoid, starting motor	1954-55	*76411D/E	Main beam	1954-55	*38053F	Arm	1954-55	*737624
Solenoid operating	1954-55	*31071A	Petrol reserve	1954	*38042A	Blade	1954-55	741543
Stop lamp	1955	31082D	1955				

ALLARD 'P' and 'M' Models 1949-51

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
AMMETER			LAMPS—continued			SWITCHES—continued		
Ammeter	1949-51	*369001	Head, Export Europe (not France)	1951	*B50445K	Stop lamp	1949-50	31281B
Battery	1949-51	SLG13E Later	1951	*50963A	Spring	—	315543
Coil, ignition	1949-51	*45012A/D	Head, Export France	1949-51	*50790E	Windshield wiper	—	—
.. .. . ditto (Cadillac eng.)	1951	*45039A Later	1951	*50962A	'M' Model only	1949-51	31201B
Control box	1949-50	37065E	Number plate illumination	1949-50	53101E	Knob	—	*314691
.. .. . ditto	1951	*37076E ditto	1951	*53034A	Terminal block	1951	37082A
Distributor	1949-51	40068A/F ditto (U.S.A.)	1951	53093E	Trafficators	1949-51	*54035A
.. .. . ditto (Cadillac eng.)	1951	*40253A	Side	1949-51	53097D/E	Warning lights		
Fuse box	1949-51	*37137A (U.S.A.)	1949-51	52139B	Flasher	1951	38052B
Generator	1949-50	238498	Stop tail and reverse	1949-51	*52162B/D	Ignition	1949-51	*38013B
.. .. . ditto	1950-51	22443A	Petrol reserve valve	1949-51	53184B	Main beam	1951	38052B
Horn	1949	*69021A	Starting motor	1949-50	780060	Windshield wipers		
Low note	1950-51	*69011F ditto	1951	*270557	Motor	1949-50	*75063K
High note	1949	*69022A	Steering column control	1949-51	26060A ('M' Model)	1951	75148A
.. .. . ditto	1950-51	*69012F			32782B/E ('P' Model)	1951	75152A
Inspection lamp sockets	1949-51	38604A	SWITCHES			Wheelbox	1949-51	72592A/K
LAMPS			Bonnet light	1951	31201B	'M' Model	1949-51	72564A
Bonnet	1951	56035E	Knob	—	314026	'P' Model (with switch)	1949-51	72668A
Fog	1949-51	*55055B	Door light	1949-51	*31222A (less switch)	1949-51	736177
Head, Home	1949-50	*50878A	Heater	1951	*78262A	Crosshead and rack assy.	1949-51	738499
R.H.D., dip left	1949-50	50825A	Knob	—	768473	'M' Model Cut to 47 #	1949-50	736177
.. .. . ditto (alternative)	1951	*50445K	Ignition and lighting	1949-50	*34026D	'P' Model	1951	738499
R.H.D., dip left (L.H.)	1951	*50446K	Panel	1949-51	*34018A ditto	1951	738499
.. .. . non-dip (R.H.)	1951	*50446K	Knob	—	31201B	Outer casing	1949-51	*739907
Head, Export	1951	*50445K ditto	1949-51	*314664	Motor to wheelbox	1949-51	*739956
R.H.D., dip left	1951	*50954A	Petrol	1949-51	31201B	Wheelbox to wheelbox	1949-51	740031
.. .. . ditto	1951	*A50445K	Knob	—	*314421	3", offside wheelbox	1949-51	737517
L.H.D., dip right	1949-51	*50804D	Reverse lamp	1951	31281B	Arm	1949-51	737641
.. .. . ditto	1951	*50804D	Solenoid, starting motor	1949-51	*76411D	Blade ('M' Model)	1949-50	*737482
Head, Export U.S.A.	1949-50	50811A	Solenoid operating	1949-51	*31071A ('P' Model)	1949-51	*737516

ALLARD 'P2' Model 1952-55

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
AMMETER			LAMPS—continued			SWITCHES—continued		
Ammeter	1952-53	*36117A	Head, Export Europe (not France)	1952-53	*50963A	Solenoid operating	1952-55	*31071A
.. .. . Later	1953-55	*36163A ditto	1953-54	50967A	Stop lamp	1954-55	31082B
Battery	1952	SLG13E ditto	1954-55	51339A	Windshield wiper	1952-54	31201B
Coil, ignition	1952-55	GT11A	Head, Export France	1952-53	*50962A	Knob	—	*314691
.. .. . ditto (Cadillac eng.)	1952-55	*45012A/D ditto	1953-54	*50966A	Windshield wiper	1955	*31297B
Control box	1952	*37076E ditto	1954-55	*51590A	Knob	—	316646
.. .. . ditto	1952-55	*37139D/E	Number plate illumination	1952-55	53093E	Terminal block	1952-53	37082A
Distributor	1952-55	40068A/F ditto (U.S.A.)	1953-55	53097D/E ditto	1953-55	37101A
.. .. . ditto (Cadillac eng.)	1952-55	40253A	Side	1952	52160A	Trafficators	1952	*54035A
Flasher unit	1954-55	*35003A (U.S.A.)	1952-54	52162B/D ditto	1952-55	*54034A
Fuse box	1952-55	033239	Stop tail	1953-54	52139B	Warning lights		
Generator	1952	22443A ditto	1955	52240A	Flasher or trafficator	1953-54	38052B
.. .. . ditto	1952-54	*22465A	Stop tail and flasher	1952	53178B/D ditto	1955	*38083B
.. .. . ditto	1955	22478A (U.S.A.)	1952-54	53153E	Ignition	1952-55	*38013B
Horn	1952-55	*69011F/J	Stop tail and flasher	1953-54	53199B	Main beam	1952-55	38052B
Low note	1952-55	*69012F/J	Stop tail and reverse	1953	53184B	Petrol reserve	1952-55	*38042A
High note	1952-55	38604A	Petrol reserve valve	1952-54	780060	Windshield wipers		
Inspection lamp sockets	1954-55	78265B	Starting motor	1952-55	26060A	Motor	1952-54	75158A
Junction box	1952-55	38604A	Steering column control	1952-53	32782A/F ditto	1955	*75147H
LAMPS		 ditto	1953-55	32882D	Wheelbox	1952-54	72592A/K
Bonnet	1953-55	56035E	SWITCHES		 ditto	1955	72636D
Driving (optional)	1955	55081A	Bonnet light	1952-55	31201B/D	Grommet, wheelbox	1952-54	729423
Fog (optional)	1952-55	*55055B	Knob	—	314026	Crosshead and rack assy.	1952-54	736307
Head, Home and Export	1952-53	*50954A	Dipper	1953-54	31226B	Cut to 50 #	1955	*741279
R.H.D., dip left	1953-54	50941A	Door light	1952-53	*31222A	Crosshead and rack assy.	1955	741279
.. .. . ditto	1953-54	50941A	Heater	1954-55	31404A	Outer casing	—	—
.. .. . ditto (Home, alternative)	1953-54	*51334A	Knob	—	768473	Motor to wheelbox	1952-54	739870
.. .. . ditto	1954-55	51336A	Ignition and lighting	1952-55	*34018A ditto	1955	745132
.. .. . ditto (Home, alternative)	1955	51596A	Panel	1952-55	78237A	Wheelbox to wheelbox	1952-54	*739979
Head, Export	1952-53	*50804D	Knob	—	*768507	3", offside wheelbox	1952-54	740031
L.H.D., dip right	1953-54	50973A	Reverse lamp	1952-54	31281B ditto	1955	745133
.. .. . ditto	1955	*51337B	Spring	—	*315714	End tube	1955	740746
.. .. . ditto	1955	*51337B	Solenoid, starting motor	1952-55	*76411D/E	Arm	1952-54	*736411
						Blade	1952	741810
					 ditto	1952	*737482
					 ditto	1952	*737682
					 ditto	1953-55	741680

* See Supersession Chart L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive



ALLARD 'Clipper' Three-wheeler 1955

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Control box	1955	*37127F	SWITCHES			SWITCHES—continued		
Generator	1955	22008B	Starting motor	1955	76423A	Step light	1955	31082D
Starting motor	1955	25037A	Coupling	1955	764428			

ALLARD Palm Beach '21C' and '21Z' Models 1953-55

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1953-55	*36117A	LAMPS—continued			SWITCHES—continued		
Battery	1953-55	GT9A	Head, Export Europe			Windshield wiper	1953-55	31201B
Coil ignition	1953-55	*45012A/D	(not France)	1955	51339A	Knob	—	*314691
Control box	1953-54	*37138B	Head, Export France	1955	*51590A	Terminal block		
"	1955	*37139E	Number plate illumination	1953-55	53093E	" 21C Model	1953-55	37101A/B
Distributor	1953	40252A/B	Side and flasher	1953-54	*52051A	" 21Z Model	1955	37101B
" 21Z Model Later	1953-55	40252D	"	1955	52240A	Warning lights		
" 21C Model	1953-55	*40244A/K	Stop tail and flasher	1953-54	53153E	Flasher	1953-55	*38083A
Flasher unit	1954-55	*35003A	Stop tail and reverse	1955	53184B	Ignition	1953-54	*38013B
Fuse box	1953-55	033239	Starting motor			Main beam	1953-54	38052B
Generator	1953-55	22265A/B	" 21Z Model	1953-55	25529A/D	Petrol	1953-54	*38042A
Horn			" 21C Model	1953-55	25022A/L			
Low note	1953-55	*69011F/J	Steering column control	1953-55	32892B	Windshield wipers		
High note	1953-55	*69012F/J				Motor	1953-55	75152A
Junction box	1953-54	78265B	SWITCHES			Wheelbox	1953-55	72629A/D
LAMPS			Dipper	1953-55	31284A	Crosshead and rack assy.		
Head, Home and Export			Ignition	1953-55	31187D	Cut to 50 1/8"	1953-55	736307
R.H.D., dip left	1953-54	50941A	Lighting	1953-55	31126B	Outer casing		
ditto Later	1954	*51335A	Knob	—	*316131	Motor to wheelbox	1953-55	*739832
ditto	1955	51336A	Panel	1953-55	31201B	Wheelbox to wheelbox	1953-55	*739971
Head, Export			Knob	—	*314664	3", offside wheelbox	1953-55	740031
L.H.D., dip right	1953-54	50973A	Solenoid, starting motor	1953-55	*76411D/E	Arm	1953-55	*73762A
ditto Later	1954	*51337A	Solenoid operating	1953-55	*31071A	Blade	1953-55	738724
ditto	1955	*51337B	Stop lamp	1954-55	31082B			

ALVIS 14 h.p. 1946-50

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1946-50	36023F	LAMPS—continued			SWITCHES—continued		
Battery	1946-50	SG11A	Side	1946-50	52030A	Stop lamp	1946-50	31281B
Coil, ignition	1946-50	*45012A/D	Mirror	1946-50	*580785	Spring		315543
Control box	1946-48	*37032A	Petrol reserve valve	1946-50	78001A	Trafficators	1946-50	*54039A
"	1949-50	*37076E	Starting motor	1946-50	*255721	Warning light (ignition)	1946-49	*318526
Distributor	1946-48	40071A/B	Steering column control	1946	32718A	"	1950	318604
"	1949-50	40071D/F	ditto	1947-50	32757A	Windshield wipers		
Fuse box	1946-50	*37137A	ditto (Export)	1947-50	32755A	Motor	1946-50	*75053J
Generator	1946-49	*22447A	ditto (Sports Model)	1950	32830A	Control box	1946-50	72561A
"	1950	*22435A/B	SWITCHES			Wheelbox	1946-50	72560A/K
Horn			Heater	1949	*78220A	Grommet, wheelbox	1946-50	734697
Low note	1946-50	*69025A	Knob	—	*768499	Crosshead and rack assy.		
" (Sports Model)	1950	*69011F	Ignition and lighting	1946-50	*34028B	Cut to 29 1/8"	1946-50	738764
High note	1946-50	*69026A	ditto (Sports Model)	1950	*34059A	Inner cable rack	1946-50	736024
" (Sports Model)	1950	*69012F	Panel	1946-49	*31063A	Outer casing		
LAMPS			Knob	—	*316205	Motor to wheelbox	1946-50	*739907
Head, Home			Panel	1950	*31209A	4", nearside wheelbox	1946-50	740032
R.H.D., dip left (L.H.)	1946	50150D	Knob	—	*316205	3", offside wheelbox	1946-50	740031
" non dip (R.H.)	1946	50151D	Petrol	1946-49	*31064A	Wheelbox to control box	1946-50	739937
" dip left (L.H.)	1949-50	*50330D	Knob	—	*314662	Offside	1946-50	739937
" non-dip (R.H.)	1949-50	*50331D	Petrol	1950	*31209A	Nearside	1946-50	739937
Head, Export			Knob	—	*314662	Guide tube, offside	1946-50	735895
L.H.	1949-50	*50580B	Reverse lamp	1946-50	*31077D	wheelbox	1946-50	*735098
R.H.	1949-50	*50581B	Solenoid, starting motor	1946-50	76022B	Arm	1946-50	727707
Number plate illumination	1946-50	*53034A	Solenoid operating	1946-50	*317089	Blade	1946-50	727784
						" (Sports Model)	1950	727784

ALVIS 3 litre TA21 1951-53; TC21, TC21/100, 'Grey Lady' and Tickford Coupé 1954-55

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1951-54	*36111A	LAMPS—continued			SWITCHES—continued		
"	1955	36135A	Head, Export France	1952-54	*50962A	Petrol reserve	1951-55	31248A
Battery	1951-55	GT11A	"	1955	*51341A	Knob	—	316367
Coil, ignition	1951-55	*45012A/D	Head, Export U.S.A.	1951	50811A	Reverse lamp	1951-55	*31077D
Control box	1951-55	*37076E	Number plate illumination	1951-55	53097D/E	Solenoid, starting motor	1951-55	*76411D/E
Distributor	1951-53	40216A/B	Side	1951-55	52030A	Solenoid operating	1951-55	31253A
"	1954-55	40411A	" (U.S.A.)	1951-53	52139B	Knob	—	317362
Flasher unit (optional)	1955	*35003A	" (Special orders)	1955	52134B	Stop lamp	1955	31082D
Flasher relay (when fitted)	1955	33117A	Stop tail	1951-55	53174B	Windshield wiper	1951-55	31248A/B
Fuse box	1951-55	37110A	Stop tail and flasher			Knob	—	*316369
Generator	1951-52	*22435A/B	(U.S.A.)	1951-54	53153E	Terminal block	1951-55	37101A
" Later	1952-55	*22436A/B	Mirror (Saloon)	1951-55	*062553	Trafficators	1951-53	*54039A
Horn			" (Coupé)	1951-55	062573	Warning light (ignition)	1951-54	*38065A
Low note	1951-55	*69011F/J	Panel light	1951-55	39007A	"	1955	38059A
High note	1951-55	*69012F/J	Bulb	—	987	Windshield wipers		
LAMPS			Petrol reserve valve	1951-53	78020A	Motor	1951-52	*75055L
Driving	1954-55	55081A	" Later	1953-55	78023A	"	1953-55	75152A
Fog	1954-55	*55055A/D	Starting motor	1951-55	26041A/B	Wheelbox	1951-55	72560K
Head, Home and Export			Steering column control	1951-52	32842F/K	Grommet, wheelbox	1951-52	729423
R.H.D., dip left	1951	*50445K	"	1953-55	32863A/H	"	1953-55	734181
ditto Later	1951-53	*50954A	SWITCHES			Crosshead and rack assy.		
ditto	1953	*51335A	Choke	1951-55	31248A/B	Cut to 40 1/8"	1951-55	736307
ditto	1953-55	51336A	Knob	—	316386	Outer casing		
ditto (alternative)	1954-55	51596A	Dipper	1951-55	31284A	Motor to wheelbox	1951-55	739868
Head, Export			Foglamp	1954-55	31201D	Wheelbox to wheelbox	1951-55	*739966
L.H.D., dip right	1951	*A50445K	Knob	—	314026	3", offside wheelbox	1951-55	740031
ditto Later	1951-53	*50804D	Ignition	1951-55	31187D	Arm, L.H.	1951-53	*737633
ditto	1953	*51338A	Lighting	1951-54	*31251A	" R.H.	1951-53	*737622
ditto	1953-54	*51337A	Knob	—	*316118	L.H. and R.H.	1953-55	*737596
ditto	1955	*51337B	Lighting	1955	31126B	Blade	1951-53	727707
Head, Export Europe			Knob	—	*316118	" Later	1953-55	737681
(not France)	1951	*B50445K	Panel	1951-55	31248A			
ditto Later	1951-53	*50963A	Knob	—	*316368			
ditto	1953	*51340A						
ditto	1953-55	51339A						

* See Supersession Chart L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



ALVIS 3 litre TB21 Sports 1952

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1952	GT11A	LAMPS—continued			SWITCHES—continued		
Coil, ignition	1952	*45012A/D	Side	1952	52139B	Solenoid, starting motor	1952	*76411D
Control box	1952	*37076E	Stop tail	1952	53174B	Solenoid operating	1952	*31333A
Distributor	1952	40216A/B	Stop tail and flasher			Windshield wiper	1952	*31209A
Fuse box	1952	37110A	(U.S.A.)	1952	53153E	Knob		*316239
Generator	1952	*22435A/B	Mirror	1952	*062553	Terminal block	1952	37101A
"	Later	*22456B	" (Tickford body)	1952	062573	Trafficators	1952	*54039A
Horn			Panel light	1952	39007A	Warning light (ignition)	1952	*38065A
Low note	1952	*69011F	Petrol reserve valve	1952	78020A	Windshield wipers		
High note	1952	*69012F	"	Later	78023A	Motor	1952	75153A
LAMPS			Starting motor	1952	26041A/B	Wheelbox	1952	72629A/D
Head, Home and Export			Steering column control	1952	32855A/J	Crosshead and rack assy.		
R.H.D., dip left	1952	*50954A	SWITCHES			Cut to 39 1/2"	1952	736307
Head, Export			Dipper	1952	31284A	Outer casing		
L.H.D., dip right	1952	*50804D	Lighting	1952	*34072A	Motor to wheelbox	1952	739870
Head, Export Europe			Panel	1952	*31209A	Wheelbox to wheelbox	1952	*739956
(not France)	1952	*50963A	Knob		*316237	3", offside wheelbox	1952	740031
Head, Export France	1952	*50962A	Petrol or oil	1952	*31209A	Arm, left hand	1952	*737596
Number plate illumination	1952	53093E	Knob		*316238	" right hand	1952	*737595
			Reverse lamp	1952	*31077D	Blade	1952	*737482

ALVIS 3 litre TC108G Saloon (Graber Body) 1956-57

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1956-57	*36111A	LAMPS—continued			SWITCHES—continued		
Battery	1956-57	GT11A	Interior	1956-57	56062B	Panel	1956-57	*31515A
Coil, ignition	1956-57	*45054H	Number plate and reverse	1956-57	*53573A	Knob		315112
Control box	1956-57	37183H	Side and flasher	1956-57	52236A	Petrol reserve valve	1956-57	*31515A
Distributor	1956-57	40554A	Stop tail, flasher and reflex	1956-57	*53479A	Reverse lamp		312953
Flasher unit	1956-57	35010A	Mirror	1956-57	*062558	Knob	1956-57	*31077E
Fuse box	1956-57	37110A	Petrol reserve valve	1956-57	78023A	Solenoid, starting motor	1956-57	*76411E
Generator	1956-57	033239	Starting motor	1956-57	26041B	Stop lamp	1956-57	31082E
"	Later	*22483B	SWITCHES			Windshield wiper	1956-57	*31515A
Horn			Choke	1956-57	*31515A	Knob		312951
Low note	1956-57	69046E	Knob		312950	Windshield wipers		
High note	1956-57	69047E	Dipper	1956-57	31673A	Motor	1956-57	75296A
LAMPS			Door light	1956-57	31663A	Wheelbox	1956-57	72674A
Fog	1956-57	55128B	Foglamp	1956-57	*31515A	Crosshead and rack assy.	1956-57	743238
Head, Home and Export			Knob		313618	Outer casing		
R.H.D., dip left	1956-57	51596A	Ignition and starting	1956-57	*31678A	Motor to wheelbox	1956-57	744682
Head, Export			Interior	1956-57	*31515A	Wheelbox to wheelbox	1956-57	744683
L.H.D., dip right	1956-57	*51337D/E	Knob		313671	End tube	1956-57	740746
Head, Export Europe			Lighting	1956-57	*31251A	Grommet	1956-57	740811
(not France)	1956-57	51339B/H	Knob		316151	Arm	1956-57	745080
Head, Export France	1956-57	*51341B/E	Lighting			Blade	1956-57	738734

ALVIS 3 litre TD21 Saloon and Coupé 1958-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1958-60	36249A	LAMPS—continued			SWITCHES—continued		
Battery	1958-60	BT9A	Head, Export France	1958-60	58231A	Panel rheostat	1958-60	*78320A
Bulb holder, panel	1958-60	39007A	Number plate illumination			Petrol reserve valve	1958-60	*31515A
Coil, ignition	1958-60	*45054H	and reverse	1958-60	*53573A	Knob		312953
Control box	1958-59	*37189J	Side	1958-60	52325A/B	Reverse lamp	1958-60	*31077E
"	Later	37303A	Stop tail, flasher and reflex	1958-60	53527A/B	Solenoid, starting motor	1958-60	*76411E
Distributor	1958-60	40641A	ditto (Export Canada)	1958-60	53689A/B	Stop lamp	1958-60	31082H
Flasher unit	1958-59	35010A	Mirror	1958-60	062588D	Windshield wiper	1958-60	31892A
"	Later	35020A	Petrol reserve valve	1958-60	78023A	Knob		*318168
Fuse box	1958-60	033239	Starting motor	1958-60	26041B	Terminal block	1958-60	37101B
Generator	1958-59	*22483D	Steering column control	1958-60	33535A	Warning lights		
"	Later	22489B/D	Suppressor	1959-60	78106A	Flasher and main beam		
Horn			SWITCHES			Bulb	1958-60	987
Low note	1958-60	69087A	Choke	1958-60	*31515A	Adaptor	1958-60	*863143
High note	1958-60	69090A	Knob		312950	Ignition	1958-59	38100A
Horn relay	1958-59	*33135B	Dipper	1958-59	31750A	"	Later	38156A
"	Later	33209A	"	Later	31800A	Windshield wipers		
LAMPS			Door light	1959-60	31663B	Motor	1958-60	75310A
Flasher, front	1958-59	*52272D	Foglamp	1958-60	*31515A	Wheelbox	1958-60	72726A
ditto	1959-60	*52444A	Knob		313618	Crosshead and rack assy.		
ditto (Export Canada)	1959-60	*52464A	Ignition and starting	1958-60	*31678B	Cut to 39 1/2"	1958-60	744256
Fog	1958-60	55128B	Inhibitor (Borg Warner transmission, when fitted)			Outer casing		
Head, Home and Export			"	1959-60	31680A	Motor to wheelbox	1958-60	744682
R.H.D., dip left	1958-60	58336A	Interior	1958-60	*31515A	Wheelbox to wheelbox	1958-60	744683
Head, Export			Knob		313671	End tube	1958-60	740746
L.H.D., dip right	1958-59	*51337D/E	Lighting	1958-60	*31251D	Ferrule, casing retaining	1958-60	740715
"	1960	*51337F/K	Knob		316151	Grommet	1958-60	740811
Head, Export Europe			Lighting			Arm	1958-60	745081
(not France)	1958-60	58230A	Knob			Blade	1958-60	738734

ARMSTRONG SIDDELEY 'Hurricane' and 'Lancaster' 1946-53; 'Typhoon' 1948-50

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1946-53	GT9A	Distributor	1950	40207A	Horn		
Coil, ignition	1946-53	*45020A/B	"	Later	1950	40207B	Low note	1946-50
Control box	1946-48	*37032A	"	1950-53	40207D/E	"		*69021A
"	1949-50	37065E	Fuse box	1949-52	*37107A	"		*69011F
"	1951-52	*37076E	"	Later	033239	High note	1946-50	*69022A
"	1952-53	*37139D	Generator	1946-49	*22447A	"		*69012F
Distributor	1946	*40060A	"	1950-52	*22435A/B	"		
"	1947-49	40110A/B	"	Later	*22456A/B	Junction box	1946-53	78266B

* See Supersession Chart

L.H.D. .. Left hand drive R.H.D. .. Right hand drive

continued



ARMSTRONG SIDDELEY 'Hurricane' and 'Lancaster' 1946-53: 'Typhoon' 1948-50—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS			Starting motor	1946-49	*255721	Trafficators	1946-49	*54018D
Boot	1950-53	*53019A	"	1950-53	25521B/D	"	1950-53	*54039A
Head, Home			Steering column control ..	1946-49	32704D/E	Warning lights		
R.H.D., dip left (L.H.)	1946-47	*50165A	"	1950-53	32810D/H	Ignition	1946-53	*318534
" non-dip (R.H.)	1946-47	*50166A				Side lamp	1950-53	*318534
" dip left (L.H.)	1948-50	*50756E	SWITCHES			Windshield wipers		
" non-dip (R.H.)	1948-50	*50755E	Boot lamp	1946-53	*359216	Motor	1946-47	*75055K
" dip left (L.H.)	1951	*50799D	Fan	1946-53	*78244A	"	1948-50	*75063K
" non-dip (R.H.)	1951	*50579K	Knob	—	768442	"	1951	*75063L
Head, Export			Heater	1950	*78257A	"	1952-53	75148A
R.H.D. dip left			Knob	—	*768654	Control box	1946-47	*72547A
(L.H. and R.H.)	1948-50	*50756E	Heater	1951-52	*78244A	Wheelbox	1946-53	*72548A/K
"	1951	*50799D	Knob	—	768443	Crosshead and rack assy.		
Head, Home and Export			Heater Later	1952-53	*78276A	Cut to 34 1/2"	1946-51	*736177
R.H.D., dip left			Knob	—	*768691	" 42 1/2"	1952-53	*732706
(L.H. and R.H.)	Later	*50959A	Ignition	1946-53	31287A	Inner cable rack	1946-47	736024
"			Lighting	1946-49	31044A	Outer casing		
Head, Export			"	1950-53	*31240A	Motor to control box ..	1946-47	739858
L.H.D., dip right ..	1948-50	*A50756E	Panel	1946-50	*31043B	ditto (Export)	1946-47	*736357
"	1951	*A50799D	"	1951-53	*31242B	Motor to wheelbox	1948-51	*739907
" Later	1951-53	*50528M	Petrol	1946-49	*31042A	"	1952-53	*739868
Head, Export Europe			"	1950-53	31256A	4", nearside wheelbox	1946-47	740032
(not France)	1948-50	*B50756E	Reverse lamp			Wheelbox to wheelbox	1948-53	*739956
ditto	1951	*B50799D	Synchromesh	1950-53	*31077D	3", offside wheelbox	1946-53	740031
ditto Later	1951-53	*50961A	Pre-selector	1950-53	31281B	Control box to wheel-		
Head, Export France			Solenoid, starting motor			boxes	1946-47	*738009
"	1948-50	*50757E	Solenoid operating	1946-49	76022B	Guide tube	1946-47	735895
"	1951-53	*50808D	"	1950-53	*76411D	Grommet	1946-53	735824
Number plate box	1946-53	*53045B	Solenoid operating	1946-50	*31045A	Arm	1946-47	735097
Side	1951-53	52139B	"	1951-53	31241A	" (Export)	1946-47	735099
Stop tail and number plate			Stop lamp	1946-53	31281B	" 'Lancaster'	1948	*736418
'Typhoon'	1948-50	*53072B	Spring	—	315543	"	1948-53	*737520
Panel light	1950-53	39006A	Windshield wiper			Blade	1946-47	727784
Petrol reserve valve ..	1950-53	78000A	"	1950	*31131A	" 'Lancaster'	1948	736412
			"	1951-53	31243A	"	1948-53	736414

ARMSTRONG SIDDELEY Utility 1950-52

Battery	1950-52	GT9A	LAMPS—continued			SWITCHES—continued		
Coil, ignition	1950-52	*45020A/B	Head, Export			Solenoid operating	1950	*31045A
Control box	1950-52	*37076E	R.H.D., dip left			"	1951-52	31241A
" Later	1952	*37139D	(L.H. and R.H.)	1950	*50756E	Stop lamp	1950-52	31281B
Distributor	1950	40207A	L.H.D., dip right	1950	*50799D	Spring	—	315543
" Later	1950	40207B	"	1951	*A50799D	Windshield wiper	1950	*31131A
"	1950-52	40207D/E	"	1952	*50528M	"	1951-52	31243A
Fuse box	1950-52	*37107A	Head, Export Europe			Trafficators	1950-52	*54039A
" Later	1952	033239	(not France)	1950	*B50756E	Warning light	1950-52	*318534
Generator	1950-52	*22435A/B	ditto	1951	*B50799D	Windshield wipers		
" Later	1952	*22456A/D	ditto Later	1951-52	*50961A	Motor	1950	*75063K
Horn	1950-52	*69011F	Head, Export France ..	1951	*50808D	"	1951-52	*75063L
Junction box	1950-52	78266B	Side	1951-52	52139B	" Later	1952	75148A
LAMPS			Stop tail and number plate			Wheelbox	1950-52	*72548A/K
Head, Home			Starting motor	1950-52	*53072B	Crosshead and rack assy.		
R.H.D., dip left (L.H.)	1950	*50756E	Steering column control ..	1950-52	25521B/D	Cut to 34 1/2"	1950-52	736177
" non-dip (R.H.)	1950	*50755E			32815A/H	" 42 1/2" Later	1952	736307
" dip left (L.H.)	1951	*50799D	SWITCHES			Outer casing		
" non-dip (R.H.)	1951	*50579K	Ignition	1950-52	31287A	Motor to wheelbox	1950-52	*739907
" dip left (L.H. and R.H.)	Later	*50959A	Lighting	1950-52	*31240A	ditto Later	1952	739868
			Panel	1950	*31043B	Wheelbox to wheelbox	1950-52	*739956
			Solenoid, starting motor			3", offside wheelbox ..	1950-52	740031
						Grommet	1950-52	735824
						Arm	1950-52	*737520
						Blade	1950-52	736414

ARMSTRONG SIDDELEY 'Whitley' Saloon 1950-53

Battery	1950-53	GT9A	LAMPS—continued			SWITCHES—continued		
Coil, ignition	1950-53	*45020A/B	Head, Export			Reverse lamp		
Control box	1950-53	*37076E	L.H.D., dip right	1950	*A50879A	Synchromesh	1950-53	*31077D
Distributor	1950	40207A	"	1951	*A50799D	Pre-selector	1950-53	31281B
" Later	1950	40207B	" Later	1951-53	*50528M	Solenoid, starting motor	1950-53	*76411D
Fuse box	1950-53	*37107A	Head, Export Europe			Solenoid operating	1950	*31045A
Generator	1950-52	*22435A/B	(not France)	1950	B50756E	"	1951-53	31241A
" Later	1952-53	*22456A/D	ditto	1951	*B50799D	Stop lamp	1950-53	31281B
Generator pulley	1950-53	228080	ditto Later	1951-53	*50961A	Spring	—	315543
Horn	1950	*69021A	Head, Export France ..	1950	50757E	Windshield wiper	1950	*31131A
Low note	1951-53	*69011F	Map reading	1950	*50808D	"	1951-53	31243A
High note	1950	*69022A	Number plate illumination			Trafficators	1950-53	*54039A
"	1951-53	*69012F	Side	1950-53	53093E	Warning lights		
Junction box	1950-53	78266B	Stop tail and reverse ..	1950-53	52139B	Ignition	1950-53	*318534
LAMPS			Petrol reserve valve	1950-53	53198B	Side lamp	1950-53	*318534
Boot	1950-53	*53019A	Relay	1950-53	78014A	Windshield wipers		
Head, Home			Starting motor	1950-53	33052B	Motor	1950	*75063K
R.H.D., dip left (L.H.)	1950	*50879A	Steering column control ..	1950-53	25521B/D	"	1951-52	*75063L
" non-dip (R.H.)	1950	*50881A			32810B/J	" Later	1952-53	75148A
" dip left (L.H.)	1951	*50799D	SWITCHES			Wheelbox	1950-53	*72548A/K
" non-dip (R.H.)	1951	*50579K	Boot lamp	1950-53	*359216	Crosshead and rack assy.		
Head, Export			Heater	1950-53	*78257A	Cut to 34 1/2"	1950-52	736177
R.H.D., dip left			Knob	—	*768654	" 42 1/2" Later	1952-53	736307
(L.H. and R.H.)	1950	*50879A	Ignition	1950-53	31287A	Outer casing		
"	1951	*50799D	Lighting	1950-53	*31240A	Motor to wheelbox	1950-52	*739907
Head, Home and Export			Panel	1950	*31043B	ditto Later	1952-53	739868
R.H.D., dip left			Petrol	1950-53	*31352A	Wheelbox to wheelbox	1950-53	*739956
(R.H. and L.H.) Later	1951-53	*50959A			31256A	3", offside wheelbox ..	1950-53	740031
						Grommet	1950-53	735824
						Arm	1950-53	*737520
						Blade	1950-53	736414

* See Supersession Chart L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



ARMSTRONG SIDDELEY Limousine 1951-52

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1951-52	GT9A	LAMPS—continued			SWITCHES—continued		
Coil, ignition	1951-52	*45020A/B	Head, Export	1951	*A50799D	Reverse lamp	1951-52	*31077D
Control box	1951-52	*37076E	L.H.D., dip right	1951-52	*50528M	Synchromesh	1951-52	31281B
" Later	1952	*37139D	" Later			Pre-selector	1951-52	*76411D
Distributor	1951-52	40207D/E	Head, Export Europe	1951	*B50799D	Solenoid, starting motor	1951-52	*31045A
Fuse box	1951-52	*37107A	(not France)	1951	*50961A	Solenoid operating	1951-52	31281B
" Later	1952	033239	ditto Later	1951-52	*50808D	Stop lamp	1951-52	315543
Generator	1951-52	*22435A/B	Head, Export France	1951	*50808D	Spring	—	—
" Later	1952	*22456A/D	Number plate illumination	1951-52	53093E	Windshield wiper	1951-52	*31131A
Horn			Side	1951-52	52139B	Trafficators	1951-52	*54039A
Low note	1951-52	*69011F	Stop tail and reverse	1951-52	53198B	Warning lights		
High note	1951-52	*69012F	Panel light	1951-52	39006A	Ignition	1951-52	*318534
Junction box	1951-52	78266B	Petrol reserve valve	1951-52	78000A	Side lamp	1951-52	*318534
LAMPS			Starting motor	1951-52	25521B/D	Windshield wipers		
Boot	1951-52	*53019A	Steering column control	1951-52	32810A/J	Motor	1951-52	*75063L
Head, Home			SWITCHES			Wheelbox	1951-52	*72548A/K
R.H.D., dip left (L.H.)	1951	*50799D	Heater	1951-52	*78276A	Crosshead and rack assy.		
non-dip (R.H.)	1951	*50579K	Knob	—	*76869I	Cut to 45°	1951-52	736307
Head, Export			Ignition	1951-52	*31163A	Outer casing		
R.H.D., dip left	1951	*50799D	Lighting	1951-52	31044A	Motor to wheelbox	1951-52	739868
(L.H. and R.H.)			Panel	1951-52	*31043B	Wheelbox to wheelbox	1951-52	*739960
Head, Home and Export			Petrol	1951-52	*31042A	3", offside wheelbox	1951-52	740031
R.H.D., dip left						Grommet	1951-52	735824
(R.H. and L.H.) Later	1951-52	*50959A				Arm	1951-52	*737481
						Blade	1951-52	736412

ARMSTRONG SIDDELEY 'Sapphire' 1953-55

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1953-54	*36114B	LAMPS—continued			SWITCHES—continued		
" Later	1954	*36024E	Head, Export Europe,	1953	B51065A	Solenoid operating	1953-55	31115A
" 1955	1955	36201A	except countries stated	1953-55	51483A	Knob	1955	317337
Battery	1953-55	GT11A	ditto Later	1953-55	51484A	Stop lamp	1953-55	31082D
Coil, ignition	1953-55	*45012A/D	Head, Export France	1953-55	51484A	Windshield wiper	1953-55	31302A/D
Control box	1953-55	*37139D/E	Head, Export Switzerland	1954-55	51553A	Knob	1953-55	*317601
Distributor	1953	*40354A	Head, Export U.S.A.	1953-55	51067B	Terminal block	1953-55	37101A/B
" Later	1953-54	*40366A	Head, Export Canada	1953-55	51495A	Trafficators	1953-54	54044D
" 1954-55	1954-55	*40392B	Map reading (panel)	1953-55	39006A	Warning lights		
Flasher unit	1955	*35003A	Number plate illumination	1953-55	53097D/E	Direction indicator	1953-54	*318534
Flasher relay	1955	33117A	Side	1953	52150B	Main beam	1953-54	38052B
Fuse box	1953-55	033240	Side and flasher (U.S.A.)	1953-55	52212A	" (U.S.A. and Canada)	1953-54	*318534
Generator	1953-54	*22456A/D	Stop tail and reverse	1953-54	*52162B/D	Windshield wipers		
" 1955	1955	*22483A	Stop tail and flasher	1953-55	53183B	Motor, left hand drive	1953	*75183A
Horn			(U.S.A.)	1955	53199B	Motor, right hand drive	1953	*75236A
Low note	1953-55	*69011F	Stop tail and flasher	1955	53410A	Motor, " " " "	1953	*75199B
High note	1953-55	69046A	Stop tail, flasher and reflex	1955	*57035A	"	1953	*75235A
" Later	1955	69046A	Reflex reflector	1953-54	57085A	Wheelbox	1953-55	72639D
High note	1953-55	*69012F	"	1955	78024A	Crosshead and rack assy.	1953-55	741264
" Later	1955	69047A	Petrol reserve valve	1953-55	26041A/B	Outer casing	1953-55	740867
Junction box	1953-55	78266B	Starting motor	1953-55	32883A/E	Motor to wheelbox	1953-55	740782
LAMPS			Steering column control	1953-55	32948A	Wheelbox to wheelbox	1953-55	740746
Bonnet	1955	39006A	Suppressor	1954-55	78105A	End tube	1953-55	740746
Boot	1953	*53019A	SWITCHES			Arm, left hand drive	1953-55	745072
Flasher, front	1953-55	53163A	Dipper	1953-55	31284A	Arm, right hand drive	1953-55	745071
Fog	1955	53359A	Foglamp	1953-55	31114A	Blade	1953-55	738734
Fog	1953-55	55043E	Knob	—	315244	Pre-selector gear change		
Head, Home			Heater or fan	1953-55	*31302A/D	equipment		
R.H.D., dip left (L.H.)	1953-54	51065A	Knob	—	*317649	Fuse box, gear change		
non-dip (R.H.)	1953-54	*51066A	Ignition	1953-55	31287A	solenoid	1953-55	*37130A
Head, Home and Export			Lighting	1953-55	31114A	Relay, gear change	1953-55	*33116B
R.H.D., dip left			Knob	—	315243	Cover	1953-55	340786
(L.H. and R.H.)	1955	51065A	Panel	1953-55	31113A	Solenoid, gear change	1953-55	76501A
Head, Export			Knob	—	316494	Switches		
R.H.D., dip left			Petrol reserve	1953-55	31113A	Kick-down	1953-55	31397A
(L.H. and R.H.)	1953-54	51065A	Knob	—	316496	Rubber cover	1953-55	317870
L.H.D., dip right	1953	A51065A	Reverse lamp	1953-54	31281B	Pre-selector gear change		
" Later	1953-55	51482D/E	" Later	1954-55	*31077D/E	R.H.D.	1953-55	31398A
			Solenoid, starting motor	1953-55	*76411D/E	L.H.D.	1953-55	31414A

ARMSTRONG SIDDELEY 'Sapphire' 234 and 'Sapphire' 236 1956-58

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1956-58	36201A/D	Horn			LAMPS—continued		
Battery	1956-58	GT9A	Low note	1956-58	69046A/F	Head, Export		
Coil, ignition	1956-58	*45054H/K	High note	1956-58	69047A/F	L.H.D., dip right	1956-58	51953A/D
Control box	1956-58	*37187K/L	LAMPS			Number plate illumination		
Distributor (234)	1956-57	40542B	Bonnet	1956-58	*39023A	and reverse	1956-58	*53523A
" (236)	1956-58	40607A/B	Boot	1956-58	53163B	Roof	1956-58	56060A
Flasher unit	1956-57	40519A/D	Flasher, front	1956-58	53359D	Side	1956-58	52325A/B
"	1958	*35003A	Flasher, repeater	1956-58	52326B	Stop tail, flasher and reflex	1956-58	53489A
Fuse box	1956-58	35010A	Head, Home and Export			Petrol reserve valve	1956-58	78024F
" (236 Manumatic)	1956-58	033240	R.H.D., dip left	1956-58	51891A	Starting motor (234)	1956-58	26041B
Generator	1956	*37201A	" Later	1958	51891B/E	" (236)	1956-58	25521D
"	1956	22258D	"			Steering column control	1956-58	32968A
"	1957-58	22258E/F	"			Suppressor	1956-58	78105A

* See Supersession Chart L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive continued



ARMSTRONG SIDDELEY 'Sapphire' 234 and 'Sapphire' 236 1956-58—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			SWITCHES—continued			Windshield wipers—cont'd		
Air control knob ..	1956-58	318180	Solenoid operating ..	1956-58	31115A	Ferrule, casing retaining	1956-58	740715
Dipper ..	1956-58	31284A	Knob (234) ..	1956-58	317337	Arm ..	1956-58	745071
Ignition ..	1956-58	31287A/B	Knob (236) ..	1956-58	317348	Blade ..	1956-58	738734
Lighting ..	1956-58	31114E	Windshield wiper ..	1956-58	*31302D	Laycock de Normville overdrive equipment		
Knob (234) ..	1956-58	318173	Knob (234) ..	1956-58	318171	Relay ..	1956-57	33158A
" (236) ..	1956-58	315247	Knob (236) ..	1956-58	318492	" ..	1958	33157A/D
Panel ..	1956-58	31114E	Terminal block ..	1956-58	37101B	Solenoid, transmission gear		
Knob (234) ..	1956-58	316494	Windshield wipers ..	1956-58	*75232A	gear ..	1956-58	*76505B
" (236) ..	1956-58	315246	Motor ..	1956-58	72674A	ditto ..	1958	76515A
Petrol reserve valve ..	1956-58	31113E	Wheelbox ..	1956-58	741263	Switches		
Knob (234) ..	1956-58	316496	Crosshead and rack assy. ..	1956-58	741263	Interrupter ..	1956-58	*31077E
" (236) ..	1956-58	316523	Cut to 40" ..	1956-58	744048	Operating ..	1956-58	31587A
Reverse lamp ..	1956-58	*31077E	Outer casing ..	1956-58	745226			
Roof lamp ..	1956-58	31571A	Motor to wheelbox ..	1956-58	740746			
Solenoid, starting motor	1956-58	*76411E	Wheelbox to wheelbox ..	1956-58	740746			
			End tube ..	1956-58	740746			

ARMSTRONG SIDDELEY 'Sapphire' 346 Saloon 1956-59: Limousine 1956-59

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter ..			LAMPS—continued			Windshield wipers		
Battery ..	1956-59	36201A/D	Side ..	1956-59	52212A	Motor, left hand drive	1956-58	*75236A
Coil, ignition ..	1956-59	GT11A	Stop tail, flasher and reflex	1956-59	53410A/B	ditto .. Later	1958-59	75311A
Control box ..	1956-59	*45054H/K	Petrol reserve valve ..	1956-58	78024F	Motor, right hand drive	1956-58	*75235A
Distributor ..	1956-58	37183E/H	" " ..	1959	*78039A	ditto .. Later	1958-59	75310A
Flasher unit ..	1959	40608A	Starting motor ..	1956-59	26041B	Wheelbox ..	1956-59	72639D
Flasher relay ..	1958-59	*35003A	Steering column control ..	1956-59	32948A	Crosshead and rack assy. ..	1956-58	741264
Fuse box ..	1956-59	35010A	Suppressor ..	1956-59	78105A	Cut to 49" ..	1959	744257
Generator ..	1956-59	*22483B/D	SWITCHES			Outer casing ..	1956-59	740867
Horn ..	1956-59	69046A/F	Dipper ..	1956-59	31284A	Motor to wheelbox ..	1956-59	740782
Low note ..	1956-59	69047A/F	Foglamp ..	1956-59	31114E	Wheelbox to wheelbox ..	1956-59	740746
High note ..	1956-59	78266B	Knob ..	1956-59	31524A	End tube ..	1956-59	740715
Junction box ..	1956-59	78266B	Heater ..	1956-59	*31302D	Ferrule, casing retaining	1956-59	740715
LAMPS			Knob ..	1956-58	318172	Arm, left hand drive	1956-58	745072
Bonnet ..	1956-59	*39023A	Ignition ..	1959	318172A	Saloon ..	1956-58	741837
Boot ..	1956-59	53163B	Lighting ..	1956-59	31287A/F	Limousine ..	1956-59	741837
Flasher, front ..	1956-59	53359D	Knob ..	1956-58	31114E	Arm, right hand drive	1956-58	745071
Fog ..	1956-59	55043H	Map light ..	1959	318173	Saloon ..	1956-58	741836
Head, Home ..	1956-59	51065B	Panel ..	1956-57	315243	Limousine ..	1956-59	741836
R.H.D., dip left ..	1956-59	51065B	Knob ..	1956-59	31571A	Blade ..	1956-59	738734
Head, Export ..	1956-59	51482D/E	Petrol reserve valve ..	1956-59	31114E	Pre-selector gear change equipment		
L.H.D., dip right ..	1956-59	51483B	Knob ..	1956-59	316494	Fuse box, gear change ..	1956-59	*37130A
Head, Export Europe, ..	1956-59	51484A	Reverse lamp ..	1956-59	*31077E	solenoid ..	1956-59	*33116B
except countries stated ..	1956-59	51553A/B	Roof lamp ..	1956-57	31571A	Relay, gear change ..	1956-59	340786
Head, Export France ..	1956-59	51067B	Solenoid, starting motor	1956-59	*76411E	Cover ..	1956-59	76501A
Head, Export Switzerland ..	1956-59	51495B	Solenoid operating ..	1956-59	31115E	Solenoid, gear change ..	1956-59	76501A
Head, Export U.S.A. ..	1956-59	53097E	Knob ..	1956-59	317337	Switches		
Head, Export Canada ..	1956-59	39006A	Stop lamp ..	1956-59	31082E	Kick-down ..	1956-59	31397A
Number plate illumination	1956-59	39006A	Windshield wiper ..	1956-59	*31302D	Cover, rubber ..	1956-59	317870
Panel ..	1956-59	39006A	Knob ..	1956-58	318171	Pre-selector gear change	1956-59	31398A/B
			Terminal block ..	1959	318171A	R.H.D. ..	1956-59	31414A/B
				1956-59	37101B	L.H.D. ..	1956-59	31414A/B

ARMSTRONG SIDDELEY ½ ton Pick-up Truck (Export only) 1957

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter ..			LAMPS—continued			SWITCHES—continued		
Battery ..	1957	36201B	Side ..	1957	*52074A	Windshield wiper ..	1957	31526A
Coil, ignition ..	1957	GTZ11A-2	Stop tail and flasher ..	1957	53178H	Knob ..	—	318171
Control box ..	1957	*45054H	Reflex reflector ..	1957	57079A	Choke control knob ..	1957	313617
Distributor ..	1957	37183H	Petrol reserve valve ..	1957	78024F	Starter control knob ..	1957	317337
Flasher unit ..	1957	*35003A	Starting motor ..	1957	26041B	Terminal block ..	1957	37101B
Flasher relay ..	1957	33117D	Steering column control ..	1957	32948A	Windshield wipers		
Fuse box ..	1957	033240	Suppressor ..	1957	78105A	Motor ..	1957	*75214A
Generator ..	1957	*22483B/D	SWITCHES			Wheelbox ..	1957	72639D
Horn ..	1957	69046E	Dipper ..	1957	31284A	Crosshead and rack assy. ..	1957	*743250
Low note ..	1957	69047E	Ignition ..	1957	31287B	Outer casing		
High note ..	1957	78266B	Lighting ..	1957	31114E	Motor to wheelbox ..	1957	740867
Junction box ..	1957	78266B	Knob ..	1957	318173	Wheelbox to wheelbox ..	1957	740782
LAMPS			Panel light ..	1957	31114E	End tube ..	1957	740746
Bonnet ..	1957	*39023A	Knob ..	1957	316494	Ferrule, casing retaining	1957	740715
Flasher, front ..	1957	53359D	Petrol reserve valve ..	1957	31113D	Arm, left hand drive ..	1957	745072
Head ..	1957	51067B	Knob ..	1957	316496	" right hand drive ..	1957	745071
Number plate illumination	1957	53101H	Starting motor ..	1957	76423A	Blade ..	1957	738734
Panel ..	1957	39006A	Coupling ..	—	764428			

ARMSTRONG SIDDELEY 'Star Sapphire' 1959-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter ..	1959-60	36201D	Distributor ..	1959-60	40650A/D	Horn		
Battery ..	1959-60	GT11A-3	Flasher unit ..	1959-60	35010A	Low note ..	1959-60	69046F
(Canada) ..	1959-60	GV13A	Fuse box ..	1959-60	033240	High note ..	1959-60	69047F
Coil, ignition ..	1959-60	*45054K	Generator ..	1959	*22524E	Junction box ..	1959-60	78266B
Control box ..	1959	*37189J	" ..	1960	22528D			
" ..	1960	37297A						

* See Supersession Chart

L.H.D. .. Left hand drive R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



ARMSTRONG SIDDELEY 'Star Sapphire' 1959-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS			Petrol reserve valve	1959-60	78039A	SWITCHES—continued		
Bonnet	1959	*39023A	Relay, horn	1959-60	*3198A	Solenoid, starting motor	1959-60	*76411E
Boot	1959-60	53163A	Starting motor	1959-60	26043A	Solenoid plunger guard	1959-60	761789
Driving	1959-60	55132B	Steering column control ..	1959-60	33534A	Solenoid operating ..	1959-60	31115E
Flasher, front	1959-60	52337A/B	Suppressor	1959-60	78105A	Knob	—	317337
" " (U.S.A.)	1959-60	52345A/B				Windshield wiper	1959-60	31430D
Fog	1959-60	55128B	SWITCHES			Knob	—	318171A
Head, Home and Export			Dipper	1959-60	31800A	Washer	—	315209
R.H.D., dip left	1959	58301A	Cap	—	54331425	Terminal block	1959-60	37101B
Head, Export	1960	58390A	Foglamp	1959-60	31857B/D			
L.H.D., dip right	1959-60	58304A/D	Knob	1959-60	31114E	Windshield wipers		
Head, Export Europe, except countries stated ..	1959-60	58305A/D	Heater	1959-60	315244	Motor, left hand drive	1959-60	75311A
Head, Export France	1959-60	58306A/D	Knob	—	31862A	Motor, right hand drive	1959-60	75310A
Head, Export Switzerland	1959-60	58307A	Washer	—	318172A	Wheelbox	1959-60	72639D
Head, Export U.S.A.	1959-60	58189A	Ignition	1959-60	31287F	Crosshead and rack assy.	1959-60	*744270
Head, Export Canada	1959-60	58308A	Lighting	1959-60	31114E	Outer casing		
Number plate	1959	53097E	Panel light	1959-60	315243	Motor to wheelbox ..	1959-60	740867
Number plate and reverse	1960	*53523A	Knob	—	31114E	Wheelbox to wheelbox	1959-60	740782
Panel	1959-60	56037B	Petrol reserve valve	1959-60	316494	End tube	1959-60	740746
Side	1959-60	52212A	Knob	—	316496	Arm, left hand drive ..	1959-60	745072
Stop tail, flasher and reflex ditto (U.S.A.)	1959-60	53356J	Reverse lamp and starting inhibitor ..	1959-60	31680A	Arm, right hand drive ..	1959-60	745071
		53660A				Blade	1959-60	738734

ARMSTRONG SIDDELEY 'Star' Limousine 1960

Ammeter	1960	36271A	LAMPS—continued			SWITCHES—continued		
Battery	1960	GT11A-3	Head, Export France	1960	58306D	Panel	1960	31114E
" (Canada)	1960	GV13A	Head, Export U.S.A.	1960	58189A	Knob	—	316494
Coil, ignition	1960	45102E	Number plate and reverse	1960	*53159A	Rear heater and interior light	1960	31947A
Control box	1960	37304A	Panel	1960	56037B	Reverse lamp,		
Distributor	1960	40719A	Side	1960	52212A	Synchromesh	1960	31849A
Flasher unit	1960	35020A	Stop tail, flasher and reflex ditto (U.S.A.)	1960	53356J	Solenoid, starting motor	1960	76464A
Fuse box	1960	033283		1960	53660A	Plunger guard	—	54330065
Generator	1960	22528A/D	Petrol reserve valve	1960	78039A	Starting inhibitor, automatic transmission ..	1960	31680A
Horn			Relay, horn	1960	33188A	Windshield wiper	1960	31430D
Low note	1960	69046F	Starting motor	1960	26041B	Knob	—	318171A
High note	1960	69047F	Steering column control ..	1960	33534A			
			Suppressor	1960	78105A	Windshield wipers		
LAMPS						Motor, left hand drive	1960	75311A
Boot	1960	53163A	SWITCHES			Motor, right hand drive	1960	75310A
Driving	1960	55132B	Dipper	1960	31800A	Wheelbox	1960	72639D
Flasher, front	1960	52337A	Cap	—	54331425	Crosshead and rack assy.	1960	744270
" " (U.S.A.)	1960	52345A	Foglamp	1960	31114E	Outer casing		
Fog	1960	55128B	Knob	—	315244	Motor to wheelbox ..	1960	740867
Head, Home and Export			Heater	1960	31862A	Wheelbox to wheelbox	1960	740782
R.H.D., dip left	1960	58390A	Knob	—	318172A	End tube	1960	740746
Head, Export			Washer	—	315209	Arm, left hand drive ..	1960	745072
L.H.D., dip right, except U.S.A.	1960	58304D	Ignition and Starting	1960	*31953A	Arm, right hand drive ..	1960	745071
Head, Export Europe (not France)	1960	58305D	Lighting	1960	31114E	Blade	1960	738734
			Knob	—	315243			

ASTON MARTIN 2 litre 1947-50

Ammeter	1947-50	*369295	LAMPS—continued			SWITCHES—continued		
Battery	1947-50	SG11A	Head, Export Europe (not France)	1947-50	*B50793B	Trafficator	1949	*31039Z
Coil, ignition	1947-50	*45012A/D	Number plate illumination ditto (Sports & Tourer)	1947-49	53093E	Windshield wiper	1947-50	*31285A
Control box	1947-50	37065E	Reverse	1947-50	53100A	Trafficators	1947-50	*54018D
Distributor	1947-50	40140F/H	Stop tail	1947-50	52120D	Warning lights		
Fuse box	1947-50	*37137A	Starting motor	1947-50	*53082B	Choke	1947-50	*38013B
Generator	1947-50	*22447A	Steering column control ..	1947-50	26008A/B	Ignition	1947-50	38018B
					32756A	Windshield wipers		
Horn			SWITCHES			Motor	1947-50	*75062J
Low note	1947-50	*69021A	Dipper	1947-50	31284A	Wheelbox	1947-50	*31285A/K
High note	1947-50	*69022A	Ignition and lighting ..	1947-50	*34026D	Crosshead and rack assy.	1947-50	736307
LAMPS			Panel light	1947-50	*31285A	Outer casing		
Head, Home			Petrol	1947-50	*31285A	Motor to wheelbox ..	1947-50	739870
R.H.D., dip left (L.H.)	1947-50	*50793B	Reverse	1947-50	*31077D	Wheelbox to wheelbox	1947-50	*739963
" non-dip (R.H.)	1947-50	*50362F	Solenoid, starting motor	1947-50	76022B	3", offside wheelbox ..	1947-50	740031
Head, Export			Solenoid operating	1947-50	*31300A	Grommet	1947-50	729423
R.H.D., dip left (L.H. and R.H.)	1947-50	*50793B	Stop lamp	1947-50	31281B	Arm	1947-50	*737428
L.H.D., dip right	1948-50	*A50793B	Spring	—	315543	Blade	1947-50	736412

ASTON MARTIN DB2 1951-54

Ammeter	1951-54	36144A	Flasher unit (U.S.A.)	1954	*35003A	Horn		
Battery	1951-52	SG11A	Flasher relay (U.S.A.)	1954	33117A	Low note	1951-53	*69021A
"	1953	GT11A				"	1954	*69011F
"	1954	GT9A	Fuse box (25 amp.)	1951-53	*37130A	High note	1951-53	*69022A
Coil, ignition	1951-54	*45012A/D	" " (50 amp.)	1951-53	*37107A	"	1954	*69012F
Control box	1951-52	37105A	" "	1954	*37137A	Horn relay (R.H.D.) ..	1952-54	*33116B
"	1952-54	*37139D	Generator	1951-52	23000A/J	" " (L.H.D.)	1952-54	33135B
Distributor	1951-52	40125E/F	"	Later	*22462A/E	Inspection lamp sockets ..	1951-54	301187
"	1953-54	*40264A/B						

* See Supersession Chart

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

continued



ASTON MARTIN DB2 1951-54—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS			SWITCHES—continued			Windshield wipers		
Bonnet	1951-54	*52162B/D	Dipper	1951-54	31284A	Motor	1951-52	*75063L
Fog	1954	*55055D	Foglamp	1951-54	*31320A	"	1953	75161A
Head, Home			Heater	1951-54	*31328A	"	1954	*75236A
R.H.D., dip left (L.H.)	1951-52	50825A	Ignition and lighting ..	1951-54	*34018A	Wheelbox	1951-53	*72548A/H
" non-dip (R.H.)	1951-52	*50826A	Inspection lamp	1951-54	*31327A	"	1954	72639A
" dip left (L.H.)	1953-54	51065A	Map light	1951-54	*31276A	Crosshead and rack assy.		
" non-dip (R.H.)	1953	*51066A	Panel	1951-54	*31321A	Cut to 51 1/2"	1951-52	738499
" dip left	1954	51065A	Petrol and oil gauge	1951-54	31295A	" " 55 3/8"	1953	738223
Head, Export France	1954	51561A	Petrol reserve valve	1951-54	*31319A	" " 51 1/2"	1954	741262
Head, Export Switzerland ..	1954	51560A	Reverse lamp	1951-53	*31077D	Outer casing		
Head, Export U.S.A.	1951-52	50942A	"	1954	*31439A	Motor to wheelbox	1951-52	*739832
"	1954	51067B	Solenoid, starting motor ..	1951-54	*76411D	"	1953	739858
Map reading	1951-54	39006A	Solenoid operating	1951-54	*31071A	"	1954	740954
Number plate and reverse	1951-54	53097D/E	Stop lamp	1951-52	31281B	Wheelbox to wheelbox ..	1951-52	*739962
Side	1951-54	*52162B/D	Spring	—	315543	"	1953	*739956
Stop tail	1951-54	53178B/D	Windshield wiper	1951-53	*31322A	"	1954	745005
Petrol reserve valve	1951-52	78017A	"	1954	*31302A	3", offside wheelbox	1951-53	740031
"	1953	78006A	Terminal block	1952	37082A	End tube	1954	740746
"	1954	78026A	Trafficators	1951-53	*54039A	Grommet	1951-53	729423
Starting motor	1951-54	26043A	"	1953-54	54044D	Arm	1951-52	*737517
Steering column control	1951-54	32756A	Warning lights			"	1953	*736418
Suppressor	1954	78105A	Choke	1951-53	*38019B	"	1954	*741294
SWITCHES			Ignition	1951-54	*38013B	Blade	1951-52	736412
Battery master	1951-54	76605B	Petrol reserve	1951-54	*38042A	"	1953	736414
Choke	1951-53	*31323A	Trafficator	1954	*38013B	"	1954	*738735

ASTON MARTIN DB2/4 1955-57

Ammeter	1955-56	36144A	LAMPS—continued			SWITCHES—continued		
"	1957	*36236A	Head, Export Mexico	1955-57	51482D/E	Petrol	1955-57	*31319A
Battery	1955-57	GT9A	Map reading	1955-57	39006A	Reverse lamp	1955-57	*31077E
Coil, ignition	1955-57	*45012B/D	Number plate and reverse	1955	53097D	Solenoid, starting motor ..	1955-57	*76411E
Control box	1955-57	37183A/H	"	1956-57	53097E	Solenoid operating	1955-57	*31071A
Distributor	1955-56	40264B	Side and flasher "	1955	*52162B	Windshield wiper	1955-57	*31302D
"	1957	40484A	"	1956-57	52240B/D	Knob	—	316646
Flasher relay	1955-57	33117A	Stop tail and flasher	1955-57	53178E/F	Terminal block	1955-57	37101B
Fuse box	1955	*37137A	Petrol reserve valve	1955-57	78026A	Warning lights		
"	1956-57	37110A	Starting motor	1955-57	26043A	Direction indicator		
Generator	1955-57	*22462B/D	Steering column control ..	1955-57	32756A	(U.S.A.)	1955	*38013B
Horn			Suppressor	1956-57	78105A	Ignition	1956-57	*38013B
Low note	1955-57	69046A/F	SWITCHES			Main beam	1955-57	*38087A
High note	1955-57	69047A/F	Battery master	1955-57	76605B	Petrol reserve	1955-57	*38042A
Horn relay	1955-57	33135B	Dipper	1955-57	31284A	Windshield wipers		
LAMPS			Engine inspection lamp	1955	*31327A	Motor	1955-57	*75236A
Bonnet	1955	*52162B	Foglamp	1955-57	*31328A	Wheelbox	1955-57	72639D
Driving	1956-57	55081A	Heater/Fan	1955-57	*31328A	Crosshead and rack assy.		
Fog	1955-57	*55055D	Ignition and lighting	1955-57	*34018B	Cut to 51 1/2"	1955-57	741262
Head, Home and Export			Map light	1955	*31276A	Outer casing		
R.H.D., dip left	1955	51065A	Oil and petrol gauge	1955	31295B	Motor to wheelbox	1955-57	740954
Vertical dip	1956-57	51560A	Panel light	1955	*31321A	Wheelbox to wheelbox ..	1955-57	745005
Head, Export France	1955-57	51561A	"	1956-57	*78315A	End tube	1955-57	740746
Head, Export Switzerland ..	1955	51560A	Knob	—	768913	Ferrule, casing retaining	1955-57	740715
Head, Export U.S.A.	1955	51067A				Arm	1955-57	745080
"	1956-57	51067B				Blade	1955-57	*738735

ASTON MARTIN DB3/S Competition 2-seater 1956

Ammeter	1956	*36110A	LAMPS			SWITCHES		
Battery	1956	RCPR11A	Dash	1956	56010A	Battery master	1956	76605B
Coil, ignition	1956	*45012B	Head			Dipper and horn push	1956	*31076B
Control box	1956	37183E	Vertical dip	1956	51560A	Fog or driving lamp	1956	031218
Distributor	1956	40484A	Number plate illumination	1956	53093H	Ignition	1956	031218
Fuse box	1956	*37107A	Side	1956	52139F	Lighting	1956	*34031B
Generator	1956	*22462D	Stop tail	1956	53178F	Panel	1956	031218
Horn			Mirror	1956	062564	Solenoid, starting motor ..	1956	*76411E
Low note	1956	*70063D	Reflex reflector	1956	*57035D	Solenoid operating	1956	*31071A
High note	1956	*70071D	Starting motor	1956	26043A	Terminal block	1956	37082A
Horn relay	1956	*33116B	Suppressor	1956	78105A	Warning light (ignition) ..	1956	*38013B

ASTON MARTIN DB Mk. III Saloon 1958-59

Ammeter	1958-59	*36236A	LAMPS			Petrol reserve valve	1958-59	78035B
Battery	1958-59	GT9A	Head			Relay, flasher	1959	33117D
Bulb, interior and map light	1958-59	254	Vertical dip	1958-59	58110A	Relay, headlamp	1959	*33116B
Coil, ignition	1958	*45012D	Head, Export France	1959	51561A	Relay, horn	1958-59	33135B
Control box	Later	*45054K	Head, Export U.S.A. and			Screenjet (optional)	1958-59	077011A
"	1958	37183H	Cuba	1958-59	58189A	Accessories (ref. only) ..	1958	*295230
"	Later	*37189A/J	Head, Export Mexico	1959	51482D/E	"	1959	*295118
Distributor	1958-59	40484A	Number plate and reverse	1958-59	53097E	Starting motor	1958-59	26043A
Flasher unit	1958-59	35010A	Side and flasher	1958-59	52240B/D	Steering column control ..	1958-59	32756D
Fuse box	1958-59	*37137A	Stop tail, flasher and reflex			Suppressor	1958-59	78105A
Generator	1958-59	*22462D/E	Mk. IIIA	1958	53330D			
Horn			Mk. IIIB	1958-59	53527A			
Low note	1958-59	69046F	U.S.A.	1958-59	53689A			
High note	1958-59	69047F						

* See Supersession Chart L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



ASTON MARTIN DB Mk. III Saloon 1958-59—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			SWITCHES—continued			Windshield wipers—cont'd		
Battery master	1958	76605B	Solenoid operating	1958-59	31082E	Outer casing		
" " " "	1959	*76604B	Windshield wiper and screenjet	1958-59	31714A	Motor to wheelbox ..	1958-59	745436
Foglamp " "	1958-59	*31705A	Knob	1958-59	313682	Wheelbox to wheelbox	1958-59	745005
Knob		312866	Rubber boot, terminal	1958-59	858266	End tube	1958-59	740746
Heater	1958-59	*31705A	Terminal block	1959-59	37101B	Ferrule, casing retaining	1958-59	740715
Knob		313683	Warning light (flasher) ..	1958	*319387	Grommet	1958-59	740811
Ignition and starting	1958-59	31678A	" " " "	1959	38112A	Arm (Mk. IIIA)	1958	745080
Lighting	1958-59	*31723A	Windshield wipers			" (Mk. IIIB)	1958-59	741844
Knob		318174	Motor			Blade (Mk. IIIA)	1958	*738735
Panel	1958-59	78311A	Mk. IIIA	1958	*75236A	" (Mk. IIIB)	1958-59	737897
Knob		769064	Mk. IIIB	1958-59	75311A	Overdrive equipment		
Panel, auxiliary	1958-59	*31705A	Wheelbox	1958-59	72639D	Interrupter switch ..	1958-59	*31077E
Knob		316102	Crosshead and rack Assy.			Relay	1958-59	33157A
Petrol reserve	1958-59	*31705A	Mk. IIIA Cut to 47 3/8"	1958	741264	Solenoid, transmission		
Knob		313684	Mk. IIIB " " "	1958-59	744256	gear	1958	*76505B
Reverse lamp	1958-59	*31077E				ditto	1959	*76517A
Solenoid, starting motor	1958-59	*76411E						

ASTON MARTIN DB4 1959-60: DB4GT 1960

Ammeter	1959-60	*36236A	Petrol reserve valve	1960	78040A	Warning lights		
" (GT)	1960	36268A	Relay, headlamp " (GT) ..	1960	78035A	Choke	1959	*38019B
Battery	1959-60	GT9A	Relay, horn	1959-60	*33116B	Flasher	1959-60	38112A
Coil, ignition	1959-60	*45054K	Screenjet (optional)	1959-60	077011A	Ignition (bulb holder		
" (GT)	1960	45121A	Accessories (ref. only) ..	1959-60	295118	only)	1959-60	863511
Ballast resistance (GT) ..	1960	47147A	Starting motor	1959-60	26043A	Main beam and petrol		
Control box	1959	*37189J	Steering column control ..	1959-60	33542A	reserve (bulb holder		
" " " "	Later	37303A	Slip ring	1959-60	38270A	only)	1959-60	554734
Distributor	1959-60	40671A	Suppressor	1959-60	78105A	Bulb	1959-60	987
" (GT)	1960	40697A	SWITCHES			Windshield wipers		
Flasher unit	1959-60	35010A	Battery master	1959-60	*76604B	Motor, left hand drive	1959-60	75365A
Fuse box	1959-60	*37137A	Choke heater	1959	*31705A	Motor, right hand drive	1959-60	75366A
Generator	1959-60	*22462E	Knob		313683	Wheelbox	1959-60	72729A
" " " "	Later	22496D	Foglamp (when fitted) ..	1959-60	*31705A	Crosshead and rack Assy.		
Horn			Knob	1959-60	312866	L.H.D. Cut to 46 1/8"	1959-60	743235
Low note	1959-60	69046F	Fuel reserve	1959-60	*31705A	R.H.D. " " 37 3/8"	1959-60	744254
" " " "	1960	69087A	Knob		313684	Outer casing		
High note	1959-60	69047F	Ignition and starting ..	1959-60	*31678A	Motor to wheelbox		
" " " "	Later	69090A	Lighting	1959-60	*31723A	L.H.D.	1959-60	54711249
Inspection lamp sockets ..	1959-60	38604A	Knob		318174	R.H.D.	1959-60	54711248
LAMPS			Panel light	1959-60	78311A	Wheelbox to wheelbox	1959-60	54711250
Flasher, front	1959-60	53359D	Knob		769064	End tube	1959-60	740746
Head			Panel light, auxiliary ..	1959	*31705A	Arm, left hand drive ..	1959	54710005
Vertical dip	1959-60	58110A	Knob		316102	ditto	1959-60	54711536
" (GT)	1960	51534E	Reverse lamp	1959-60	*31077E	Arm, right hand drive ..	1959	54710006
Head, Export U.S.A. ..	1960	58572A	Solenoid, starting motor	1959-60	*76411E	ditto	1959-60	54711537
Number plate and reverse	1959-60	53097E	Stop lamp	1959-60	31082E	Blade	1959-60	*737907
Side	1959-60	52139E	Windshield wiper and			" " " "	1960	54711283
" (GT)	1960	52510A	screenjet	1959-60	31714A			
Stop tail, flasher and reflex	1959-60	53527A	Knob		313682			
ditto (U.S.A.)	1959-60	53689A						

AUSTIN 8 h.p. Saloon and Tourer 1946-47

Ammeter	1946-47	*364366	LAMPS—continued			SWITCHES—continued		
Battery	1946-47	SG11E	Side	1946-47	*52027A	Stop lamp	1946-47	31281B
Coil, ignition	1946-47	*45016A	Stop tail and number plate	1946-47	*A53031A	Spring		*315723
Control box	1946-47	*37056A	Mirror	1946-47	*620307	Trafficators	1946-47	*539664
Distributor	1946-47	*400206	Starting motor	1946-47	*250405	Warning light (ignition) ..	1946-47	*38012B
Generator	1946-47	22450A	Steering column control ..	1946-47	32705A/H	Windshield wipers		
Horn	1946-47	069343	SWITCHES			Motor	1946-47	75065A
LAMPS			Dipper	1946-47	31284A	Clutch housing	1946-47	737357
Head, Home			Ignition and lighting ..	1946-47	*34002D	Bracket	1946-47	734747
L.H.	1946-47	50146D	Panel	1946-47	*314090	Link, primary	1946-47	735685
R.H.	1946-47	50147B/D	Starting motor	1946-47	76428A	" secondary	1946-47	735687
Head, Export						Arm	1946-47	*735096
L.H.	1946-47	50148D				Blade	1946-47	727802
R.H.	1946-47	*50149D						

AUSTIN 8 h.p. Van 1946-47

Ammeter	1946-47	*364366	LAMPS, Head, Home—			SWITCHES—continued		
Battery	1946-47	SG11E	<i>continued</i>			Starting motor	1946-47	76428A
Coil, ignition	1946-47	*45016A	L.H.	1947	*50526D	Stop lamp	1946-47	31281B
Control box	1946-47	*37056A	R.H.	1947	*50527D	Spring		*315723
Distributor	1946-47	*400206	Stop tail and number plate	1946-47	*53060A	Warning light (ignition) ..	1946-47	*38012B
Generator	1946-47	22450A	Mirror	1946-47	*580306	Windshield wipers		
Horn	1946-47	069343	Starting motor	1946-47	*250405	Motor	1946-47	75081A
LAMPS			Steering column control ..	1946-47	32705A/H	Arm	1946-47	*735096
Head, Home			SWITCHES			Blade	1946-47	727802
L.H.	1946	*50201A	Dipper	1946-47	31284A			
R.H.	1946	*50202A	Ignition and lighting ..	1946-47	*34002D			
			Panel	1946-47	*314090			

* See Supersession Chart L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive



AUSTIN 10 h.p. 1946-47

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1946-47	*364366	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
Battery	1946-47	SG9A	Head, Export			Starting motor	1946-47	76428A
Coil, ignition	1946-47	*45020A/B	L.H. (shallow lens) ..	1946-47	*50300B	Stop lamp	1946-47	31281B
Control box	1946-47	*37055A	R.H.	1946-47	50301B	Spring	—	*315723
Distributor	1946-47	*405601	L.H. (deep domed lens)	1947	*50593A	Trafficators	1946-47	*539665
Generator	1946-47	22449B	R.H. " " " " ..	1947	50594A	Warning light (ignition) ..	1946-47	*38013B
Horn	1946-47	069344	Side	1946-47	*52040A			
LAMPS			Stop tail and number plate	1946-47	*53031D	Windshield wipers		
Head, Home			Mirror	1946-47	*620307	Motor	1946-47	75066A
L.H.	1946	*50402A	Starting motor	1946-47	*255378	Clutch housing	1946-47	737357
R.H.	1946	*50403A	Steering column control ..	1946-47	32706A/H	Bracket	1946-47	734747
L.H. (shallow lens)	1947	*50107A	SWITCHES			Link, primary	1946-47	735685
R.H.	1947	50108A	Dipper	1946-47	31284A	" secondary	1946-47	735686
L.H. (deep domed lens)	1947	*50591A	Ignition and lighting ..	1946-47	*34002D	Arm	1946-47	*735096
R.H. " " " " ..	1947	50592A	Panel	1946-47	*314090	Blade	1946-47	727802

AUSTIN 10 h.p. Van 1946-47

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1946-47	*364366	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
Battery	1946-47	SG9A	Side	1946-47	*52003A	Stop lamp	1946-47	31281B
Coil, ignition	1946-47	*45020A/B	Stop tail and number plate	1946-47	*53060A	Spring	—	*315723
Control box	1946	*37031B	Starting motor	1946-47	*255378	Trafficators	1946-47	*54013B
" "	1947	*37055A	Steering column control ..	1946-47	32706A/H	Warning light (ignition) ..	1946-47	*38013B
Distributor	1946-47	*405601	SWITCHES			Windshield wipers		
Generator	1946-47	22449B	Dipper	1946-47	31284A	Motor	1946-47	75066A
Horn	1946-47	069344	Ignition and lighting ..	1946-47	*34002D	Clutch housing	1946-47	737357
LAMPS			Panel	1946-47	*314090	Bracket	1946-47	734747
Head, Home			Starting motor	1946-47	76428A	Link	1946-47	735685
L.H.	1946-47	50260D				Arm	1946-47	*735098
R.H.	1946-47	*50261D				Blade	1946-47	727707

AUSTIN 12 h.p. 1946-47

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1946-47	*36013A	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
Battery	1946-47	SG9A	Head, Export			Solenoid operating	1946-47	*31048A
Coil, ignition	1946-47	*45020A/B	L.H.	1946-47	*50379A	Stop lamp	1946-47	31281B
Control box	1946-47	*37031B	R.H.	1946-47	*50380A	Spring	—	*315723
Distributor	1946-47	*405601	Side	1946-47	*52040A	Trafficators	1946-47	*539671
Generator	1946-47	22449B	Stop tail	1946-47	*53057A	Warning light (ignition) ..	1946-47	*38013B
Horn	1946-47	069344	Starting motor	1946-47	*255378	Windshield wipers		
LAMPS			Steering column control ..	1946-47	32709A/F	Motor	1946-47	75066A
Head, Home			SWITCHES			Clutch housing	1946-47	737357
L.H.	1946-47	*50196A	Dipper	1946-47	31284A	Bracket	1946-47	735404
R.H.	1946-47	*50197A	Ignition and lighting ..	1946-47	*34004B	Link, primary	1946-47	735383
			Panel	1946-47	*31054A	" secondary	1946-47	735386
			Solenoid, starting motor	1946-47	76022B	Arm	1946-47	*735098
						Blade	1946-47	727707

AUSTIN 16 h.p. 1946-48

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1946-48	*36013A	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
Battery	1946-48	SG11A	Head, Export			Reverse lamp	1946-48	*31077D
Coil, ignition	1946-48	*45020A/B	L.H.	1946	*50231A	Solenoid, starting motor	1946-48	76022B
Control box	1946-48	*37032A	R.H.	1946	*50232A	Solenoid operating	1946-48	31107A
Distributor	1946	*40055B	L.H.	1947-48	*50379A	Stop lamp	1946-48	31281B
" "	1946	40085A	R.H.	1947-48	*5380A	Spring	—	315726
" "	1947	*40088A	Side	1946-48	*52051A	Trafficators	1946-48	*54013B
" "	1948	*40117F/H	Stop tail	1946-48	*53057A	Warning light (ignition) ..	1946-48	*38013B
Generator	1946-48	*22446A/B	Starting motor	1946-48	*255378	Windshield wipers		
Horn	1946-48	*69021A	Steering column control ..	1946-48	32709A/F	Motor	1946-48	75066A
Low note	1946-48	*69022A	SWITCHES			Clutch housing	1946-48	737357
High note	1946-48	*69022A	Dipper	1946-48	31284A	Bracket	1946-48	735404
LAMPS			Heater	1946-48	*78204A	Link, primary	1946-48	735383
Head, Home			Knob	—	*76849I	" secondary	1946-48	735386
L.H.	1946-48	*50196A	Ignition and lighting ..	1946-48	*34032D	Arm	1946-48	*735098
R.H.	1946-48	*50197A	Panel	1946-48	*31106A	Blade	1946-48	727707
L.H.	1948	50719A						
R.H.	1948	50720A						

AUSTIN A30 'Seven' 1952-56

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1952-56	GLT7A	Distributor	1952-55	*40299A/E	LAMPS		
" (special, Export to cold countries) ..	1952-55	GT7A	" " " "	1956	*40299L	Head, Home and Export		
Coil, ignition	1952-55	*45020A/B	" " " "	1956	40494A	R.H.D., dip left	1952	*50954A
Control box	1952-55	*45053A/F	Fuse box	1952-56	033240	" " " "	1953-55	51336A
" "	1956	*45053A/F	Generator	1952-55	22258D	" " " "	1956	51336B/J
Van and 'Countryman'	1955-56	*45053A/F	" "	1956	22258E/F	Head, Export		
Control box	1952-56	*37138B	" "	1952-56	*069213	L.H.D., dip right	1952	*50804D
			Horn	1954	069448	" " " "	1953-55	*51337A/B
			Alternative	Later		" " " "	1956	*51337D/E

* See Supersession Chart L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive *continued*
 Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



AUSTIN A30 'Seven' 1952-56—continued

Table with 9 columns: Unit, Year, Part No., Unit, Year, Part No., Unit, Year, Part No. Contains specifications for LAMPS, SWITCHES, and Windshield wipers.

AUSTIN 'Seven' (850) 1959-60: Quarter Ton Van 1960

Table with 9 columns: Unit, Year, Part No., Unit, Year, Part No., Unit, Year, Part No. Contains specifications for Battery, LAMPS, SWITCHES, and Windshield wipers.

AUSTIN A35 Saloon 1957-59: 'Countryman' 1957-60: Pick-up 1957-58: Van 1957-60

Table with 9 columns: Unit, Year, Part No., Unit, Year, Part No., Unit, Year, Part No. Contains specifications for Battery, LAMPS, SWITCHES, and Windshield wipers.

* See Supersession Chart L.H. . . Left hand R.H. . . Right hand L.H.D. . . Left hand drive R.H.D. . . Right hand drive



AUSTIN A40 'Devon' 1948-52; 'Dorset' 1948; 'Somerset' 1953-54; 'Cambridge' 1955-56; A50 'Cambridge' 1955-57

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1948-51	36062E	LAMPS—continued			SWITCHES—continued		
Battery	1952-54	36140A	Head, Export Europe			Panel	1956-58	*31498A
	1948-57	GT7A	(not France) .. .	1948-51	*B50799D	Knob	—	318368
(special, Export to			ditto	1952	*50961A	Starting motor ..	1948-49	76428A
cold countries) ..	1948-57	GT9A	ditto .. Later	1952-53	*50963A Later	1949-57	76423A
Bulb holder, panel light ..	1951-54	39020B	ditto (alternative)	1953	50967A	Coupling	1949-57	764428
	1955-57	554734	ditto .. Later	1953-54	51339A	Stop lamp	1948	31281B
Bulb	—	987	ditto ..	1955-57	51517A/J	Spring	—	*315723
Coil, ignition	1948-55	*45020A/B	Head, Export France ..	1948-51	*50808D	Stop lamp	1949-51	31281B
	1956-57	*45053A/H	ditto	1952	*50978A	Spring	—	315726
Control box	1948	*37078A	ditto .. Later	1952-53	*50962A	Stop lamp	1956-57	31082E
" "	Later	37065E	ditto (alternative)	1953	*50966A	Trafficator (G.P.O.)		
" "	1951-55	*37138B/D	ditto .. Later	1953-54	*51341A	(optional)	1955-56	*31464D
" "	1956-57	37182B	ditto ..	1955-57	51518A/H	Windshield wiper ..	1948	315066
Distributor	1948-52	40141A/F	Lens, decorative, front			Knob	—	31199A
" "	1952-54	*40284A/E	(when trafficators fitted)	1955-56	574245	Windshield wiper ..	1949-51	*31199A
A40	1955-56	*40452B/E	Lens, decorative, rear			Knob	—	315061
" "	1956	40498A	(when trafficators fitted)	1955-56	574260	Windshield wiper ..	1952-54	31113A
A50	1955	*40427D	Number plate illumination	1948-54	53101E	Knob	—	316478
" "	1956	*40427F	ditto	1955-56	*53348B	Windshield wiper ..	1955	*31419A
(low compression)			ditto .. Later	1956-57	53518A	Knob	—	318369
.. .. . Later	1956-57	*40499A	Side	1948-52	52139B	Windshield wiper ..	1956-57	*31498A
(high compression)	1957	40570A	" "	1953-55	*52182A/D	Knob	—	318369
Flasher unit	1955-56	*35003A	" "	1956-57	*52214E	Knob, starter and choke		
Fuse box	1951-57	033240	Stop tail	1948-50	*53102D	control	1953	325744
Generator	1948-49	*22250A	" "	1951-52	53200A	ditto .. Later	1953-54	*326540
" "	Later	*22250E/F	" "	1952-54	53178A/F	Knob, starter control ..	1955-57	326729
" "	1951-54	22258D	Stop tail and reflex ..	1955	53332B	.. choke control ..	1955-57	326728
" "	1955-57	22258E/F	Stop tail, flasher and reflex	1956-57	058619	Trafficators when fitted)	1948-51	*54035A
Horn			ditto (Export U.S.A.			ditto	1952	*54041A
Low note	1948-54	*69011F	and Canada)	1957	058647	ditto .. Later	1952-56	54044D
" "	1955	*70063D	Mirror	1948-52	*062537	Warning lights		
" "	Later	69046A/F	Starting motor	1948-49	25013A/B	Ignition	1948-51	38048A
High note	1948-54	*69012F	" "	1949-57	25022A/L	Holder	1948-51	38041A
" "	1955	*70071D	" " .. Later	1948-50	32760A/K	" "	1951-54	30499A
" "	1955-57	69047A/F	Steering column control ..	1951	*32777A/J	" "	1951-53	38048A
LAMPS			" "	1952-54	32853A/H	Windshield wipers		
Flasher, front	1955	*52213A	" "	1955	32919B	Motor	1948-50	*75064J
" "	1956-57	*52296A	Suppressor	1956-57	32929D/E	" "	1951	*75064K
" " (N. America)	1957	*52213B		1951	78105A	" "	1952	75145A
Flasher, rear	1955	53333A	SWITCHES			" " .. Later	1952-54	75150A
Head, Home			Dipper	1948-54	*31372A	" "	1955-57	75251A
R.H.D., dip left (L.H.)	1948-49	*50792B	" "	1955-57	31284A	Wheelbox	1948-52	*72548A/K
" non-dip (R.H.)	1948-49	*50614E	Flasher	1955-56	*31530A	" " .. Later	1952-54	72592/AK
" dip left (L.H.)	1949	50613E	" "	1957	31608A	" "	1955-57	72665A
" non-dip (R.H.)	1949	*50578E	Heater	1948-51	31113A	Crosshead and rack assy.		
" dip left (L.H.)	1949	*50799D	Knob	—	*315119	Cut to 31 ¹⁶ / ₃₂ ..	1948-54	738764
" non-dip (R.H.)	1949-51	*50799D	Heater	1952-53	31201B	" " 41 ¹⁶ / ₃₂ ..	1955-57	*743231
" dip left (L.H.)	1949-51	*50579K	Knob	—	*31622A	Outer casing		
" non-dip (R.H.)	1949-51	*50579K	Heater/Fan	1953-54	31113A	Motor to wheelbox ..	1948-52	*739855
R.H.D., dip left			Knob	—	316478	ditto .. Later	1952-54	739879
(L.H. and R.H.) ..	1952	*51254A	Heater/Fan (alternative)	1951	*78238A	ditto	1955-57	745118
ditto	1952-53	*50954A	Knob	—	*768543	Wheelbox to wheelbox	1948-52	*739953
ditto (alternative)	1953	50941A	Heater/Fan (alternative)	1953	78260A	ditto .. Later	1952-54	*739970
ditto	1953-54	51336A	Knob	—	*768689	ditto	1955-57	745119
ditto	1955-57	51515F/J	Heater/Fan	1955	*31419A	3", offside wheelbox ..	1948-54	740031
Head, Export			Knob	—	318370	End tube	1955-57	740746
R.H.D., dip left			Heater/Fan	1956-57	*31498A	Ferrule, casing retaining	1955-57	740715
(L.H. and R.H.) ..	1948-51	*50799D	Knob	—	318370	Arm, left hand drive ..	1948-51	*737431
ditto	1952	*51254A	Ignition	1948-51	*31163A	ditto	1952	737445
ditto .. Later	1952-53	50954A	Ignition and lighting ..	1952-54	31194A	ditto .. Later	1952-54	*737581
ditto (alternative)	1953	50941A	Knob	—	316286	ditto	1955	*741295
ditto	1953-54	51336A	Ignition and lighting ..	1955-57	31516A	ditto	1956-57	745081
ditto	1955-57	51515F/J	Knob	—	316449	Arm, right hand drive ..	1948-51	*737430
L.H.D., dip right	1948-51	*A50799D	Lighting	1948-51	31114A	ditto	1952	737444
ditto	1952	*50528M	Knob	—	315213	ditto .. Later	1952-54	*737529
ditto	1952-53	*50804D	Panel	1948-54	31113A	ditto	1955	*741294
ditto (alternative)	1953	50973A	Knob	1948-51	315118	ditto	1956-57	745080
ditto	1953-54	*51337A	Panel	1952-54	316478	Blade	1948-52	727802
ditto	1955-56	51516A/K	Knob	1955	*31419A	" " .. Later	1952	*737433
					318368	" "	1952-54	738724
						" "	1955-57	738734

AUSTIN A40 Van, 'Countryman' and Pick-up Truck 1948-56

Ammeter	1948-51	36062E	LAMPS—continued			LAMPS—continued		
Battery	1948-56	GT7A	Head, Home			L.H.D., dip right ..	1955	*51345B
Coil, ignition	1948-55	*45020A/B	R.H.D., dip left (L.H.)	1948	50613E	" "	1956	*51345D/F
" "	1956	*45053D/F	" non-dip (R.H.)	1948	*50578E	Head, Export Europe		
Control box	1948-51	37065E	" dip left (L.H.)	1949-51	*50799D	(not France)	1948	*B50613E
" "	Later	*37138B/D	" non-dip (R.H.)	1949-51	*50579K	ditto	1949-51	*B50799D
" "	1956	37182B	.. dip left			ditto	1952	*50961A
Distributor	1948-52	40141A/F	(L.H. and R.H.) ..	1952-53	*50992A	ditto	1953	*50994A
" "	1953-54	*40284A/E	ditto .. Later	1953-55	51344A	ditto	1953-56	51346B/D
" "	1955-56	*40452B/E	ditto	1956	51344B	Head, Export France ..	1948	50664E
Fuse box	1951-56	033240	Head, Export			" "	1949-51	*50808D
Generator	1948-49	*22250A	R.H.D., dip left			" "	1952	*50978A
" "	Later	*22250E/F	(L.H. and R.H.) ..	1948	50613E	" "	1953	51009A
" "	1951-55	22258D	ditto	1949-51	*50799D	" " .. Later	1953-55	51411A
" "	1956	22258E/F	ditto	1952-53	*50992A	" "	1956	51411B
Horn	1948-49	069344	ditto .. Later	1953-56	51344A/B	Number plate illumination	1956	51101H
Low note	1950-55	*69011F	L.H.D., dip right ..	1948	*A50613E	Side	1948-56	52139A/F
" "	1956	69046A	" "	1949-51	*A50799D	Stop tail	1956	53178F
High note	1950-55	*69012F	" "	1952	*50528M	Stop tail and number plate	1948-55	*53060A
" "	1956	69047A	" "	1953	*50993A	Mirror (alternative) ..	1948-54	*62521D
" "			" " .. Later	1953-54	*51345A			

* See Supersession Chart

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



AUSTIN A40 Van, 'Countryman' and Pick-up Truck 1948-56—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Panel light bulb holder ..	1951-53	*39013A	SWITCHES—continued			Warning lights		
" " " " ..	1954-55	39020A	Lighting	1948-51	31114A	Ignition	1948-52	38048A
Starting motor	1948-49	25013A/B	Knob	—	315213	Holder	—	38041A
" " " " Later ..	1949-56	25022A/L	Panel	1948-51	31113A	Main beam	1951-52	38048A
Steering column control ..	1948-51	32760A/K	Knob	—	315118	Windshield wipers		
" " " " ..	1952-55	32853A/H	Panel	1952-56	*31342A	Motor	1948-50	75054J
Suppressor	1951	78105A	Starting motor	1948	76428A	" " " " ..	1951	75054K
SWITCHES			" " " " ..	1949-56	76423A	" " " " Later ..	1951-56	75145A
Choke warning light ..	1949-50	31201B	Coupling	—	764428	Wheelbox	1948-54	*72548A/K
Knob	—	*315989	Stop lamp	1948-51	31281B	" " " " ..	1955-56	72662A
Dipper	1948-56	*31372A	Spring	1948	*315723	Crosshead and rack assy.		
Heater (optional)	1952-54	*78239A	" " " " ..	1949-51	315726	Cut to 19 1/8" ..	1948	738987
Knob	—	768473	Windshield wiper	1949-51	*31199A	ditto (Export) ..	1948	738764
Heater (optional)	1955	31201D	Knob	—	315061	Cut to 31 1/8" ..	1949-56	738764
Knob	—	*316224	Windshield wiper	1952	*31322A	Outer casing		
Heater (optional)	1956	78260A	" " " " ..	1953-56	*31345A	Motor to wheelbox		
Knob	—	768473	Trafficators	1948	*54013B	(Export)	1948	*739907
Ignition	1948-51	*31163A	" " " " ..	1949	*54009B	Motor to wheelbox ..	1948-56	*739855
Ignition and lighting ..	1952-56	31270A	" " " " ..	1950-51	*54036A	Wheelbox to wheelbox	1949-56	*739953
Knob	—	316285	" " " " ..	1952	*54040A	3", offside wheelbox ..	1948-56	740031
			" " " " ..	1953-56	54045A/D	Arm, R.H.D.	1948-54	737444
						" L.H.D.	1948-54	737445
						Blade	1948-54	727802

AUSTIN A40 Sports 1951-53

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1951-53	36140A	LAMPS, Head, Export—			SWITCHES—continued		
Battery	1951-53	GT7A	continued			Ignition and lighting ..	1951-53	31194A
Coil, ignition	1951	*45020A/B	L.H.D., dip right ..	1951	*A50445K	Knob	—	316286
" " " " ..	1952-53	*45012A/D	ditto (alternative) ..	1951	*50804D	Panel	1951-53	31113A
Control box	1951	37065E	ditto	1952	*50528M	Knob	—	316478
" " " " Later ..	1951-53	*37138B	ditto	1953	*51345A	Starting motor	1951-53	76423A
Distributor	1951	*40262A/D	Head, Export Europe			Coupling	—	764428
" " " " ..	1952-53	*40319A	(not France)	1951	*B50445K	Windshield wiper	1951-53	31113A
Fuse box	1951-53	033240	ditto (alternative) ..	1951	*50963A	Knob	—	316478
Generator	1951	*22250E/F	ditto	1952	*50961A	Knob, starter and choke		
" " " " Later ..	1951-53	22258D	ditto	1953	51346A	control	1951-53	325744
Horn			Head, Export France ..	1951	*50790E	Trafficators	1951	*54036A
Low note	1951-53	*69011F	ditto (alternative) ..	1951	*50962A	" " " " Later ..	1951-53	54044D
High note	1951-53	*69012F	ditto	1952	*50978A	Warning lights		
LAMPS			ditto	1953	51411A	Ignition	1951-53	38048A
Head, Home			Number plate illumination			Holder	—	38041A
R.H.D., dip left (L.H.)	1951	*50445K	Side	1951-53	53093E	" " " " ..	1952-53	304994
" non-dip (R.H.)	1951	*50446K	(U.S.A.)	1953	*52182A/B	Main beam	1951-53	38048A
" dip left			Stop tail	1951-53	53178B/D	Windshield wipers		
(L.H. and R.H.,			Mirror	1951	*062537	Motor	1951	75064K
alternative)	1951	*50954A	" " " " ..	1952-53	*62043A	" " " " Later ..	1951-53	75145A
R.H.D., dip left			Panel light	1951-53	39020B	Wheelbox	1951-53	72548A/K
(L.H. and R.H.) ..	1952	*50992A	Starting motor	1951-53	25022A/L	Crosshead and rack assy.		
" " " " ..	1953	51344A	Steering column control ..	1951	32787F/H	Cut to 44 1/8" ..	1951-53	736307
Head, Export			" " " " ..	1952-53	32860B	Outer casing		
R.H.D., dip left ..	1951	*50445K	SWITCHES			Motor to wheelbox ..	1951-53	*739832
ditto (alternative) ..	1951	*50954A	Dipper	1951-53	*31372A	Wheelbox to wheelbox	1951-53	*739958
ditto	1952	*50992A	Heater	1951	31201B	3", offside wheelbox ..	1951-53	740031
ditto	1953	*51344A	Knob	—	*316224	Arm, left hand drive ..	1951	*737431
			Heater	1952-53	*78274A	ditto	1951-53	*737629
			Knob	—	*768689	Arm, right hand drive ..	1951	*737430
						ditto	1951-53	*737628
						Blade	1951-53	727802

AUSTIN A40 Saloon (A2S6) 1959-60: 'Countryman' 1960

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1959-60	BT7A	LAMPS—continued			SWITCHES—continued		
Bulb holder, courtesy light	1959-60	863511	Head, Export France ..	1959-60	58279A	Solenoid, starting motor	1959-60	*76465A
Bulb	—	987	Head, Export Sweden ..	1959	58220A/B	ditto	Later	76464A
Bulb holder, panel light ..	1959-60	554734	ditto	1959-60	58455A	Stop lamp	1959-60	31802D
Bulb	—	987	Head, Export U.S.A. ..	1960	58619A	Windshield wiper	1959-60	31780B/D
Coil, ignition	1959-60	*45053L/M	Number plate illumination			Warning lights		
Control box	1959	37182H	ditto	1959-60	53705A	Bulb holder, ignition and		
" " " " Later ..	1959	37182J	ditto	1960	53518A	oil pressure	1959-60	863511
Distributor	1960	37183L	Side and flasher	1959-60	52407A	Bulb	—	987
High compression	1959	*40561F/H	ditto (N. America			Bulb holder, flasher and		
Low compression	1960	40675B	and Switzerland) ..	1959-60	52408A/B	main beam	1959-60	554734
" " " " ..	1959	40569D/F	Stop tail, flasher and reflex			Bulb	—	987
Flasher unit	1960	40674A/B	ditto (N. America)			Windshield wipers		
Generator	1959-60	35020A	Sleeve, Lucas connector			Motor	1959	75315D
" " " " ..	1959	22258F	14 amp.	1959-60	54190042	" " " " Later ..	1959-60	75380A
" " " " (temporary			35	1959-60	25022M	Wheelbox	1959-60	72713A
alternative)	1960	22700A	Starting motor	1959	25022N/Q	Crosshead and rack assy.	1959-60	*743225
Horn	1959-60	*22704A	Steering column control ..	1959	33516A	Outer casing		
LAMPS			" " " " ..	1960	33516B	Motor to wheelbox ..	1959-60	748867
Head, Home			SWITCHES			Wheelbox to wheelbox	1959-60	748868
R.H.D., dip left ..	1959-60	58218B/D	Flasher	1959	31743B	End tube	1959-60	740746
Head, Export			" " " " Later ..	1959-60	31904A	Grommet	1959-60	740811
R.H.D., dip left ..	1959-60	58218B/D	Knob	—	54331875	Arm, left hand drive ..	1959	741848
L.H.D., dip right ..	1959-60	58219A/B	Ignition and starter ..	1959	31781D	" " " " ..	1960	54711450
Head, Export Europe			" " " " ..	1960	31973B	Arm, right hand drive ..	1959	*741849
(except France & Sweden)	1959-60	58278A	Lighting and dipper ..	1959-60	34103D	Blade	1960	54711451
			Panel	1959-60	31780B/D		1959-60	737897

* See Supersession Chart L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive



AUSTIN A55 'Cambridge' 1958-59

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1958	GT7A	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
" (special orders) ..	1959	BT7A	Head, Export Europe			Windshield wiper ..	1958-59	*31498A
Coil, ignition	1958-59	BT9A	(not France)	1958-59	58050A/D	Knob	—	318369
Control box	1958-59	*45053A/M	(except France & Sweden)			Knob, choke	1958-59	326728
" Later	1959	37182H	Later	1959	58280A	" starter control ..	1958-59	326729
Distributor		37182J	Head, Export France ..	1958-59	58051A/B	Windshield wipers		
Low compression ..	1958	40499A	" Later	1959	58281A	Motor	1958	75251E
" Later	1959	40499B/D & F	Head, Export Sweden ..	1959	58457A	"	1959	75251H
High compression ..	1958	40570A	Number plate illumination	1958-59	53630A	Wheelbox	1958-59	*72668A/B
" Later	1958	40600A	Side	1958-59	*52214E	Crosshead and rack assy.	1958-59	743235
"	1959	40600B/D & F	Stop tail, flasher and reflex	1958-59	53565E	Outer casing		
Flasher unit	1958-59	35010A	ditto (N. America)	1958-59	53579D	Motor to wheelbox ..	1958-59	745118
Fuse box	1958-59	033240	Starting motor	1958-59	25022M	Wheelbox to wheelbox	1958-59	745119
Generator	1958-59	22258F	Steering column control ..	1958-59	32993B/D	End tube	1958-59	740746
Horn			Suppressor	1958-59	78106A	Ferrule, casing retaining	1958	738410
Low note	1958-59	69046F	SWITCHES			"	1959	740715
High note (optional) ..	1958-59	69047F	Dipper	1958-59	31284A/D	Arm, left hand drive ..	1958-59	745081
LAMPS			Flasher	1958	31630D	" right hand drive ..	1958-59	745080
Flasher, front	1958-59	*52296B	Heater (optional)	1959	31885A	Blade	1958-59	738734
ditto (N. America)	1958-59	*52213B	Ignition and lighting ..	1958-59	*31498A	Borg Warner overdrive		
Head, Home			Knob	1958-59	318370	equipment (optional)		
R.H.D., dip left .. .	1958-59	58048A/E	Panel	1958-59	*316449	Relay	1958	33177A
Head, Export			Knob	1958-59	*31498A	"	1959	33204A
R.H.D., dip left .. .	1958-59	58048A/E	Starting motor	1958-59	318368	Switches		
L.H.D., dip right .. .	1958-59	58049A/D	Coupling	—	76423A	Centrifugal	1958-59	76113D
					764428	Kick-down	1958-59	*31597B

AUSTIN A55 'Cambridge' Mk. II 1959-60

Battery	1959-60	BT7A	LAMPS— <i>continued</i>			Warning Lights— <i>cont'd</i>		
" (special orders) ..	1959-60	BT9A	Number plate illumination	1959-60	53763A	Bulb holder, main beam	1959-60	554734
Bulb holder, panel light ..	1959-60	554734	ditto Later	1960	53814A	Bulb	—	987
Bulb		987	Reverse (optional)	1960	*53209D	Windshield wipers		
Coil, ignition	1959	*45103B/D	Side and flasher			Motor, left hand drive	1959-60	75358A
Control box	1960	*45113D	L.H.	1959-60	52422B/E	" right hand drive	1959-60	75357A
"	1959	37283A/B	R.H.	1959-60	52427B/F	Wheelbox		
"	1960	37290D/E	N. America, Italy, Mexico			Driver's side	1959-60	72713A/B
Distributor			and Manila (L.H.)	1959-60	52423B/F	Passenger's side ..	1959-60	72707A/B
High compression ..	1959-60	40643D & F	ditto (R.H.)	1959-60	52428B/F	Crosshead and rack assy.	1959-60	744254
" Later			Stop tail, flasher and reflex	1959-60	53712B/D	Outer casing		
Low compression ..	1959-60	40624D & F	ditto (N. America)	1959-60	53713B/D	Motor to wheelbox ..	1959-60	54710207
"			Starting motor	1959	25022M	Wheelbox to wheelbox	1959-60	54710208
Flasher unit	1959-60	35020A	"	1960	25022Q	End tube	1959-60	740746
Fuse box	1959-60	033285	Steering column control ..	1959-60	32993D	Ferrule, casing retaining	1959-60	740715
Generator	1959-60	22700D	Suppressor	1959-60	78106A	Grommet	1959-60	740811
" (temporary alternative)	1959-60	*22704A	SWITCHES			Arm, left hand drive ..	1959-60	54711539
Horn			Dipper	1959-60	31800A	" right hand drive ..	1959-60	54711538
Low note	1959-60	69046F	Flasher	1959-60	31885A	Blade	1959-60	54711283
High note (De Luxe and optional extra)	1959-60	69047F	Heater	1959-60	*31851A	Windshield wipers (later, from Body No. 61724)		
LAMPS			Ignition and starting ..	1959	31781D	Motor, left hand drive	1960	75357A
Head, Home			"	1960	31973B	" right hand drive	1960	75358A
R.H.D., dip left .. .	1959-60	58251A/F	Lighting	1959-60	31850A/B	Wheelbox		
Head, Export			Panel	1959-60	*31851A	Driver's side	1960	72707B
R.H.D., dip left .. .	1959-60	58251A/F	Solenoid, starting motor	1959-60	*76465A	Passenger's side ..	1960	72713B
L.H.D., dip right .. .	1959-60	58252A/F	ditto (automatic transmission) ..	1959	*76466A	Crosshead and rack assy.	1960	744254
Head, Export Europe (except France & Sweden)	1959-60	58253A/E	Stop lamp	1959-60	31882A	Outer casing		
Head, Export France ..	1959-60	58254A/E	Windshield wiper	1959-60	31780B/D	Motor to wheelbox ..	1960	54710207
Head, Export Sweden ..	1959	58315A/E	Warning lights			Wheelbox to wheelbox	1960	54710208
ditto Later	1959	58446A	Bulb holder, ignition ..	1959-60	863511	End tube	1960	740746
ditto	1960	58545A/B	Bulb	—	987	Ferrule, casing retaining	1960	740715
Head, Export U.S.A. ..	1959-60	58488A/D				Grommet	1960	740811
ditto Later	1960	58620A				Arm, left hand drive ..	1960	54711538
						" right hand drive ..	1960	54711539
						Blade	1960	54711283

AUSTIN A55 Pick-up Truck and Chassis and Van 1957-60

Battery	1957-58	GT7A	Horn			LAMPS— <i>continued</i>		
" (special orders) ..	1959-60	BT7A	Low note	1957-60	69046F	Head, Export France ..	1957-59	58059A
Coil, ignition	1957-60	BT9A	High note (optional) ..	1957-60	69047F	" Later	1959-60	58283A
Control box	1958-59	*45053J/M	LAMPS			Head, Export Sweden ..	1959-60	58457A
"	1960	37182H/J	Flasher, front	1957-60	*52296B	Number plate illumination	1957-60	53101H
" Later	1960	37183K	ditto (N. America)	1958-60	*52213B	Side	1958-60	*52214E/F
Distributor		37183L	Flasher, rear	1958-60	52337A	Stop tail	1957-60	53564A/B
Low compression ..	1957-58	*40499A	ditto (N. America)	1958-60	53600A/E	Reflex reflector	1957-58	57104A
" Later	1960	*40499B/D & F	Head, Home			"	1959-60	57121A
High compression ..	1960	*40499E & H	R.H.D., dip left	1957-60	58056A/B	Starting motor	1957-59	25022M
"	1960	*40600D & F	Head, Export	1957-60	58057A/B	"	1960	25022N/Q
Flasher unit	1957-60	*40600E & H	R.H.D., dip left	1957-60	58056A/B	Steering column control ..	1957-60	32993B/D
Fuse box	1957-60	35010A	L.H.D., dip right	1957-60	58057A/B	Suppressor	1958-60	78106A
Generator	1957-59	033240	Head, Export Europe (not France)	1958-59	58058A/B			
"	1960	22258F	(except France & Sweden)					
" (temporary alternative)	1960	22700D	Later	1959-60	58282A			

* See Supersession Chart

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



AUSTIN A55 Pick-up Truck and Chassis and Van 1957-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			SWITCHES—continued			Windshield wipers—cont'd		
Dipper	1957-60	31284A/D	Starting motor	1957-60	76423A	Crosshead and rack assy.		
Flasher	1957	31630D	Coupling	—	764428	Cut to 41 ³ / ₁₆ "	1957-60	743235
"	1958-60	31885A	Stop lamp	1957-60	31082E/H	Outer casing		
Heater (optional)	1957-60	*31498A	Windshield wiper ..	1957-60	*31498A	Motor to wheelbox ..	1957-60	745118
Knob	—	318370	Knob	—	318369	Wheelbox to wheelbox	1957-60	745119
Ignition and lighting	1957-60	31516A/D	Windshield wipers			End tube	1957-60	740746
Knob	—	316449	Motor	1957-58	75251E	Ferrule, casing retaining	1957-60	740715
Panel	1957-60	*31498A	"	1959-60	75251H	Arm, left hand drive ..	1957-60	745081
Knob	—	318368	Wheelbox	1957-60	*72665A/B	" right hand drive ..	1957-60	745080
						Blade	1957-60	738734

AUSTIN A70 'Hampshire' 1948-51: 'Hereford' 1952-55

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
AMMETER			LAMPS—continued			SWITCHES—continued		
Ammeter	1948-50	36076J	Head, Export Europe			Solenoid operating ..	1948-55	31115A
"	1951-55	36140A	(not France)	1948-50	*B50799D	Knob	1948-50	*317320
Battery	1948-55	GT11A	ditto	1951-52	*50963A	"	1951-55	*317332
Coil, ignition ..	1948-50	*45020A/B	ditto	1953-55	51339A	Windshield wiper ..	1948-55	31113A
Control box	1951-55	*45012A/D	Head, Export France			Knob	1948-50	*315133
"	1948-49	37065E	"	1948-50	*50808D	"	1951-55	316478
"	1950	*37076E	"	1951-52	*50962A	Knob, choke control ..	1951-55	325744
"	1951	*37118A	"	1953-55	*51341A	Terminal block	1948-54	37101A
"	Later	*37139D/E	Number plate illumination	1948-55	53101F	Trafficators	1948-51	*54035A
Distributor	1951-55	*40117F/H	Side	1948-49	*52133A	"	1951-55	54044D
"	1951	*40257A/D	" (U.S.A.)	1950	52139B	Warning lights		
"	1952	40270A/D	"	1951	*52040A	Ignition	1948-50	38048A
"	Later	*40295A/E	"	Later	52182D	"	1951-55	39020B
"	(Police Car) ..	40258A/B	Stop tail	1948-50	*53102D	Holder	—	304994
Fuse box	1951-55	033240	"	1951-55	53178B/E	Main beam	1951-55	39020B
Generator	1948-49	*22446A	Mirror	1948-52	*062537	Holder	—	318874
"	1950-51	*22435A/B	"	1953-55	*62043A	Windshield wipers		
"	Later	*22456A/B	Starting motor	1948-49	*255378	Motor	1948-50	*75064J
"	1955	*22483A	"	1949	*25522A/B	"	1951-52	*75053K
Horn			"	1950-55	25521B/D	"	1953-55	75150A
Low note	1948-55	*69011F/J	Steering column control	1948-50	32787F/H	Wheelbox	1948-50	*72548A/K
High note	1948-55	*69012F/J	"	1951-55	32854D/J	"	1951-55	72592A/K
Horn relay	1948-55	*33135B	Suppressor	1951	78114A	Crosshead and rack assy.		
LAMPS			SWITCHES			Cut to 31 ³ / ₁₆ "	1948-50	738764
Fog	1951	*55029B/E	Dipper	1948-55	*31372A	"	1951-55	736177
Head, Home			Foglamp	1948-51	31113A	Outer casing		
R.H.D., dip left (L.H.)	1948-50	*50799D	Knob	—	*315131	Motor to wheelbox ..	1948-50	*739855
" non-dip (R.H.)	1948-50	*50579K	Heater	1948-50	*78238A	Wheelbox to wheelbox	1948-50	*739953
" dip left			Knob	—	*768543	"	1951-55	*739969
(L.H. and R.H.)	1951-52	*50954A	Heater	1951-55	31201B/D	3", offside wheelbox ..	1948-55	740031
ditto (alternative)	1952	50941A	Knob	—	*316224	Arm, left hand drive ..	1948-50	*737431
ditto	1953-55	51336A	Ignition and lighting	1948-55	31194A/D	"	1951-55	*737581
Head, Export			Knob	—	316286	" right hand drive ..	1948-50	*737430
R.H.D., dip left	1948-50	*50799D	Panel	1948-55	31113A	"	1951-55	*737529
ditto	1951-52	*50954A	Knob	1948-50	*315132	Blade	1948-50	727802
ditto (alternative)	1952	50941A	"	1951-55	316478	"	1951-52	*737433
ditto	1953-55	51336A	Solenoid, starting motor	1948-55	*76411E	"	1953-55	738724
L.H.D., dip right	1948-50	*A50799D	SWITCHES					
"	1951-52	*50804D	Dipper	1952-55	*31372A	Windshield wiper ..	1952-55	31113A
"	1953-55	*51337A	Heater	1952-55	31201D	Knob	—	316478
			Knob	—	*316224	Knob, choke control ..	1952-55	325744
			Ignition and lighting	1952-55	31194A/D	Terminal block	1952-54	37101A
			Knob	—	316286	Trafficators	1952	*54040A
			Panel	1952-55	31113A	"	Later	54045A/D
			Knob	—	316478	Warning lights		
			Solenoid, starting motor	1952-55	*76411D/E	Ignition	1952-54	39020B
			Solenoid operating	1952-55	31115A	Holder	—	304994
			Knob	—	*317332	Main beam	1952-54	39020B
						Holder	—	318874
						Windshield wipers		
						Motor	1952	*75053K
						"	1953-55	75150A
						Wheelbox	1952-55	72592A/K
						Crosshead and rack assy.		
						Cut to 37 ³ / ₁₆ "	1952-55	736177
						Outer casing		
						Motor to wheelbox ..	1952-55	739879
						Wheelbox to wheelbox	1952-55	*739969
						3", offside wheelbox ..	1952-55	740031
						Arm, left hand drive ..	1952-55	*737581
						" right hand drive ..	1952-55	*737529
						Blade	1952	*737433
						"	1952-55	738724

AUSTIN A70 'Countryman' and Pick-up Truck 1952-55

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
AMMETER			LAMPS—continued			SWITCHES—continued		
Ammeter	1952-55	36140A	Head, Export Europe			Windshield wiper ..	1952-55	31113A
Battery	1952-55	GT11A	(not France)	1952	*50963A	Knob	—	316478
Coil, ignition ..	1952-55	*45012A/D	ditto	1953-55	51339A	Knob, choke control ..	1952-55	325744
Control box	1952-55	*37139D/E	Head, Export France			Terminal block	1952-54	37101A
Distributor	1952	40270A/D	"	1953-55	*50962A	Trafficators	1952	*54040A
"	Later	*40295A/E	"	1955	*51341A	"	Later	54045A/D
Fuse box	1952-55	033240	Number plate illumination	1952-55	53101E	Warning lights		
Generator	1952	*22435A/B	Side	1952-55	*52182D	Ignition	1952-54	39020B
"	Later	*22456A/B	Stop tail and number plate	1952-54	53060A	Holder	—	304994
Horn			Stop tail	1955	53178E	Main beam	1952-54	39020B
Low note	1952-55	*69011F	Mirror	1952-55	*62043A	Holder	—	318874
High note	1952-55	*69012F	Starting motor	1952-55	25521B/D	Windshield wipers		
Horn relay	1952-55	33135B	Steering column control	1952-55	32854D/J	Motor	1952	*75053K
LAMPS			SWITCHES			"	1953-55	75150A
Head, Home			Dipper	1952-55	*31372A	Wheelbox	1952-55	72592A/K
R.H.D., dip left	1952	*50954A	Heater	1952-55	31201D	Crosshead and rack assy.		
"	Later	50941A	Knob	—	*316224	Cut to 37 ³ / ₁₆ "	1952-55	736177
"	1953-55	51336A	Ignition and lighting	1952-55	31194A/D	Outer casing		
Head, Export			Knob	—	316286	Motor to wheelbox ..	1952-55	739879
R.H.D., dip left	1952	*50954A	Panel	1952-55	31113A	Wheelbox to wheelbox	1952-55	*739969
ditto	1953-55	50941A	Knob	—	316478	3", offside wheelbox ..	1952-55	740031
ditto	1953-55	51336A	Solenoid, starting motor	1952-55	*76411D/E	Arm, left hand drive ..	1952-55	*737581
L.H.D., dip right	1952	*50804D	Solenoid operating	1952-55	31115A	" right hand drive ..	1952-55	*737529
"	1953-54	*51337A	Knob	—	*317332	Blade	1952	*737433
"	1955	*51337B				"	1952-55	738724

* See Supersession Chart

L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive



AUSTIN A90 'Atlantic' 1949-52

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1949-52	36078F	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
Battery	1949-52	GT11A	Head, Export Europe			Solenoid operating ..	1949-52	31115A
Coil, ignition ..	1949-52	*45012A/D	(not France)	1949-51	*B50445K	Knob	1949-50	*317320
Control box	1949	37065E	ditto	1951-52	*50963A	"	1951-52	*317332
"	1949	*37076E	Head, Export France ..	1951	*50790E	Stop lamp	1949-52	31281B
Distributor	1950-52	40172A/F	"	1951-52	*50962A	Spring	1949-50	315726
"	1952	*40320A/B	"	1949	53101E	"	1951-52	*315723
Fuse box	1952	033240	Number plate illumination			Windshield wiper ..	1949-52	31113A
Generator	1949	*22446A	Number plate illumination			Knob	—	*315133
"	1950-51	*22435A/B	and reverse	1950-52	53152E	Terminal block	1949-52	37101A
"	1951-52	*22456A/B	Side	1949	*52130A	Trafficators	1950-52	*54041A
Horn			"	1950-52	52149A	Warning lights		
Low note	1949-52	*69011F	" (U.S.A.)	1950-52	52165A	Ignition	1949-52	38048A
High note	1949-52	*69012F	Stop tail	1949	*53082B	Holder	—	304994
Horn relay	1949-52	33095A	"	1950-52	53194B	Main beam	1949-52	38048A
LAMPS			Mirror	1949-52	*62043A	Holder	—	304994
Fog	1949-50	*55052F	Starting motor	1949	*25522A/B	Windshield wipers ..		
"	1951-52	55090A	Steering column control			Motor	1949-50	*75063K
Head, Home			Suppressor	1949-52	32792A/N	"	1951	*75063L
R.H.D., dip left (L.H.)	1949-51	*50445K	"	1951	78114A	"	1952	75154A
" non-dip (R.H.) ..	1949-51	*50446K	SWITCHES			"	1949-52	*72548A/K
" dip left			Dipper	1949-52	*31372A	Crosshead and rack assy.		
(L.H. and R.H.) ..	1951-52	*50954A	Foglamp	1949-50	31154A	Cut to 4 1/2"	1949-52	736307
"	1952	50941A	Knob	—	*315131	Outer casing		
Head, Export			Heater	1949-52	*78238A	Motor to wheelbox ..	1949-52	*739832
R.H.D., dip left ..	1949-51	*50445K	Knob	—	*768543	Wheelbox to wheelbox	1949-51	739932
"	1951-52	*50954A	Lighting	1949-52	31194A	"	1952	*739959
"	1952	50941A	Knob	—	316276	3", offside wheelbox ..	1949-52	740031
L.H.D., dip right ..	1949	*50528M	Panel	1949-52	31113A	Arm, left hand drive ..	1949-52	*737557
"	1949-51	*A50445K	Knob	—	*315132	" right hand drive ..	1949-52	*737453
"	1951-52	*50804D	Solenoid, starting motor			Blade	1949-52	*737433

AUSTIN A90 and A95 'Westminster' and 'Countryman' 1955-59

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1955-58	GT9A	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
"	1959	BT9A	Head, Export Europe			Ignition and lighting ..	1955-59	31516A/D
Coil, ignition	1955	*45012B	(not France)	1955-56	51517F/J	Knob	—	316449
"	1955-59	*45054A/M	ditto	1957	51969A/E	Panel	1955-59	*31498A
Control box	1955	*37139E	ditto	1958-59	58050B/D	Knob	—	318368
"	1955-58	37183A/H	(except France & Sweden)			Solenoid, starting motor	1955-59	*76411E
"	1959	37183K	Later	1959	58280A	ditto (automatic		
Distributor	1955-59	40442A/D	Head, Export France ..	1955-56	51518F/H	transmission)	1958-59	*76443A
"	1955	40470A	"	1957	51970A/D	Solenoid operating ..	1955-59	*31510A
Flasher unit	1955-56	*35003A	"	1958-59	58051A/B	Knob	—	317375
"	1957-59	35010A	"	1959	58281A	Stop lamp	1956-59	31082E/H
Fuse box	1955-59	033240	Head, Export Sweden ..	1959	58050B/D	Trafficator	1955-56	*31464D
Generator	1955	*22483A	Lens, decorative			Windshield wiper ..	1955-59	*31498A
"	1956-59	*22483B/D	(when trafficators fitted)			Knob	—	318369
Horn			Front	1955-56	574245	Knob, choke control ..	1955-59	326728
Low note	1955-59	69046A/F	Rear	1955-56	574260	Trafficators	1955-56	54044D
High note	1955-59	69047A/F	Number plate illumination			Windshield wipers ..		
Horn relay	1957-59	*33116B	ditto ('Westminster')			Motor	1955-58	75251A/E
LAMPS			ditto ditto	1957	53278B	"	1959	75251H
Flasher, front	1955	*52213A	ditto ('Countryman')			Wheelbox	1955-59	*72665A
ditto	1956	*52296A	ditto ditto	1958-59	53630A	Crosshead and rack assy.	1955-56	*743234
ditto	1957-59	52337A	Side	1955-56	53518A	Cut to 4 1/2"	1957-59	743235
ditto (N. America) ..	1957	*52213B	"	1957	*53633A	Outer casing		
ditto	1958-59	52345A	"	1955-56	*52214E	Motor to wheelbox ..	1955-59	743316
Flasher, rear	1955	*53333A	Stop tail and reflex ..	1955	53332B	Wheelbox to wheelbox	1955-59	743317
Head, Home			Stop tail, flasher and reflex			End tube	1955-59	740746
R.H.D., dip left ..	1955-56	51515F/J	ditto	1956	058619	Ferrule, casing retaining	1957-59	740715
"	1957	51967A/E	ditto	1957-59	53565D/E	Arm, left hand drive ..	1955-59	755081
"	1958-59	58048B/E	Starting motor	1955-59	25521D	" right hand drive ..	1955-59	745080
Head, Export			Steering column control			Blade	1955-59	738734
R.H.D., dip left ..	1955-56	51515F/J	ditto	1957-58	*32994B	Borg Warner		
"	1957	51967A/E	ditto	1958-59	33524A	overdrive equipment		
"	1958-59	58048B/E	SWITCHES			Relay	1957-59	33177A
L.H.D., dip right ..	1955-56	51516H/K	Dipper	1955-59	31284A/D	"	1959	33204A
"	1957	51958D	Flasher	1955-56	*31530A	Switches		
"	1958-59	58049B/D	"	1957-59	31630A/D	Centrif ugal	1958-59	76112D
"			Heater/Fan	1959	31885A	Kick-down	1957-59	31597A/B
"			Knob	1955-59	*31498A			
"			"	—	318370			

AUSTIN A99 1959-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1959-60	BT9A	LAMPS— <i>continued</i>			LAMPS— <i>continued</i>		
"	1959-60	BT11A	Gear indicator			Number plate illumination	1959-60	53822A
Bulb holder, panel light	1959-60	554734	(automatic transmission)			ditto	1960	53814A
Bulb	—	987	L.H.D.	1959-60	38205B	Side and flasher	1959-60	52416A/B
Coil, ignition	1959-60	45102A/D	R.H.D.	1959-60	38202B/D	ditto (N. America)	1959-60	52429A/B
Control box	1959	37290A/B	Head, Home			Stop tail and flasher ..	1959-60	53774A/B
"	1959-60	37290D/E	R.H.D., dip left	1959-60	58465A/D	ditto (N. America)	1959-60	53775A/B
Distributor	1959-60	40661A/D	Head, Export			Reflex reflector	1959-60	57115A
Flasher unit	1959-60	35020A	R.H.D., dip left	1959-60	58465A/B	"	1960	57136A
Fuse box	1959-60	033285	L.H.D., dip right	1959-60	58466A/D	Sleeve, Lucar connector		
Generator	1959-60	22530A	Head, Export Europe			14 amp.	1959-60	54190042
Horn			(except France & Sweden)			35 amp.	1959-60	54190043
Low note	1959-60	69046F	Head, Export France ..	1959-60	58467A/D	Starting motor	1959-60	25521D
High note	1959-60	69047F	Head, Export Sweden ..	1959-60	58468A/D	Steering column control	1959-60	33532A/B
Horn relay	1959-60	33214A	Head, Export U.S.A. ..	1959-60	*58494A/B			
"			"	1960	*58623A			

* See Supersession Chart

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



AUSTIN A99 1959-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			Warning lights			Windshield wipers—cont'd		
Brake booster warning light	1959-60	31921A	Bulb holder, ignition	1959-60	863511	Grommet	1959-60	740811
Dipper	1959-60	31800A	Bulb	—	987	Arm, left hand drive	1959	54710870
Heater	1959-60	*31851A	Bulb holder, main beam and vacuum	1959-60	554734	" right hand drive	1960	54711544
Ignition and starter	1959	31781D	Bulb	—	987	" " " " "	1959	54710869
" " Later	1959-60	31973A/B				" " " " "	1960	54711545
Lighting	1959-60	31850A/B	Windshield wipers			Blade	1959-60	54711283
Panel light	1959-60	*31851A	Motor, left hand drive	1959-60	75366A			
Safety switch, starter circuit (automatic transmission)	1959-60	*31824A	" right hand drive	1959-60	75365A	Borg Warner overdrive equipment		
Solenoid, starting motor	1959	*76465A	Wheelbox	1959-60	72724A	Relay	1959	33177A
ditto	1960	76464A	Crosshead and rack assy.			" " Later	1959-60	33217A
ditto (automatic transmission)	1959-60	*76466A	L.H.D. Cut to 39 $\frac{3}{16}$ "	1959-60	744256			
Stop lamp	1959-60	31882A	R.H.D. " " 33 $\frac{3}{16}$ "	1959-60	744254	Switches		
Windshield wiper	1959	31928A	Outer casing			Centrifugal	1959	76112D
Knob	—	31264A	Motor to wheelbox			" " Later	1959-60	76122A
Windshield wiper Later	1959-60	31975A	L.H.D.	1959-60	54710838	Kick-down	1959-60	*31597B
Knob	—	31264A	R.H.D.	1959-60	54710837	" " Later	1960	34291A
			Wheelbox to wheelbox	1959-60	54710839	" " "	1960	34261B
			End tube	1959-60	740746			

AUSTIN A105 (BS7) 1957-59: A105 (Vanden Plas BS8) 1958-59

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery			LAMPS—continued			SWITCHES—continued		
" (special orders)	1957-59	GT9A	Head, Export France	1957	51970A	Solenoid, starting motor	1957-59	*76411E
Bulb holder, panel light	1957	554734	ditto (BS7)	1958-59	58051B	ditto (automatic transmission)	1958-59	*76443A
Bulb	—	987	ditto (BS7) Later	1959	58281A	Solenoid operating	1957-59	*31510A/D
Coil, ignition	1957-59	*45054D/K	ditto (BS8)	1958-59	58237A	Knob	1957-59	317375
Control box	1957-59	37183A/H	Head, Export Sweden (BS8)	1959	58050B/D	Stop lamp	1957-59	31082E/H
" " Later	1959	37183K	Number plate illumination	1957	53518A	Windshield wiper	1957-59	*31498A
Distributor	1957-59	40442A/E	Side	1957	52348A	Knob	1957-59	318369
Flasher unit	1957-59	35010A	" " " "	1958-59	*52214E	Knob, choke control	1957-59	326728
Fuse box	1957-59	033240	Stop tail, flasher and reflex	1957-59	53565D/E	Windshield wipers		
Generator	1957-59	*22483B/D	ditto	1959	53565F	Motor	1957-59	75251A/E
Horn			ditto (N. America)	1957-59	53579D	" " Later	1959	75251H
Low note	1957-59	69046E/F	Mirror (BS8)	1959	62047A	Wheelbox	1957-59	*72665A/B
High note	1957-59	69047E/F	Starting motor	1957-59	25521D	Crosshead and rack assy. Cut to 45 $\frac{3}{16}$ "	1957-59	743235
Horn relay	1957-59	*33116B	Steering column control	1957-58	*32994A/B	Outer casing		
LAMPS			ditto (BS8 and later BS7)	1958-59	33524A	Motor to wheelbox	1957-59	743316
Flasher, front			SWITCHES			Wheelbox to wheelbox	1957-59	743317
Except North America	1957-59	52337A	Dipper	1957-59	31284A/D	End tube	1957-59	740746
North America	1957-59	52345A	Flasher	1957	31608A	Ferrule, casing retaining	1957-59	740715
Fog	1957-59	55187A	" " " "	1958	31630D	Arm, left hand drive	1957-59	745081
Head, Home			" " " "	1959	31885A	" right hand drive	1957-59	745080
R.H.D., dip left	1957	51967A/E	Foglamp	1957-59	*31498A	Blade	1957-59	738734
" " (BS7)	1958-59	58048B/E	Knob	—	313603	Borg Warner overdrive equipment		
" " (BS8)	1958-59	58235A/D	Heater	1957-59	*31498A	Relay	1957-59	33177A
Head, Export			Knob	—	318370	Switches		
R.H.D., dip left	1957	51967A/E	Ignition and lighting	1957-58	31516A	Centrifugal	1958-59	76112D
" " (BS7)	1958-59	58048B/E	Knob	—	316449	Kick-down	1957-59	*31597A/B
" " (BS8)	1958-59	58235A/D	Ignition and lighting (B.S.7.)	1959	31516A			
L.H.D., dip right	1957	51968A/E	Knob	—	316449			
" " Later	1958-59	58049B/D	Relay (BS8)	1959	31194D			
Head, Export Europe (not France)	1957	51969A/E	Knob	—	316285			
ditto (BS7)	1958-59	58050B/D	Panel	1957-59	*31498A			
ditto (BS8)	1958-59	58236A/B	Knob	—	318368			
(except France & Sweden)								
Later	1959	58280A						

AUSTIN A125 'Sheerline' 1948-54

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter			LAMPS—continued			Suppressor		
Battery	1948-54	36053B	Head, Home				1951	78114A
Coil, ignition	1948-54	*45012A/D	R.H.D., dip left (L.H.)	1948-54	50532B	SWITCHES		
Control box	1948-49	*37066B	" non-dip (R.H.)	1948-54	50533A	Dipper	1948-54	*31372A
" " Later	1952-54	*37118A	Head, Export			Foglamp	1948-54	31114A
Distributor	1948	*40107A/B	Vertical dip	1948-54	50502A	Knob	—	315206
" " " "	1949	*40147B	Head, Export France	1948-54	50820A	Heater	1948-54	31113A
" " " "	1950-54	*40147D/H	Head, Export U.S.A.	1948-54	50773B	Knob	—	315104
Generator	1948	*22417D	Map reading light	1948-54	39006A	Ignition	1948-54	31287A
" " Later	1948	*22417E	Number plate illumination			Lighting	1948-54	31114A
" " " "	1949	*22417J	L.H.	1948-52	53109A	Knob	—	315206
" " " "	1950-52	*22435A/B	R.H.	1953-54	*53108A	Map light	1948-54	31113A
" " " "	1952-54	*22456A/B	Side	1948-54	*52112A	Knob	—	315104
Horn			Stop tail	1948-54	53095F	Panel	1948-54	31113A
Low note	1948-54	*69021A	Tail and reverse	1948-53	*53103E	Knob	—	315104
High note	1948-54	*69022A	Stop tail and reverse (alternative)	1953-54	53202B	Reverse lamp	1948-54	*31077D
Horn relay	1953-54	*33135B	Mirror	1948-54	*62015A/E	Solenoid, starting motor	1948-49	76022B
Junction box	1948-54	78266A	Panel light bulb holder	1948-54	39010A	" " " "	1950-54	*76411D
LAMPS			Starting motor	1948-49	*27024A	Solenoid operating	1948-54	31115A
Fog	1948-54	55044A	" " Later	1949-54	26043A	Knob	—	*317308
			Steering column control			Stop lamp	1948-54	31281B
			R.H.D.	1948-54	32747A/N	Spring, R.H.D.	—	*315723
			L.H.D.	1948-54	32776A/K	" L.H.D.	—	315726

* See Supersession Chart L.H. .. Left hand R.H. .. Right hand L.H.D. ... Left hand drive R.H.D. .. Right hand drive continued



AUSTIN A125 'Sheerline' 1948-54—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Terminal block	1948-54	37083E	Windshield wipers— <i>cont'd</i>			Windshield wipers— <i>cont'd</i>		
Trafficators	1948-50	*54010A	Motor	1951	*75088M	Outer casing		
"	1948-50	*54010A	"	1952-54	75151A	3", offside wheelbox ..	1948-54	740031
"	1951-54	*54041A	Control box	1948-54	72606A	Wheelbox to control box		
Warning lights			Wheelbox	1948-54	*72548A/K	Offside	1948-50	739937
Ignition	1948-54	*318534	Crosshead and rack assy.			"	1951-54	*739933
Main beam	1948-54	*318534	Cut to 18 #	1948-54	738987	"	1948-51	739937
Thermo starter (three-carburettor models only)	1948-51	*38019B	Inner rack	1948-54	736024	"	1952-54	*739933
Windshield wipers			Outer casing			Guide tube	1948-54	735895
Motor	1948-49	*75055K	Motor to wheelbox ..	1948-50	739870	Arm	1948-54	*737481
"	1950	*75088L	"	1951-54	*739855	Blade	1948-53	*737482
			4", nearside wheelbox	1948-54	740032	"	1954	*737682

AUSTIN A125 Limousine 1951-54

Ammeter	1951-54	36053B	Mirror	1951-52	62044A	Terminal block	1951-52	37083E	
Battery	1951-54	SLT15E	"	1953-54	*62015E	"	1953-54	37101A	
Coil, ignition	1951-54	*45012A/D	Panel light bulb holder	1951-54	39010A	Trafficators	1951-52	*54036A	
Control box	1951	*37118A	Starting motor	1951-54	26043A	"	Later	1952-54	*54041A
"	1952-54	*37076E	Steering column control			Warning lights			
Distributor	1951-54	*40147D/H	R.H.D.	1951-54	32837B/F	Heater	1951-54	39020B	
Generator	1951-52	*22435A/B	L.H.D.	1951-54	32838B/F	Holder	—	304994	
Horn	Later	*22456A/B	Suppressor	1951	78114A	Ignition	1951-54	*318534	
Low note	1951-54	*69021A	SWITCHES			Main beam	1951-54	*318534	
High note	1951-54	*69022A	Dipper	1951-54	*31372A	Radio	1951-53	*318534	
Junction box	1951-52	78266A	Door light	1951-54	*359216	Windshield wipers			
LAMPS			Foglamp	1951-54	31114A	Motor	1951-52	*75088M	
Fog	1951-54	55044A	Knob	1951-54	315206	"	Later	1952-54	75151A
Head, Home			Heater	1951-54	31113A	Control box	1951-54	72606A	
R.H.D., dip left (L.H.)	1952-54	50532B	Knob	—	315104	Wheelbox	1951-54	*72548A/K	
non-dip (R.H.)	1952-54	50533A	Ignition	1951-54	31287A	Crosshead and rack assy.			
Head, Export			Interior light	1951-54	*31275A	Cut to 18 #	1951-54	738987	
Vertical dip	1951-54	50502A	Lighting	1951-54	31114A	Inner rack	1951-54	736024	
Head, Export France	1951-54	50820A	Knob	—	315206	Outer casing			
Head, Export U.S.A.	1951-54	50773B	Map light	1951-54	31113A	Motor to wheelbox ..	1951-54	*739855	
Map reading light	1951-54	39006A	Knob	—	315104	4", nearside wheelbox	1951-54	740032	
Number plate illumination	1951	53109A	Panel	1951-54	31113A	3", offside wheelbox ..	1951-54	740031	
ditto	1952	53100A	Knob	—	315104	Wheelbox to control box			
ditto (L.H.)	1952-54	*53108A	Reverse lamp	1951-54	*31077D	Offside	1951-54	*739933	
ditto (R.H.)	1952-54	*53110A	Solenoid, starting motor	1951-54	*76411D	Nearside	1951-52	739937	
Pass	1952	55043E	Solenoid operating ..	1951-54	31115A	"	Later	*739933	
Reverse tail and number plate	1953-54	53116A	Knob	—	*317308	Guide tube	1951-54	735895	
Side	1951-54	*52112A	Stop lamp	1951-54	31281B	Arm	1951-54	*737481	
Stop tail and reverse	1951-54	53198B	Spring, R.H.D.	—	*315723	Blade	1951-54	*737482	
Stop tail and number plate	1953-54	53117A	" L.H.D.	—	315726				

AUSTIN A135 'Princess' 4 litre Saloon and Limousine 1948-60

Ammeter	1948-54	36053B	Horn relay	1955	*33116B	LAMPS, Head, Export— <i>continued</i>			
Battery	1955-60	36185A	Cover	1956-60	33135B	L.H.D., dip right	1948	*A 50705D	
Bulb holder, panel light	1948-60	SLT15E	Junction box	1959-60	340931	"	1949	A 50825A	
Bulb	1956-60	39010A	"	1951-60	340786	"	1950	A 50900A	
"	1956-60	554734	LAMPS			"	1951-55	A 51054A	
Coil, ignition	1949-55	*45012A/D	Bonnet	1955-57	39006A	"	1956	51810B	
Control box	1948-49	*37066B	Boot and map reading	1955-60	39006A	"	Later	51921B	
"	1950-52	*37118A	Courtesy or step	1955-60	52139B/E	"	1958 60	58166A	
"	1952-56	*37139D/E	Flasher, front	1954-55	*52256A	Head, Export Europe			
"	1957-58	37183A/H	Flasher, rear	1954-55	*52282A	(not France)	1948	*B50705D	
"	1959-60	37183K	Flasher, front and rear	1956	*52282A	ditto	1949	B50825A	
Distributor	1948	*40107A/B	ditto	Later	*52282B	ditto	1950	B50900A	
"	1949-50	*40147D/H	Fog	1948-50	55043E	ditto	1951-55	B51054A	
"	1950	*40189A/B	"	1951	*55055B	ditto	1956	51811A	
"	1951-54	*40147D/H	"	1952-53	55043E	ditto	Later	51922A/B	
"	1954	40308A/B	"	1953	55084B	Head, Export France			
"	1954	40308D/J	"	1954-56	*55055B/D	"	1948-50	50848A	
"	1955	*40147H	"	1956-60	55165A	"	1951-55	*51056A	
"	1956-60	40371A/F	Head, Home			"	1956	51812A	
Flasher unit	1955-56	*35003A	R.H.D., dip left (L.H.)	1948	*50705D	"	Later	51923A/B	
"	1957-60	35010A	" non-dip (R.H.)	1948	50751D	Number plate illumination			
Flasher relay	1955	33117A	" dip left (L.H.)	1949	50825A	ditto	1948-56	53100A	
Fuse box	1955-60	033240	" non-dip (R.H.)	1949	*50826A	"	Later	53093E/J	
" (special orders)	1960	37075A	" dip left (L.H.)	1950	50900A	Pass	1951	55043E	
Generator	1948	*22417D	" non-dip (R.H.)	1950	*50901A	Reverse	Later	1955	53128E
"	1948	*22417E	" dip left (L.H.)	1951-55	51054A	"	1956-60	53412B	
"	1949	*22417J	" non-dip (R.H.)	1951-55	*51055A	Roof			
"	1950-52	*22435A/B	dip left			Front compartment ..	1956-60	56060A	
"	1952-54	*22456A/B	(L.H. and R.H.)	1956	51808A	Rear compartment ..	1956-60	56061A	
"	1955	*22483A	"	1957	51920A	Side	1948	*52118A	
"	1956-59	*22483B/D	"	1958-60	58165A	"	1949-53	*52148A	
"	1960	22489B/D	Head, Export			"	1954-57	*52182A/D	
" (power steering, optional)	1959	*22524A/F	R.H.D., dip left ..	1948	*50705D	"	1958-60	52254A	
ditto	Later	22528A/D	"	1949	50825A	Stop tail and reverse			
Horn	1948-55	*69021A	"	1950	50900A	"	1948	*53094E	
Low note	1956-60	69046A/F	"	1951-55	51054A	"	1949	*53142D	
High note	1948-55	*69022A	"	1956	51808A	"	1950-55	53202B	
"	1956-60	69047A/F	"	1956-57	51919A	Stop tail and reflex	Later	1955-60	53384B
"	1956-60	69047A/F	"	1958-60	58164A				

* See Supersession Chart

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



AUSTIN A135 'Princess' 4 litre Saloon and Limousine 1948-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Mirror	1948-54	62044A	SWITCHES—continued			Warning lights—continued		
" (L.W.B.)	1955-60	*62047A	Map/Reading light	1948-60	31113A/D	Bezel		
" (S.W.B.)	1955-56	62060A	Knob	1948-53	315104	Main beam and ignition	1956-60	304084
" (optional, L.H.)	1959-60	062590	"	1954	316478	Rear door (green)	1958-60	304085
" (R.H.)	1959-60	062587	"	1955	316512	Bulb	1956-60	987
Reflex reflector	1954	57052B	"	1956-60	316520	Radio	1948-53	*318534
Screenjet	1956-60	077011	Panel	1948-53	31113A	Thermo starter (three-carburettor models)	1948-51	*38019B
Accessories	1956-60	*295230	Knob	—	315104	Windshield wipers		
Starting motor	1948	*26057A	Panel rheostat	1954	*78238A	Motor	1948-50	*75055K
"	1949-60	26043A	Knob	—	*316509	"	1951-52	*75067L
Steering column control			Panel rheostat	1955	78232B	"	1952-53	75158A
R.H.D.	1948-55	32747A/N	Knob	—	*316509	"	1954-55	*75188F
L.H.D.	1948-55	32776A/K	Panel rheostat	1956-59	78299A/B	"	1956	*75291A
Steering column control	1956-60	32951A/E	Knob	—	316518	"	1957-59	75296B/D
Suppressor	1951	78114A	Panel rheostat	1960	78369A	"	1959-60	75296E
" (when fitted)	1958-59	78106A	Knob	—	316518	Control box	1948-50	72606A
			Reverse lamp (synchro-mesh)	1948-60	*31077D/E	Wheelbox	1948-53	*72548A/K
			Solenoid, starting motor	1948-50	76022B	"	1954-56	72647B
			ditto	1951-60	*76411D/E	"	1957-60	72694A
			ditto (automatic transmission)	1957-60	*76443A	Crosshead and rack assy.		
			Solenoid operating	1948-54	31115A	Cut to 20 1/8"	1948-50	738987
			Knob	1948-53	*317308	" " 47 1/8"	1951-53	*738499
			"	1954	316478	" " 47 1/8"	1954-56	741264
			"	1955	316512	Crosshead and rack assy.	1957-60	743235
			"	1956-60	316520	Inner rack	1948-50	736024
			"	1948-57	31281B	Outer casing		
			"	1958-60	31082E	Motor to wheelbox	1948-53	739870
			"	1948-57	*315723	"	1954-56	745038
			"	1948-57	315726	"	1957	744892
			"	1948-57	315726	"	1958-60	744550
			"	1948-51	31201B	"	1951-53	*739968
			"	1951-53	31201B	"	1954-56	745039
			"	1951-53	*316233	"	1957	744891
			"	1954-56	31302A/D	"	1958-60	745039
			"	1957-60	316510	"	1958-50	740032
			"	1957-60	31113E	"	1948-53	740031
			"	—	316520	"	1954-60	740746
			"	1955	326724	End tube		
			"	1956-60	327617	Control box to wheelboxes	1948-50	739937
			"	1957-60	313610	Guide tube	1948-50	735895
			"	1948-53	37083E	Ferrule, casing retaining	1954-60	740715
			"	1954-60	37101A/B	Grommet	1957-60	740811
			"	1948-50	*54010A	Arm	1948-50	*737481
			"	1951-54	54003E	" left hand	1951-53	*737557
			"	1955	*54041A	"	1954	*741294
			"	1955	*54041A	"	1955	*741295
			"	1955	*54041A	" right hand	1951-53	*737453
			"	1955	*54041A	"	1954	*741295
			"	1955	*54041A	"	1955	*741294
			"	1955-60	304994	" left hand drive	1956-60	745081
			"	1948-54	*318534	" right hand drive	1956-60	745080
			"	1948-55	*318534	Blade	1948-51	*737482
			"	1956-60	39020B	"	1951-53	*737682
			"	1956-60	39020B	"	1954-60	741680

AUSTIN 'Princess' Mk. IV 4 litre Saloon and Limousine 1957-59

Ammeter	1957-59	36230A	LAMPS—continued			SWITCHES—continued		
Battery	1957-59	GT11A	Interior			Panel	1957-59	*78326H
Bulb holder panel light	1957-59	55473A	Front compartment,			Knob	—	313628
"	1959	8663511	Limousine	1957-59	56016A	Screenjet	1957-59	31115E
Bulb	1957-59	987	Map reading and boot	1957-59	39006A	Knob	—	313624
Coil, ignition	1957-59	*45054A/K	Number plate illumination	1957-59	53093H	Solenoid, starting motor	1957-59	*76443A
Control box	1957	37225A	Reverse	1957-59	53412A/B	Solenoid operating	1957-59	31115E
"	1958-59	37259B	Roof and courtesy	1957	56061A	Knob	—	313629
Distributor	1957-58	40371D/E	"	1958-59	56060A	Stop lamp	1957-59	31082E/H
"	1959	40635A/D	"	1959	56060B	Windshield wiper	1957-58	*31302A/B
Flasher unit	1957-59	35010A	Side	1957-59	52325B	"	1959	31430D/E
Fuse box (main)	1957-59	033240	Stop tail and reflex	1957-59	53566A	Knob, air control	1957-59	327617
" (subsidiary)	1957-59	37075A	Mirror	1957	62065A	" choke	1957-59	313610
Generator	1957-59	*22483B/D	"	1958-59	*62047A	Terminal block	1957-59	37101B
Horn			Relay, horn	1957-59	33135B			
Low note	1957-59	69046E/F	Cover	1958	*340931	Warning lights		
High note	1957-59	69047E/F	"	1959	340786	Bezel (red)	1957-59	319345
Junction box (Limousine)	1957	78266A	Relay, side lamp	1957-59	33052B	" (green)	1957-59	319346
			Screenjet	1957-59	077011	Shade	1957-59	319222
			Accessories	—	*295270	Bulb holder	1957-59	863511
			Starting motor	1957-59	26043A	Bulb	—	987
			Steering column control	1957-59	32951A/E			
						Windshield wipers		
						Motor	1957	75309A
						"	1958-59	*75329A
						Wheelbox	1957-59	72687A
						Crosshead and rack assy.		
						Cut to 44 1/8"	1957-59	744256
						Outer casing		
						Motor to wheelbox	1957	744892
						"	1958-59	744283
						"	1957	744891
						Wheelbox to wheelbox	1958-59	744284
						"	1957-59	740746
						End tube	1957	*741835
						Arm, left hand drive	1957	*741835
						"	1958-59	745072
						" right hand drive	1957	*741834
						"	1958-59	745071
						Blade	1957	*738735
						"	1958-59	737897

* See Supersession Chart L.H. . . Left hand R.H. . . Right hand L.H.D. . . Left hand drive R.H.D. . . Right hand drive



AUSTIN B.M.C. 'Princess' 3 litre 1960

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1960	36261A	LAMPS—continued			Warning light		
Battery	1960	BT11A	Side and flasher			Brake booster	1960	38204A
Coil ignition	1960	45102E	(L.H.)	1960	52506B			
Control Box	1960	37304B	(R.H.)	1960	52507B			
Distributor	1960	40661D	(U.S.A., L.H.)	1960	52508B	Windshield wipers		
Flasher unit	1960	35020A	(" R.H.)	1960	52509B	Motor, left hand drive ..	1960	75366A
Fuse box	1960	033285	Stop tail, flasher and reflex	1960	53776A/B	" right hand drive	1960	75365A
Generator	1960	22530A	ditto (U.S.A.)	1960	53777A/B	Wheelbox	1960	72724A
Horn			Relay, horn	1960	33214A	Crosshead and rack assy.		
Low note	1960	69087A	Starting motor	1960	25521D	L.H.D.	1960	744256
High note	1960	69090A	Steering column control ..	1960	33560A	R.H.D.	1960	744254
LAMPS			Stator tube	—	54300200	Outer casing		
Fog	1960	55165A	SWITCHES			Motor to wheelbox		
Gear indicator			Brake booster warning			L.H.D.	1960	54710838
L.H.D.	1960	38214A	light	1960	31921D	R.H.D.	1960	54710837
R.H.D.	1960	38213A	Dipper	1960	31800A	Wheelbox to wheelbox	1960	54710839
Head, Home			Foglamp	1960	31780D	End tube	1960	740746
R.H.D., dip left ..	1960	58581A	Heater	1960	*31498A	Ferrule, casing retaining	1960	740715
Head, Export			Knob	—	313622	Grommet	1960	740811
R.H.D., dip left ..	1960	58581A	Ignition and starter	1960	31973B	Arm, left hand drive ..	1960	54711544
L.H.D., dip right ..	1960	58444D	Lighting	1960	31850B	" right hand drive ..	1960	54711545
Head, Export Europe			Maplight	1960	*31498A	Blade	1960	54711283
(except France & Sweden)	1960	58445D	Knob	—	313626			
Head, Export France ..	1960	58447D	Panel Rheostat	1960	78369A			
Head, Export Sweden ..	1960	58446D	Knob	—	313628			
Head, Export U.S.A. ..	1960	*58527D	Reverse lamp	1960	31849A			
Map reading	1960	39006A	Safety	1960	*31824A			
Number plate illumination	1960	53814A	Solenoid, starting motor	1960	*76465A	Borg Warner		
Reverse	1960	53789A	ditto (automatic			overdrive equipment		
			transmission)	1960	*76466A	Relay	1960	33177A
			Stop lamp	1960	31882A	Switches		
			Windshield wiper	1960	31997A	Centrifugal	1960	76112D
			Knob	—	312644	Kick-down	1960	34291A

AUSTIN Ambulance (DA1) and Hearse (DH1) 1951–55: Ambulance Chassis (DA2 and DA3) and Hearse Chassis (DH2 and DH3) 1956–60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1951-55	36053B	LAMPS—continued			SWITCHES—continued		
Battery	1956-60	36185A	Head, Export France ..	1951-55	50820A	Solenoid, starting motor	1951-60	*76411D/E
(DA3 and DH3)	1951-60	STXT19E	" " " " Later	1956-59	51812A	ditto (automatic		
Bulb holder, panel light ..	1951-55	FMI29E	" " " " " "	1959-60	51923B	transmission)	1958-60	*76443A
" " " " " "	1956-60	39010A	Head, Export U.S.A. ..	1951-55	50773B	Cap	1956-60	763014
" " " " " "	1956-60	554734	Map/Reading	1951-55	39006A	Solenoid operating	1951-60	31115A/E
" " " " " "	1956-60	987	Number plate illumination	1951-55	53109A	Knob	1951-55	*317308
Coil, ignition	1951-55	*45012A/D	ditto (Ambulance			" " " " " "	1956-60	316520
" " " " " "	1956-60	*45054	only)	1955	53100A	Stop lamp	1951-60	31281B
			D/M			Spring, R.H.D.	—	*315723
Control box	1951	*37118A	Reverse, tail and number			" L.H.D.	—	315726
" " " " " "	1952-55	*37076E	plate	1953-55	53116A	Windshield wiper	1956-57	31302D
" " " " " "	1956-59	37183A/H	" " " " " "	1951-55	*52112A	" " " " " "	1958-60	31113D
" " " " " "	1960	37183K	Side	1956-57	*52182D	Knob	1956-57	316519
Distributor	1951-54	*40147H	" " " " " "	1958-60	52254A	" " " " " "	1958-60	316520
" " " " " "	1955	40308D/J	Stop tail and reverse ..	1951	53095F	Terminal block	1951-52	37083E
" " " " " "	1956-60	40371A/F	" " " " " "	1952-53	*53103E	" " " " " "	1953-60	37101A/B
Flasher unit	1956	*35003A	" " " " " "	1953-55	53198B	Trafficators " "	1951-52	*54036A
" " " " " "	1957-60	35010A	" " " " " "	1953-55	53117A	" " " " " " Later	1952-55	*54041A
Generator	1951-52	*22435A/B	Stop tail and number plate	1951-52	62044A	Warning lights		
" " " " " "	1952-54	*22456A/B	Mirror	1951-52	*62015E	Ignition and main beam	1951-55	*318534
" " " " " "	1955-56	*22483A	Starting motor	1951-60	26043A	Bulb holder	1951-60	39020A
" " " " " "	1956-59	*22483B/D	Steering column control			Holder	1951-60	30499A
" " " " " "	1960	22489B	R.H.D.	1951-55	32837B/F	Bezel	1951-60	30408A
" " " " " "	1960	22528A/D	L.H.D.	1951-55	32838B/F	Bulb	1951-60	987
Horn			Steering column control ..	1956-60	32951A/E	Windshield wipers (when		
Low note	1951-55	*69021A	Suppressor	1951	78114A	fitted)		
" " " " " "	1956-60	69046A/F	SWITCHES			Motor	1951-52	*75088M
" " " " " "	1951-55	*69022A	Dipper	1951-54	*31372A	" " " " " " Later	1952-55	75151A
" " " " " "	1956-60	69047A/F	" " " " " "	1955-60	31284A/D	" " " " " "	1959-60	75296D/E
Horn relay	1956-60	33135B	Door light	1951-55	*359216	Control box	1951-55	72606A
Cover	1958	*340931	Flasher (serviced by			Wheelbox	1951-54	*72548A/K
" " " " " "	1959-60	340786	Austin)	1956	31523B	" " " " " "	1955	72662A
Junction box (when fitted)	1951-60	78264A	" " " " " "	1957-60	31609A	" " " " " "	1959-60	72694B
ditto	1951-60	78265A	Foglamp	1951-60	31114A/E	Crosshead and rack assy.		
ditto	1951-60	78266A	Knob	1951-55	315206	Cut to 17 1/8"	1951-55	738987
LAMPS			" " " " " "	1956-60	316520	" " " " " "	1959-60	743235
Flasher, front	1956	*52282A	Heater/fan	1951-60	31113A/D	Inner rack	1951-55	736024
" " " " " " Later	1956-60	*52282B	Knob	1951-55	315104	Outer casing		
Fog	1951-55	55044A	" " " " " "	1956-60	316520	Motor to wheelbox ..	1951-55	*739855
" " " " " "	1956-60	55165A	Ignition	1951-55	31287A	" " " " " " " "	1959-60	744550
Head, Home			Ignition and lighting ..	1951-55	31194D	Wheelbox to wheelbox	1959-60	745039
R.H.D., dip left (L.H.)	1952-55	50532B	Knob	—	316285	4" nearside wheelbox ..	1951-55	740032
non-dip (R.H.)	1952-55	50533A	Interior light	1951-55	*31275A	3" offside wheelbox ..	1951-55	740031
R.H.D., dip left	1956-59	51808A	Lighting	1951-55	31114A/E	End tube	1951-55	740032
" " " " " "	1960	58165A	Knob	—	315206	Wheelbox to control	1959-60	740746
Head, Export			Map/Reading light	1951-60	31113A/E	box		
R.H.D., dip left	1956-59	51808A	Knob	1951-55	315104	Offside	1951-52	*739937
" " " " " " Later	1959-60	58164A	" " " " " "	1956-60	316520	Nearside	1951-52	739937
" " " " " "	1960	58165A	Panel	1951-55	316520	Both sides " " Later	1952-55	*739933
L.H.D., dip right	1956-59	51810A	Knob	—	315104	Ferrule, casing retaining	1959-60	740715
" " " " " " Later	1959-60	58166A	Panel rheostat	1956-59	78299A/B	Guide tube	1951-55	735895
Head, Export Europe (not			Knob	—	316518	Arm	1951-55	*737481
France)	1951-55	50502A	Panel rheostat	1960	78369A	" left hand	1959-60	745081
ditto	1956-59	51811A	Knob	—	316518	" right hand	1959-60	745080
ditto	1959-60	51922B	Reverse lamp	1951-60	*31077D/E	Blade	1951-55	*737482

* See Supersession Chart L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



AUSTIN Austin-Healey '100' and '100M' 1954-56

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1954-55	SLG11E	LAMPS— <i>continued</i>			Windshield wipers		
Coil, ignition .. .	1956	SLT11E	Head, Export France ..	1954-55	*51341A	Motor	1954	75150A
Control box .. .	1954-55	*45012A/D	Head, Export U.S.A. ..	1954-56	*51341B/E	"	1955	75144A
Distributor (100) ..	1956	*45054D/E	Number plate illumination	1954-56	53093E	"	1956	*75214A
" (100M) .. .	1954-56	*37139D/E	Side and flasher .. .	1954-55	*52162B/D	Wheelbox	1954-55	72629D
" .. .	1956	37183A/H	"	1956	52240D	"	1956	*72674A
" .. .	Later	*40320A/B	Stop tail	1954-56	53178B/F	Crosshead and rack assy.		
Flasher unit .. .	1956	40495A	Reflex reflector .. .	1955	57052A	Cut to 30 $\frac{3}{8}$ " .. .	1954-55	738764
Flasher relay .. .	1956	*40422B	"	1956	*57084A	"	1956	743221
Fuse box .. .	1954-56	40520A	Panel light bulb holder	1954	39020B	Outer casing .. .		
Generator .. .	1954	*35003A	Starting motor .. .	1954-56	25521B/D	Motor to wheelbox ..	1954-55	739844
" .. .	1955	33117A	Steering column control ..	1954	*32900A/B	"	1956	743880
" .. .	1956	033240	SWITCHES .. .	1955-56	32918A	Wheelbox to wheelbox	1954-55	*739971
Horn		*22456A/B	Battery master	1954-56	76605A	"	1956	743881
Low note .. .	1954-56	*22483A	Dipper	1954-56	*31372A	3" offside wheelbox ..	1954-55	740031
High note .. .	1954-56	*22483B	Ignition	1954-56	31403A/B	End tube	1956	740746
LAMPS .. .		*70071A/F	Lighting	1954-56	*31432A	Arm, left hand drive ..	1954-55	*737571
Driving (optional) ..	1955-56	55132B	Knob	1954-56	316129	"	1956	745083
Fog (optional) .. .	1955-56	55128B	Panel	1954-56	*31140A	Arm, right hand drive ..	1954-55	*737570
Head, Home .. .			Solenoid, starting motor	1954-56	*76411D/E	"	1956	745082
R.H.D., dip left .. .	1954-55	51336A	Solenoid operating .. .	1954-56	*31318A	Blade	1954-56	738724
" .. .	1956	51336B/J	Stop lamp	1956	31082E	Overdrive equipment		
Head, Export .. .			Windshield wiper .. .	1954-56	*31431A	Relay	1954-56	33157A
R.H.D., dip left .. .	1954-55	51336A	Knob	1955	317530	Solenoid	1954	*76500A/B
" .. .	1956	51336B/J	Trafficators	1955	54044D	"	1954-56	*76505A
L.H.D., dip right .. .	1954	*51337A	Warning lights .. .			Switches .. .		
" .. .	1955	*51337B	Ignition	1955	39020A	Centrifugal .. .	1954-55	76108A
" .. .	1956	*51337D/E	Bulb holder, flasher .. .	1956	38067A	Control	1954-56	31452A
Head, Export Europe			" .. main beam .. .	1956	554734	Interrupter .. .	1954-56	*31077E
(not France) .. .	1954-55	51339A	Bulb	1955-56	987	Rotary throttle .. .	1954-56	31402A
ditto	1956	51339B/H						

AUSTIN Austin-Healey '100 Six' (BN4 and BN6) 1957-59

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1957-58	GT9A-3	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
" (alternative, 2 off)	1957-58	SLTW15E	Head, Export Europe			Windshield wiper .. .	1957-59	*31431A
" (BN4) .. .	1959	BT9A	(except France & Sweden)			Knob	—	317530
" (BN6 2 off) .. .	1959	SLG11E	Head, Export France .. .	1957-59	58290A	Warning lights .. .		
Bulb holder, panel light	1957-59	39007A	"	Later	1959	Bulb holder, flasher ..	1957-59	39020B
Bulb	1957-59	554734	Head, Export Sweden .. .	1959	58291A	" .. ignition .. .	1957-59	863511
Coil, ignition .. .	1957-59	*45054E/K	Head, Export U.S.A. .. .	1959	58463A	" .. main beam .. .	1957-59	554734
Control box .. .	1957-59	37183H	Number plate illumination	1957-59	51957B/D	Bulb	—	987
"	Later	37183K	Side and flasher .. .	1957-59	52338A	Windshield wipers		
Distributor .. .	1957	40532A	Stop tail and flasher .. .	1957-59	53564A/B	Motor	1957	*75214A
Flasher unit .. .	1958-59	*40581A/B	Reflex reflector .. .	1957-59	57072B	"	1958-59	75297B/D
Flasher relay .. .	1957-59	35010A	Starting motor .. .	1957-59	25521D	Wheelbox	1957-59	*72674A/B
Fuse box .. .	1957-59	33117A/D	Steering column control ..	1957-59	32984A/B	Crosshead and rack assy.		
Generator .. .	1957	033240	SWITCHES .. .			Cut to 31 $\frac{3}{8}$ " .. .	1957-59	743221
"	Later	*22483A	Battery master	1957	76605A	Outer casing .. .		
Horn		*22483B/D	Dipper	1957-59	*76604B	Motor to wheelbox .. .	1957-59	743880
Low note .. .	1957-59	*70063E/F	"	1957-58	*31372A	Wheelbox to wheelbox	1957-59	743881
High note .. .	1957-59	*70071E/F	Heater	1957-58	31284A/D	End tube	1957-59	740746
LAMPS .. .			Knob	1957-59	*78261B	Ferrule, casing retaining	1957-59	740715
Head, Home .. .			Ignition	1957-59	768473	Arm, left hand drive ..	1957-59	745083
R.H.D., dip left .. .	1957-59	51956B/F	Lighting	1957-59	*31403B/H	" .. right hand drive ..	1957-59	745082
Head, Export .. .			Knob	1957-59	*31432A/D	Blade	1957-59	738724
R.H.D., dip left .. .	1957-59	51956B/F	Panel	1957-59	316129	Laycock de Normanville		
L.H.D., dip right .. .	1957-59	*51966B/E	Solenoid, starting motor	1957-59	31140A/B	overdrive equipment		
Head, Export Europe			Rubber boot	1957-59	*76411E	Relay	1957-59	33157D
(not France) .. .	1957-59	51959A/E	Solenoid operating .. .	1957-59	858266	Solenoid	1957-58	*76510A
			Stop lamp	1957-59	*31318A	"	1958-59	76515A
					31082E/H	Switches .. .		
						Interrupter .. .	1957-58	*31077E
						Rotary, throttle .. .	1957-58	31402A/B

AUSTIN Austin-Healey '3000' 1959-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery (2-seater) ..	1959-60	SLG11E	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
" (4-seater) .. .	1959-60	BT9A	Head, Export France .. .	1959-60	58291A/B	Solenoid, starting motor	1959-60	*76411E
Bulb holder, panel light	1959-60	554734	Head, Export Sweden .. .	1959-60	58463A/B	Solenoid operating .. .	1959-60	*31318A
"	1959-60	39007A	Head, Export U.S.A. .. .	1959-60	58569A	Stop lamp	1959-60	31082H/J
Bulb	—	987	"	1960	58626A	Windshield wiper .. .	1959	*31431A
Coil, ignition .. .	1959-60	45102B/E	"	Later	1960	"	1960	*31419A
Control box .. .	1959-60	37183K	Number plate illumination	1959-60	53093H/J	Knob	1959-60	317530
Distributor .. .	1959-60	40662A/D	ditto (Switzerland) .. .	1960	53905A	Warning lights .. .		
Flasher unit .. .	1959-60	35010A	Side and flasher .. .	1959-60	52338A/D	Bulb holder .. .		
Flasher relay .. .	1959-60	33117D	Stop tail and flasher .. .	1959-60	53564A/B	Flasher	1959-60	38067A
Fuse box .. .	1959-60	033240	Reflex reflector .. .	1959-60	57072B	Ignition	1959-60	863511
Generator .. .	1959-60	22530A	Sleeve, Lucar connector			Main beam	1959-60	554734
Horn			14 amp.	1959-60	54190042	Bulb	—	987
Low note .. .	1959-60	*70063F	35 amp.	1959-60	54190043	Windshield wipers		
High note .. .	1959-60	*70071F	Starting motor .. .	1959-60	25521D	Motor	1959-60	75297E
LAMPS .. .			Steering column control ..			Wheelbox	1959-60	*72674A
Head, Home .. .			Fixed	1959-60	33517A/F	Crosshead and rack assy.		
R.H.D., dip left .. .	1959-60	51956D/F	Adjustable	1959-60	32984A/B	Cut to 31 $\frac{3}{8}$ " .. .	1959-60	743221
Head, Export .. .			SWITCHES .. .			Outer casing .. .		
R.H.D., dip left .. .	1959-60	51956F	Battery master	1959-60	*76604B	Motor to wheelbox .. .	1959-60	743880
L.H.D., dip right .. .	1959-60	*51966E	Dipper	1959-60	31284D	Wheelbox to wheelbox	1959-60	743881
Head, Export Europe			Ignition	1959-60	31403H	End tube	1959-60	740746
(except France & Sweden)	1959-60	58290A/B	Lighting	1959-60	*31432D	Arm, left hand drive ..	1959-60	745083
			Knob	—	316129	" .. right hand drive ..	1959-60	745082
			Panel	1959-60	31140B	Blade	1959-60	738724

* See Supersession Chart

L.H.D. .. Left hand drive R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



AUSTIN Austin-Healey 'Sprite' 1958-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1958	GT7A-3	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
Bulb holder, panel light ..	1958-60	BT7A	Head, Export Europe			Starting motor	1958-60	76423A
" " " " ..	1958-60	39007A	(not France)	1958-59	*51782A/D	Coupling	—	764428
" " " " ..	1958-60	554734	Head, Export Europe			Boot	—	858266
Bulb	1958-60	863511	(except France & Sweden)			Stop lamp	1958-60	31082E/J
Coil, ignition	1958-60	987	Later	1959-60	58286A/B	Windshield wiper ..	1958-60	*31498A
Control box	1958-60	*45053J/M	Head, Export France ..	1958-59	*51783A/B	Knob	—	312872
" " " " ..	1958-60	37182J	Later	1959-60	58287A/B	Warning lights		
Distributor	1958-60	37182K	Head, Export Sweden ..	1959-60	58459A/B	Flasher	1958-60	*319417
" " " " ..	1958-60	*40561D/H & K	Head, Export U.S.A.			Bulb holder	—	554734
" " " " ..	1958-60	960	(via Canada)	1958-59	*58070A/D	Bulb holder, ignition ..	1958-60	863511
" " " " ..	1958-60	*40561J & L	ditto	1960	*58474A/B	Main beam	1958-60	*319416
" " " " ..	1958-60	40656A/B & E	ditto	1960	58617A	Bulb holder	—	554734
" " " " ..	1958-60	40656D & F	Number plate illumination	1958-60	53093H/J	Bulb	—	987
Flasher unit	1958-60	35010A	ditto	1960	53836B	Windshield wipers		
Fuse box	1958-60	033239	ditto (Switzerland) ..	1960	53905A	Motor	1958	75296B
Generator	1958-60	22265E	Side and flasher	1958-60	52338A/D	" " " " ..	1959-60	75213E/F
Horn	1958-60	70141B	Stop tail and reflex ..	1958-60	53330D	Wheelbox	1958-59	*72674A/B
Low note (optional) ..	1958-60	69046F	Starting motor	1958-59	25022M	" " " " ..	1960	72744A
High note (optional) ..	1958-60	69047F	" " " " ..	1960	25022N/Q	Crosshead and rack assy.		
LAMPS			Steering column control ..	1958-60	33515A	Cut to 32 $\frac{3}{4}$ "	1958-60	743221
Flasher, rear	1958-60	52337A	Suppressor (when fitted) ..	1958-60	78106A	Outer casing		
" " (N. America) ..	1958-60	53600A/E	SWITCHES			Motor to wheelbox ..	1958-60	748794
Head, Home			Dipper	1958-60	31284A/D	Wheelbox to wheelbox ..	1958-60	748795
R.H.D., dip left ..	1958-60	*51780A/E	Flasher	1958-60	31743A/D	End tube	1958-60	740746
Head, Export			Ignition and lighting ..	1958-60	31270B/F	Arm, left hand drive ..	1958-60	745076
R.H.D., dip left ..	1958-60	*51780A/E	Knob	1958-60	316285	" " right hand drive ..	1958-60	745077
L.H.D., dip right ..	1958-60	*51781A/E	Panel light	1958-60	31140B	Blade	1958-60	737910

AUSTIN 'Metropolitan' 1957-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1957-58	GT9A-3	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
" " " " ..	1959-60	BT9A	Head, Export			Ignition and lighting ..	1957	31416B
Coil, ignition	1957-60	*45053A/M	R.H.D., dip left	1957-60	58083A/E	ditto L.H.D.	1958-60	31416B/E
Control box	1957-59	37182D/H	L.H.D., dip right	1957-60	58086A/D	ditto R.H.D.	1958-60	*31693A/E
" " " " ..	1957-59	37182J	Head, Export Europe			Knob	1957-60	316285
" " " " ..	1960	37183L	(not France)	1957-59	58084A/D	Starting motor	1957-60	76423A
Distributor	1957-58	*40499A	Head, Export Europe			Coupling	1957-60	764428
(low compression) ..	1958-60	*40499B/D & F	(except France & Sweden)			Stop lamp	1957-60	31082E/J
" " " " ..	1960	*40499E & H	Later	1959-60	58288A/B	Windshield wiper ..	1957-60	31479A
" " " " ..	1957-58	*40600A	Head, Export France ..	1957-59	58085A/B	Knob	—	318350
" " " " ..	1959-60	*40600B/D & F	Later	1959-60	58289A/B	Warning lights		
" " " " ..	1960	*40600E & H	Head, Export Sweden ..	1957-60	58458A/B	Flasher	1957-60	*319083
Flasher unit	1957-60	35010A	Number plate illumination	1957-60	53502B/D	Bulb holder	—	
Fuse box	1957-60	033239	Side and flasher	1957-60	52240B	Ignition	1957-60	863511
Generator	1957-59	22258E/F	Stop tail and flasher ..	1957	53541B/E	Main beam	1957-60	554734
" " " " ..	1960	22700D	" " " " ..	1958-60	53280K/L	Oil pressure	1957-60	863511
" " " " ..	1960	*22704A	Gasket	1958-60	574073	Bulb	—	987
Horn	1957-60	69046E/F	Reflex reflector (Home) ..	1957-58	*57075B	Windshield wipers		
Low note	1957-60	69047E/F	Sleeve, Lucas connector ..	1960	54190042	Motor	1957-60	75145A/B
High note	1957-60	69047E/F	14 amp.	1960	54190043	Wheelbox	1957-60	*72548K
LAMPS			35 amp.	1960	25022F/M	Crosshead and rack assy.	1957-60	736364
Courtesy	1958-60	861353	Starting motor	1957-59	25023N/Q	Outer casing		
Bulb	—	222	" " " " ..	1960	25023N/Q	Motor to wheelbox ..	1957-60	739937
Head, Home			Steering column control ..	1957-60	32897A/D	Wheelbox to wheelbox ..	1957-60	740031
R.H.D., dip left ..	1957-60	58083A/D	Suppressor (when fitted) ..	1957-60	78106A	End tube	1957-60	740031
" " " " ..			SWITCHES			Ferrule, casing retaining	1957-60	738410
" " " " ..			Courtesy light	1958-60	31140B	Arm, left hand drive ..	1957-60	742282
" " " " ..			Dipper	1957-59	*31372A/B	" " right hand drive ..	1957-60	742349
" " " " ..			" (alternative)	1958-60	31284A/D	Blade	1957-60	741543
" " " " ..			Heater, L.H.D.	1958-60	78305B/E			
" " " " ..			" R.H.D.	1958-60	78328A			

AUSTIN Taxi (Petrol) 1948-58; Taxi (Diesel) 1955-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1948-52	36002D	Fuse box	1948-52	*37137A	LAMPS— <i>continued</i>		
" " " " ..	1952-58	36137B	" " " " ..	1952-53	37075A	Fog	1948-55	*55029B/E
" " " " ..	1959-60	36245A	" " " " ..	1954-56	*37137A	" " " " ..	1956-60	55165A
Battery (Petrol)	1948-58	SLT15E	" " " " ..	1955-58	*37209A	Head, Home		
" (Diesel)	1955-60	MT19E	Generator	1948-49	*22446A	R.H.D., dip left (L.H.)	1948	*50588A/E
Coil, ignition	1948-55	*45020A/B	" " " " ..	1949-52	*22435A/B	" non-dip (R.H.) ..	1948	*50589A/D
" " " " ..	1956-58	*45053A/J	" " " " ..	1952-54	*22456A/B	" dip left (L.H.) ..	1949-52	50711A
Control box	1948	37065E	" " " " ..	1955-56	*22483A	" non-dip (R.H.) ..	1949-52	50712A
" " " " ..	1949-58	*37076E/F	" " " " ..	1955-56	*22483A	" dip left (L.H.) ..	1953-54	*50588A/E
" " " " ..	1958	*37076H	" " " " ..	1956-58	*22483B/D	" non-dip (R.H.) ..	1953-54	*50589A/D
" " " " ..	1959-60	37304A/B	" " " " ..	1959-60	22530A	R.H.D., dip left		
" " " " ..	1960	37341A	" " " " ..	1960	22802B	(L.H.)	1955-58	51644A/D
" " " " ..	1960	37341A	" " " " ..	1948	*69013A	(R.H.)	1955-58	51645A/D
Distributor	1948-52	*40117A/J	" " " " ..	1948-55	*69040A	(L.H. and R.H.) ..	1959	51336B/J
" " " " ..	1952-53	40269A/B	" " " " ..	1956-60	69054A/E	" " " " ..	1960	*58521A
" " " " ..	1953-56	*40321A/F	Junction box	1948-58	78264A	Head, Export		
" " " " ..	1956-58	40496A	LAMPS			R.H.D., dip left ..	1959	51336E/H
Flasher unit	1955-57	*35007A	Flasher, front (U.S.A.) ..	1960	52345A	" " " " ..	1960	*58521A/B
" " " " ..	1958	35012A	Flasher, rear (U.S.A.) ..	1960	53600A/E	L.H.D., dip right ..	1959	*51337F/K
" " " " ..	1959-60	35024A	Flasher, roof	1955-58	53411A/B	" " " " ..	1960	*58522A/B
" " " " ..	1960	35020A	" " " " ..	1959-60	53807A	Head, Export Europe		
" " " " ..			" " " " ..			(except France & Sweden)	1959	58230A/E
" " " " ..			" " " " ..			ditto	1960	*58523A/B

* See Supersession Chart

L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



AUSTIN Taxi (Petrol) 1948-58: Taxi (Diesel) 1955-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS—continued			SWITCHES—continued			Windshield wipers—cont'd		
Head, Export France ..	1959	58231A/E	Interior	1948-50	359357	Wheelbox (nearside) ..	1953	72603E
Head, Export Sweden ..	1960	*58524A/B	"	1958	359357	" (offside) ..	1953	72560K
" Later	1959	51339B/H	"	1959-60	31780B/D	"	1954-56	72632A
"	1959	58456A/B	"	1959-60	31120B	"	1957-58	*72665A
Head, Export U.S.A. ..	1960	*58525A	"	1959-60	31788A	"	1959-60	72727A
"	1959	51509A/H	Lighting	1948-58	*34002D	Crosshead and rack assy.	1948-51	736364
"	1960	*58526A/B	main	1948-58	31201B	Cut to 18" .. Later	1951	738987
Interior light	1960	56061B	Panel	1948-58	314026	" .. 26" ..	1952	736364
Gasket	—	535380	Knob	1948-58	—	" .. 29" ..	1953	738764
Lamp holder (Taxi sign)	1959-60	52447A	Panel	1959-60	31780B	" .. 26" ..	1954-56	736364
Number plate	1955-60	53101E/J	Solenoid, starting motor	1948	76022B	" .. 32" ..	1957-60	743221
Side	1948-50	*52079A	Solenoid operating ..	1949-58	*76411D/E	Outer casing	1948-51	739844
"	1951-52	52154A	Starter/Heater	1948-58	*31071A	Motor to wheelbox ..	1951	*739855
"	1953-58	*52105A	Stop lamp	1959-60	31829A/B	ditto Later	1952	739844
"	1959-60	52348B/D	Spring	1948-58	31281B	ditto	1952	739844
Stop tail and number plate	1948-54	*53060A	Stop lamp	1959-60	315726	ditto	1953	739870
Stop tail	1955-58	53178E/F	Windshield wiper ..	1948-58	31201B	ditto	1954-56	739844
Left hand	1959-60	53838A	Knob	—	*316243	ditto	1957-58	744197
Right hand	1959-60	53839A	Windshield wiper ..	1959-60	31780B/D	Wheelbox to wheelbox	1959-60	54710619
Mirror	1948-51	*620128	Trafficators	1948-54	*54040A	ditto Later	1951	*739948
Reflex reflector	1956-58	*57084A	"	1955	*54039A	ditto	1952	739937
Starting motor	1948	*255378	Warning lights	1956-58	*38042A	ditto	1952	*739981
Petrol	1949-58	25521B/D	Flasher	1959	319107	ditto	1953	*739948
Diesel	1955-58	26116A/E	Cover and window ..	1959	319222	ditto	1954-56	*739981
"	1959-60	26153D	Shade	1960	54360213	ditto	1957-58	744198
Steering column control ..	1948-58	32709A/F	Flasher	1960	54360248B	ditto	1959-60	54710620
ditto	1959-60	33537A	Gear indicator	1948-58	*38013B	4", nearside wheelbox	1948-53	740032
ditto (L.H.D. only)	1951-52	32817D/H	Ignition	1948-58		3", offside wheelbox ..	1948-56	740031
Suppressor	1951	78114A	Windshield wipers ..			End tube	1957-60	740746
SWITCHES			Motor	1948-50	*75053J	Wheelbox to control box	1948-51	*738679
Dipper	1948-57	*31372A	"	1951	*75053K	Offside	1948-51	738680
"	1958	31284A	" Later	1951	75150A	Nearside	1948-51	738895
"	1959-60	31800A	"	1952	*75053K	Guide tube	1953	735895
Door light	1958	31175F	" Later	1952-56	75150A	Ferrule, casing retaining	1957-58	740715
Flasher	1959-60	31904A/B	"	1957	*75200A	Grommet, wheelbox ..	1948-51	729423
Knob	—	54331875	"	1958	75296B/D	" control box ..	1948-51	733695
Foglamp	1948-58	31201B	"	1959-60	75367A	Arm	1948-56	735072
Knob	—	314403	Control box	1948-51	72602A	" left hand	1957-58	741486
Foglamp	1959-60	31780B/D	"	1953	72602A	" right hand	1959-60	741836
Knob	—	314403	Wheelbox (nearside) ..	1948-51	72603A/E	Blade	1948-56	727803
Heater, Diesel	1958	1823420	" (offside)	1948-51	72560K	"	1957-58	*737682
(serviced by C.A.V.) ..	1959-60	31780B/D	"	1952	72632A	"	1959-60	737886

§ FUEL INJECTION EQUIPMENT

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1955-57	BPE4A65S210S6355EL	Venturi	1955	BEPK40-40-102
Governor	1958-60	BPE4A65U210S6355EL	Nozzle holder	1956-60	BEPK42-42-111S
"	1955	BEPMZ80A129	Nozzle	1955-60	BKB35S668
" Later	1956	BEPMZ80A131	Filter	1955-60	BDN12SP6A
"	1956-58	BEPAMZ80A131	"	1955-59	F2-9
"	1959-60	BEPBMZ80A131	"	1960	F2B-9

AUSTIN Hire Car (Petrol) 1950-58: Hire Car (Diesel) 1955-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1950-52	36002D	LAMPS			LAMPS, Head, Export—		
" Later	1952-58	36137B	Flasher, front (U.S.A.) ..	1960	52345A	<i>continued</i>		
Battery (Petrol)	1950-58	36245A	Flasher, rear (U.S.A.) ..	1960	53600E	L.H.D., dip right	1956-58	51671A
(Diesel)	1955-60	SLT15E	Flasher, roof	1955-58	53411A/B	(L.H.)	1956-58	51672A
Coil, ignition	1950-55	*45020A/B	"	1959-60	53807A	(L.H. and R.H.) ..	1959	*51337F/K
"	1956-58	*45053A/J	Fog	1950-55	*55029B/E	"	1960	*58522A/B
Control box	1950-58	*37076E/F	"	1956-60	55165A	Head, Export Europe	1956-58	51673A
" Later	1958	*37076H	Head, Home			(not France) (L.H.) ..	1956-58	51674A
Distributor	1959-60	37304A/B	R.H.D., dip left (L.H.)	1950-52	50707A	(R.H.)		
"	1950-52	*40117A/J	" non-dip (R.H.) ..	1950-52	50708A	(except France & Sweden)		
" Later	1952-53	40269A/B	" dip left (L.H.) ..	1952	50711A	(L.H. and R.H.) ..	1959	58230A/E
"	1953-56	40321A/F	"			"	1960	*58523A/B
"	1956-58	40496A	" non-dip (R.H.) ..	1952	50712A	Head, Export France	1956-58	51675A
Fuse box	1950-51	*37137A	"	1952	50712A	(L.H.)	1956-58	51676A
"	1952-54	37075A	" dip left (L.H.) ..	1953-54	*50588A/E	(R.H.)	1956-58	58231A/E
"	1954-60	*37137A	" non-dip (R.H.) ..	1953-54	*50589A/D	(L.H. and R.H.) ..	1959	*58524A/B
" (Diesel heater)	1955-58	*37209A	" dip left (L.H.) ..	1955	51644A/D	"	1960	51339E/F
Generator	1959-60	37287A	" non-dip (R.H.) ..	1955	51645A/B	Head, Export Sweden ..	1959	58456A/B
"	1950-52	*22435A/B	R.H.D., dip left ..	1956-58	51677A/B	" Later	1959	*58525A
"	1952-54	*22456A/B	(L.H.)	1956-58	51678A/B	Head, Export U.S.A.		
"	1955-56	*22483A	(R.H.)	1956-58	51336B/J	(L.H.)	1951-54	50709A
"	1956-58	*22483B/D	(L.H. and R.H.) ..	1959	*58521A/B	(R.H.)	1951-54	50710A
"	1959-60	22530A	"	1960		(L.H. and R.H.) ..	1959	51509A/H
Horn	1950-55	*69011F	Head, Export			"	1960	*58520A/B
"	1956-60	69046A/F	R.H.D., dip left ..	1956-58	51677A/B	Interior light	1960	56061B
High note	1950-55	*69012F	(L.H.)	1956-58	51678A/B	Gasket	1960	535380
"	1956-60	69047A/F	(R.H.)	1959	51336B/J	Number plate illumination	1955-58	53101E/H
Junction box	1950-58	78264A	(L.H. and R.H.) ..	1960	*58521A/B	"	1959-60	53093H/J



AUSTIN Hire Car (Petrol) 1950-58: Hire Car (Diesel) 1955-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS—continued			SWITCHES—continued			Windshield wipers—cont'd		
Side	1950-51	52157A	Lighting and ignition or main	1948-58	*34002D	Crosshead and rack Assy. Cut to 29 3/8"	1950-53	738764
.. .. .	1952-58	*52040A	Panel	1950-58	31201B	" " 26 1/2"	1954	736364
.. .. .	1959-60	52348B/D	Knob	—	314026	" " 29 1/2"	1955	738764
Stop tail and number plate	1950-54	*53060A	Panel	1959-60	31780B	" " 28 1/2"	1956-57	736364
Stop tail	1955-58	53178E/F	Solenoid, starting motor	1950-58	*76411D/E	Inner rack	1958-60	743221
.. .. . (left hand)	1959-60	53838A	Solenoid operating	1950-58	*31071A	Outer casing	1950-52	736024
.. .. . (right hand)	1959-60	53839A	Starter/Heater	1959-60	31829A/B	Motor to wheelbox	1950-53	739870
Mirror	1950-51	620128	Stop lamp	1950-58	31281B	" " "	1954	739844
.. .. .	1955	620128	Spring	—	315726	" " "	1955	739870
Reflex reflector	1956-58	*57084A	Stop lamp	1959-60	31882A	" " "	1956-57	739844
Starting motor	1950-58	25521B/D	Windshield wiper	1956-58	31201B	" " "	1958	744197
Petrol	1955-58	26116A/B	Knob	—	*316243	" " "	1959-60	54710619
Diesel	1959-60	26153D	Windshield wiper	1959-60	31780B/D	Wheelbox to wheelbox	1952-53	*739948
Steering column control	1950-58	32709A/F	Trafficators	1950-51	*54040A	Later	1954	*739981
Right hand drive	1950-58	32817A/J	"	1952-54	*54041A	ditto	1955	*739948
Left hand drive	1959-60	33537A	"	1955	*54039A	ditto	1956-57	*739981
Either hand	1959-60	33537A	Warning lights	1956-58	*38042A	ditto	1958	744198
Suppressor	1951	78114A	Flasher	1959	319107	ditto	1959-60	54710620
SWITCHES			Cover and window	1959	319107	ditto	1950-53	740032
Dipper	1950-57	*31372A	Shade	1959	319222	ditto	1955	740032
"	1958	31284A	Flasher	1960	*54360213	4", nearside wheelbox	1950-57	740031
"	1959-60	31800A	Gear indicator	1960	54360248B	3", offside wheelbox	1958-60	740746
Door light	1958	31175F	Ignition	1950-58	*38013B	End tube	1950-57	740031
Flasher	1959-60	31904A/B	Windshield wipers	—	—	Wheelbox to control box	1950-52	*738679
Knob	—	54331875	Motor	1950	*75053J	Offside	1950-52	738680
Foglamp	1950-58	31201B	" Later	1951-52	*75053K	Nearside	1958-60	740715
Knob	—	314403	"	1952-57	75150A	Ferrule, casing retaining	1950-53	735895
Foglamp	1959-60	31780B/D	Control box	1959-60	75367A	Guide tube	1955	735895
Knob	—	314403	"	1950-53	72602A	"	1950-57	729423
Heater, Diesel (serviced by C.A.V.)	1958	1823420	Wheelbox (nearside)	1950-53	72603E	Grommet, wheelbox	1950-52	733695
Heater, Diesel	1959-60	31780B/D	" (offside)	1950-53	72560K	control box	1950-57	735072
Interior	1950	359357	"	1954	72632A	Arm	1958	741486
"	1958	359357	" (nearside)	1955	72603E	" left hand	1959-60	741836
"	1959-60	31780B/D	" (offside)	1955	72560K	" right hand	1959-60	741837
" (passenger)	1959-60	31120B	"	1956-57	72632A	Blade	1950-57	727803
Lighting	1959-60	31788A	"	1958	*72665A	"	1958	*737682
"	1959-60	31788A	"	1959-60	72727A	"	1959-60	737886

§ FUEL INJECTION EQUIPMENT

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1955-57	BPE4A65S210S6355EL	Venturi	1955	BEPK40-40-102
Governor	1958-60	BPE4A65U210S6355EL	Nozzle holder	1956-60	BEPK42-42-111S
"	1955	BEPMZ80A129	Nozzle	1955-60	BKB35S668
" Later	1956	BEPMZ80A131	Filter	1955-60	BDN12SP6A
"	1956-58	BEPAMZ80A131	"	1955-59	F2-9
"	1959-60	BEPBMZ80A131	"	1960	F2B-9

AUSTIN 'Champ' (Civilian) 1954-56

Ammeter	1954-56	36099E/F	LAMPS—continued	1954	51468A	LAMPS—continued	1954-56	53178B/F
Battery	1954-56	GT11A	Head, Export	1955	51468B	Stop tail	1954-56	57044A
Coil, ignition	1954-55	*45012A/D	"	1955	51468D	Reflex reflector	1955-56	26061A
.. .. .	1956	*45054D/E	" Later	1955	51468E/H	Starting motor	1954-56	26061A
Control box	1954-55	*37139D	L.H.D., dip right	1954	51469A	SWITCHES		
.. .. .	1956	37183A/H	"	1954	51469B	Dipper and horn push	1954-56	*31325A
Distributor	1954-56	*40386A	" Later	1955	51469D	Ignition and lighting	1954-56	31270A
.. .. . Later	1956	40500A	"	1955	51469E	Knob	—	316285
Fuse box	1954-56	033240	Head, Export Europe (not France)	1954	51469F/J	Panel	1954-56	*31342A
Generator	1954	*22456A/B	ditto	1955	51470A	Starter motor	1954-56	764428
"	1955	*22483A	ditto	1955	51470B	Coupling	—	325882
"	1956	*22483B	ditto Later	1955	51470D	Knob, choke control	1955-56	325882
Horn	1954-56	*069213	ditto	1956	51470E/H	" starter control	1954-56	325883
Junction box	1954-56	78264A	Head, Export France	1954	51471A	Warning light	1954-56	304994
LAMPS			"	1955	51471B	Ignition, holder	1954-56	304994
Head, Home	1954	51468A	"	1955	51471C	Windshield wipers	1954-56	75198A
R.H.D., dip left	1955	51468B	" Later	1955	51471D	Motor	1954-56	*735055
"	1955	51468D	"	1956	51471E	Arm	1954-55	*735056
" Later	1955	51468E	Number plate illumination	1954-56	53101E/H	"	1956	*735056
"	1956	51468E/H	Side	1954-56	*52105A	Blade	1954-56	727802

AUSTIN 1 and 1 1/2 ton 4x4 Cargo Truck (Civilian) 1954-55

Ammeter	1954-55	36099E/F	LAMPS—continued	1954	51346A	SWITCHES—continued	1954-55	*78239A
Battery	1954-55	GT11A	Head, Export Europe (not France)	1954	51411A	Heater/Fan	—	768473
Coil, ignition	1954-55	*45012A/D	Head, Export France	1954	53101E	Knob	1954-55	31270A
Control box	1954-55	*37166B/D	Number plate illumination	1954-55	*52105A	Ignition and lighting	1954-55	316285
Distributor	1954	40308A/B	Side	1954-55	53178B/E	Knob, lighting	1954-55	316434
.. .. . Later	1954-55	40308D/J	Stop tail	1954-55	062561	" ignition	1954-55	*31342A
Fuse box	1954-55	033240	Mirror	1954	51704A	Panel	1954-55	*76411D/E
Generator	1954	*22470F	Reflex reflector	1955	57044A	Solenoid, starting motor	1954-55	*31071A
"	1955	*22470H/L	Red	1955	57045A	Solenoid operating	1954-55	*31071A
Horn	1954-55	069448	Amber	1955	26043A	Warning lights	—	—
Inspection lamp sockets	1954-55	38605A	Starting motor	1954-55	*78110A	Convoy	1954-55	39020B
Junction box	1954-55	78264A	Suppressor	1954-55	78117A	Ignition	1954-55	39020B
LAMPS			Wiper	1955	—	Holder	—	304994
Head, Home	1954-55	51344A	SWITCHES	1954-55	*31276A	Bulb	—	987
R.H.D., dip left	1954-55	51344A	Convoy light	1954-55	*31324A	Windshield wipers	1954-55	75168A
Head, Export	1954-55	*51345A	Dipper and horn push	1954-55	—	Arm	1954-55	*735096
R.H.D., dip left	1954	—				Blade	1954	727803
L.H.D., dip right	1954	—				"	1955	727802

* See Supersession Chart

§ Serviced by C.A.V. Ltd.

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



AUSTIN 1 and 1½ ton LD1A and LD2A (Petrol) 1955-60: 1 and 1½ ton LDO1A and LDO2A (2.2 litre Diesel) 1956-60: Light 2 ton 301FC (3.4 litre Diesel) 1958-59

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter (2 ton)	1959	36125B	LAMPS—continued			SWITCHES—continued		
Battery (Petrol)	1955-59	GT11A	Flasher, rear (2 ton, when fitted)	1958-59	53367D	Panel (1 and 1½ ton) ..	1956-57	31434B
" (Diesel)	1956-60	BT11A	Flasher, roof or side (when fitted)	1955-60	53362A/B	Knob	1958-60	*31557A
Bulb holder, panel	1955-57	554734	Head, Home			Solenoid, starting motor (2.2 litre Diesel) ..	1958-60	*76443A
" " (2 ton)	1958-59	39010A	R.H.D., dip left	1955-60	51515F/J	Solenoid operating (3.4 litre Diesel) ..	1958-59	31425B
Bulb holder, speedo	1958-59	39007A	L.H.D., dip right	1955-60	51516H/K	Knob	—	*317366
Bulb	1958-59	987	Head, Export Europe (not France) (except France & Sweden)	1956-59	51517F/J	Starting Motor (Petrol, and Diesel before 1958) ..	1955-60	76423A
Coil, ignition	1955	*45020A	Head, Export Europe	1959-60	58274A/B	Coupling	—	764428
" "	1956-57	*45054A/H	Later	1959-60	58274A/B	Stop lamp	1955-60	31082E/J
" "	1958-60	*45053J/M	Head, Export France	1958-59	51518F/H	Windshield wiper	1955-57	31434B
Control Box	1955	*37138D	" " " Later	1959-60	58275A/B	Knob	1958-60	*31557A
Petrol and 3.4 litre Diesel	1955-58	37182B/H	Head, Export Sweden	1959-60	58451A	Warning lights		
ditto	1959-60	37182J	Head, Export U.S.A. and Mexico	1958-59	51784A	Ignition	1955	38049A
ditto	1960	37182K	Number plate illumination			Bulb holder (ignition) ..	1956-57	554734
2.2 litre Diesel	1956-59	37183A/H	Side	1955-60	*52274A/B	Bulb	—	987
ditto	1959	37183K	Stop tail	1955-60	53178E/H	Main beam (2 ton)	1959	38052B
ditto	1960	37183L	Reflex reflector	1955-58	57052A/B	No charge (2 ton)	1958-59	*38013B
Distributor	1955-56	*40321F	ditto	1959-60	57116A	Windshield wipers		
" " " Later	1956-59	40496A/B	ditto (with bumpers) ..	1960	57131A	Motor	1955	75146A
" " " "	1960	40496D & F	ditto (special orders) ..	1960	57031D	" " " "	1956-60	75145A/B
" " " "	1960	40496E & H	Starting motor			Wheelbox	1955	72624A
Flasher unit (when fitted)	1956	*35003A	Petrol	1955-60	26043A	" " " "	1956-60	72651A
" " " "	1957-60	35010A	2.2 litre Diesel	1956-60	26125A	Crosshead and rack assy.		
Fuse box	1955-60	033239	3.4 litre Diesel	1958-59	26133D/E	Left hand drive	1955	738499
Generator	1955-56	22258D	Suppressor (when fitted)	1956-60	78106A	Right hand drive	1955	738987
" " " "	1956-59	22258E/F	SWITCHES			Either hand, cut to 44 ½"	1956-60	736307
" " " "	1960	22700D	Battery Master (special orders) ..	1960	76602B	Outer casing		
" " " " (temporary alternative) ..	1960	*22704A	Flasher (when fitted)	1956-60	31476A/D	Motor to wheelbox	1955	739870
Horn	1955-58	*069213	Heater, Diesel (serviced by C.A.V.) ..	1958-60	1823420	" " " "	1956-60	739844
" " " "	1959-60	69046F	Ignition and lighting	1955-60	31270A/B	Wheelbox to wheelbox (Left hand drive only) ..	1955	*739974
Horn push and dipper switch	1955-60	*31442A	Knob	—	*312813	ditto	1956-60	739972
Junction box	1955-60	78265A	Lighting (2 ton)	1958-59	*31251D/E	End tube	1955-60	740031
Tail lamp	1955-60	78266A	Knob	—	*316117	Ferrule, casing retaining	1957-60	738410
Panel	1958-60	78266A	Master (2 ton)	1958-59	31187D	Arm	1955	*736411
Tail and flashers (when fitted)	1958-60	78264A				" (alternative)	1956-60	*742293
LAMPS						Blade	1960	*742311
Flasher front or rear (when fitted)	1955-60	53359D/E				" " " "	1955	741680
Flasher, front (2 ton, when fitted)	1958	53457D				" " " "	1956-60	*737683
ditto	1959	53637A				" (alternative)	1960	732642

§ FUEL INJECTION EQUIPMENT (2.2 litre Engine)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1956-57	BPE4A65S210S6355EL	Venturi	1956	BEPK40-40-102
" " " "	1958-60	BPE4A65U210S6355EL	" " " " " Later	1956-60	BEPK42-42-111S
Governor	1956	BEPMZ80A129	Nozzle holder	1956-60	BK B35S668
" " " " " Later	1956	BEPMZ80A131	Nozzle	1956-60	BDN12SP6A
" " " " " "	1956-58	BEPAMZ80A131	Filter	1956-59	F2-9
" " " " " "	1959-60	BEPBMZ80A131	" " " " " "	1960	F2B-9

AUSTIN 25 cwt. Van and Ambulance 1948-54

Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1948-50	36002D	LAMPS—continued		
" " " "	1951-54	36137B	Head, Export		
Battery (Ambulance) ..	1948-54	STXT19E	R.H.D., dip left	1948-54	50572F
(Van)	1948-54	SG11A	L.H.D., dip right	1948-54	A50572F
Coil, ignition	1948-54	*45020A/B	Head, Export Europe (not France)	1948-54	B50572F
Control box	1948-49	*37048E	Reverse, tail and number plate (Ambulance)	1948	53032B
" " " " " Later	1950-52	*37118A	Side	1948	52047A
Distributor	1948-50	*37139D	" " " "	1949	*52133A
" " " " " "	1951-52	*40117B/F	" " " "	1950-54	52047A
" " " " " "	1952-54	*40295A/E	Stop tail and number plate ditto (Van)	1949-54	*53060A
Fuse box	1948-54	37075A	ditto (Ambulance)	1949-54	*53027B
Generator	1948-49	*22446A	Mirror	1948-54	*62521D
" " " " " "	1950-52	*22435A/B	Starting motor	1949	*270244
" " " " " "	1952-54	*22456A/B	" " " " " "	1950-54	26043A
Horn	1949-54	*069213	Suppressor	1951	78114A
Junction box	1948-54	78264A	SWITCHES		
LAMPS			Horn and dipper	1948-50	*380150
Fog	1952	*55062B	" " " "	1951-54	*31324A
" " " "	1953-54	*55075B			
Head, Home			SWITCHES—continued		
R.H.D., dip left (L.H.)	1948-54	50572F	Ignition and lighting (Ambulance)	1948-54	*34002D
" " " " " "	1948-54	*50573F	(Van)	1948-52	*34042A
			" " " " " "	1953-54	*34002D
			Panel (Ambulance)	1948-54	*31276A
			(Van)	1948-54	*31285A
			Starting motor	1948-54	*76420B
			Knob	—	764354
			Stop lamp	1948-54	31281B
			Spring	—	*315762
			Trafficator (Ambulance)	1948-50	31190A
			" " " " " "	1951-54	31311A
			Terminal block	1948-54	807094
			Trafficators (Ambulance)	1948-50	*54035A
			" " " " " "	1951-54	*54041A
			Warning light (ignition)		
			Ambulance	1948-54	*38013B
			Van	1948-54	*38015B
			Windshield wipers		
			Motor	1948-54	*75070A
			Arm	1948-54	735065
			Blade	1948-54	727803

* See Supersession Chart § Serviced by C.A.V. Ltd. L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive



AUSTIN 2 and 3 ton Trucks 1946-48

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1946-48	*364470	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
Battery	1946-48	SG11A	Head, Export			Ignition and lighting ..	1946-48	34055A
Coil, ignition ..	1946-48	*45020A/B	Left hand	1946-47	*50602A	Knob	—	*344528
Control box .. .	1946-48	37065E	Right hand	1946-47	50603A	Panel	1946-48	*314722
Distributor .. .	1946-47	*410504	Left hand	1948	50713A	Starting motor	1946-48	76428A
"	1948	40133A/E	Right hand	1948	50714A	Stop lamp	1946-48	31281B
Generator .. .	1946-48	*22446A	Side	1946-48	*52003A	Spring	—	315746
Horn	1946-48	069344	Stop tail and number plate	1946-48	*53063B	Warning light (ignition) ..	1946-48	*38013B
LAMPS			Mirror	1946-48	*62521D	Windshield wipers		
Head, Home			Starting motor	1946-48	*270244	Motor	1946-48	75130A
Left hand	1946-47	*50588A	SWITCHES			Arm	1946-48	*735096
Right hand	1946-47	*50589A	Horn push and dipper ..	1946-48	*380150	Blade	1946-48	727803
Left hand	1948	50711A						
Right hand	1948	50712A						

AUSTIN 2 and 5 ton Trucks 1949-50: Series II 1951-55: 3 ton Series II 1955

Ammeter	1949-55	36099E/F	LAMPS, Head, Home— <i>continued</i>			Starting motor— <i>cont'd</i>		
Battery	1949-51	SG11A	R.H.D., dip left (L.H.)	1951	*50799D	Diesel (Perkins, serviced by C.A.V.) ..	1949-55	BS512L66
Petrol	1952-55	GT11A	" non-dip (R.H.)	1951	*50579K	" (2 and 3 ton) ..	1955	*26109D
Diesel	1949-54	LMXB	" dip left	1952-53	*50992A	Suppressor (Petrol) ..	1951-54	78114A
2 and 3 ton (Diesel) ..	1955	EWT17E	" " " " Later	1953-55	51344A	SWITCHES		
5 ton (Diesel)	1955	MT19E	Head, Export			Dipper (5 ton S.W.B.) ..	1951-54	*359863
Coil, ignition .. .	1949-55	LMXB	R.H.D., dip left ..	1951	*50799D	Heater	1951-55	*78239A
Petrol	1955	EWT17E	" " " " Later	1952-53	*50992A	Knob	—	768473
" " " " Later	1955		L.H.D., dip right ..	1951	*A50799D	Horn push and dipper ..	1949-50	*380150
High speed (Petrol) ..	1952-55	*45020A/B	" " " " " "	1952	*50528M	" " " " " "	1951-55	*31324A
Control box .. .	1949-51	*45012A/D	" " " " " "	1953	*50993A	Ignition and lighting ..	1949-50	*344528
"	1951-55	*37076E	" " " " " "	1953-54	*51345A	" " " " " "	1951-55	31270A
" " " " 2 and 3 ton	1955	*37139D/E	Head, Export Europe	1955	*51345B	Knob	—	316285
(Diesel only)	1955	*37138D	(not France)	1951	*B50799D	Panel	1949-52	*31276A
Distributor .. .	1949-52	40161A/F	ditto	1952	*50961A	Solenoid, starting motor		
Petrol	1952-54	40307A/D	ditto	1953	*50994A	Petrol	1950-55	*76411D/E
"	1954-55	40307E	ditto	1953-55	51346A	Diesel (2 and 3 ton) ..	1955	*76411E
High speed (Petrol) ..	1952	*40147D/H	Head, Export France			Solenoid operating		
" " " " " "	1953-54	40308A/B	L.H.	1949-50	50672A	Petrol	1950-55	*31071A
" " " " " "	1954-55	40308D/J	R.H.	1949-50	50673A	Diesel (2 and 3 ton) ..	1955	*31071A
Fuse box (Petrol) .. .	1951-54	033240	L.H. and R.H. .. .	1951	*50808D	" (5 ton, serviced by C.A.V.) ..	1949-55	1823410
" " (Diesel)	1951-54	033241	" " " " " "	1952	*50978A	Starting aid (5 ton, serviced by C.A.V.) ..	1949-55	1823420
Generator .. .	1949	*22446A	" " " " " "	1953	51009A	Starting motor		
"	1949-51	*22435A/B	" " " " " "	1953-55	51411A	Petrol	1949	*76420B
"	1951-54	*22456A/B	Number plate illumination	1949	*52003A	Stop lamp	1949-55	31281B
"	1955	*22483A	Side	1949-50	52153A	Spring	—	315746
" 2 and 3 ton (Diesel only)	1955	22258D	"	1950-51	52154A	Warning light (ignition)		
Horn	1949-55	*069213	"	1952-55	52105A	Petrol	1949-50	*38015B
LAMPS			Stop tail and number plate	1949-52	*53063B	"	1951-55	39020B
Head, Home			Stop tail	1953-55	53178B/E	Holder	—	30499A
R.H.D., dip left (L.H.)	1949-50	50711A	Mirror	1949-53	*62521A	Windshield wipers		
" non-dip (R.H.)	1949-50	50712A	Reflex reflector .. .	1951	*605248	Motor	1949-55	75130A
			Red	1952-55	57044A	Arm	1949-54	*735055
			Amber	1952-55	57045A	Blade	1955	*735096
			Starting motor				1949-55	727802
			Petrol	1949-55	26043A			

§ FUEL INJECTION EQUIPMENT

(Perkins P4 Engine 1949-54)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1949-54	BPE4A60S310S6319	Feed pump	1949-52	BFPK22N68
Governor	1949-54	BPEMZ80A100	"	1953-54	BFPK22P68
Coupling	1949-54	BZKG31-538	Pre-filter	1949-54	BFJSJ1-501
Nozzle holder .. .	1949-54	BKB35S87	Primer	1949-54	BFPUE2-54Z
Nozzle	1949-54	BDL110S6133	Filter	1949-54	BFA5P1

(Perkins P6V Engine 1949-54)

Fuel pump	1949-52	BPE6A60Q310S6237	Feed pump	1949-52	BFPK22N68
"	1953-54	BPE6A60S310S6321	"	1953-54	BFPK22P68
Governor	1949-54	BPEMZ80A99	Pre-filter	1949-54	BFJSJ1-501
Coupling	1949-54	BZKG31-538	Primer	1949-54	BFPUE2-54Z
Nozzle holder .. .	1949-54	BKB35S87	Filter	1949-54	BFA5P1
Nozzle	1949-54	BDL110S6133			

(B.M.C. 5.1 litre Engine, 5 ton 1955)

Fuel pump	1955	AAR6A75-3E	Venturi	1955	BEPK50-50-106
"	1955	AAR6A75-72E	Nozzle holder .. .	1955	BKBL67S668
Governor	1955	LP16	Nozzle	1955	BDLL150S6194
Coupling	1955	BZKG31-9Z	Filter	1955	F2-9

* See Supersession Chart

§ Serviced by C.A.V. Ltd.

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



AUSTIN Series III Trucks and Prime Mover 3 and 5 ton 1956-59: 4 ton 1957-59: 3 ton (303), 4 ton (403) and 5 ton (503) Normal Control 1960

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter (F.C.) ..	1956-59	36099F/H	LAMPS—continued			SWITCHES—continued		
(when fitted) ..	1960	36280A	Head, Home			Lighting (F.C.) ..	1956-59	*31432A/E
Battery (Petrol) ..	1956-59	GT11A	R.H.D., dip left ..	1956-60	51515F/H	Knob	—	316156
(Diesel)	1960	BT11A	Head, Export			Panel	1956-60	*31498A
Bulb holder, panel (F.C.) ..	1956-60	MT19E	R.H.D., dip left ..	1956-60	51515F/H	Knob	—	312871
" " " (N.C.) ..	1958-59	39007A	L.H.D., dip right ..	1956-60	51516H/J	Solenoid, starting motor	1956-60	*76411E
" " "	1959-60	39010A	Head, Export Europe			Solenoid operating ..	1956	31253A
" " "	1959-60	554734	(not France)	1956-59	51517F/H	" " " Later	1957-58	*31669A
" " "	1956-60	987	(except France & Sweden)			" " "	1959-60	31719A
Coil, ignition	1956-60	*45053	Later	1959-60	58274A	Knob	1956-60	317376
" " " (high speed		D/M	Head, Export France ..	1956-59	51518F	Stop lamp	1956-60	31281B
engine)	1959	*45054K	" " " Later	1959-60	58275A	Spring (when fitted) ..	—	315746
Control box	1956	37183A/H	Head, Export Sweden ..	1959-60	58452A	Stop lamp (Prime Mover)	1958	31082E
Petrol	1956	37182B	Number plate illumination	1956-60	53101H	Windshield wiper (F.C.)	1956-59	*31498A
Diesel	1956	37182B/K	Side (F.C.)	1956-59	*52286A/D	Knob	—	312872
Petrol and Diesel	1957-60	40327F	(N.C.)	1956-60	52260B/E	Warning lights		
Distributor (3 ton) ..	1956-57	*40472A	Stop tail	1956-60	53178F/H	Ignition	1956-58	*38091A
" " " (5 ton) ..	1956-57	*40472A/B	Reflex reflector			(F.C. only)	1959	*38091A
" " "	1958-60	40308F/H	Amber	1956-60	57045A	Main beam	1956-58	*38127A
" " " (high speed engine)	1959	53010A	Red	1956-60	57044A	" " " (F.C. only)	1959	*38127A
Flasher unit (when fitted)	1958-60	033240	Relay, horn (when fitted)	1959-60	*33116B	Holder	1959-60	304994
Fuse box	1956-60	033240	Relay, starting switch (with			Bulb holder, ignition or		
Generator			C.A.V. starter)	1960	33229A	no charge	1959-60	863511
Petrol	1956	*22483A	Starting motor			Bulb holder, main beam	1959-60	554734
" " " Later	1956	*22483B	Petrol	1956-60	26043A	ditto (alternative)	1959-60	39020B
Diesel	1956	22258D	Diesel			Bulb	—	987
" " " Later	1956	22258E	(serviced by C.A.V.) ..	1956	SP512-3	Windshield wipers (F.C.)		
Petrol and Diesel	1957-59	22258E/F	3 and 4 ton (Diesel) ..	1957	26122A	Motor	1956	75251A
High speed engine	1959	*22483D	5 ton and Prime Mover	1958-60	26135A	" " " Later	1956-59	75298A/D
Generator	1960	22700D	(Diesel, serviced by			" " "	1959	75298F
" (temporary			C.A.V.)	1957	1340030	Wheelbox	1956-59	72676A/B
" (alternative)	1960	*22704A	ditto	1958-59	1320021	Crosshead and rack assy.	1956-59	743235
" (B.R.S.)	1959-60	22299A	ditto	1960	1320023	Outer casing		
" (B.R.S., I.R.) ..	1959-60	22300A	SWITCHES			Motor to wheelbox ..	1956-59	743777
Horn			Flasher (when fitted) ..	1958-60	31635A/B	Wheelbox to wheelbox ..	1956-59	743778
Low note (special orders)	1959-60	69046F	Heater/Fan (F.C.) ..	1956-59	*31498A	End tube	1956-59	740746
High note	1959-60	69047F	Knob	—	312892	Ferrule, casing retaining	1956-59	740715
Horn push and dipper ..	1956-60	31438A/B	Heater/Fan (N.C.) ..	1956-59	78260A	Arm	1956-59	741810
Junction box	1956-60	78264A	Knob	—	768473	Blade (11")	1956	737883
" (when flashers			Heater/Fan	1960	78356A	" (12")	1956-59	737886
fitted)	1958-60	78266B	Knob	—	54332086	Windshield wipers (N.C.)		
LAMPS			Ignition and lighting or			Motor	1956-60	*75285A/F
Flasher, cab (when fitted)	1958-60	Serviced by	master (N.C.)	1956-60	31270B/E	Arm	1956-60	735072
" " "		Butlers	Knob	—	316285	Blade (9")	1956-60	727803
Flasher, rear (when fitted)	1958-60	53358D	Ignition or master (F.C.)	1956-59	*31484A/B	" (10", special	1959-60	*737799

§ FUEL INJECTION EQUIPMENT

(B.M.C. 5.1 litre Engine, 5 ton 1956-60)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1956-60	AAR6B75-72E	Venturi	1957-60	BEPK50-50-120
Governor	1956-58	LPB16	Nozzle holder	1956-60	BKBL67S668
" " "	1959-60	LPE14	Nozzle	1956-60	BDLL150S6194
Coupling	1956-60	BZKG31-9Z	Filter	1956-59	F2-9
Venturi	1956-57	BEPK50-50-106	" " "	1959-60	F2B-9

AUSTIN S200 1½ ton (2.2 litre Petrol and Diesel), T200 2 ton, (304) 3 ton and (404) 4 ton (4 litre Petrol and 3.4 litre Diesel) Series IV F.G. Trucks 1960

Ammeter	1960	36256A	LAMPS—continued			SWITCHES—continued		
Battery (Petrol) ..	1960	BT11A	Head, Export Europe			Lighting, flasher and horn		
(Diesel)	1960	MT19E	(except France & Sweden)	1960	58286A	push	1960	31791B
Coil, ignition	1960	*45113A/D	Head, Export France ..	1960	58287A	Panel	1960	31780D
Control box	1960	37283D	Head, Export Sweden ..	1960	58459A	Solenoid, starting motor		
Distributor			Interior	1960	56062D	(Petrol)	1960	76465A
2.2 litre (Petrol) ..	1960	40705B	Base	—	535380	Starter, heater or ignition	1960	31829B
4 litre	1960	40673D	Number plate illumination	1960	53101H	ditto	1960	34299A
Flasher unit	1960	35020A	Side	1960	52466A	Stop lamp	1960	31802B
Fuse box	1960	033285	Stop tail	1960	53564B	Windshield wiper ..	1960	31780D
Generator	1960	22700D	Reflex reflector			Warning lights		
" (temporary			Amber	1960	57045A	Bulb holder, ignition and		
" (alternative)	1960	*22704A	Red	1960	57044B	oil pressure	1960	863511
Horn			" (alternative) ..	1960	57033A	Bulb	—	987
Low note	1960	69046F	Relay, horn (when fitted)	1960	*33116B	Windshield wipers		
High note (optional) ..	1960	69047F	Starting motor			Motor	1960	75353A/B
LAMPS			2.2 litre (Petrol) ..	1960	25521D	Link set	1960	745964
Flasher, cab	1960	53744A	4 litre	1960	26043A	Arm, right hand crank	1960	54711068
Flasher, rear	1960	53358D	2.2 litre (Diesel) ..	1960	26166A	" left hand crank ..	1960	54711069
Head, Home			3.4 litre	1960	26167A	Blade	1960	54711074
R.H.D., dip left ..	1960	*51780D	SWITCHES					
Head, Export			Heater	1960	31788B			
R.H.D., dip left ..	1960	*51780D	Interior light	1960	31780D			
L.H.D., dip right ..	1960	*51781D						

* See Supersession Chart
R.H.D. .. Right hand drive

§ Serviced by C.A.V. Ltd.

N.C. .. Normal Control

F.C. .. Forward Control

L.H.D. .. Left hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



AUSTIN S200 1½ ton (2.2 litre Petrol and Diesel), T200 2 ton, (304) 3 ton and (404) 4 ton (4 litre Petrol and 3.4 litre Diesel) Series IV F.G. Trucks 1960—continued

§ FUEL INJECTION EQUIPMENT (2.2 litre Diesel)					
Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1960	BPE4A65U210S6355EL	Nozzle holder	1960	BKB35S668
Governor	1960	BEPBMZ80A131	Nozzle	1960	BDN12SP6A
Venturi	1960	BEPK42-42-111S	Filter	1960	F2B-9

AUSTIN 5 ton (504) Forward Control Truck and Prime Mover Series IVFF (Petrol and Diesel) 1959-60: 7 ton (701 and 702) Forward Control Trucks (Diesel) 1956-58: 7 ton (702) Series IVFF 1959-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1958	36212B	LAMPS—continued			SWITCHES—continued		
Battery (Petrol)	1959-60	*36225B	Head, Export France	1959	51518F/H	Solenoid operating	1956	31253A
" (Diesel)	1956-60	BT11A	" " Later	1959-60	58275A/B	ditto	1957	31425A
Bulb holder, panel light	1958	39007A	Head, Export Sweden	1959-60	51517F/H	ditto (702 and 504)	1957-58	*31669A
" speedometer	1958	39010A	" " Later	1960	58452A/B	" " " "	1958-60	31719A/B
" vacuum gauge	1960	554734	701 and 702 only:			Knob	1958-60	317376
illumination (702)	1958-60	987	Head, Home	1956-60	*51780A/E	Stop lamp	1956-60	31082E
Bulb	1959-60	*45053K/M	R.H.D., dip left	1956-60	*51780A/E	" " " "	1959-60	31281B
Coil, ignition	1956-59	37182B/H	Head, Export	1956-60	*51781A/E	Spring (when fitted)	1959-60	31574E
Control box	1959	37182J	R.H.D., dip right	1956-60	*51781A/E	Windshield wiper	1956-58	*31498A
" " Later	1959-60	37182K	L.H.D., dip right	1956-60	*51781A/E	Knob	—	312872
" (special orders, used with Generator 22802B)	1960	37301B	Head, Export Europe (not France)	1956-59	*51782A/D	Windshield wiper (702 and 504)	1958-60	31780A/D
Distributor	1959-60	*40472A/B	(except France & Sweden)	1959-60	58286A/B	Later	1958-59	554734
Flasher unit (when fitted)	1958-60	35010A	Head, Export France	1956-59	*51783A/B	Bulb holder, main beam	1958-59	863511
Fuse box	1956-60	033240	" " Later	1959-60	58287A/B	" " no charge	1959-60	863511
Generator	1956	22258D	Head, Export Sweden	1959-60	58459A/B	Bulb	1958-60	987
" " Later	1956-59	22258E/F	Number plate illumination	1956-60	53101H/J	Windshield wipers		
" (temporary alternative)	1960	22700D	Side	1956-60	*52286A/D	Motor	1956	75251A
" (B.R.S.)	1959-60	22299A	Stop tail	1956-60	53178E/J	" " " "	1956-58	75298A
" (B.R.S., I.R.)	1959-60	22300A	Reflex reflector			" (702 and 504)	1958-60	75349A
" (special orders)	1960	22802B	Amber	1956-60	57045A	L.H.D. Later	1958-60	75363A
Horn			Red	1956-60	57044A	R.H.D.	1958-60	72676A/B
Low note (optional)	1959-60	69046F	Relay, horn (when fitted)	1959-60	*33116B	Wheelbox	1956-58	72712A
High note (optional)	1959-60	69047F	Relay, starting switch (with C.A.V. starter)	1960	33229A	" (702 and 504)	1958-60	72712A
Horn relay (when fitted)	1959-60	*33116B	Starting motor			Later	1958-60	743235
Horn push and dipper	1956-58	31438A	Petrol	1959-60	26043A	Crosshead and rack Assy.	1956-58	743235
Junction box	1956-60	78264A	Diesel	1958-59	1320021	Cut to 45°	1958-60	743957
" (when flashers fitted)	1958-60	78266A	(serviced by C.A.V.)	1956-57	1340030	ditto (702 and 504)	1958-60	743957
LAMPS			ditto	1958-59	1320021	Later	1958-60	743957
Flasher, cab (when fitted)	1958-59	Serviced by Butlers	ditto	1960	1320023	Outer casing	1956-58	743777
Left hand (when fitted)	1960	53707A	SWITCHES			Motor to wheelbox (702 and 504)	1956-58	743777
Right hand (when fitted)	1960	53706A	Heater (optional)	1956-58	*31498A	L.H. Later	1958-60	54710142
Flasher, rear	1958-60	53358D	Knob	—	312892	R.H.	1958-60	54710143
504 and Prime Mover only:			Heater	1958-60	31780B/D	Wheelbox to wheelbox	1956-58	743778
Head, Home			Ignition or master	1958-60	31403H	End tube	1956-60	740746
R.H.D., dip left	1959-60	51515F/J	Lighting, flasher and horn push (when fitted)	1959-60	31791A/B	Arm	1956-58	741810
Head, Export			Lighting and horn push	1958-60	31792A/B	" (702 and 504)	1956-58	741810
R.H.D., dip left	1959-60	51515F/J	ditto (B.R.S.)	1959-60	31936A	L.H.D.	1958-59	54710231
L.H.D., dip right	1959-60	51516H/K	Lighting and master	1956-57	31567A	" " " "	1960	54711540
Head, Export Europe (not France)	1959	51517F/J	Knob	—	316435	Arm " R.H.D. (702 and 504)	1958-59	54710230
(except France & Sweden)			Panel	1956-58	*31498A	Later	1958-59	54710231
Later	1959-60	58274A	" " " "	1958-60	31780B/D	" " " "	1956	737883
			" " " "	1956-58	312871	Blade	1956-58	737886
			Solenoid, starting motor (Petrol)	1959-60	*76411E	" (702 and 504)	1958-59	*737940
						Later	1960	54711284

§ FUEL INJECTION EQUIPMENT (B.M.C. 5.1 litre engine)					
Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1956-60	AAR6B75-72E	Venturi	1957-60	BEPK50-50-120
Governor	1956-58	LPB16	Nozzle holder	1956-60	BKBL67S668
" " " "	1959-60	LPE14	Nozzle	1956-60	BDLL150S6194
Coupling	1956-60	BZKG31-9Z	Filter	1956-59	F2-9
Venturi	1956-57	BEPK50-50-106	" " " "	1959-60	F2B-9

AUSTIN 2/5 ton Petrol Tanker 1946-55

Ammeter	1946-48	*364470	Control box	1946-47	*37002A	Fuse box (serviced by C.A.V.)	1952-55	1800700
" " " "	1952-55	36099E/F	" " " "	1948-55	37065E	Generator	1946-52	*22453A
Battery	1946-52	SG11A	Distributor	1946-48	*40012A/B	" " " "	1953-55	*22461A/B
" " " " Later	1952-55	GT11A	" " " "	1952	*40163A	Horn	1946-55	*069213
Coil, ignition	1946-48	*45023A	" " " " Later	1953	40339A/B	Horn push	1946-55	76205A
" " " "	1952-55	*45021A	" " " "	1955	40339E	Junction box	1946-55	78264A

* See Supersession Chart § Serviced by C.A.V. Ltd. L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



AUSTIN Coach 1947-50: Series II 1951-55

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery (Petrol)	1947-55	STWD	LAMPS—continued			Reflex reflector	1951	*605248
" " (Export)	1947-55	STXZD	Head, Export			Starting motor	1947-49	*270244
" (Diesel)	1950-55	LMXBE	R.H.D., dip left			(Petrol)	1950-55	26043A
Coil, ignition	1947-55	WT17E	(L.H.)	1947-49	*50602A	(Perkins Diesel, serviced		
Control box (serviced by			(R.H.)	1947-49	50603A	by C.A.V.)	1950-54	BS512L66
C.A.V.)	1947-55	*45020A/B	(L.H. and R.H.) ..	1950-51	*50799D	(B.M.C. Diesel, serviced		
Distributor (Petrol) ..	1947-48	*45053A	" " "	1952-54	*50992A	by C.A.V.)	1955	1340030
" " Later			" " "	1955	51344A	Suppressor	1951-55	78114A
" " "	1947-55	1685030	L.H.D., dip right ..	1950-51	*A50799D			
" " "	1947-48	*410504	" " "	1952	*50528M			
" " "	1948-52	*40161A/F	" " "	1953-54	*50993A			
" " "	1952-53	40307E	Head, Export Europe			SWITCHES		
" " "	1954-55	40327B/F	(not France)	1950-51	*B50799D	Horn push and dipper ..	1947-50	*380150
" " "	1947-55	*37137A	ditto	1952	*50961A	" " "	1951-55	*31324A
Fuse box (Petrol)	1947-55	1800020	ditto	1953-54	*50994A	Ignition and lighting ..	1947-50	*344528
" (Diesel, serviced			ditto	1955	51346B/D	Knob	1951-55	31270A
by C.A.V.)	1950-55	D5LFA10	Head, Export France ..	1950-51	*50808D	Panel	1947-55	*31276A
Generator (serviced by			" " "	1952	*50978A	Solenoid, starting motor		
C.A.V.)	1947-55	*069213	" " "	1952	51009A	(Petrol)	1950-55	*76411D/E
Horn	1947-55	78264A	" " "	1955	51411A	Solenoid operating		
Junction box	1947-55		Head, Export U.S.A. ..	1950-52	*50528M	(Petrol)	1950-55	*31071A
LAMPS			" " "	1953-54	*50993A	Starting motor	1947-49	76428A
Head, Home			" " "	1955	51411A	Stop lamp	1947-55	31281B
R.H.D., dip left (L.H.)	1947-49	*50402A	Side	1947-49	*52003A	Spring	—	315746
" non-dip (R.H.)	1947-49	*50403A	" " "	1950	52153A	Windshield wipers		
" dip left (L.H.)	1950-51	*50799D	" " "	1951	52154A	Motor	1947-55	75130A
" non-dip (R.H.)	1950-51	*50579K	" " "	1952-55	*52105A	Arm	1947-55	*735055
" dip left			Stop tail and number plate	1947-55	*53063B	Blade	1947-55	727802
(L.H. and R.H.)	1952-54	*50992A	Mirror	1947-53	*62521D			
" " "	1955	51344A						

§ FUEL INJECTION EQUIPMENT (Perkins P6V Engine 1947-54)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1947-52	BPE6A60Q310S6237	Feed pump	1947-52	BFPK22N68
" "	1953-54	BPE6A60S310S6321	" "	1953-54	BFPK22P68
Governor	1947-54	BPEM280A99	Pre-filter	1947-54	BFJSJ1-501
Coupling	1947-54	BZKKG31-538	Primer	1947-54	BFPUE2-54Z
Nozzle holder	1947-54	BKB35S87	Filter	1947-54	BFA5P1
Nozzle	1947-54	BDL110S6133			

(B.M.C. 5.1 litre Engine 1955)

Fuel pump	1955	AAR6A75-3E	Venturi	1955	BEPK50-50-106
" " Later	1955	AAR6A75-72E	Nozzle holder	1955	BKBL67S668
Governor	1955	LP16	Nozzle	1955	BDLL150S6194
Coupling	1955	BZKKG31-9Z	Filter	1955	F2-9

AUSTIN Coach Series III 1957-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter (F.C.)	1957-58	36099F/H	LAMPS—continued			SWITCHES—continued		
Battery	1957-58	GT11A	Head, Export Europe			Solenoid, starting motor	1957-60	*76411E
Petrol	1957-58	MT19E	(not France)	1957	51517F/J	Solenoid operating	1957	31425A
Petrol and Diesel	1959-60	MT19E	ditto	1958-59	*51782A/D	" " Later	1957-58	*31669A
Bulb holder, panel light			(except France & Sweden)			" " "	1959-60	31719A
F.C.	1957-60	39007A	Later	1959-60	58286A/B	Knob	1957-60	317376
" "	1957-60	39010A	Head, Export France ..	1957	51518F/H	Stop lamp	1957-60	31281A
N.C.	1959-60	554734	" " "	1958-59	*51783A/B	Spring (when fitted) ..	—	315746
Bulb	1957-60	987	" " " Later	1959-60	58287A/B	Trafficator (when fitted)	1959-60	*31367B
Coil, ignition	1957-60	*45053A/L	Head, Export Sweden ..	1959-60	58459A/B	Windshield wiper	1957-60	*31498A
Control box	1957-59	37226A/H	Number plate illumination	1957-60	53101H	Knob	—	312872
" "	1959-60	37308B	Side (F.C.)	1957-60	*52286A/D	Trafficators (optional) ..	1957-60	54050A
" " Later			(N.C.)	1957-60	52260B/E	Warning lights (F.C.) ..	1957-60	*38091A
" " "	1960	37301D	Stop tail	1957-60	53178F/H	Ignition or no charge ..	1957-60	*38127A
Distributor	1957-60	*40472A/B	Reflex reflector			Main beam	1957-60	304994
Flasher unit (when fitted)	1959-60	35010A	Amber	1957-60	57045A	Warning lights (N.C.) ..	1959-60	863511
Fuse box	1957	033240	Red	1957-60	57044A/B	Holder	1959-60	554734
" "	1958-60	*37137A	Starting motor			Bulb holder, ignition or	1959-60	39020B
Generator	1957-58	22492A/E	Petrol	1957-60	26043A	no charge	1959-60	987
" "	1959-60	22492L	Diesel			Bulb holder, main beam	1959-60	39020B
" " Later			(serviced by C.A.V.) ..	1957	SP512/A3	ditto (alternative) ..	1959-60	987
Horn	1959-60	69046F	ditto	1958-59	1320021	Bulb	—	987
Low note (optional) ..	1959-60	69047F	ditto	1960	1320023	Windshield wipers (F.C.)		
High note (optional) ..	1959-60	*33116B	SWITCHES			Motor	1957-58	75298B/D
Horn relay (when fitted)	1957-60	31438A	Flasher (when fitted) ..	1959-60	*31635B	" "	1959-60	75298F
Horn push and dipper ..	1957-60	78264A	Heater/Fan			Wheelbox	1957-60	72676A/B
Junction box	1957-60		F.C. (when fitted)	1957-60	*31498A	Crosshead and rack assy.		
LAMPS			Knob	1957-60	312892	Cut to 45°	1957-60	743235
Flasher, cab (when fitted)	1959-60	Serviced by	N.C. (when fitted)	1957-60	78260A	Outer casing	1957-60	743777
" "		Butlers	Knob	1957-60	768473	Motor to wheelbox	1957-60	743778
Flasher, rear (when fitted)	1959-60	53358D	Ignition or master (F.C.)	1957-60	*31484A/B	Wheelbox to wheelbox	1957-60	740746
Head, Home			Lighting (F.C.)	1957-60	*31432A/E	End tube	1957-60	740715
R.H.D., dip left	1957	51515F/J	Knob	1957-60	316156	Ferrule, casing retaining	1957-60	741810
" "	1958-60	51780A/D	Lighting and ignition or			Arm	1957-60	737886
Head, Export	1957	51515F/J	master (N.C.)	1957-60	31270B/E	Blade	1957-60	737886
R.H.D., dip left	1958-60	51780A/E	Knob	1957-60	316285	Windshield wipers (N.C.)		
" "	1957	51516F/K	Panel	1957-60	*31498A	Motor	1957-60	*75285D/F
L.H.D., dip right	1958-60	*51781A/E	Knob	1957-60	312871	Arm	1957-60	735072
" " "			" " "			Blade	1957-60	727803

* See Supersession Chart § Serviced by C.A.V. Ltd. N.C. .. Normal Control F.C. .. Forward Control L.H. .. Left hand continued
 R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



AUSTIN 152 'Omnicoch', 'Omnitruck' and 'Omnivan' 1957-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS			Starting motor	1957	25022A/L	Windshield wipers		
Flasher, side	1957-60	53362A/B	"	1958-59	25022M	Motor	1957	75300A/D
Head, Home			"	1960	25022N/Q	"	1958-60	75347A
R.H.D., dip left	1957-60	51344B/E	Steering column control	1957	32965B	"	1957-58	*72665A
Head, Export			"	1957-60	32965D/E	Wheelbox	1958-60	72711A
R.H.D., dip left	1957-60	51344B/E	Stator tube	1957-60	331739	"	Later	
L.H.D., dip right	1957-60	*51345D/E	Suppressor (when fitted)	1959-60	78106A	Crosshead and rack assy.	1957-60	743950
Head, Export Europe (not France)			SWITCHES			Outer casing		
(except France & Sweden)	1957-59	51346B/D	Dipper	1957-60	31284A/D	Motor to wheelbox	1957-58	743920
Later	1959-60	58272A/B	Heater (when fitted)	1958-60	31126E	"	Later	54710280
Head, Export France	1957-59	51411B	Knob	1957-60	316162	End tube	1957-60	740746
Later	1959-60	58273A/B	Ignition and lighting	1957-60	31270A/F	Ferrule, casing retaining	1957-58	740715
Head, Export Sweden	1959-60	58451A/B	Knob	1957-60	*316724	Arm, left hand	1957	741839
Number plate illumination	1957-60	53101H/J	Interior light (Coach)	1957-60	31544A/B	"	1958	744134
Roof (driving cab)	1957-59	56062B	" (driving cab)	1957-60	*31557A	"	1958-59	54710233
"	1959-60	56062D	Knob	1957-60	316144	"	1960	741838
" (Coach)	1958-59	56063B	Starting motor	1957-60	76423A	"	1958	744133
Later	1959-60	56063D	Knob	1957-60	764469	"	1957	741838
Side	1957-58	*52182D	Stop lamp	1957-60	31082E/J	"	1958	744133
"	1959-60	52436A	Windshield wiper	1957-60	*31557A	"	1958-59	54710232
Stop tail, flasher and reflex ditto (N. America)	1957-60	53479A/D	Knob	—	316393	"	1960	54711530
Mirror (hinged door)	1957-58	53634A	Warning lights			Blade	1957	737895
"	1959-60	062620	Bulb holder, ignition	1959-60	863511	"	1958	*737907
"	1959-60	062639	" main beam	1959-60	554734	"	1958-59	*737940
" (sliding door)	1957-58	062619	Bulb	—	987	"	1960	54711284
"	1959-60	062638	Flasher	1957-60	*38155A			

AUSTIN 1 1/2 ton 30I Range (except 30I F.C., see page A34) 1957-60

Ammeter	1957-60	36125B	LAMPS—continued			SWITCHES—continued		
Battery (Petrol)	1957-59	GT11A	Head, Export	1957-59	51344B	Lighting	1957-60	*31251A/D
" (Diesel)	1960	BT11A	R.H.D., dip left	1959-60	51344D/F	Knob	—	*316117
Bulb holder, panel light	1957-60	39010A	Later	1957-60	*51345D/F	Panel	1957-60	*31557A
" speedo	1957-60	39007A	L.H.D., dip right	1957-60	51346B/L	Knob	—	316132
Bulb	—	987	Head, Export Europe (not France)	1957-60	51346B/L	Solenoid, starting motor (Diesel)	1957-60	*76443A
Coil, ignition	1957	*45054D	(except France & Sweden)	1959-60	58272A/B	Starting motor (Petrol)	1957-60	76423A
Control box	1958-60	*45053J/M	Later	1959-60	58273A/B	Coupling	—	764428
"	1957-59	37182D/H	Head, Export France	1959-60	58451A/B	Warning lights		
"	1959-60	37182J	Head, Export Sweden	1959-60	51467B	Ignition	1957-60	38049A
"	1960	37182K	Head, Export U.S.A.	1959	*58499A	Main beam	1957-60	38052B
Distributor	1957-58	40496A	Number plate illumination	1957-60	53101H/J	Motor	1957-60	75146A/B
"	1959-60	40496B/D & F	Side	1957-60	52139E	Wheelbox	1957-60	72624H
"	1960	40496E & H	Stop tail	1957-60	53178F/H	Crosshead and rack assy.	1957-60	738499
Fuse box	1959-60	033239	Reflex reflector	1957-58	57052B	Left hand drive	1957-60	738987
Generator	1957-59	22258E/F	ditto	1959-60	57116A	Right hand drive	1957-60	738987
" (temporary alternative)	1960	22700D	ditto (with bumpers)	1959-60	57131A	Outer casing		
Horn	1957-58	*22704A	Starting motor (Petrol)	1957-60	26043A	Motor to wheelbox	1957-60	739870
"	1959-60	*069213	" (Diesel)	1957	26122A/D	Wheelbox to wheelbox (Left hand drive)	1957-60	*739974
Horn push and dipper	1957-60	69046F	"	1958-59	26135A/D	Short, wheelbox	1957-60	740031
Junction box	1957-60	*31305A	Suppressor (when fitted)	1960	26051J/K	Ferrule, casing retaining	1957-60	738410
LAMPS		78265A	SWITCHES			Arm, left hand	1957-60	737639
Head, Home			Fuel gauge (Diesel)	1958-60	*31294A/B	" right hand	1957-60	737640
R.H.D., dip left	1957-59	51344B	Ignition	1957-60	31187D/E	Blade	1957-60	727803
Later	1959-60	51344D/F						

BARRETT, W. & F. Invalid Carriage 1949-54

Battery	1949-54	SLG11E	LAMPS—continued			SWITCHES—continued		
Coil, ignition	1951-54	*45016A	Side	1949-52	*A52003A	Ignition and lighting	1951	*34075A
Control box	1949-50	*37054E	Tail and number plate	1953-54	*A52040A	Starting motor (special orders only)	1949-51	76428A
"	1951	37081E/H	Starting motor (special orders only)	1949-51	*A53007B	ditto	1952-54	76423A
"	1952-54	37062E	ditto	1952-54	25037A/B	Coupling	1952-54	764428
Generator	1949-54	22008B	SWITCHES			Trafficator (special orders only)	1952-54	31379A
Horn	1949-54	*069214	Dipper	1949-51	*380521	Trafficators (special orders only)	1952-54	053831
Horn push	1949-54	76204A	"	1952-54	*31278A	Warning lights	1952-54	*38012B
LAMPS								
Head	1949-50	*50706A						
"	1951-54	*50306D						

BARRETT, W. & F. 'Midget' All-weather Invalid Car 1954

Horn	1954	*70092A	SWITCHES			Trafficators	1954	54053A
LAMPS			Dipper	1954	*31278A	Windshield wipers		
Head	1954	51076A	Lighting	1954	31126B	Motor	1954	*75127A
Side	1954	*A52157A	Knob	—	*315044	Arm	1954	735099
Stop tail and number plate	1954	*53269A	Starting motor	1954	76427B	Blade	1954	727707
Mirror	1954	062562	Stop lamp	1954	*31109B			
			Spring	—	315543			
			Trafficator	1954	31379A			

* See Supersession Chart L.H.D. ... Left hand drive R.H.D. ... Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



BARRETT, W. & F. All-weather Invalid Car: 147 c.c. 1953-54 and 197 c.c. 1955

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1953-54	SLG11E	Starting motor (modified)	1953-55	25037A	Trafficators	1953	*54043A
"	1955	SLT11E				" Later	1953	*54042A
Horn	1954-55	*70092A	SWITCHES			"	1954	54046A/D
Horn push	1954-55	76204A	Dipper	1953-55	*31278A	" Later	1954	053977
Junction box	1955	78266A	Lighting	1953-55	*31159A	"	1955	053980
LAMPS			Knob	—	*315044	Windshield wipers		
Head	1953-55	51076A	Starting motor	1953-55	76427B	Motor	1953-55	*75121A
Parking	1953-54	*A52040A	Stop lamp	1953-54	*31109B	Arm	1953	735097
Side	1955	*52066A	"	1955	31281A	" Later	1953-55	735099
Stop tail and number plate	1953-54	*53182B	Spring	1953-55	315543	Blade	1953	727803
"	1955	*53269A	Trafficator	1953-54	31379A	" Later	1953-55	727707
Mirror	1953-54	062571	"	1955	31127A			

BATAVUS 3-wheeler 1949

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Horn	1949	70048D	LAMPS—continued			SWITCHES		
LAMPS			Stop tail and number plate	1949	*A53056A	Lighting	1949	31201B
Side	1949	*52117A				Knob	—	314026

BEARDMORE Taxi Mk. VII (Ford 'Consul' Engine) 1955-58

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1958	36252A	LAMPS—continued			SWITCHES—continued		
Battery	1955-58	STXW13A	Side and flasher	1955-58	52240A/B	Starting motor	1955-58	76427B
Coil, ignition	1955-58	*45020B	Stop tail and flasher	1955-58	53178F	Windshield wiper	1958	*31515A
Control box	1955-56	*37139E	Mirror	1955-57	*620128	Knob	—	*316491
"	1957-58	37183H	" Later	1957-58	*062511	Warning lights		
Distributor	1955-56	*40244A	Reflex reflector	1955-58	57031B	Direction indicator	1955	38112A
"	1957-58	40512A	Starting motor	1955-58	25022A/L	Hire sign bezel and glass	1955-58	304085
Flasher unit	1955-58	*35003A	SWITCHES			Ignition	1955	38118A
Fuse box (1.25 amp.)	1955-58	*37130A	Battery master	1955-58	*76604B	Oil	1955	38119A
" (4.25 amp.)	1955-58	*37137A	Dipper	1955-58	31284A	Windshield wipers		
Generator	1955-58	22483A	Flasher	1955-58	31250H	Motor	1958	75212A
Horn	1955-58	69054A	Knob	—	311149	Wheelbox	1958	72660B
Horn push	1955-58	76205B	Foglamp	1955	*31410A	Crosshead and rack assy.	1958	743221
Inspection lamp sockets	1955	*545072	"	1956-58	*31515A	Outer casing		
Junction box	1955-58	78266A	Knob	1955-58	*316499	Motor to wheelbox	1958	743940
LAMPS			Ignition and lighting	1955-58	*31288A	Wheelbox to wheelbox	1958	54710180
Flasher, rear	1955-58	53359A/D	Knob	—	*312813	End tube	1958	740746
Head, Home	1955	51344A	Panel	1955-58	*31515A	Arm	1958	741810
"	1956-58	51344B	Knob	—	*316492	Blade	1958	737886
Number plate illumination	1955-58	53101H						

BEDFORD 5/6 cwt. Van 1946-47

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1946-47	SG11E	LAMPS			SWITCHES		
Coil, ignition	1946-47	*45014A	Head, Home			Dipper	1946-47	31284A
Control arm	1946-47	*310750	R.H.D., dip left	1946-47	50199D	Ignition and lighting	1946-47	*34010D
Control box	1946-47	*37033A	" non-dip	1946-47	50200D	Panel	1946-47	*359350
Distributor	1946-47	*410041	Side	1946-47	*52032A	Starting motor	1946	764248S
Generator	1946-47	22451A	Stop tail and number plate	1946-47	*53071B	"	1947	*76413D
Horn	1946-47	*70025D	Starting motor	1946	*255998	Terminal block	1946-47	37101A
			"	1947	25515B/D			

BEDFORD 10/12 cwt. Van 1946-52

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1946-47	SG11E	LAMPS			LAMPS—continued		
"	1948-52	GT7A	Head, Home			Stop tail and number plate	1946-52	*53008B
Coil, ignition	1946-47	*45014A	R.H.D., dip left (L.H.)	1946-51	50199D	Mirror	1946-47	*62531D
"	1948-52	*45012A/D	" non-dip (R.H.)	1946-51	50200D	Starting motor	1946-47	*255998
Control box	1946-47	*37033A	R.H.D., dip left (L.H.)	1952	*51139A	"	1948	25014A
"	1948-52	37065E	" non-dip (R.H.)	1952	*51138A	" Later	1948-50	25014B
Distributor	1946-48	*410041	Head, Export			"	1951-52	25014D/E
" Later	1948-52	40164A/B	Vertical dip (L.H.)	1950-51	50219A/F	SWITCHES		
Generator	1946-47	22451A	" (R.H.)	1950-51	50220D	Dipper	1946-52	31284A
"	1948	*22250A	R.H.D., dip left (L.H.)	1952	*51139A	Ignition and lighting	1946-49	*34010D
"	1949-52	*22250E/F	Roof	1950-52	56022D	"	1950-52	34043D
" Later	1952	22258D	Side	1946	*52032A	Panel	1946-50	*359350
Horn	1946-47	*70025D	"	1947-49	*52052A	Starting motor	1946-47	764248S
"	1948-52	*069213	"	1950-52	52154A	"	1948-52	*76414D

BEDFORD 30 cwt. 1946-50

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Coil, ignition	1946-50	*45014A	Generator	1946-48	*238184	SWITCHES		
Control box	1946-48	336212	" Later	1948	*22251A	Dipper	1946-50	31284A
"	1948-50	*37079E	Horn	1949-50	*22251E/F	Ignition and lighting	1946-48	34019D
Distributor	1946-47	40033B/D	Mirror	1946-50	*70025D	" Later	1948-50	34043D
"	1948	40033E	Starting motor	1946-50	*62531D	Panel	1946-50	*31285A
" Later	1948-50	40033F/J				Starting motor	1946-50	76428A

* See Supersession Chart L.H. ... Left hand R.H. ... Right hand L.H.D. ... Left hand drive R.H.D. ... Right hand drive



BEDFORD 2/3 and 3/4 ton Trucks 1946-50

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.	
Coil, ignition	1946-50	*45014A	Generator	1946-47	*238184	SWITCHES			
Control box	1946-47	336212	"	1948	*22251A		Dipper	1946-50	31284A
"	1948-50	*37079E	"	1949-50	*22251E/F		Ignition and lighting	1946-48	34019D
Distributor	1946-47	40033B/D	Horn	1946-50	*70025D		"	1948-50	34043D
"	1948	40033E	Mirror	1946-50	*62531D		Panel	1946-50	*31285A
"	1948-50	40033F/J	Starting motor	1946-50	*270383		Starting motor	1946-50	76428A
"	Later								

BEDFORD 5 ton Truck and Scammell Tractor 1946-50

Coil, ignition	1946-50	*45014A	Generator	1946-47	*238184	SWITCHES			
Control box	1946-48	336212	"	1948-50	*22251E/F		Dipper	1946-50	31284A
"	1948-50	*37079E	"	1949-50	*70025D		Ignition and lighting	1946-48	34019D
Distributor	1946-47	40033B/D	Horn	1946-50	*70025D		"	1948-50	34043D
"	1948	40033E	Mirror	1946-50	*62531D		Panel	1946-50	*31285A
"	1948-50	40033F/J	Starting motor	1946-50	*270383		Starting motor	1946-50	76428A
"	Later								

BEDFORD 1 1/2 ton K, 4 ton OSA-OLA, 5 ton OSB-OLB, 3 ton MS-ML and 8 ton OSS Scammell Tractor 1951-53

Battery	1951-53	STXT 15E-6	Horn	1951-53	*069399	SWITCHES			
Coil, ignition	1951-53	*45012A/D	LAMPS				Dipper	1951-53	31284A
Control box	1951-52	37065E	Head, side and Stop tail	1951-53	Serviced by Butlers Ltd.		Ignition and lighting	1951-53	34043D
"	1952-53	*37138B	Starting motor	1951-53	25521B/D		Panel	1951-53	*31285A
Distributor	1951-53	40033F/J					Starting motor	1951-52	*76401E
Fuse box	1952-53	033239					"	1953	76438A
Generator	1951-52	*22250E/F					Knob	—	764505
"	1952-53	22258D							
"	Later								

BEDFORD Ambulance 1949-50

Control box	1949-50	*37079E	Generator	1949-50	*22251E/F	Starting motor	1949-50	*270383
Distributor	1949-50	40033F/J						

BEDFORD Bus 1946-50

Coil, ignition	1946-50	*45039A	Fuse box	1946-50	*37137A	SWITCHES			
Control box (serviced by C.A.V.)	1946-50	1687010	Generator (serviced by C.A.V.)	1946-50	1150150		Dipper	1946-50	31284A
Distributor	1946-47	40033B/D	Horn	1946-50	*70026D		Ignition and lighting	1946-50	*34010D
"	1948	40033E	Mirror	1946-50	*62531D		Panel	1946-50	*31285A
"	1948-50	40033F/J	Starting motor	1946-50	*270064		Starting motor	1946-50	76428A
"	Later								

BEDFORD CA Van 1953-60

Battery	1953-57	GT7A	LAMPS			LAMPS—continued			
"	1958-60	BT7A	Flasher, rear	1959-60	53359B		Stop tail	1953-60	53178B/H
Coil, ignition	1953	*45012A/D	" (N. America)	1959-60	53600A/E		" (Canada)	1959-60	53564A/D
Control box	1953-56	*37138B/D	Head, Home	1953-60	51336A/E		Reflex reflector	1955-60	57082A
"	1956-58	*37187E/L	R.H.D., dip left	1953-60	51336A/E		" (chassis only)	1958-60	57079A
"	1959-60	37307A/B	Head, Export	1953-60	51336A/E		Starting motor	1953-57	25022A/L
"	1960	37299B	R.H.D., dip left	1953-60	51336A/E		"	1958-59	25061B
Distributor	1953-55	*40289A/K	L.H.D., dip right	1953-60	*51337A/F		"	1960	25061E/F
"	1956	40463A/B	Head, Export Europe (not France)	1953-60	*51337A/F		SWITCHES		
"	1957	40527A	ditto	1960	58230A/E		Dipper	1953-56	†31284A
Fuse box	1953-60	033239	Head, Export France	1960	58231A/E	Ignition and lighting	1953-60	31270A	
Generator	1953-56	22258D	Head, Export Austria	1960	58613A	Knob	—	316420	
"	1957-60	22258E/F	Number plate illumination (U.S.A.)	1959-60	53766A	Panel	1953-60	31161A	
"	1960	*22704A	Side	1953-54	52160A	Starting motor	1953	*76401E	
Horn	1953-54	*069213	"	1955-59	*52227A	"	1954-60	76438A	
"	1955-58	*069399	Side/Flasher	1959-60	52338A/D	Knob	—	764505	
						Stop lamp	1954-60	31082B/J	

BEDFORD SH Fire Engine Chassis 1951-53

Coil, ignition	1951-53	45012A/D	LAMPS, Head, Home—continued			LAMPS—continued			
Control box (serviced by C.A.V.)	1951-53	1687020	R.H.D., dip left (L.H. and R.H.)	1951-52	*50954A		Side and stop tail	1951-53	Serviced by Butlers Ltd.
Distributor	1951-53	40215A/E	"	1953	51336A		Starting motor	1951-53	26043A
Generator (serviced by C.A.V.)	1951-53	1150110	Head, Export	1951	*50445K		Suppressor	1951-53	78106A
Horn	1951-53	69011F	R.H.D., dip left	1951-52	*50954A		SWITCHES		
Low note	1951-53	69012F	"	1953	51336A		Dipper	1951-53	31284A
High note	1951-53	69012F	"	1953	*50804D		Ignition and lighting	1951-53	31270A
LAMPS			L.H.D., dip right	1951-52	*51337A		Knob	—	316420
Head, Home	1951	*50445K	Head, Export Europe (not France)	1951	*B50445K		Panel	1951-53	31161A
R.H.D., dip left (L.H.)	1951	*50446K	ditto	1951-52	*50963A		Starting motor	1951-52	*76401E
" non-dip (R.H.)	1951		ditto	1953	51339A	"	1953	76438A	
						Knob	1951-53	764505	

* See Supersession Chart † Suitable replacement after 1956 L.H. ... Left hand R.H. ... Right hand L.H.D. ... Left hand drive R.H.D. ... Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



BEDFORD S Type 7 ton Truck and 9, 10 and 12 ton Tractors 1951-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery (Petrol)	1955-60	†GT11A	Horn relay			LAMPS—continued		
" (Diesel)	1957-58	†STXT19E	12 volt (when twin horns fitted)			Head, Export France ..	1960	58231A/E
"	1959-60	†HV27E-6	24 volt (when twin horns fitted)	1959-60	*33116B	Head, Export Austria ..	1960	58613A
Coil, ignition	1951-54	*45012A/D				Side and stop tail ..	1951-60	Serviced by Butlers Ltd. 57079A
Control box (Petrol) ..	1951-52	37065E	LAMPS			Reflex reflector	1957-60	
" " " Later	1952-56	*37138B/D	Head, Home			Starting motor		
" " "	1956-59	*37187E/L	R.H.D., dip left (L.H.)	1951	*50445K	Petrol	1951-60	26043A
" " "	1959-60	37307A	" non-dip (R.H.)	1951	*50446K	Serviced by C.A.V.:		
" " (Diesel)	1957-59	*37189H	(L.H. and R.H.) Later	1951-52	*50954A	Perkins Diesel	1957	1332600
" " " Later	1959-60	37303A/B	" " " (24 volt)	1956-60	51336A	"	1958	1320061
" " (Leyland Diesel, 24 volt, serviced by C.A.V.)	1958-59	1688010	Head, Export			Bedford Diesel	1958-59	1340131
" ditto	1960	1687051	R.H.D., dip left ..	1951	*50445K	"	1960	1320023
Distributor	1951-54	*40215A/E	" " " Later	1951-52	*50954A	Leyland Diesel (24 v.)	1958	1333270
"	1955-57	40405D/E	" " "	1953-55	51336A	"	1959-60	1333271
Fuse box	1952-60	033239	" " " (24 volt)	1956-60	51336B/J	SWITCHES		
Generator			L.H.D., dip right ..	1951-52	*50804D	Dipper	1951-56	‡1284A
Petrol	1951-52	*22250E	" " "	1953-54	*51337A	Ignition and lighting ..	1951-60	31270A
" " " Later	1952-56	22258D	" " "	1955	*51337B	Knob	—	316420
" " "	1957-60	22258E/F	" " "	1956-59	*51337D/E	Panel	1951-60	31161A
Perkins R6 Diesel ..	1957-58	*22456F	" " " (24 volt)	1959-60	*51337F/K	Solenoid operating (Diesel)		
Bedford Diesel	1958	*22483D	" " "	1959-60	*51337E/J	"	1957-58	31253A
"	1959	*22458E	Head, Export Europe			" Later	1959-60	*31689B
"	1960	22494B	(not France)	1951	*B50445K	Starting/Heater (when fitted)	1960	31719B
Leyland Diesel, serviced by C.A.V.	1958-59	1131090	ditto .. Later	1951-52	*50963A	Starting motor	1951-52	*76401E
" ditto	1960	1151161	ditto	1953-55	51339A	"	1953-60	76438A
Horn (12 volt)	1951-58	*069399	ditto	1956-60	51339B/H	Knob	—	764505
" (24 volt)	1958	069405	(except France & Austria)			Stop lamp	1953-60	31082B/J
			ditto (24 volt) ..	1960	58230A/E	Thermostat (when fitted)	1960	*31689B
				1958-60	51492D/H	Trailer plug	1957-60	*82036A
						" socket	1957-60	*82037A

§ FUEL INJECTION EQUIPMENT (Perkins R6 Engine 1957-58)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1957-58	BPE6A70R320S6360	Pre-filter	1957-58	BFJSJ1-501
Governor	1957-58	BEPBMN80A135	Nozzle holder	1957-58	BKB32S630
Coupling	1957-58	BZKG31-538	Nozzle	1957-58	BDL105S6125
Feed pump	1957-58	BFPK22P70	Filter	1957-58	F2-8
Primer	1957-58	HPI-1			
(Bedford 4 cylinder Engine 1958-60)					
Fuel pump, R.H.D.	1958-60	AAL4B75-90	Venturi	1958-60	BEPK44-44-114
" " L.H.D.	1959-60	AAL4B75-110	Nozzle holder	1958	BKBL97S673
Governor	1958-60	RPE11	"	1959-60	BKBL97S5048
Coupling	1958-59	CN17	Nozzle	1958-60	BDLL160S6173
" " " Later	1959-60	FDC6248220	Filter	1958-59	F2-14
Feed pump (L.H.D. only) ..	1959-60	DFP6-4	" Later	1959-60	F2B-14
(Bedford 6 cylinder Engine 1958-60)					
Fuel pump	1958	AAL6B75-82E	Feed pump	1958-60	DFP6-4
" "	1959	AAL6B75-91	Venturi	1958-60	BEPK50-50-114
" "	1960	AAL6B75-106	Nozzle holder	1958	BKBL97S673
Governor	1958	RPB23	"	1959-60	BKBL97S5048
" " "	1959-60	RPE17	Nozzle	1958-60	BDLL160S6173
Coupling	1958-59	CN1	Filter	1958-59	F2-14
" " "	1960	FDC6248230	" Later	1959-60	F2B-14
(Leyland 0.350 Engine 1958-60)					
Fuel pump	1958-59	AAL6B75-66EL	Feed pump	1958-60	DFP6-3
" "	1960	AAL6B75-92	Filter	1958-59	F2-14
Governor	1958-59	RPB20D	"	1960	F2B-3
" " "	1960	RPE13D			

BEDFORD SBO Coach, SLO-SSO Truck and SAO Tractor (Perkins R6 Engine) 1954-56

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1954-56	†MT17E	Horn (Commercial) ..	1954-56	069405	LAMPS—continued		
Control box			Horn (Coach)			Head, Export Europe		
Coach			Low note	1954-55	*69041B	(not France)	1954	51492A
(serviced by C.A.V.) ..	1954-56	1687050	"	1956	69055A	ditto	1955	51492B
Coach, suppressed			High note	1954-55	*69042B	ditto	1956	51492D/H
(serviced by C.A.V.) Later	1956	1687110	" " "	1956	69056A	Side and stop tail ..	1954-56	Serviced by Butlers Ltd.
Commercial			Horn relay (Coach) ..	1954-56	33164A			
(serviced by C.A.V.) ..	1954-56	1688010	LAMPS			Starting motor		
Commercial, suppressed			Head, Home and Export			(Serviced by C.A.V.) ..	1954-56	1332600
(serviced by C.A.V.) Later	1956	1688090	Dip left	1954	51477A	SWITCHES		
Fuse box			" " "	1955	51477B	Dipper	1954-56	31284A
(serviced by C.A.V.) ..	1954-56	1800830	" " "	1956	51477D/H	Lighting and main ..	1954-56	31270A
Generator			Head, Export			Knob	—	316420
Commercial			L.H.D., dip right ..	1954	51490A	Panel	1954-56	31161A
(serviced by C.A.V.) ..	1954-56	1131200	" " " Later	1954	51490B	Plug, heater	1954-56	31425A
Coach			" " "	1955	51490D	Solenoid operating ..	1954-56	31253A
(serviced by C.A.V.) ..	1954-56	1151280	" " " Later	1955-56	51490E/J	Stop lamp	1954-56	31281B

* See Supersession Chart † Suitable replacement ‡ Suitable replacement after 1956 § Serviced by C.A.V. Ltd. L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



BEDFORD SBO Coach, SLO-SSO Truck and SAO Tractor (Perkins R6 Engine) 1954-56—continued

§ FUEL INJECTION EQUIPMENT					
Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1954-55	BPE6A 70R320S6302	Primer	1954-56	BFPUE2-54Z
"	1956	BPE6A 70R320S6360	Pre-filter	1954-56	BFJSJ1-501
Governor	1954-56	BEPAMN80A122	Nozzle holder	1954	BKB35S87
" Later	1956	BEPBMN80A135	"	1955-56	BKB32S630
Coupling	1954-56	BZKG31-538	Nozzle	1954-56	BDL105S6125
Feed pump	1954-56	BFPK22P68	Filter	1954-56	F2-8
" Later	1956	BFPK22P70			

BEDFORD 1/6 ton TA, TD and TJ Normal Control Diesel Trucks 1953-60: 4/6 ton TC Forward Control Diesel Truck 1958-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1955-59	†STXT19E	LAMPS—continued			Relay, horn (when twins fitted)	1959-60	*33116B
" (4 cyl.)	1960	†HRT17E	Head, Export			ditto (TJ only) Later	1960	33188A
" (6 cyl.)	1960	†HV27E	R.H.D., dip left ..	1953-55	51336A	Starting motor ..	1953-55	C.A.V.
Control box	1953-56	*37139D/E	"	1956-60	51336B/J	Serviced by C.A.V. ..	1956-57	1330660
" Later	1959-60	*37189H	" (4/6 ton TD only)	1958	58034A/H	4 cyl. (serviced by C.A.V.)	1958-59	1320021
"	1953-56	37303A	L.H.D., dip right ..	1953-54	*51337A	"	1960	1320023
"	1957-59	033240	"	1955	*51337B	6	1958-59	1340130/1
Fuse box	1953-56	033239	" Later	1956-59	*51337D/E	"	1960	1320023
Generator	1957-58	*22456A/B	" (4/6 ton TD only)	1959-60	*51337F/K	SWITCHES		
"	1957	*22456E/F	Head, Export Europe			Dipper	1953-56	131284A
"	1958	*22483D	(not France)	1953-55	51339A	Lighting and main ..	1953-58	31270A
" (4 cyl.)	1959	*22483D	ditto	1956-60	51339B/H	Knob		316420
"	1960	*22489D	ditto Later	1960	58230A/E	Lighting	1959	31662B
" (6 cyl.)	1959	*22458E	ditto (4/6 ton TD only)	1958	58036A/F	"	1960	31793B
"	1960	*22494D	Head, Export France ..	1960	58231A/E	Panel	1953-58	31161A
"	1960	*22494D	Head, Export Austria ..	1960	58613A	Plug, heater	1953-57	31425A
Horn	1953-58	*069399	ditto	1953-60	Serviced by	Solenoid operating ..	1953-57	31253A
LAMPS			Side and stop tail ..	1953-60	Butlers Ltd.	" ditto (TC only) ..	1958	*31689A
Head, Home						ditto Later	1959-60	*31689A
R.H.D., dip left ..	1953-55	51336A				Stop lamp	1960	31719B
"	1956-60	51336B/J				Thermostat (optional)	1953-60	31082B/J
" (4/6 ton TD only)	1958	58034A/H					1960	*31689B

§ FUEL INJECTION EQUIPMENT (Perkins R6 Engine 1953-57)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1953-55	BPE6A 70R320S6302	Primer	1953-57	BFPUE2-54Z
" Later	1955-57	BPE6A 70R320S6360	" Later	1957	HP1-1
"	1957	BPE6A 70R320S6387	Pre-filter	1953-57	BFJSJ1-501
Governor	1953-56	BEPAMN80A122	Nozzle holder	1953-54	BKB35S87
" Later	1956-57	BEPBMN80A135	"	1955-57	BKB32S630
Coupling	1953-57	BZKG31-538	Nozzle	1953-57	BDL105S6125
Feed pump	1953-56	BFPK22P68	Filter	1953-57	F2-8
" Later	1956-57	BFPK22P70			

(Bedford 4 cylinder Engine 1958-60)

Fuel pump, R.H.D.	1958-60	AAL4B75-90	Venturi	1958-60	BEPK44-44-114
" L.H.D.	1959-60	AAL4B75-110	Nozzle holder	1958	BKBL97S673
Governor	1958-60	RPE11	"	1959-60	BKBL97S5048
Coupling	1958-59	CN17	Nozzle	1958-60	BDLL160S6173
" Later	1959-60	FDC6248220	Filter	1958-59	F2-14
Feed pump (L.H.D. only) ..	1959-60	DFP6-4	" Later	1959-60	F2B-14

(Bedford 6 cylinder Engine 1958-60)

Fuel pump	1958	AAL6B75-82E	Feed pump	1958-60	DFP6-4
"	1959	AAL6B75-91	Venturi	1958-60	BEPK50-50-114
"	1960	AAL6B75-106	Nozzle holder	1958	BKBL97S673
Governor	1958	RPB23	"	1959-60	BKBL97S5048
"	1959-60	RPE17	Nozzle	1958-60	BDLL160S6173
Coupling	1958-59	CN1	Filter	1958-59	F2-14
"	1960	FDC6248230	" Later	1959-60	F2B-14

BEDFORD SB Type Coach and Chassis 1951-60: Fire Engine Chassis (Petrol) 1955-57

Battery	1951-59	†STXT19E	Fuse box (serviced by C.A.V.)	1951-54	1800700	Horn		
" (Petrol)	1960	†STXT19E	ditto	1955-60	1800830	Low note (12 volt) ..	1951-55	69011F/J
" (Bedford Diesel) ..	1960	†HV27E				"	1956-57	69046A/B
" (Leyland Diesel) ..	1960	†HRT17E				" (24 ..)	1958	*§69083A
Coil, ignition	1951-54	45012A/D	Generator			"	1958	*§69086A
Control box (serviced by C.A.V.)	1951-60	1687010/1	Serviced by C.A.V. ..	1951-58	1150150	High note (optional, 12 volt) ..	1951-55	*69012F/J
ditto (Leyland Engine) ..	1958	1688010	"	1959	1150111	"	1956-57	*69047A/B
ditto	1959-60	1687050/1	Leyland Diesel (serviced by C.A.V.)	1960	1150152	" (24 ..)	1958	*§69084A
Distributor	1951-54	*40215A/E	ditto	1958-59	1131090	"	1958	*§69085A
"	1955-57	40405D/E	Perkins Diesel (serviced by C.A.V.)	1960	1151161	Horn relay		
				1957-58	1150152	12 volt (when twins fitted)	1955-60	*33116B
						24	1958-60	*33164A

* See Supersession Chart
§ Serviced by C.A.V. Ltd.

† Suitable replacement
L.H.D. .. Left hand drive

‡ Suitable replacement after 1956
R.H.D. .. Right hand drive
§ Suitable replacement after 1958

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



BEDFORD SB Type Coach and Chassis 1951-60: Fire Engine Chassis (Petrol) 1955-57—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS			LAMPS—continued			SWITCHES		
Head, Home			Head, Export Europe			Dipper	1951-56	†31284A
R.H.D., dip left (L.H.)	1951	*50445K	(not France)	1951	*B50445K	Lighting and ignition or		
" non-dip (R.H.)	1951	*50446K	ditto Later	1951-52	*50963A	main	1951-60	31270A
" dip left			ditto	1953-55	51339A	Knob	—	316420
(L.H. and R.H.) Later	1951-52	*50954A	ditto	1956-60	51339B/H	Panel	1951-60	31161A
" " " ..	1953-55	51336A	ditto Later	1960	58230A/E	Solenoid operating		
" " " ..	1956-60	51336B/J	ditto (24 volt) ..	1958-60	51492F	Diesel	1957	31253A
" " " (24 volt)	1958-60	51477F	Head, Export France ..	1960	58231A/E	" (serviced by		
Head, Export			Side and stop tail ..	1951-60	Serviced by	" C.A.V.) ..	1958	1823410
R.H.D., dip left ..	1951	*50445K			Butlers Ltd.	" Later	1959-60	*31689A
" " " .. Later	1951-52	*50954A	Starting motor			"	1960	31719A
" " " ..	1953-55	51336A	Petrol	1951-60	26043A	Starting/Heater (Diesel,		
" " " ..	1956-60	51336B/J	Serviced by C.A.V.: ..			serviced by C.A.V.) ..	1958	1823420
" " " (24 volt)	1958-60	51477F	Perkins Diesel	1957	1332600	Starting motor (Petrol)	1951-52	*76401E
L.H.D., dip right ..	1951-52	*50804D	Bedford Diesel	1958	1320061	" " " ..	1953-60	*76438A
" " " ..	1953-54	*51337A	Leyland Diesel (24 v.)	1958	1320023	Knob .. " ..	—	764505
" " " ..	1955	*51337B	" " " ..	1959-60	1333271	Stop lamp	1953-60	31082B/J
" " " .. Later	1956-59	*51337D/E						
" " " ..	1959-60	*51337F/K						
" " " (24 volt)	1958-60	*51490E/J						

§ FUEL INJECTION EQUIPMENT
(Perkins R6 Engine 1957-58)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1957-58	BPE6A70R320S6360	Pre-filter	1957-58	BFJSJ1-501
Governor	1957-58	BEPBMN80A135	Nozzle holder	1957-58	BKB32S630
Coupling	1957-58	BZKG31-538	Nozzle	1957-58	BDL105S6125
Feed pump	1957-58	BFPK22P70	Filter	1957-58	F2-8
Primer	1957-58	HP1-1			

(Bedford 4 cylinder Engine 1958-60)

Fuel pump, R.H.D.	1958-60	AAL4B75-90	Venturi	1958-60	BEPK44-44-114
" L.H.D.	1959-60	AAL4B75-110	Nozzle holder	1958	BKBL97S673
Governor	1958-60	RPE11	" " "	1959-60	BKBL97S5048
Coupling	1958-59	CN17	Nozzle .. "	1958-60	BDLL160S6173
" " " .. Later	1959-60	FDC6248220	Filter	1958-59	F2-14
Feed pump (L.H.D. only) ..	1959-60	DFP6-4	" " " .. Later	1959-60	F2B-14

(Bedford 6 cylinder Engine 1958-60)

Fuel pump	1958	AAL6B75-82E	Feed pump	1958-60	DFP6-4
" " " ..	1959	AAL6B75-91	Venturi	1958-60	BEPK50-50-114
" " " ..	1960	AAL6B75-106	Nozzle holder	1958	BKBL97S673
Governor	1958	RPB23	" " "	1959-60	BKBL97S5048
" " " ..	1959-60	RPE17	Nozzle .. "	1958-60	BDLL160S6173
Coupling	1958-59	CN1	Filter	1958-59	F2-14
" " " ..	1960	FDC6248230	" " " .. Later	1959-60	F2B-14

(Leyland 0.350 Engine 1958-60)

Fuel pump	1958-59	AAL6B75-66EL	Feed pump	1958-60	DFP6-3
" " " ..	1960	AAL6B75-92	Filter	1958-59	F2-14
Governor	1958-59	RPB20D	" " "	1960	F2B-3
" " " ..	1960	RPE13D			

BEDFORD 1/6 ton TA, TD and TJ Normal Control Petrol Trucks 1953-60: 4/6 ton TC Forward Control Petrol Truck 1958-60

Battery	1955-59	†GT9A	LAMPS—continued			Reflex reflector	1956-60	57079A
" " " ..	1960	†BT9A	Head, Export			Relay, horn (when twins		
Coil, ignition	1953-54	*45012A/D	R.H.D., dip left	1953-55	51336A	fitted)	1959-60	*33116B
Control box	1953-56	*37138B/D	" " " " (4/6 ton	1956-60	51336B/J	ditto (TJ only) Later	1960	33188A
" " " .. Later	1956-59	*37187E/L	" " " " TD only)			Starting motor	1953-57	25521B/D
" " " ..	1959-60	37307A	L.H.D., dip right	1958	58034A/H	" " "	1958-60	25557A
" " " ..	1960	37299B	" " " " ..	1953-54	*51337A	SWITCHES		
Distributor	1953-54	*40033F/J	" " " " ..	1955	*51337B	Dipper	1953-56	†31284A
" " " ..	1955-57	40404D/E	" " " " ..	1956-59	*51337D/E	Flasher (when fitted) ..	1960	31564D
Fuse box	1953-58	033239	" " " " .. Later	1959-60	*51337F/K	Ignition and lighting ..	1953-58	31270A
Generator	1953-56	22258D	" " " " (4/6 ton			Knob	—	316420
" " " ..	1957-60	22258E/F	TD only)	1958	58035A/D	Lighting	1959	31662B
" " " .. Later	1960	*22704A	Head, Export Europe			" " "	1960	31793B
Horn	1953-54	*069399	(not France)	1953-55	51339A	Panel	1953-58	31161A
LAMPS			ditto	1956-60	51339B/H	Solenoid, starting motor	1959	*76411E
Head, Home			ditto Later	1960	58230A/E	ditto (TJ)	1960	*76411E
R.H.D., dip left ..	1953-55	51336A	ditto (4/6 ton TD only)	1958	58036A/D	Starting motor	1953-58	76423A
" " " ..	1956-60	51336B/J	Head, Export France ..	1960	58231A/E	Coupling	—	764428
" " " (4/6 ton			Head, Export Austria ..	1960	581613A	Starting motor (TC)	1960	76438A
" " " TD only)	1958	58034A/H	Side and stop tail ..	1953-60	Serviced by	Knob .. " ..	—	764505
					Butlers Ltd.	Stop lamp	1953-60	31082B/J

*See Supersession Chart R.H. .. Right hand † Suitable replacement after 1956 L.H.D. .. Left hand drive ‡ Suitable replacement R.H.D. .. Right hand drive § Serviced by C.A.V. Ltd. L.H. .. Left hand



BENTLEY 4 1/4 litre Mk. VI 1946-51

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Coil, ignition	1946-51	45025A/F	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
Control box	1946	*37052F/H	Number plate illumination	1946-51	53080A	Petrol/Oil gauge ..	1946-51	*31074A
" "	1947-49	*37089D	ditto (Export) ..	1947-50	53114A	Solenoid, starting motor	1946-50	*760080
" "	1949-51	*37116B	ditto (U.S.A.) ..	1948	53093E	"	1951	076013
Fuse box	1946-49	*385200	ditto	1951	53164A	Windshield wiper ..	1946-51	31201B
Generator	1946	22413D	Pass	1951	55031D	Trafficators	1946-51	54003E
" "	1947-51	23000A/J	Reverse	1948-51	53128E	Windshield wipers		
Horn			Side	1946-51	52088E/F	Motor	1948	*75075J
Low note	1946-51	*69004B	Stop	1951	53113A	"	1949-50	*75087L
" " (Export) ..	1951	70067A	" (Export)	1947-48	53113A	"	1951	*75087M
High note	1946-51	*69005B	Stop tail	1951	53207B	Wheelbox, with switch	1948-51	72627A
" " (Export) ..	1951	70070A	"	1946-50	*53091D	.. less switch ..	1948-51	72598A/D
Horn relay	1946-51	*33139B	" " (Switzerland) ..	1951	*53192A	Crosshead and rack assy.	1948	738223
Junction box	1946-51	78264A	" " (U.S.A.)	1951	*53127B	ditto	1949-51	738499
" "	1946-51	78266A	Mirror			ditto (Special and		
LAMPS			Right hand	1946-51	*580733	Park Ward body)		
Fog	1946-51	*55030A	Left hand	1946-51	*580736	Cut to 58 "	1950-51	738223
Head, Home			Panel light	1946-51	39006A	Outer casing		
R.H.D., non-dip ..	1946-48	*50311F	Starting motor (R.H.D.)	1946-51	26023A/E	Motor to wheelbox ..	1948	*738221
" dip left	1949-51	50751D	" " (L.H.D.)	1946-51	26033A/B	1949-51	*739907
Head, Export			SWITCHES			Wheelbox to wheelbox	1948	*739979
R.H.D., dip left ..	1946-51	*50429H	Dipper	1946-51	31284B	ditto (L.H.D.) ..	1949-50	*739933
Head, Export France ..	1948-51	50864B	Foglamp	1946-51	31201B	ditto	1951	*739979
" "	1951	51087B	Heater	1946-50	78210A	ditto (Special body)	1950-51	*739980
" " Later	1951	51087B	"	1951	78286A/F	ditto (Park Ward body)	1951	*739933
Head, Export U.S.A. ..	1949-51	50817D	Ignition	1946-51	31201B	3", offside wheelbox ..	1948-51	740031
" " " Later ..	1951	*51088B	Lighting	1946-51	31201B	Arm	1948	*736418
			Panel	1946-51	31073A	"	1949-51	*738933
						Blade	1948	*737536
						"	1949-51	*738934

BENTLEY 4 1/2 litre Mk. VII 1952-54

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Coil, ignition	1952-54	45025A/F	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
Control box	1952-53	*37116B	Head, Export France ..	1952	51294B	Lighting	1952-54	31201B
" "	1954	37190A	"	1953-54	51422A	Panel	1952-54	31073A
Flasher unit	1954	*35003A	Number plate illumination	1952	53164A	" (alternative) ..	—	78300A
Flasher relay	1954	33117A	"	1953-54	53243B	Petrol/oil gauge ..	1952-54	*31074A
Generator	1952-54	23002A/D	Side	1952-54	52088E/F	Solenoid, starting motor	1952-54	*76411D
Horn			" (U.S.A.)	1952	52176A	Windshield wiper ..	1952-53	*31302A
Low note	1952-54	*69044A	Stop tail	1953-54	52209A	"	1954	31448A
" " (Export) ..	1952-54	70067A	Mirror (Home and Export,	1952-54	53193A	Trafficators	1952-54	54054A/D
High note	1952-54	*69045A	except U.S.A.) ..	1952-54	062577	Warning light (flasher) ..	1952-54	*38069A
" " (Export) ..	1952-54	70070A	" (R.H., U.S.A.) ..	1952-54	*580733	Windshield wipers		
Horn relay	1952-53	*33139B	" (L.H., U.S.A.) ..	1952-54	*580736	Motor	1952-54	*75170A
" "	1954	*33116B	Starting motor (R.H.D.)	1952-54	26023A/E	" (special orders) ..	1952-54	*75186A
Junction box	1952-54	78264A	" " (L.H.D.)	1952-54	26033A/B	Wheelbox	1952-54	72635A
" "	1952-54	78266A	" " (automatic	1952-54	26095A	Crosshead and rack assy.	1952-54	741264
LAMPS			transmission)	1952-54	26095A	Outer casing		
Fog	1952	55031A	SWITCHES			Motor to wheelbox ..	1952-54	740780
" "	1953-54	*55092A	Boot lamp	1952-54	31375A	Wheelbox to wheelbox	1952-54	740781
Head, Home			Demister	1952-54	78286A/F	End tube	1952-54	740746
R.H.D., dip left ..	1952	51292A	Dipper	1952-54	31284A	Arm	1952-53	*741451
" "	1953-54	51493A	Heater	1952-54	78286A/F	"	1954	*741481
Head, Export Europe						Blade	1952-53	*737679
(not France)	1952-54	51295A				"	1954	*742079

BENTLEY 'Continental' Sports 1952-54

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1952-54	*36161A	LAMPS— <i>continued</i>			SWITCHES		
Coil, ignition	1952-54	45025A/F	Head, Export France ..	1952	51294A	Boot lamp	1952-54	31375A
Control box	1952-54	*37116B	"	1953-54	51464A	Demister	1952-54	78286A/F
Flasher unit	1954	*35003A	Head, Export U.S.A. ..	1952	51293A	Dipper	1952-54	31284A
Generator	1952-54	23002A/D	Number plate illumination	1952	53243A	Heater	1952-54	78286A/F
Horn			"	1953-54	53297A	Lighting	1952-54	31201B
Low note	1952-54	*69044A	Pass	1952	55031A	Panel	1952-54	31073A
" " (Export) ..	1952-54	70067A	"	1953-54	*55092A	" (alternative) ..	1952-54	78300A
High note	1952-54	*69045A	Reverse	1953-54	53307A	Petrol/Oil gauge ..	1952-54	*31074A
" " (Export) ..	1952-54	70070A	Side	1952-54	52088E/F	Solenoid, starting motor	1953-54	*76411D
Junction box	1952-54	78264A	Side and flasher	1952-54	52202A/B	Windshield wiper ..	1952-54	*31302A
" "	1952-54	78266A	Stop	1952	53113A	Trafficators	1952-54	54054A/D
LAMPS			" (flasher)	1953-54	53306A	Warning light (flasher) ..	1952-54	*38069A
Flasher indicator ..	1953-54	53294A	Stop tail	1952-54	53193A	Windshield wipers		
Head, Home			Mirror (Home and Export,	1952-54	062577	Motor	1952-54	*75181A
R.H.D., dip left ..	1952	51292A	except U.S.A.) ..	1952-54	*580733	Wheelbox	1952-54	72638A
" "	1953-54	51462A	" (R.H., U.S.A.) ..	1952-54	*580736	Crosshead and rack assy.	1952-54	*741265
Head, Export			" (L.H., U.S.A.) ..	1952-54	33117A	Outer casing		
R.H.D., dip left ..	1953-54	51462A	Relay, flasher	1952-54	*33139B	Motor to wheelbox ..	1952-54	740775
Head, Export Europe			Relay, horn	1952-54	26023A/E	Wheelbox to wheelbox	1952-54	740776
(not France)	1952	51295A	Starting motor (R.H.D.)	1952-54	26033A/B	End tube	1952-54	740746
ditto	1953-54	B51462A	" " (L.H.D.)	1952-54	26095A	Arm	1952-54	*741453
			" " (automatic	1952-54	26095A	Blade	1952-54	*738719
			transmission)	1952-54	26095A			

*See Supersession Chart

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



BENTLEY Model 'S' Saloon and 'Continental' Sports 1955-59

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1955-59	36216A/D	LAMPS—continued			LAMPS—continued		
Coil, ignition .. .	1955-59	45066A/E	Head, Export Europe			Stop tail and flasher		
Control box .. .	1955-57	37195A/F	(except France and			'S'	1955-59	53339E/K
" " .. . Later	1957	37195H/J	Switzerland) .. .	1955-56	51604A/F	" (France) .. .	1957-59	53495B
" " .. .	1958	37195L	ditto .. . Later	1956-57	51604H/K	" (U.S.A.) .. .	1957-59	53522D
" " .. . Later	1958-59	37277E	ditto .. .	1957-59	51604L/M	" (California) .. .	1957-59	53516D
Flasher unit .. .	1955-56	*35003A	Head, Export France ..	1955	51605A/E	Reflex reflector		
" " .. .	1957-59	35010A	" " " " .. .	1956	51605F/H	'Continental' .. .	1955-59	57093A
Generator .. .	1955-57	22481A/J	" " " " .. . Later	1956	51605J/L	" (France) .. .	1957-59	57097A
" " .. .	1958	22481M/T	" " " " .. .	1957	51605M/N	Relay, flasher .. .	1955-59	33169A/B
" " .. . Later	1958-59	22800B	" " " " .. . Later	1957-59	58023A/B	Relay, headlamp flasher		
Horn			Head, Export Switzerland	1955-59	51816D/H	(France) .. .	1957-59	*33116B
Low note .. .	1955-57	*69044A	Head, Export U.S.A. ..	1955	51607A/E	Relay, horn .. .	1955-59	*33116A/B
" " .. .	1958-59	69082D	" " " " .. .	1955-56	51607F/J	Starting motor		
" " (France) .. .	1958-59	*69080B	" " " " .. . Later	1957-59	51607K/L	Automatic transmission	1955-56	*26104A
" " (U.S.A.) .. .	1958-59	69071E	Head, Export Canada and			" " .. .	1957-59	26123A
High note .. .	1955-57	*69045A	South America .. .	1955	51606B/F	Synchromesh .. .	1957-59	26120A
" " .. .	1958-59	69077D	ditto .. . Later	1955	51606H/J	Suppressor ('S') .. .	1957-59	78128A
" " (France) .. .	1958-59	*69081B	ditto .. .	1956	51606K	SWITCHES		
" " (U.S.A.) .. .	1958-59	69070E	ditto .. .	1956	51606L/M	Air conditioner ('S') ..	1957-59	31708A
LAMPS			ditto .. . Later	1956	51606N/P	Boot lamp ('S') .. .	1955-56	*31522A
Flasher, front			ditto .. .	1959	51606Q/R	" " .. .	1957-59	31645A
'Continental', Park Ward			Inspection .. .	1955-59	61418B	" " ('Continental')	1955-59	*31522A
body			Number plate illumination			Dipper .. .	1955-59	*31372A
California (L.H.) ..	1957-59	52287D	and reverse .. .	1955-56	53243A/F	Heater, demister and air	1955-59	31455E/F
(R.H.) .. .	1957-59	52288D	ditto ('S') .. .	1957-59	53063A/B	valve .. .	1955-59	31456F/M
U.S.A. (L.H.) .. .	1957-59	52331B	ditto ('Continental')	1957-59	53243F	Panel and map light ..	1955-59	31531B
(R.H.) .. .	1957-59	52332B	ditto (France) .. .	1955-56	53481E	Petrol filler lid .. .	1955-59	31644A
Flasher, rear			ditto ('S', France)	1957-59	53604A/B	Petrol/Oil change-over		
'Continental' (L.H.)	1955-56	52287A	ditto ('Continental',			('S') .. .	1957-59	31644A
(R.H.) .. .	1955-56	52288A	France) .. .	1957-59	53481E	Petrol pump (test		
'Continental', Park Ward			Reverse			special) .. .	1957-59	31579A
body			'Continental' (Mulliner			Pillar light (France) ..	1957-59	31570D
Left hand .. .	1957-59	52329B	body) .. .	1957-59	53515A	Solenoid, damper .. .	1955-59	76503E/F
Right hand .. .	1957-59	52330B	Park Ward body .. .	1957-59	52308A	" starting motor	1955-59	*76411E
Fog/Flasher .. .	1955-56	55151B	France .. .	1957-59	52309B	Window lift ('S') .. .	1957-59	31650A
" " .. .	1957-59	55151F	Italy .. .	1957-59	53501A/B	Windshield wiper and		
" " (France) .. .	1955-56	55167A	Side .. .	1955-56	52228J	washer .. .	1955-59	31457D/E
" " .. .	1957-59	55167B	" ('Continental',			Windshield wipers		
Head, Home			special orders)	1955	52318A	Motor .. .	1955-57	*75249B
R.H.D., dip left ..	1955-56	51602A/F	" ('S') .. .	1957-59	52228K	" .. . Later	1957-59	75331A
" " .. . Later	1956-59	51602H/N	" ('Continental')	1957-59	52300A	Wheelbox .. .	1955-59	72661A/B
Head, Export			Stop tail ('Continental')	1955-59	53640A/D	Crosshead and rack assy.	1955-57	741268
R.H.D., dip left ..	1955-56	51602A/F				Cut to 58½" .. . Later	1957-59	744258
" " .. .	1956-59	51602H/N				Arm .. .	1955-59	741483
L.H.D., dip right ..	1955-56	51603A/F				Blade .. .	1955-59	738734
" " .. .	1956-57	51603H/M						
" " .. .	1957-59	51603N/Q						

BENTLEY Model 'S2' Saloon and 'Continental' Sports 1960

Actuator, heat contro ¹ ..	1960	78329B	LAMPS—continued			Starting motor	1960	26162A
Ammeter ('S2') .. .	1960	36260A	Fog/Flasher .. .	1960	†55151F	" " .. . Later	1960	26162B/E
" ('Continental')	1960	36216F	" (U.S.A.) .. .	1960	†55236A	SWITCHES		
Control box .. .	1960	37277E	Head, Home			Dipper .. .	1960	31800A
Flasher unit .. .	1960	35010A	R.H.D., dip left .. .	1960	58334A/D	Flasher .. .	1960	31915B
Generator .. .	1960	22800B	Head, Export Europe			Panel and map .. .	1960	31939A
Horn			(except France & Sweden)	1960	58541B	Petrol door .. .	1960	31363B
Low note ('S2') .. .	1960	69108A	Head, Export France ..	1960	58542B/E	Petrol/Oil change-over	1960	31938A/B
" " ('Continental')	1960	70067H	Head, Export Sweden ..	1960	58543B	Solenoid, starting motor	1960	*76411E
High note ('S2')	1960	69109A	Head, Export U.S.A. ..	1960	58553A/B	Windshield wiper and		
" " ('Continental')	1960	70070H	Head, Export Canada ..	1960	51606R	washer .. .	1960	31940A
LAMPS			Head, Export Middle East	1960	51603Q	Windshield wipers ('S2' and		
Flasher ('S2')			Number plate illumination	1960	53826A	'Continental', Mulliner		
Switzerland (L.H.) ..	1960	52476A	(Continental') .. .	1960	53603A/B	body) .. .		
" (R.H.) .. .	1960	52475A	Number plate illumination	1960	52503A	Motor .. .	1960	75379A
Flasher, front			and reverse ('S2') ..	1960	52228N	Wheelbox .. .	1960	72661A
'Continental')			Reverse ('Continental')	1960	53875A	Crosshead and rack assy.	1960	*744269
U.S.A. (L.H.) .. .	1960	52476A	Side .. .	1960	53339K	Windshield wipers		
(R.H.) .. .	1960	52475A	Stop tail ('Continental')	1960	53495B	('Continental')		
Flasher, front and rear			S2' .. .	1960	53516D	Motor .. .	1960	75396A
(except U.S.A.)			" (France) .. .	1960	53168B	Wheelbox .. .	1960	72739A
L.H. .. .	1960	52287A	" (U.S.A.) .. .	1960	33169B	Crosshead and rack assy.	1960	744258
R.H. .. .	1960	52288A	Reflex reflector			Arm .. .		
Flasher, rear			('Continental') .. .	1960	57118A	" 'S2'	1960	54711529
U.S.A. (L.H.) .. .	1960	52329D	Relay, change-over			'Continental' (L.H.D.)	1960	54711432
(R.H.) .. .	1960	52330D	(Switzerland) .. .	1960	33169B	" (R.H.D.)	1960	54711431
Fog ('S2'), Switzerland	1960	55239A	Relay, fog/flasher ..	1960	*33116B	Blade ('S2') .. .	1960	54711613
" ('Continental')			Relay, horn .. .	1960	33226A	" ('Continental')	1960	54711283
Except U.S.A. .. .	1960	55239A	Relay, rear window					
U.S.A. .. .	1960	55240A	demister .. .	1960	077026			
			Screen washer .. .	1950				

BERKELEY Sports Car (700 c.c. Enfield Engine) 1959-60

Distributor .. .	1959-60	40610A	Windshield wipers			Windshield wipers—cont'd		
LAMPS			Motor .. .	1959-60	75297E	Outer casing		
Flasher, front and rear	1959-60	52337A	Wheelbox (2 off) .. .	1959-60	72677D	Motor to wheelbox ..	1959-60	54711585
Stop tail and flasher	1959-60	53564B	Crosshead and rack assy.	1959-60	*743230	Wheelbox to wheelbox	1959-60	54711716
						End tube .. .	1959-60	740746
						Arm .. .	1959-60	745089
						Blade .. .	1959-60	737910

*See Supersession Chart † Alternative to separate lamps L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive



B.M.C. 7 ton Truck and Tanker — see AUSTIN

BOND 'Minicar' 1958-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Flasher unit	1958-60	35010A	SWITCHES—continued			Windshield wipers		
LAMPS			Flasher	1958-60	31476B	Motor	1958	75296D
Flasher, rear	1958-60	*52272B	Lighting	1958-60	31126E	"	1959-60	75368A
Head	1958	51344B	Knob	—	316144	"	1958	72693B
"	1959-60	58400A/D	Panel	1958-60	31434B	Wheelbox	1958	743221
Number plate illumination	1958-60	53093H	Knob	—	312953	Crosshead and rack assy.	1958	
Side/Flasher	1958	*52372A	Windshield wiper ..	1958-60	31434B	Outer casing		
Stop tail and reflex ..	1959-60	52240B/D	Knob	—	316393	Motor to wheelbox ..	1958	748802
Steering column control ..	1958-60	53377B	Warning lights			Wheelbox to wheelbox ..	1958	748803
SWITCHES			Flasher	1958	38144A	End tube	1958	740746
Dipper	1958-60	31284A	"	1959-60	38191A	Arm	1958-60	745082
			Ignition	1958	38100A	Blade	1958-60	738724
			"	1959-60	38190A			

BRISTOL 2 litre 1947-48

Ammeter	1947-48	*36041B	Starting motor	1947-48	25006A/D	SWITCHES—continued		
Battery	1947-48	SG11A	Steering column control ..	1947-48	*32750A/B	Windshield wiper	1947	*31128A
Coil, ignition	1947-48	*45012A/D	SWITCHES			" Later	1947-48	*31154D
Control box	1947-48	*37032A/B	Choke	1947-48	*31145A	Trafficators	1947-48	*54018D
Distributor	1947-48	40109A	Dipper	1947-48	31284A	Warning light	1947-48	318604
Generator	1947-48	*22446A/B	Heater or Fan	1947	*31156A	Windshield wipers		
Horn			" Later	1947-48	31154A	Motor	1947-48	*75068K
Low note	1947-48	*69021A	Ignition and lighting ..	1947-48	*34047B	Wheelbox	1947-48	72560A/K
High note	1947-48	*69022A	Panel	1947-48	78225A	Crosshead and rack assy.	1947-48	738499
LAMPS			Knob	—	*768507	Outer casing		
Head	1947-48	*50612B/D	Reverse lamp	1947-48	*31077D	Motor to wheelbox ..	1947-48	*739832
Number plate illumination	1947-48	53093E	Roof lamp	1947-48	*359350	Wheelbox to wheelbox ..	1947-48	*739971
Side	1947-48	52070A	Solenoid, starting motor	1947-48	76022B	3", offside wheelbox ..	1947-48	740031
Stop tail and reverse ..	1947-48	*53094E	Solenoid operating ..	1947-48	*31071A	Grommet, wheelbox ..	1947-48	734458
Mirror	1947-48	*580651	Stop lamp	1947-48	31281B	Arm, left hand	1947-48	*737452
			Spring	—	315543	" right hand	1947-48	*737451
			Trafficator	1947-48	031046	Blade	1947-48	727707

BRISTOL '400' 1949-50

Ammeter	1949-50	*36041B	LAMPS—continued			SWITCHES—continued		
Battery	1949	SG9A	Head, Export Europe			Trafficator	1949-50	031046
Coil, ignition	1950	GT9A	(not France)			Windshield wiper	1949-50	31201B
Control box	1949-50	*45012A/D	(R.H. and L.H.)	1949-50	*B50445K	Knob	—	*314691
Distributor	1949	37065E	Number plate illumination	1949-50	53093E	Terminal block	1949-50	300990
" Later	1949-50	40109B	Side	1949-50	52070A	Trafficators	1949-50	*54039A
Generator	1949-50	40109D	Stop tail and reverse ..	1949-50	*53094E	Warning light	1949-50	318604
"	1949-50	*22446A	Starting motor	1949-50	25006A/D	Windshield wipers		
" Later	1950	*22250E/F	Steering column control ..	1949-50	*32750B	Motor	1949-50	*75068K
Horn			SWITCHES			Wheelbox	1949-50	72560A/K
Low note	1949	*69021A	Dipper	1949-50	31284A	Crosshead and rack assy.		
High note	1950	*69011F	Ignition and lighting ..	1949-50	*344874	Cut to 47 1/2"	1949-50	738499
"	1949	*69022A	Panel	1949-50	78225A	Outer casing		
"	1950	*69012F	Knob	—	*768507	Motor to wheelbox ..	1949-50	*739832
LAMPS			Reverse lamp	1949-50	*31077D	Wheelbox to wheelbox ..	1949-50	*739971
Head, Home			Roof lamp	1949-50	*359350	3", offside wheelbox ..	1949-50	740031
R.H.D., dip left (L.H.)	1949-50	*50445K	Solenoid, starting motor	1949-50	76022B	Grommet, wheelbox ..	1949-50	734458
" non-dip (R.H.)	1949-50	*50446K	Solenoid operating ..	1949-50	*31071A	Arm, left hand	1949-50	*737452
Head, Export			Stop lamp	1949-50	31281B	" right hand	1949-50	*737451
R.H.D., dip left ..	1949-50	*50445K	Spring	—	315543	Blade	1949-50	727707
L.H.D., dip right ..	1949-50	*A50445K						

BRISTOL '401' 1949-53

Ammeter	1949-50	36070A	LAMPS—continued			Terminal block	1949-51	300990
Battery	1951-53	36120A	Head, Export France ..	1951-53	51092A	"	1952-53	304812
Coil, ignition	1949-53	GT9A	Number plate interior parts	1949-53	553780	Trafficators	1949-53	*54039A
Control box	1949-52	*45012A/D	Stop tail and reverse ..	1949-50	*53094E	Warning lights		
Distributor	1952-53	*45039A	"	1951-53	53201B	Ignition	1949-53	318604
" Later	1949-53	37065E	Petrol reserve valve ..	1949-53	78016A	Main beam	1949-53	318604
Generator	1949	40109B	Relay, foglamp	1949-53	33093A	Petrol reserve	1949-53	318604
"	1949-50	40109D	Relay, horn	1949-53	*33116B	Windshield wipers		
"	1951-52	40235A/B	Starting motor	1949-50	25006A/D	Motor	1949	75088L
"	1953	40345A	Steering column control ..	1951-53	25026A/E	"	1950	75084K
Generator	1949-52	*22250E/F	SWITCHES			"	1951	75084L
" Later	1952-53	22258D	Dipper	1949-53	31284A	"	1952-53	75143A
Horn			Foglamp	1949-53	31154A	Wheelbox	1949-53	72560A/K
Low note	1949-53	*69011F	Heater or fan	1949-53	78241A	Crosshead and rack assy.		
High note	1949-53	*69012F	Ignition and lighting ..	1949	*34051A	Cut to 47 1/2"	1949-51	738499
LAMPS			"	1950	*34050B	Crosshead and rack assy.	1952-53	738764
Fog and side	1949-53	50417F	"	1951	*34081A	Outer casing		
Head, Home			"	1952-53	*34071A	Motor to wheelbox ..	1949	*739899
R.H.D., dip left (L.H.)	1949-50	*50445K	Panel	1949-53	*78243A	"	1950-53	739858
" non-dip R.H.)	1949-50	*50446K	Petrol reserve	1949-53	31154A	Wheelbox to wheelbox ..	1949	*739947
R.H.D. dip left			Reverse lamp	1949-53	*31077D	"	1950-51	*739931
(L.H. and R.H.) ..	1951-52	50920A	Roof lamp	1949-53	31154A	3", offside wheelbox ..	1949-53	739937
ditto	1953	*51334A	Solenoid, starting motor	1949-50	76022B	Arm, left hand	1949-53	740031
Head, Export			Stop lamp	1951-53	*76411D	Arm, right hand	1950-53	*737571
R.H.D., dip left ..	1949-50	*50445K	Solenoid operating ..	1949-53	31153A	"	1949	*737603
"	1951-52	50920A	Stop lamp	1949-53	31281B	Blade	1950-53	*737570
"	1953	*51334A	Spring	—	315543	"	1949-51	*737572
L.H.D., dip right ..	1949-50	*A50445K	Trafficator	1949-53	031046	" Later	1952	*737683
Head, Export Europe			Windshield wiper	1949-53	31154A			
(not France) ..	1949-50	*B50445K						

*See Supersession Chart

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



BRISTOL '403' 1954

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1954	36120A	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
Battery	1954	GT9A	Head, Export France ..	1954	51591A	Trafficator	1954	031046
Coil, ignition ..	1954	*45012A/D	Number plate interior parts	1954	553780	Windshield wiper ..	1954	31154A
Control box .. .	1954	37065E	Side	1954	*52205A/B	Trafficators	1954	*54039A
Distributor .. .	1954	40345A	Stop tail and reverse ..	1954	53201B	Warning lights		
Generator	1954	22258D	Petrol reserve valve ..	1954	78016A	Ignition	1954	318604
Horn			Starting motor	1954	25026A/B	Main beam	1954	318604
Low note	1954	*69011F	Suppressor	1954	78120A	Petrol reserve .. .	1954	318604
High note	1954	*69012F	SWITCHES			Windshield wipers		
Horn relay	1954	*33116B	Dipper	1954	31284A	Motor	1954	75143A
LAMPS			Foglamp	1954	31154A	Wheelbox	1954	72560A/K
Fog	1954	55043E	Ignition and lighting ..	1954	*34071A	Crosshead and rack assy.	1954	738764
Head, Home			Panel	1954	*78243A	Outer casing		
R.H.D., dip left	1954	*51334A	Petrol reserve	1954	31154A	Motor to wheelbox ..	1954	739858
Head, Export			Reverse lamp	1954	*31077D	Wheelbox to wheelbox	1954	739937
R.H.D., dip left	1954	*51334A	Solenoid, starting motor	1954	*76411D	3", offside wheelbox ..	1954	740031
L.D.H., dip right	1954	*51337A	Solenoid operating .. .	1954	31153A	Arm, left hand .. .	1954	*737603
Head, Export Europe			Stop lamp	1954	31281B	Arm, left hand .. .	1954	*737602
(not France) .. .	1954	51339A	Spring	—	315543	" right hand .. .	1954	741680

BRISTOL '404' 1954-55

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1955	36196A	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
Battery	1954-55	GT9A	Side	1954-55	52139B	Stop lamp	1954-55	31082D
Bulb holder, panel light	1954-55	39007A	Stop tail and reverse ..	1954-55	53201B	Trafficator	1954-55	031046
Bulb	—	987	Petrol reserve valve ..	1954-55	78028A	Windshield wiper ..	1954-55	*31302A/D
Coil, ignition ..	1954-55	*45012A/D	Starting motor	1954-55	25026B	Terminal block .. .	1954-55	37101A/B
Control box .. .	1954	37065E	Steering column control			Trafficators	1954-55	*54039A
"	1955	*37138D	Steering bracket .. .	1954-55	323726	Warning lights		
Distributor .. .	1954-55	40345A	Contact	1954-55	323738	Auxiliary	1954	*38106A
" (special orders)	1954-55	40417A	Bracket and contact plate	1954-55	*324338	Flasher or trafficator	1955	*38106A
Fuse box	1955	033239	Suppressor	1954-55	78120A	Ignition	1954	38104A
Generator	1954-55	22258D	SWITCHES			Main beam	1954	*38105A
Horn			Dipper	1954-55	31284A	Petrol reserve .. .	1954	38103A
Low note	1954-55	*69011F/J	Fog and driving lamp			Windshield wipers		
High note	1954-55	*69012F/J	(when fitted) .. .	1955	31113A	Motor	1954-55	*75232A
Horn relay	1954-55	*33116B	Ignition and lighting ..	1955	31270A	Wheelbox	1954-55	72635B
LAMPS			Knob	—	316285	Crosshead and rack assy.		
Driving	1955	55132B	Panel	1954	*78243A	Cut to 37 $\frac{1}{2}$ " .. .	1954-55	741263
Fog (special orders)	1954	*55055A	Petrol reserve	1955	*78312A	Outer casing		
Head, Home			Knob	—	317463	Motor to wheelbox ..	1954-55	745054
R.H.D., dip left	1954-55	51344A	Solenoid, starting motor	1954-55	*76411D/E	Wheelbox to wheelbox	1954-55	740963
Number plate illumination	1954-55	53093E	Solenoid operating .. .	1954	*31300A	End tube	1954-55	740746
Pass (special orders)	1954	55081A	"	1955	*31282A	Ferrule, casing retaining	1954-55	740715
						Arm	1954-55	745072
						Blade	1954-55	*738735

BRISTOL 'X404' (Arnolt Body) 1954

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1954	GT9A	LAMPS— <i>continued</i>			Warning lights		
Bulb holder, panel light	1954	39007A	Side (flasher)	1954	*52162D	Flasher	1954	*38070A
Bulb	—	987	Stop tail (flasher) ..	1954	53178D	Ignition	1954	38071A
Coil, ignition ..	1954	*45012A/D	Starting motor	1954	25026B	Main beam	1954	38059A
Control box .. .	1954	37065E	Steering column control	1954	*32750A	Petrol	1954	38111A
Distributor .. .	1954	40417A	Suppressor	1954	78120A	Windshield wipers		
Flasher unit .. .	1954	*35003A	SWITCHES			Motor	1954	75143A
Flasher relay .. .	1954	33117A	Dipper	1954	31284A	Wheelbox	1954	72560A/K
Generator	1954	22258D	Flasher	1954	031046	Crosshead and rack assy.	1954	736177
Horn			Ignition and lighting ..	1954	*34071A	Outer casing		
Low note	1954	*69011F	Panel	1954	*78310A	Motor to wheelbox ..	1954	739870
High note	1954	*69012F	Petrol reserve	1954	*31261A	Wheelbox to wheelbox	1954	739937
Horn relay	1954	*33116B	Knob	—	317463	3", offside wheelbox ..	1954	740031
LAMPS			Reverse lamp	1954	*31077D	Arm, left hand .. .	1954	*737557
Head, Export U.S.A.	1954	51343A	Solenoid, starting motor	1954	*76411D	" right hand .. .	1954	*737453
Light unit	—	554866	Solenoid operating .. .	1954	*31300A	Blade	1954	738724
Number plate illumination	1954	53097E	Stop lamp	1954	31281B			
			Windshield wiper .. .	1954	*31468B			

BRISTOL '405' 1955-58

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1955-58	36196A	Generator	1955-56	22258D	LAMPS— <i>continued</i>		
Battery	1955-58	GT9A	" Later	1956-58	22258E	Number plate illumination	1955-58	53097D/E
Bulb holder, panel light	1955-58	39007A	Horn			Side/Flasher	1955	*52236A
Bulb	—	987	Low note	1955	*69011J	"	1956-58	*52276A
Coil, ignition ..	1955-56	*45012B	High note	1955-58	69046A/F	Stop tail, flasher and reflex	1955-58	53377A/B
"	1957-58	*45054H	"	1955	*69012J	Petrol reserve valve ..	1955-58	78029A
Control box .. .	1955	*37138D	LAMPS	1956-58	69047A/F	Relay, flasher .. .	1955-58	33117B
"	1956-58	*37187A/K	Driving	1955-58	55132B	Relay, horn	1955-58	*33116B
Distributor .. .	1955	40345A	"	1958	55128B	Starting motor .. .	1955-58	25026B/D
"	1956-58	40489A/B	Head, Export France			Steering column control		
Flasher unit .. .	1955	*35003A	Head, Home			Stop bracket	1955-58	323736
"	1956-58	35010A	R.H.D., dip left	1955	51546A	Contact	1955-58	323738
Fuse box	1955-58	033239	" Later	1955	51546B	Bracket and contact plate	1955-58	*324338
			"	1956-58	51546D/E	Suppressor	1955-58	78120A

*See Supersession Chart

L.H.D. . . . Left hand drive

R.H.D. . . . Right hand drive

continued



BRISTOL '405' 1955-58—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			Terminal block	1955-58	37101B	Windshield wipers—cont'd		
Boot lamp	1955-58	31175A	Warning lights			Outer casing	1955	745054
Dipper	1955-58	31284A	Direction indicator ..	1955-58	*38106A	Motor to wheelbox ..	1955-58	744099
Flasher	1955-58	031046	Ignition	1955-58	38104A	" " " " ..	1955	740963
Fog and driving lamp ..	1955-58	31113A/D	Main beam	1955-58	*38105A	Wheelbox to wheelbox ..	1955-58	745179
Ignition and lighting ..	1955-58	31270A/B	Petrol reserve	1955-58	38103A	End tube	1955-58	740746
Knob	—	316285	Windshield wipers			Ferrule, casing retaining	1955-58	740715
Panel	1955-58	*78312A	Motor	1955-56	*75280A	Arm	1955-58	741839
Petrol reserve	1955-58	*31261D	" " " " ..	1957-58	*75232A	Blade	1955-58	*738735
Knob	—	317463	Wheelbox	1955	72635B	Overdrive equipment		
Solenoid, starting motor	1955-58	*76411E	Crosshead and rack assy.	1955-58	72683A	Switches		
Solenoid operating ..	1955-58	*31282A	Cut to 37 $\frac{1}{2}$ "	1955-58	741263	Control	1955-58	31500A
Stop lamp	1955-58	31082D/E				Interrupter	1955-58	*31077E
Windshield wiper ..	1955-58	*31302D						

BRISTOL '406' 1958-60

Ammeter	1958-60	36242A	Relay, horn	1958-60	*33116B	Windshield wipers		
Battery	1958-60	GT9A	Starting motor	1958-60	25026E	Motor	1958-60	75310A
Coil, ignition	1958-60	*45054H/K	Steering column control			Wheelbox	1958-60	72686B
Control box	1958-60	*37187A/L	Stop bracket	1958-60	323736	Crosshead and rack assy.	1958-60	744256
Distributor	1958-59	*40592A	Contact	1958-60	323738	Outer casing		
" " " " ..	Later	40629A	Bracket and contact plate	1958-60	*324338	Motor to wheelbox ..	1958-60	54710550
Flasher unit	1958-60	35010A	SWITCHES			Wheelbox to wheelbox ..	1958-60	54710551
Fuse box	1958-60	033239	Boot lamp	1958-60	31175F	End tube	1958-60	740746
Generator	1958-60	22258E/F	Courtesy	1958-60	*31302D	Arm	1958-59	744133
Horn			Dipper	1958-60	31284A	" " " " ..	1960	54711538
Low note	1958-60	69046F	Door pillar	1958-60	31175F	Blade	1958-60	*737907
High note	1958-60	69047F	Flasher	1958-60	031046	" " " " ..	1960	54711283
LAMPS			Ignition and lighting ..	1958-60	31270B	Overdrive equipment		
Boot	1958-60	53343A	Knob	—	316285	Solenoid, transmission	1958	*76505B
Flasher, front and rear ..	1958-60	*52272D	Panel	1958-60	*78312A	gear	1959-60	76515A
Flasher, repeater ..	1958-60	52326B	Reverse lamp	1958-60	*31077E	ditto		
Front grille illumination ..	1958-60	39006A	Solenoid, starting motor	1958-60	*76411E	Switches		
Number plate illumination	1958-60	53518A	Solenoid operating ..	1958-60	*31282A	Interrupter	1958-60	*31077E
Reverse	1958-60	*52246B	Stop lamp	1958-60	31082E/J	Manual control	1958-60	31500B
Stop tail and reflex ..	1958-60	53377B	Windshield wiper ..	1958-60	31847A			
Petrol reserve valve ..	1958-60	78037A	Terminal block	1958-60	37101B			
Relay, foglamp	1958-60	33093A						

BRUSH ELECTRIC Battery Vehicle 1951-55

Fuse box	1951-55	37104A	LAMPS			Windshield wipers		
Horn	1951-55	*069213	Roof lamp	1951-55	*56017A	Motor	1951-55	*75126A
Horn push	1951-55	76205A	Mirror	1951	62515A	Arm	1951-55	*735049
			Reflex reflector	1952-55	*062562	Blade	1951-55	727802

CITROEN 15 h.p. 1946-55

Ammeter	1946-54	36033D	LAMPS, Head, Home—			Trafficators	1946-52	*54017B
Coil, ignition	1946-54	*45020A/B	<i>continued</i>			" " " " ..	1953-55	54044A/D
" " " " ..	1955	*45012B	R.H.D., dip left			Warning lights		
Control arm	1946	*310518	(L.H. and R.H.) ..	1951-52	*50718F	Flasher	1951-54	*38069A
" " " " ..	Later	31110A	ditto	1953-55	51473A	Main beam	1949-54	*38069A
Control box	1947-50	31129A	Head, Export			Windshield wipers		
" " " " ..	1946-48	*37031A/B	R.H.D., dip left ..	1950-52	*50718F	Motor	1946-48	75066A
" " " " ..	1949-50	37057E	L.H.D., dip right ..	1950-52	*50775E	" " " " ..	1949-50	*75055K
" " " " ..	1951-52	37065E	Number plate illumination			" " " " ..	1951	*75055L
" " " " ..	Later	*37138A/D	and boot	1954-55	53308A	" " " " ..	1952-55	75152A
Distributor	1946-49	40100E	Side	1949-50	52030A	" " " " ..	1946-48	735691
" " " " ..	Later	40219A/B	(U.S.A.)	1953-55	*52162B/D	Clutch housing		
" " " " ..	1950	*40219D	Stop tail and number plate	1946	*53028B	Wheelbox		
" " " " ..	Later	40219E/F	" " " " ..	1947-52	*53063B	With switch	1949-50	72608A/D
" " " " ..	1951-52	40236B/D	Stop tail (Export) ..	1949-50	*53151B/D	" " " " ..	1951-55	72567A/H
" " " " ..	Later	*40332A/E	Tail and flasher (U.S.A.)	1953-54	53200A	" " " " ..	1949-50	72607A/B
Flasher unit	1953-54	*35003A	Reflex reflector (U.S.A.)	1953-54	*57035D	Less switch	1951-55	72568A/E
Flasher relay	1953-54	33117A	Starting motor	1946	*255273	" " " " ..	1951-55	72568A/E
Fuse box	1952-55	033239	" " " " ..	1946-48	25502A	Bracket, shaft, short ..	1946-48	737243
Generator	1946	*228199	" " " " ..	1949-55	25531A/D	Bracket coupling ..	1946-48	729036/S
" " " " ..	1947-50	22416B	SWITCHES			Link, primary	1946-48	734756
" " " " ..	1951-52	*22250E/F	Ignition	1951-55	31287A	Link, secondary	1946-48	737281
" " " " ..	Later	22258D	Ignition and lighting ..	1946-50	*34025B	Crosshead and rack assy.		
Horn			Solenoid, starting motor	1946-48	76022B	Cut to 34 $\frac{1}{2}$ "	1949-52	736177
Low note	1946-48	*69021A	Solenoid operating ..	1949-55	*76411D/E	Crosshead and rack assy.	1953-55	738764
" " " " ..	1949-50	*69011F	" " " " ..	1946-54	317063	Outer casing		
" " " " ..	1955	69046A	Starting motor	1955	31363A	Motor to wheelbox ..	1949-55	739870
High note	1946-48	*69022A	Stop lamp	1946-53	*764150	Wheelbox to wheelbox ..	1949-52	*739943
" " " " ..	1949-50	*69012F	Spring	1955	31281B	" " " " ..	1953-55	739937
" " " " ..	1955	69047A	Stop lamp	1946-53	*31571A	3", offside wheelbox ..	1949-55	740031
LAMPS			Trafficator	1954-55	31440A	Grommet	1946-52	734874
Head, Home			" " " " ..	1951	31190A	Housing or wheelbox	1953-55	733695
R.H.D., dip left (L.H.)	1946	*50253B	" " " " ..	1951-52	031046	Wheelbox	1946-54	*735076
" non-dip (R.H.) ..	1946	*50254B	Knob	1953-55	31250F	Arm	1955	*735098
" dip left (L.H.) ..	1947-50	*50716D		1953-55	311156	Blade	1946-55	727707
" non-dip (R.H.) ..	1947-50	*50717D						

* See Supersession Chart L.H.D. .. Left hand drive † No longer available—refer to Wiper Conversion Set Section. L.H. .. Left hand R.H. .. Right hand

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



CITROEN 23 h.p. 1946-55

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1946-53	36033D	LAMPS—continued			Trafficators	1949-52	*54017B
Coil, ignition	1949-53	*45020A/B	Side	1949	52164A	" Later	1952-55	54044A/D
"	1954-55	*45012B	"	1950-52	52134A/B	Warning lights		
Control arm	1949-50	31129A	"	1953-55	52030A	Flasher	1951-53	*38069A
Control box	1946-55	37057E	" (U.S.A.)	1949-50	52134A/B	Main beam	1949-53	*38069A
Distributor	1946-55	40173A/E	"	1953	*52162B/D	Windshield wipers		
Flasher unit	1953	*35003A	Stop tail and number plate	1949-50	*53029A	Motor	1949-50	*75055K
Flasher relay	1953	33117A	"	1951-52	*53063B	"	1951	*75055L
Generator	1946-55	22430E	Tail and flasher indicator			" Later	1951-55	75152A
Horn			(U.S.A.)	1953	53200A	Wheelbox		
Low note	1949-51	*69019A	Reflex reflector (U.S.A.)	1953	*57035D	With switch	1949-50	72608A/D
"	1955	69046A	Starting motor	1949-55	25513A/D	"	1951-55	72567A/H
High note	1949-51	*69020A	SWITCHES			Less switch	1949-50	72607A/B
"	1955	69047A	Ignition	1951-55	31287A	"	1951-55	72568A/E
LAMPS			Ignition and lighting	1949-50	*34025B	Crosshead and rack assy.		
Head, Home			Solenoid, starting motor	1949-55	*76411D/E	Cut to 34 1/8"	1949-55	736177
R.H.D., dip left (L.H.)	1949-50	*50861A	Solenoid operating	1949-54	*317063	Outer casing		
" non-dip (R.H.)	1949-50	*50862A	Stop lamp	1955	31363A	Motor to wheelbox	1949-55	739870
" dip left			Spring	1949-53	31281B	Wheelbox to wheelbox	1949-52	*739943
(L.H. and R.H.)	1951-52	*50718F	Trafficator	1951	*31571A	"	1953-55	*739979
"	1953-55	51473A	" Later	1951-52	31190	3", offside wheelbox	1949-55	740031
Head, Export			Lever	1953-55	311156	Grommet, wheelbox	1949-53	733874
R.H.D., dip left	1951-52	*50718F				"	1954-55	733695
L.H.D., dip right	1951-52	*50775E				Arm	1949-54	*735076
Number plate illumination						"	1955	*735098
and boot	1955	53308A				Blade	1949-55	727707

CITROEN 2CV 1954-60

Ammeter	1954-60	*36113A	SWITCHES			Warning light, petrol		
Coil, ignition	1954-60	45057A/B	Ignition	1954-60	31287A/B	Van	1954-60	38094A
Horn	1957-60	*70146A/B	Trafficator	1954-60	31250A/H	Windshield wipers		
LAMPS			Lever	—	311156	Arm	1956-60	*735096
Number plate illumination			Trafficators	1954-60	54053A	Blade	1956-60	727802
(Van)	1954-60	A53101						
		E/H						

CITROEN DS19 1956-60: ID19 1959-60: 'Safari' 1960

Ammeter	1957-59	36233B/D	LAMPS—continued			Warning lights		
Bulb holder, panel light	1960	863511	Stop	1958-60	53686A/E	High pressure	1960	38158A
Bulb	—	987	" ("Safari" only)	1960	53600A/E	Ignition	1960	38185A
Coil, ignition (ID19 only)	1959-60	*45053K	Tail	1956-60	*53533A/B	Main beam	1960	38210A
Control box	1956	37183H	" ("Safari" only)	1960	*53902A/B	Oil	1960	38209A
"	1957-60	*37187K/L	Reflex reflector	1956-60	57111A	Windshield wipers		
Fuse box	1956-60	033239	Starting motor	1956-60	25553B	Motor	1958-60	75330A
Generator	1956	*22483B	SWITCHES			Wheelbox	1958-60	72704A
"	1957-60	22258E/F	Dimmer and demister	1956-59	78311A	Crosshead and rack assy.	1958-60	745955
Horn			"	1960	78346A	Outer casing		
Low note	1956-60	69046B/F	Knob, dimmer	1956-60	768972	Motor to wheelbox		
High note	1956-60	69047B/F	"	1956-60	768973	Left hand	1958-60	745678
LAMPS			"	1956-60	768974	Right hand	1958-60	745677
Flasher, rear	1956-60	*52272A/D	demister	1956-60	768975	End tube	1958-60	740746
Head, Home			Ignition	1956-60	31287B	Ferrule, casing retaining	1958-60	740715
R.H.D., dip left	1956-60	51988A/D	Interior light	1956-60	31126B	Grommet, wheelbox	1958-60	740811
Number plate illumination	1956-59	53101H	Knob	1956-60	316144	Arm, left hand	1958-60	745968
"	1960	53518A	Panel	1956-59	*78320A	Arm, right hand	1958-60	745967
Reverse	1960	53378A	Knob	1956-59	768972	Blade	1958-60	737897
			Solenoid, starting motor	1956-60	*76411E			
			Solenoid operating (ID19	1959-60	31363A			
			only)					

CLECCO ELECTRICS Battery Vehicle 1952-54

Fuse box	1952-54	*37137B	LAMPS—continued			Windshield wipers		
Horn	1952-54	*069213	Tail and number plate	1952-54	*53007B	Motor	1952-54	*75120A
Horn push	1952-54	76205A	SWITCHES			Arm	1952-54	*735049
LAMPS			Lighting	1952-54	34065A	Blade	1952-54	727802
Side	1952-54	52102A						

COMMER 8 cwt. Van 1946-52: Estate Car 1949

Battery	1946-47	SG9A	Control box	1946	*37003A	Generator	1946-47	22449A
"	1948-49	GT9A	"	1947	*37031A	"	1948	*22411A
"	1950-52	GT7A	"	1948	37057E	"	1949	*22250A
Coil, ignition	1946-52	*45020A/B	" Later	1949-51	37065E	"	1950-51	*22250E/F
			Distributor	1951-52	*37138B	" Later	1951-52	22258D
			"	1946	*40042B/D	Horn	1946-48	069344
			"	1947-52	*40050A/J	" Later	1948-52	*69011F

* See Supersession Chart L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive continued



COMMER 8 cwt. Van 1946-52: Estate Car 1949—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.	
LAMPS			LAMPS—continued			SWITCHES—continued			
Head, Home			Stop tail and number plate	1946	*524753	Windshield wiper	1948-52	31192A	
R.H.D., L.H. and R.H.	1946	50129A	" " " "	1947-48	*53060A	Knob	—	*315077	
" dip left (L.H.)	1947	50511A	Stop tail	1949	53131B	Trafficators	1946-48	*54009B	
" non-dip (R.H.)	1947	50512A	" " " " Later	1949	*53151B/D	" " " " Later	1948-50	*54018D	
" dip left (L.H.)	1948-49	*50792B	" " " " Later	1950-51	53178B/D	" " " " Later	1950-52	*54048A	
" non-dip (R.H.)	1948-49	*50578E	Mirror	1946	620511	Warning light (main beam)	1950-52	38052B	
" dip left (L.H.)	1950	50572F	Rear reflector (U.S.A.)	1950-52	65424A	Windshield wipers			
" non-dip (R.H.)	1950	*50573F	Starting motor	1946-47	*250603	Motor	1946-47	75066A	
" dip left (L.H.)	Later	1950-51	" " " " Later	1948	25016A	" " " " Later	1948-50	*75053J	
" non-dip (R.H.)	Later	1950-51	" " " " Later	1949	*25022A	" " " " Later	1951	*75053K	
R.H.D., dip left	1951	*50954A	" " " " Later	1949-52	25022A/L	" " " " Later	1952	75150A	
(R.H. and L.H.)	Later	50941A	Steering column control			Clutch housing	1946-47	737357	
" " " "	1952		Home	1946-47	323801	Wheelbox	1948-52	*72548A/K	
" " " "			Export	1946-47	323821	Bracket, with shaft and coupling	1946-47	735395	
Head, Export			Steering column control	1947-48	32724B/D	Bracket, shaft, short	1946-47	737243	
R.H.D., L.H. and R.H.	1947-48	50519A	" " " " Later	1949-50	32786E	Bracket coupling	1946-47	729036/S	
" dip left	1949	*50792B	" " " " Later	1951	32862B/F	Link	1946-47	733813	
(L.H. and R.H.)	1950-51	*50445K	" " " " Later	1951-52	32856B/F	Crosshead and rack assy.	1948	736177	
" " " " Later	1951	*50954A	SWITCHES			ditto Cut to 42 1/2"	Later	1948-52	736307
" " " " Later	1952	50941A	Dipper	1951-52	31284A	Outer casing			
L.H.D., dip right	1950-51	*A50445K	Heater	1950-52	*78245A	Motor to wheelbox	1948	739868	
(L.H. and R.H.)	1951-52	*50804D	Knob	1946-47	*768548	ditto	1948-52	*739832	
" " " " Later			Ignition and lighting	1946-47	*344924	Wheelbox to wheelbox	1948	739937	
Head, Export Europe	1950-51	*B50445K	" " " "	1948	*34023B	ditto	1948-51	*739957	
(not France)	1951-52	*50963A	" " " "	1949-52	*34050A	ditto	1952	*739982	
ditto	Later		Panel	1948	*31108A	Grommet, housing or wheelbox	1946-48	733874	
Head, Export France	1948-49	50664E	Knob	1949-52	*315059	ditto	1948-52	735349	
" " " " Later	1950-51	*50790E	Panel	1948	*31108A	Grommet, scuttle	1946-47	729378	
" " " " Later	1951-52	*50962A	Knob	1949-51	*315077	Arm	1946-47	*735098	
Head, Export U.S.A.	1949-50	50806A	Starting motor	1946-48	*76404B	" R.H.D.	1948	*737425	
" " " " Later	1951-52	50811A	" " " " Later	1949-52	*764401	" L.H.D.	Later	1948-52	*737524
Number plate illumination	1949-52	53093E	Coupling	1946-52	764428	Blade	1946-47	727707	
Side	1946	52036A	Stop lamp	1946-47	*31281B	" " " " Later	1948	737424	
" " " " Later	1947	*52066A	Spring	1948	*315723	" " " " Later	1948-50	*737433	
" " " " Later	1950-52	52139B	" " " " Later	1949-52	*315714	" " " " Later	1951-52	738724	
" (U.S.A.)	1949	52139B							

COMMER 'Express' Delivery Van and Pick-up Truck 1953-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter (special orders)			LAMPS—continued			SWITCHES—continued		
Battery	1955-57	36197A	Head, Export France	1953	*50962A	Solenoid operating	1955-60	31447A
" " " "	1953-58	GT7A	" " " " Later	1953-55	*51341A	Starting motor	1953-54	76423A
" " " "	1959-60	BT7A	" " " " Later	1956-59	51739B	Coupling	1953-60	764428
Bulb holder, speedometer	1955-57	39007A	" " " " Later	1959-60	58271A	Stop lamp	1953-60	31281B
Coil, ignition	1953-56	*45020A/B	Head, Export Sweden	1959-60	58610A	Spring	1953-56	*315714
" " " "	1957-59	*45053H/J	Head, Export U.S.A.	1953	50811A	" " " "	1957-60	315774
" " " "	1960	*45054M	" " " " Later	1953-55	51343A	Windshield wiper	1953-60	*31261A/D
Control box	1953-55	*37138B/D	" " " " Later	1956-60	51741B	Knob	1953-58	317456
" " " " Later	1956-59	37182A/H	" " " " Later	1960	58493A	Trafficators	1959-60	54330754
" " " " Later	1959-60	37182J	Number plate illumination	1953-60	53093E/H	" " " " Later	1953-54	*54048A
" " " " Later	1960	37182K	Roof	1953-54	*56051A	Warning lights		
Distributor			Side	1953-54	52139E	Flasher	1953-54	*38092A
S.V. Engine	1953-56	*40050A/J	Side and flasher (U.S.A.)	1953-54	*52162F	" " " " Later	1955-60	38119A
O.H.V. Engine — from	1956	*40428A/B	" " " " (all models)	1953-56	*52240B	Main beam	1953-54	*38069A
Chassis No. F460001	1956-58	40492A	" " " " Later	1957	*52372A/B	" " " " Later	1955-60	38118A
O.H.V. Engine	1959-60	40492B	Stop tail	1958-60	52403A/D	Windshield wipers		
Distributor	1960	40492D/E	Stop tail and flasher	1953-54	53178B/D	Motor	1953-54	75150A
Flasher unit	1953-55	*35003A	U.S.A.	1953-54	53178E/J	" " " " Later	1955-56	*75200B
" " " " Later	1956	*35004A	All models	1955-60	53178E/J	" " " " Later	1957-58	75296A/B
" " " " Later	1957-60	35011A	Rear reflector	1953-54	65424A	" " " " Later	1959-60	75296E
Flasher relay	1953-60	33117A/D	Reflex reflector	1955-56	*57035A	Wheelbox	1953-54	*72548A/K
Fuse box	1953-60	033239	" " " " Later	1957-59	57095A	" " " " Later	1955-60	72663D/JF
Generator	1953-56	22258D	Starting motor	1960	57122A	Crosshead and rack assy.		
" " " " Later	1957-60	22258E/F	" " " " Later	1953-60	25022A/L	Cut to 42 1/2"	1953-54	736307
Horn			" " " " Later	1960	25022M	" " 42 1/2"	1955	*743231
Low note	1953-54	69011F	Steering column control	1953	25022N/Q	" " 42 1/2"	1956-60	743235
" " " " Later	1955-60	69046A/F	ditto	1953-60	32868J/L	Outer casing		
High note (optional)	1953-54	*69012F	" " " " Later		32888A/B	Motor to wheelbox	1953-54	*739832
" " " " Later	1955-60	69047A/F	SWITCHES			" " " " Later	1955	745029
Horn relay (when twins fitted)	1955-60	*33116B	Dipper	1953-60	31284A	" " " " Later	1956-60	745138
LAMPS			Heater	1953-54	*78245A	Wheelbox to wheelbox	1953-54	*739982
Head, Home			Knob	—	*768548	" " " " Later	1955	740814
R.H.D., dip left	1953	50941A	Ignition	1953-60	31187D	End tube	1956-60	745139
" " " " Later	1953-55	51336A	Knob, choke control	1955	326624	" " " " Later	1953-54	740031
" " " " Later	1956-60	51736B	Lighting	1953-55	*31200A	Ferrule, casing retaining	1955-60	740716
Head, Export			" " " " Later	1956	31126B	Grommet, wheelbox	1953	735349
L.H.D., dip right	1953	50973A	" " " " Later	1957-60	31200E	Arm, left hand drive	1953-54	*737576
" " " " Later	1953-54	*51337A	" " " " Later	1957-60	31200E	" " right hand drive	1955-60	745074
" " " " Later	1955-56	*51737B	Knob	1953-58	316128	" " " " Later	1953-54	*737524
Head, Export Europe			" " " " Later	1959-60	54330753	" " " " Later	1955-60	745073
(not France)	1953	50967A	Solenoid, starting motor	1955-60	*76411E	Blade	1953-60	738724
ditto	1953-55	51339A						
ditto	1956-59	51738B/D						
(except France & Sweden)								
Later	1959-60	58270A						

* See Supersession Chart

L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



COMMER 'Cob' Light Van 1957-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1957-58	GLTW7A	LAMPS—continued			SWITCHES—continued		
" (cold climates) ..	1959-60	BT7A	Head, Export France ..	1957	51739B	Stop lamp	1957	31281B
Coil, ignition	1957-60	*45053	" " " Later	1958-59	51990D/E	Spring	—	315774
		H/M	Head, Export Sweden ..	1959-60	58366A	Stop lamp	1958-60	31082E/H
Control box	1957-59	37182H	Head, Export U.S.A. ..	1957	51741B	Cap	—	316072
" " " Later	1959	37182J	" " " " ..	1958-60	51991D/E	Windshield wiper ..	1957	31192D
" " " " ..	1959-60	37182K	Number plate illumination	1957-60	53278B	Knob	—	317453
Distributor	1957	*40050J	Side and flasher	1957	52240B	Warning light (main beam)		
" (high compression)	1958-59	*40562A	" " " " Later	1957-58	*52372A/B	(U.S.A.)	1959-60	38118A
" " " " ..	1960	40530A/D	Stop tail and flasher ..	1959-60	52403B	Windshield wipers		
" " " " Later	1960	40530E	Stop tail, flasher and reflex	1957	53178F	Motor	1957-58	75296A/B
" (low compression)	1958	40492A	ditto (N. America) ..	1958-60	53640A/D	" " " " ..	1959-60	75296E
" " " " ..	1959-60	40492B	ditto " Later	1958-59	53754A	" " " " ..	1957-58	72663F
" " " " Later	1960	40492D/E	ditto	1960	53752F	Wheelbox	1959-60	72673A
Flasher unit	1957-60	35011A	Reflex reflector	1957	57095A/D	Crosshead and rack assy.		
Fuse box	1957	033239	Relay, horn (when twins	1957-60	*33116B	Cut to 43 1/2"	1957-60	743235
" " " " ..	1958-60	033277	fitted)	1957	25022A/L	Outer casing	—	—
Generator	1957-60	22258E/F	Starting motor	1957-60	25022M	Motor to wheelbox ..	1957	745138
Horn			" " " " Later	1960	25022N/Q	" " " " ..	1958-60	743517
Low note	1957-60	69046E/F	Steering column control ..	1957	32940D	Wheelbox to wheelbox	1957	745139
High note (optional) ..	1957-60	69047E/F	" " " " ..	1958-60	33508B	" " " " ..	1958-60	743706
LAMPS			SWITCHES			End tube	1957-60	740746
Head, home			Dipper	1957-60	31284A/D	Arm, left hand drive ..	1957	745074
R.H.D., dip left ..	1957	51736B/D	Flasher	1957	31533A	" " " " ..	1958-59	741845
" " " " ..	1958-60	51971E/H	" " " " ..	1958-60	31737A/B	" " " " ..	1960	54711558
Head, Export Europe			" (N. America) ..	1958-60	31738A	" " right hand drive ..	1957	745073
(not France)	1957	51738B	Housing	—	348539	" " " " ..	1958-59	741844
ditto	1958-59	51989D/F	Ignition and lighting ..	1957-60	31270B	" " " " ..	1960	54711557
(except France & Sweden)			Knob	—	316285	Blade	1957	738724
Later	1959-60	58365A	Starting motor	1957-60	76423A	" " " " ..	1958-60	737897
			Coupling	1957	764428	" " " " ..		
			" " " " ..	1958-60	764466			

COMMER 'Cob' Series II 1960

Battery	1960	BT7A	LAMPS—continued			SWITCHES—continued		
" (cold climates) ..	1960	BT9A	Head, Export Europe			Starting motor	1960	76423A
Coil, ignition	1960	45102E	(except France & Sweden)	1960	58359A	Coupling	—	764466
Control box	1960	37290D/E	Head, Export France ..	1960	58360A	Stop lamp	1960	31802D
Distributor			Head, Export Sweden ..	1960	58657A/B	Warning light (main beam)		
High compression ..	1960	40681A	Head, Export U.S.A. ..	1960	51779A/H	(U.S.A.)	1960	38118A
" " " " Later	1960	40641B	Number plate illumination	1960	53278B	Windshield wipers		
Low compression ..	1960	40682A	Side and flasher	1960	52403D	Motor, left hand drive	1960	75389A
" " " " Later	1960	40682B	Stop tail, flasher and reflex	1960	*53648F	" " right hand drive	1960	75388A
Flasher unit	1960	35011A	ditto (U.S.A.)	1960	53753F	Wheelbox	1960	72734A
Fuse box	1960	033287	Starting motor	1960	25022Q	Crosshead and rack assy.		
Generator	1960	22700D	Steering column control ..	1960	33508B	Cut to 44 1/2"	1960	744256
" (temporary			SWITCHES			Outer casing	—	—
alternative)	1960	*22704A	Dipper	1960	31800A	Motor to wheelbox ..	1960	54711609
Horn	1960	69092D	Cap, rubber	—	54331425	Wheelbox to wheelbox	1960	743706
LAMPS			Flasher	1960	31737B	End tube	1960	740746
Head, Home			Ignition and lighting ..	1960	31270F	Arm, left hand drive ..	1960	54711535
R.H.D., dip left ..	1960	51777A/K	Knob	—	316285	" " right hand drive ..	1960	54711534
						Blade	1960	54711282

COMMER 15/25 cwt. 1946-48

Battery	1946-48	SG11A	LAMPS			SWITCHES—continued		
Coil, ignition	1946-48	*45020A/B	Head			Panel	1946-48	*314129
Control box	1946-48	*37032A/B	Left hand	1946-48	*50204A	Solenoid, starting motor	1946-48	76428A
Distributor	1946-48	*409624	Right hand	1946-48	*50205A	Stop lamp	1946-48	31281B
Fuse box	1946-48	*385175	Side	1946-48	*52074A	Spring	—	315543
Generator	1946-48	*22446A	Stop tail and number plate	1946-48	*53063B	Warning light	1946-48	*318505
Horn	1946-48	069344	Starting motor	1946-48	*255378	Windshield wipers		
			SWITCHES			Motor	1946-48	75129A
			Horn and dipper	1946-48	*380148	Arm	1946-48	*735096
			Ignition and lighting ..	1946-48	*34014B	Blade	1946-48	727802

COMMER 25 cwt. Lyons Van 1949-50

Battery	1949-50	SG11A	LAMPS			SWITCHES		
Coil, ignition	1949-50	*45020A/B	Head, Home			Horn and dipper	1949-50	*31061B
Control box	1949-50	37065E	Left hand	1949-50	*50583A	Ignition and lighting ..	1949-50	*34020B
Distributor	1949-50	409930A	Right hand	1949-50	*50584A	Starting motor	1949-50	76427B
Fuse box	1949-50	*385211	Side	1949-50	*52097A	Warning light	1949-50	*38015B
Generator	1949-50	*22446A	Tail and number plate ..	1949-50	*53007B			
" " " " Later	1950	*22435A/B	Starting motor	1949-50	*255378			
Horn	1949-50	069344						

* See Supersession Chart R.H.D. . . . Right hand drive



COMMER 3/4 ton Forward Control Van and Passenger Chassis (Petrol & Diesel) 1960

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter (optional) ..	1960	36254A	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
Battery (Petrol) ..	1960	BT7A	Head, Export Europe			Starter and heater		
" (Petrol, Export)	1960	BTZ9A	(not France) ..	1960	58270A	(Diesel) ..	1960	31829A
" (Diesel) ..	1960	STXK13A	Head, Export France ..	1960	58271A	Escutcheon plate ..	—	54332117
Coil, ignition ..	1960	45102E	Head, Export U.S.A. ..	1960	58493A	Starting motor (Petrol)	—	76423A
Control box ..			Number plate illumination	1960	53630A	Coupling ..	—	764466
Petrol ..	1960	37290D/E	Side and flasher ..	1960	52403B	Warning light (main beam)		
Standard Diesel ..	1960	37299A/B	Stop tail, flasher and reflex	1960	53640A/D	(U.S.A.) ..	1960	38190A
Heavy duty Diesel ..	1960	37304A/B	ditto (U.S.A.) ..	1960	53754B	Bulb ..	1960	281
Distributor ..	1960	40682A	Relay, horn (when twins			Windshield wipers		
Fuse box ..	Later	40682B	fitted) ..	1960	*33116B	Motor ..	1960	75390A
Generator ..	1960	033287	Starting motor (Petrol) ..	1960	25022N/Q	(R.H.D., switch cover		
Petrol and standard			(Diesel) ..	1960	26170A/B	position 90°)		
Diesel (temporary			Steering column control ..	1960	33554A	(L.H.D., switch cover		
ditto alternative)	1960	*22704A	Suppressor ..	1960	78106A	position 270°)		
Heavy duty Diesel ..	1960	22489B	SWITCHES			Link set ..	—	54711523
Horn ..			Dipper ..	1960	31800A	Arm, left hand drive		
Low note ..	1960	69092D	Cap ..	—	54331425	Bright finish ..	1960	54711532
High note (optional) ..	1960	69091D	Flasher ..	1960	*31903B	Silver grey finish Later	1960	54712028
LAMPS			Housing ..	—	54332184	Arm, right hand drive		
Head, Home			Ignition and lighting			Bright finish ..	1960	54711533
R.H.D., dip left ..	1960	51736B/D	(Petrol) ..	1960	*31288A/D	Silver grey finish Later	1960	54712029
			Knob ..	—	316285	Blade		
						Bright finish ..	1960	54711285
						Silver grey finish Later	1960	54711284

§ FUEL INJECTION EQUIPMENT (Perkins 4/99 Engine)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump ..	1960	DPA3246175	Filter ..	1960	F4B2
Nozzle holder ..	1960	BKB40S5003N	Thermostart ..	1960	285-2A
Nozzle ..	1960	BDN12SD6236			

COMMER 25 cwt. Forward Control 1946-56

Ammeter ..	1946-50	*369263	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
Battery ..	1951-54	36047D	Head, Export			Panel ..	1946-50	*31285A
Coil, ignition ..	1946-50	SG11A	L.H.D., dip right ..	1952-53	*51250A	Knob ..	1951-56	31248A
Control box ..	1951-56	GT11A	" " " " ..	1954	*51337A	" " " " Later	1951-52	*316365
" " " " ..	1946-50	*45020A/B	" " " " ..	1955	*51337B	Starting motor ..	1952-56	316493
" " " " ..	1951-56	*45012A/D	" " " " ..	1956	*51337D/E	" " " " ..	1946-49	76428A
" " " " ..	1946	*37002A	Head, Export Europe			" " " " ..	1950	76404B
" " " " ..	1947	*37032A	(not France) ..	1952-53	*51251A	" " " " ..	1951-54	76427B
" " " " ..	1948-52	*37065E	ditto ..	1954-55	51339A	" " " " ..	1955-56	76423A
" " " " ..	1952-54	*37138B	ditto ..	1956	51339B/H	Coupling ..	1955-56	764428
" " " " ..	1955-56	37182A/H	Head, Export France ..	1952-53	*50962	Trafficator (when fitted)	1955-56	31379A
Distributor ..	1946-50	*40962A	Head, Export U.S.A. ..	1952-53	*51253A	Trafficators (special		
" " " " ..	1951-53	40218A/D	Number plate illumination	1955-56	53343A	orders) ..	1955	*053830
" " " " ..	1953	40070A/E	Side ..	1946	52036A	ditto ..	Later	1955-56
" " " " ..	1954-56	*40376A/B	" " " " ..	1947-48	*52003A	Warning light ..	1946	*31859E
" " " " ..	1956	40511A/B	" " " " ..	1949-51	52154A	" " " " ..	1947-50	*38015B
" " " " ..	1946-52	*385175	" " " " ..	1952-54	*52110A	" " " " ..	1951-55	38059A
" " " " ..	1952-56	033240	" " " " ..	1955-56	52139B/F	Windshield wipers		
Generator ..	1946-48	22453D	Stop tail and number plate	1949-54	*53063B	Motor ..	1946-50	*733068
" " " " ..	1949-50	*22446A	Stop tail ..	1955-56	53178E/F	" " " " ..	1951-53	*54050A
" " " " ..	1951-52	*22250E/F	Tail and number plate ..	1946-48	*53007B	" " " " ..	1954-56	75144A
" " " " ..	1952-56	22258D	Reflex reflector ..	1955-56	*57073B	Wheelbox ..	1954-56	72655A
" " " " ..	1946-56	*069213	Starting motor ..	1946-50	*255378	Crosshead and rack assy.		
" " " " ..	1951-54	39507A	Suppressor ..	1951-56	25521B/D	Cut to 43 1/2" ..	1954-56	736307
LAMPS			" " " " ..	1955-56	78106A	Outer casing		
Head, Home			SWITCHES			Motor to wheelbox ..	1954-56	739844
Non-dip ..	1946	50129A	Horn and dipper ..	1946-50	*380168/S	Wheelbox to wheelbox	1954-56	739972
Vertical dip ..	1947-51	*50285A	" " " " ..	1951-56	*31325A	End tube ..	1954-56	740031
Dip left ..	1952-53	*51249A	" " " " ..	1946	*344920	Arm ..	1946-52	*735061
R.H.D., dip left ..	1954-55	51336A	Ignition and lighting			" left hand ..	1952-53	*735055
" " " " ..	1956	51336B/J	" " " " ..	1947-50	*34014B	" right hand ..	1954-56	737496
Head, Export			" " " " ..	1951-56	*31288A	Blade ..	1946-52	727802
R.H.D., dip left ..	1952-53	*51249A	Knob ..	—	316285	" " " " Later	1952-53	727801
" " " " ..	1954-55	51336A				" " " " ..	1954-56	727803
" " " " ..	1956	51336B/J						

COMMER 1 1/4/1 1/2 ton Forward Control Mk. V 1956-60: 1 ton Forward Control 1959-60

Battery (Petrol) ..	1956-59	GT11A	Horn ..	1956-57	*069213	LAMPS— <i>continued</i>		
" (Diesel) ..	1960	BT11A	Low note ..	1957-60	69046E/F	Head, Export Europe		
Coil, ignition ..	1956-60	STXT19E	High note (optional) ..	1959-60	69047F	(not France) ..	1956-59	51339B/H
Control box ..	1956-59	*45054D/L	Horn relay (when twins			ditto ..	1959-60	58230A/E
" " " " ..	1959-60	37182J	fitted) ..	1959-60	*33116B	(not France) ..	1960	58231A/E
" " " " ..	1960	37182K	LAMPS			Head, Export France ..	1956-60	53343A
Distributor ..	1956-59	*40430A	Head, Home			Number plate illumination	1956-60	52639F
" " " " ..	1960	40491A/B	R.H.D., dip left ..	1956-60	51336B/J	Side ..	1956-60	52139F
" " " " ..	1960	40667A/B	Head, Export			Stop tail ..	1956-60	53178F/H
" " " " ..	1957-60	033239	R.H.D., dip left ..	1956-60	51336B/J	Reflex reflector ..	1956-60	57073B
Fuse box ..	1957-60	1800020	R.H.D., dip right ..	1956-60	*51337D/E	Starting motor (Petrol) ..	1956-60	25521D
" (Diesel starting			L.H.D., dip right ..	1959	*51337F/K	" " (Diesel) ..	1957	26133A/B
aid, serviced by C.A.V.)	1957-60	22258D	" " " " Later			" " " " ..	1958-60	26133D/E
Generator ..	1956	22258E/F				Steering column control ..	1956-60	32937A/B
" " " " ..	1957-60					Suppressor ..	1956-60	78106A

* See Supersession Chart

§ Serviced by C.A.V. Ltd.

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



COMMER 1¼/1½ ton Forward Control Mk. V 1956-60: 1 ton Forward Control 1959-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			SWITCHES—continued			Windshield wipers		
Dipper	1956-60	31284A/D	Starting motor (Petrol)	1956-60	76423A	Motor	1956-60	75144A
Ignition and lighting	1956-60	*31288A	Coupling	1956-58	764428	Wheelbox	1956-60	72655A
Knob	—	316285	Trafficator	1959-60	764466	Crosshead and rack assy.	—	—
Panel	1956-58	31248B	1956	31564A	Cut to 43 ½"	1956-60	736307
.. .. .	1959-60	*31515A	1957-60	31379A	Outer casing	—	—
.. .. . Later	1960	31869A	Windshield wiper	1956-60	31248B	Motor to wheelbox	1956-60	73984A
Knob	1956-60	*316365 Later	1960	34266A	Wheelbox to wheelbox	1956-60	739972
.. .. . Later	1960	316493	Knob	1956-60	312954	End tube	1956-60	740031
Solenoid operating (Diesel, serviced by C.A.V.)	1957-60	1823410	Terminal block	1959-60	37101B	Ferrule, casing retaining	1956-60	738410
Starter/heater (Diesel, serviced by C.A.V.)	1957-60	1823420	Trafficators	1956	54050A	Arm, left hand	1956-60	737496
			1957-60	54045E right hand	1956-60	737495
			Warning light (ignition) ..	1956-60	*38065A	Blade	1956-60	727803

§ FUEL INJECTION EQUIPMENT (Standard 23CV Engine)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1956-57	DPA3246020	Nozzle	1956-60	BDN4SP6188
.. .. . Later	1957-58	DPA3246070-1-2-3	Filter	1956-59	F4-1
.. .. .	1959-60	DPA3246103	1960	F4B-3
Nozzle holder	1956-60	BKB40S697	Thermostart	1956-60	285-2A

COMMER 25 cwt. 'Superpoise' Van 1949-56: Medium Pick-up Truck Mk. IV 1951-54

Battery	1949-50	SG11A	LAMPS—continued			Reflex reflector	1955-56	32886A/D
.. .. .	1951-56	GT11A	Head, Export			Starting motor	1949-50	*255378
Coil, ignition	1949-56	*45012A/D	R.H.D., dip left	1950-51	*50445K	1951-56	25521B/D
Control box	1949-52	37065E	R.H.D., dip left (L.H. and R.H.)	Later		Steering column control (Pick-up Truck)	1951-54	32886A/D
.. .. . Later	1952-54	*37138B	1951	*50954A	Suppressor	1955-56	78106A
Distributor	1955-56	37182A/H	1952-53	50941A	SWITCHES		
.. .. .	1949-50	*409624	L.H.D., dip right	1954-55	51336A	Horn and dipper	1949-50	*380148
.. .. .	1951-53	40218A/D	1956	51336B/J	1951-56	*31325A
.. .. . Later	1953	40070A/E Later	1950-51	*A50445K	Ignition and lighting	1949-50	*34014B
.. .. .	1954-56	*40376A/B	1951-53	*50804D	1951-56	*31288A
(from Engine No. SSP7950)	1956	40511A/B	1954-56	*51337A	Knob	1951-56	*316285
Fuse box	1949-52	*385175	Head, Export Europe (not France)	1950	*B50445K	Panel	1949-50	*31285A
.. .. . Later	1952-56	033240	ditto	1951-53	*50963A	1951-56	*31248A
Generator	1949-50	*22446A	ditto	1954-55	51339A	Knob	—	*316365
.. .. .	1950	*22435A/B	ditto	1956	51339B/H	Starting motor	1949	76428A
.. .. .	1951-52	*22250E/F	ditto	1950	52108A	1950	76404B
.. .. . Later	1952-56	22258D	Head, Export France	1951-53	*50962A	Coupling	1951-56	76423A
Horn	1949-56	*069213	1954	*51341A	Stop lamp	1951-56	764428
LAMPS			Head, Export U.S.A. (Pick-up Truck)	1951-52	*50804D	Trafficator	1949-50	31281A
Head, Home			1953-54	51343A	Trafficator (when fitted)	1955-56	31379A
R.H.D., dip left (L.H.)	1949	*50583A	Number plate illumination	1955-56	53343A	orders)	1955	*053830
.. .. . non-dip (R.H.)	1949	*50584A	ditto (Pick-up Truck)	1951-54	53101E Later	1955-56	54000A
.. .. . dip left (L.H.)	1950	*50878A	Side	1949	52108A	Warning light (ignition) ..	1949-50	*38015B
.. .. . non-dip (R.H.)	1950	*50880A	1950	52154A	1951-56	38059A
.. .. . dip left (L.H.)	1951	*50445K	Stop tail and number plate (except Pick-up Truck)	1950-54	*53063B	Truck)	1951-56	38059A
.. .. . non-dip (R.H.)	1951	*50446K	Stop tail	1955-56	53178E/F	Windshield wipers		
R.H.D., dip left (L.H. and R.H.)	Later	 (Pick-up Truck)	1951-54	*53151B/D	Motor	1949-56	75129A
.. .. .	1951	*50954A				Arm	1949-56	735065
.. .. .	1952-53	50941A				Blade	1949-56	727802
.. .. .	1954-55	51336A						
.. .. .	1956	51336B/J						

COMMER ¾/1½ ton 'Superpoise' Van and Medium Pick-up Truck Mk. V 1956-60

Battery (Petrol)	1956-57	GT11A	LAMPS—continued			SWITCHES—continued		
.. .. . Later	1957-59	GT9A	Head, Export			Flasher (when fitted)	1956-60	31564A/D
.. .. . (Diesel)	1957-60	STX119E	R.H.D., dip left	1956-60	51336B/J	Ignition and lighting	1956-60	*31288A
Coil, ignition	1956-57	*45054D/H	L.H.D., dip right	1956-59	*51337D/E	Knob	—	316285
.. .. .	1958	*45053J Later	1959-60	*51337F/K	Solenoid operating (Diesel, serviced by C.A.V.)	1957-60	1823410
.. .. .	1959-60	*45054K/L	Head, Export Europe (not France)	1956-59	51339B/H	Starter/Heater (Diesel, serviced by C.A.V.)	1957-60	1823420
Control box	1956-59	37182A/H	ditto Later	1959-60	58230A/E	Starting motor (Petrol)	1956-60	76423A
.. .. .	1959-60	37182J	Head, Export France	1960	58231A/E	Coupling	1956-58	764428
.. .. . Later	1960	37182K	Number plate illumination	1956-60	53343A	1959-60	764466
Distributor	1956	*40430A	Side	1956-60	52250B	Stop lamp	1956-60	31802B
.. .. .	1956 59	40491A/B	Side and flasher (optional) (alternative)	1956-59	*52162E/F	1956-60	31248B
.. .. . Later	1959-60	40667A/B	ditto	1960	52240B	Windshield wiper	1956-60	34266A
Flasher unit (when fitted)	1956-57	*35003A	Rear flasher (optional)	1956-60	*52282A/B Later	1960	34266A
.. .. .	1958-60	35010A	Stop tail	1956-60	53178E/J	Knob	1956-60	312954
Fuse box	1956	033240	Reflex reflector	1956-60	57073B	Windshield wipers		
.. .. .	1957-60	033239 (Dutch Van)	1958-60	65424A	Motor	1956-60	75289A
.. .. . (Diesel starting aid, serviced by C.A.V.)	1957-60	1800020	Relay, horn (when twins fitted)	1957-60	*33116B Later	1960	75398A
Generator	1956	22258D	Starting motor (Petrol)	1956-60	25521D	Wheelbox	1956-60	72660A
.. .. .	1957-60	22258E/F (Diesel)	1957	26133A/B	Crosshead and rack assy.	1956-60	743722
Horn	1956	*069213	Steering column control ..	1956-60	32937A/B	Outer casing	—	—
.. .. .	1956-60	69046A/E	Suppressor (when fitted)	1956-60	78106A	Motor to wheelbox		
.. .. . Later	1957-60	69047E/F	SWITCHES			Left hand	1956-60	743708
High note (optional) ..			Dipper	1956-60	31284A/D	Right hand	1956-60	743709
LAMPS						End tube	1956-60	740746
Head, Home						Arm, left hand	1956-60	745081
R.H.D., dip left	1956-60	51336B/J			 right hand	1956-60	745080
						Blade	1956-60	741680

* See Supersession Chart R.H.D. ... Right hand drive

§ Serviced by C.A.V. Ltd.

L.H. ... Left hand

R.H. ... Right hand

L.H.D. ... Left hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



COMMER 3/4/1 1/2 ton 'Superpoise' Van and Medium Pick-up Truck Mk. V 1956-60—continued

§ FUEL INJECTION EQUIPMENT (Standard 23CV Engine)					
Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1956-57	DPA3246020	Nozzle	1956-60	BDN4SP6188
" " Later	1957-58	DPA3246070-1-2-3	Filter	1956-59	F4-1
" "	1959-60	DPA3246103	" "	1960	F4B-3
Nozzle holder	1956-60	BKB40S697	Thermostart	1956-60	285-2A

COMMER 2 and 3 ton 1946-47

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1946-47	SG11A	LAMPS—continued			SWITCHES—continued		
Coil, ignition	1946-47	*45039A	Head, Export			Panel	1946-47	*314129
Control box	1946-47	*37032A/B	L.H. and R.H.	1947	*50585A	Starting motor	1946-47	76428A
Distributor	1946-47	*410700	Side	1946-47	*520940	Stop lamp	1946-47	31281B
Fuse box	1946-47	*385175	Stop tail and number plate	1946-47	*523595	Spring		315543
Generator	1946-47	*22446A/B	Starting motor	1946-47	*270490	Warning light	1946-47	*318505
Horn	1946-47	069344				Windshield wipers		
LAMPS			SWITCHES			Motor	1946-47	75129A
Head, Home			Horn and dipper	1946	*380148	Arm	1946-47	*735096
R.H.D., dip left (L.H.)	1946	*50204A	Ignition and lighting	1946-47	*344540	Blade	1946-47	727802
" non-dip (R.H.)	1946	*50205A						
" dip left (L.H.)	1947	*50583A						
" non-dip (R.H.)	1947	*50584A						

COMMER 2/3 and 3/4 ton 1949-54: 4/5 ton 1949-51: 5 ton 'Superpoise' 1952-54: 'Commando' (Petrol) 1950-53

Battery	1949-50	SG11A	LAMPS			LAMPS—continued		
" "	1951-54	GT11A	Head, Home			Head, Export U.S.A.	1949-52	*50804D
Coil, ignition	1949-54	*45012A/D	R.H.D., dip left (L.H.)	1949	*50445K	" "	1953-54	51343A
Control box	1949-50	37065E	" non-dip (R.H.)	1949	*50446K	Side	1949-50	52108A
" " Later	1950-52	*37076E	" dip left (L.H.)	1950	*50878A	" "	1951-54	52139B
" " ('Commando')	1952-54	*37139D	" non-dip (R.H.)	1950	*50880A	Stop tail and number plate	1949-54	*53063B
serviced by C.A.V.)	1950-53	1685010	" dip left (L.H.)	1951	*50445K	Starting motor	1949	26026A/B
Distributor	1949-50	*410700B	" non-dip (R.H.)	1951	*50446K	" " Later	1949	*26035A
" "	1951	40135E/H	R.H.D., dip left			" " Later	1950-53	26041A/B
" "	1952	40210A/B	(L.H. and R.H.)	1952-53	*50954A	" " Later	1953-54	26094A
" " Later	1952-53	*40311D	Head, Export	1953-54	51336A	SWITCHES		
" "	1953	40360A/B	R.H.D., dip left	1949	*50445K	Horn and dipper	1949-50	*380168
" "	1953-54	40360D	" "	1950	*50878A	" "	1951-54	*31325A
Fuse box	1948-52	*385175	" "	1951	*50445K	Ignition and lighting	1949-51	*34014B
" " (Tractor)	1948-52	*37130A	R.H.D., dip left	1952-53	*50954A	" "	1952-54	*31288A
" " ('Commando')	1950-52	*37137A	(L.H. and R.H.)	1953-54	51336A	Knob		316285
" " Later	1952-54	033239	Head, Export	1949	*50445K	Panel	1952-53	31248A
Generator	1949-50	*22446A/B	(not France)	1949	*B50445K	Knob		*316365
" " Later	1950-52	*22435A/B	ditto	1950	*B50878A	Starting motor	1949	76428A
" "	1952-54	*22456A/D	ditto	1951	*B50445K	" "	1950	76404B
serviced by C.A.V.)	1950-53	D5LFA10	ditto Later	1951-53	*50804D	" "	1951-54	76423A
Horn	1949-53	*069213	Head, Export Europe	1953-54	*51337A	Coupling		764428
Junction box	1952-54	78265A	(not France)	1949	*B50445K	Warning light	1949-51	*38015B
			ditto	1950	*B50878A	" "	1952-54	38059A
			ditto	1951	*B50445K	Windshield wipers		
			ditto Later	1951-53	*50963A	Motor	1949-54	75129A
			ditto	1953-54	51339A	Arm	1949-54	735065
			Head, Export France	1951-53	*50962A	Blade	1949-54	727802
			" " Later	1953-54	*51341A			

§ FUEL INJECTION EQUIPMENT
(Perkins P6 Engine 1949-54)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1949-52	BPE6A60Q310S6237	Feed pump—continued	1953-54	BFPK22P68
" "	1953-54	BPE6A60S310S6321	Primer	1949-54	BFPUE2-54Z
Governor	1949-54	BEPMZ80A99	Pre-filter	1949-54	BFJSJ1-501
Coupling	1949-54	BZK G31-538	Nozzle holder	1949-54	BKB35S87
Venturi	1949-54	BEPK 50-50-77	Nozzle	1949-54	BDL110S6133
Feed pump	1949-52	BFPK22N1	Filter	1949-54	BFA5P1
" " Later	1952	BFPK22N68			

COMMER 2/5 ton 'Superpoise' (Petrol) 1955-60: 3/5 ton 'Superpoise' (Diesel) 1955-60: 6 ton 'Superpoise' (Petrol and Diesel) 1959-60

Battery (Petrol)	1955-59	GT11A	Control box (Diesel)	1959-60	37183H	Generator	1955-56	*22483A
" "	1960	BT11A	" " " " Later	1960	37183K	" "	1957-58	*22483D
" (Diesel)	1955-60	STXT19E			37183L	" (Petrol)	1959-60	22258E/H
Coil, ignition	1955-56	*45012B	Distributor	1955-60	40360D/E	" (Diesel)	1959	*22483D
" "	1957-60	*45054H/L	Flasher unit (when fitted)	1957	*35003A	" "	1960	22489B/D
Control box	1955	*37139E	" " " "	1958-60	35010A	Horn	1955-56	*069213
" " Later	1955-58	37183A/H	Fuse box	1955-60	032329	Low note	1957-60	69046E/F
" " (Petrol)	1959-60	37182H	" (Diesel heater,			High note (optional)	1957-60	69047E/F
" " Later	1960	37182J	serviced by C.A.V.)	1957-60	1800020	LAMPS		
		37182K				Flasher, front and rear		
						(optional)	1957-60	52314A

* See Supersession Chart
R.H.D. .. Right hand drive

§ Serviced by C.A.V. Ltd.

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



COMMER 2/5 ton 'Superpoise (Petrol) 1955-60: 3/5 ton 'Superpoise' (Diesel) 1955-60: 6 ton 'Superpoise' (Petrol and Diesel) 1959-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS—continued			Relay, horn (when twins fitted)			SWITCHES—continued		
Head, Home			Relay, horn (when twins fitted)	1957-60	*33116B	Starting motor (Petrol)	1955-60	76423A
R.H.D., dip left ..	1955	51336A	Starting motor (Petrol) ..	1955-60	26094A	Coupling	1955-58	764428
" " " " ..	1956-60	51336B/J	" " " " (Diesel, serviced by C.A.V.) ..	1955-57	1330930-1	Windshield wiper ..	1959-60	764466
Head, Export			ditto	1958	1330670	Knob	1956-60	31248A
R.H.D., dip left ..	1955	51336A	ditto	1959-60	1320171	Windshield wiper Later	1960	312954
" " " " ..	1956-50	51336B/J	Steering column control ..	1956-60	32937A/B	Knob	1955	34266A
L.H.D., dip right ..	1955	*51337B				Warning light (ignition) ..	1955	312954
" " " " ..	1956-59	*51337D/E				Windshield wipers		38059A
" " " " Later	1959-60	*51337F/K				Motor	1955	75129A
Head, Export Europe (not France) ..	1955	51339A	SWITCHES			" " " " ..	1956-60	75289A
ditto	1956-59	51339B/H	Dipper	1956-60	31284A/D	" " " " Later	1960	75398A
ditto Later	1959-60	58230A/E	Flasher (when fitted) ..	1956-60	31564A/D	Wheelbox	1956-60	72600A
Head, Export France ..	1956-58	*51341B/E	Heater (Diesel, serviced by C.A.V.) ..	1957-60	1823420	Crosshead and rack assy.	1956-60	743722
" " " " ..	1959	51342B/D	Horn push and dipper ..	1955	*31325A	Outer casing		
" " " " ..	1960	58231D/E	Lighting and ignition or main	1955-60	*31288A	Motor to wheelbox		
Head, Export U.S.A. ..	1955-60	51343B/E	Knob	—	316285	Left hand	1956-60	743708
ditto (indirect) ..	1960	51509A/H	Panel (when fitted) ..	1955	31248A	Right hand	1956-60	743709
Number plate illumination	1955-60	53343A	Solenoid operating (Diesel, serviced by C.A.V.) ..	1955-60	1823410	End tube	1956-60	740746
Side	1955	52139B				Arm	1955	735065
Stop tail	1956-60	52250B				" left hand	1956-60	745081
Reflex reflector ..	1955-60	53178E/J				" right hand	1956-60	745080
	1955-60	57073B				Blade	1955	727802
						" " " " ..	1956-60	741680

§ FUEL INJECTION EQUIPMENT (Perkins P6 Engine 1955-60)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1955-57	BPE6A60S310S6321	Primer	1955-57	BFPUE2-54Z
" " " " Later	1957-58	BPE6A60S310S6381	" " " " Later	1957-60	HP1-1
Governor	1958-60	BPE6A60U310S6381	Pre-filter	1955-60	BFJSJ1-501
" " " " Later	1955-56	BEPMZ80A99	Nozzle holder	1955-60	BKB32S630
" " " " ..	1956-57	BEPAMZ80A99	Nozzle	1955-60	BDL110S6133
" " " " ..	1957-58	BEPAMZ80A133	Venturi	1955	BEPK50-50-101
" " " " ..	1959-60	BEPBMZ80A133	" " " " ..	1956-60	BEPK50-50-107
Coupling	1955-60	BZKG31-538	Filter	1955-59	F2-8
Feed pump	1955-56	BFPK22P68	" " " " ..	1960	F2B-22
" " " " Later	1956-60	BFPK22P70			

(Perkins C305 Engine 1959-60)

Fuel pump	1959	DPA3264003	Filter	1959	F4-3
" " " " ..	1960	DPA3264035	" " " " ..	1960	F4B-5
Nozzle holder	1959-60	BKB32S630	Thermostart	1959	285-2A
Nozzle	1959-60	BDL110S6267	" " " " ..	1960	357-2

COMMER 3 ton Four Wheel Drive Cross-country Vehicle 1956

Battery	1956	GT11A	LAMPS			SWITCHES—continued		
Coil, ignition	1956	*45012B	Head, vertical dip	1956	056991	Ignition and lighting ..	1956	31270A
Control box	1956	*37166D	Number plate illumination	1956	53189A	Knob, ignition	—	31643A
Distributor	1956	*40364D	Side	1956	52186A	" lighting	—	316285
Fuse box	1956	033239	Tail	1956	*53250E	Panel	1956	31248B
Generator	1956	*22470H/L	Starting motor	1956	26094A	Knob	—	*316365
Horn	1956	069344	Suppressor	1956	78106A	Starting motor	1956	76423A
Inspection lamp sockets ..	1956	39507A				Coupling	—	764428
Junction box	1956	78265B	SWITCHES			Windshield wipers		
			Convoy light	1956	*31276A	Motor	1956	75107A
			Horn push and dipper ..	1956	*31325A	Arm	1956	735065
						Blade	1956	727802

COMMER 3 and 4 ton Trucks, Pantehnicon, Tipper and 'Commando' (Petrol) 1947-49

Battery	1947-49	SG11A	LAMPS			Starting motor	1947-49	*270490
Coil, ignition	1947-49	*45039A	Head, Home			SWITCHES		
Control box	1947-49	*37032A/B	R.H.D., dip left (L.H.)	1947-49	*50583A	Horn push and dipper ..	1947-49	*380234
" " " " ('Commando', serviced by C.A.V.) ..	1947-48	1685030	" non-dip (R.H.)	1947-49	*50584A	Ignition and lighting ..	1947-49	*34014B
Distributor	1947-49	*410700A	" dip left (L.H., 'Commando')	1947-49	*50481A	Panel	1947-49	*314129
Fuse box	1947-49	*385175	R.H.D., non-dip (R.H., 'Commando')	1947-49	*50482A	Starting motor	1947-49	76428A
" " " " ('Commando')	1947-49	*385221	Head, Export			Stop lamp	1947-49	31281B
Generator	1947-49	*22446A/B	L.H. and R.H. ('Commando')	1947-49	*50483A	Spring	—	315543
" " " " ('Commando', serviced by C.A.V.) ..	1947-49	DSLFA10	(Pantehnicon)	1947-49	*50585A	Warning light	1947-49	*38015B
Horn	1947-49	069344	Side	1947-49	*52060A	Windshield wipers		
Junction box (Pantehnicon and 'Commando')	1947-49	78265A	Stop tail and number plate ditto (Tipper) ..	1947-49	*53028B	Motor	1947-49	75129A
			Tail and number plate (Tractor)	1947-49	*53063B	Arm	1947-49	*735096
						Blade	1947-49	727802

* See Supersession Chart § Serviced by C.A.V. Ltd. L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive



COMMER 4, 5 and 6 ton Forward Control (Petrol and Perkins C305 Diesel) 1959-60—continued

§ FUEL INJECTION EQUIPMENT					
Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1959	DPA3264003	Filter	1959	F4-3
.. .. .	1960	DPA3264035	1960	F4B-5
Nozzle holder	1959-60	BKB32S630	Thermostart	1959	285-2A
Nozzle	1959-60	BDL110S6267	1960	357-2

COMMER 5 ton 1947

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1947	SG11A	LAMPS, Head, Home— <i>continued</i>			LAMPS— <i>continued</i>		
Coil, ignition	1947	*45039A			Side	1947	52053A
Control box	1947	*37032A/B	Chassis 16A5051-16A5075			Stop tail and number plate	1947	*53063B
Distributor	1947	*410700	Left hand	1947	*50344A	Starting motor	1947	*270490
Fuse box	1947	*385175	Right hand	1947	*50345A	SWITCHES		
Generator	1947	*22446A	Chassis 16A5076onwards			Horn push and dipper ..	1947	*38023A
Horn	1947	069344	Left hand	1947	*50478A	Ignition and lighting ..	1947	*34014B
LAMPS			Right hand	1947	*50584A	Panel	1947	*31285A
Head, Home			Head, Export			Starting motor	1947	76428A
Chassis 16A5000—			L.H. and R.H.			Stop lamp	1947	31281B
16A5050			Chassis 16A5000—			Warning light	1947	*38015B
Left hand	1947	*50204A	16A5050	1947	*50245A	Windshield wipers		
Right hand	1947	*50205A	Chassis 16A5051—			Motor	1947	75129A
			16A5075	1947	*50284A	Arm	1947	*73509E
			Chassis 16A5076onwards	1947	*50245A	Blade	1947	727802

COMMER 5 ton 'Superpoise' 1954-60: 6 ton 'Superpoise' 1959-60 (Diesel, 24 volt)

Battery	1954-60	MT15E-6	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
Control box (serviced by C.A.V.)	1954-60	1688010	Head, Export Europe (not France)	1954	51492A	Panel light	1955	31248A
Flasher unit (when fitted)	1957-60	35018A	ditto	1955	51492B	Knob	—	*316365
Fuse box	1957-60	033239	ditto	1956-60	51492D/H	Solenoid operating (serviced by C.A.V.)	1955-60	1823410
.. .. . (Diesel heater, serviced by C.A.V.)	1957-60	1800020	Number plate illumination			Stop lamp	1954-59	31082E/H
Generator (serviced by C.A.V.)	1954-60	1131090	Side	1954-55	†53210A/D	1960	31802B
Horn	1954-58	069405	1956-60	52251B	Windshield wiper	1957-60	31248B
Low note (alternative) ..	1955-56	*69041B	Stop tail and number plate	1954	*53063B Later	1960	34266A
High note (optional) ..	1955-56	*69042B	Stop tail	1955-60	†53178E/J	Knob	1957-60	31295A
.. .. .	1957-60	69055A	Reflex reflector	1955-60	57073B	Windshield wipers		
LAMPS			Starting motor (serviced by C.A.V.)	1954-58	1332600	Motor	1954-55	75193A
Flasher, front and rear (optional)	1957-60	52315A	ditto	1959-60	1332601 Later	1956-60	75290A
Head, Home and Export			Steering column control ..	1956-60	32937A/B	Wheelbox	1960	75399A
Dip left	1954	51477A	SWITCHES			Crosshead and rack assy.	1956-60	72660A
.. .. .	1955	51477B	Dipper	1955-60	31284A/D	Outer casing		743722
.. .. .	1956-60	51477D/H	Flasher (when fitted) ..	1957-60	31565A	Motor to wheelbox		
Head, Export			Heater, starting (serviced by C.A.V.)	1957-60	1823420	Left hand	1956-60	743708
L.H.D., dip right	1954	51490A	Horn push and dipper ..	1955	*31325A	Right hand	1956-60	743709
.. .. .	1954	51490B	Lighting and main	1955-60	*31288A	End tube	1956-60	740746
.. .. .	1955	51490D	Knob	—	316285	Arm	1954-55	735065
.. .. . Later	1955-60	51490E/J				.. left hand	1956-60	*735081
						.. right hand	1956-60	*735080
						Blade	1954-55	727802
						1956-60	741680

§ FUEL INJECTION EQUIPMENT (Perkins R6 Engine)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1954-55	BPE6A70R320S6302	Feed pump	1954-56	BFPK22P68
.. .. . Later	1955-57	BPE6A70R320S6360 Later	1956-60	BFPK22P70
.. .. .	1957-58	BPE6A70R320S6387	Primer	1954-57	BFPU2-54Z
.. .. .	1958-60	BPE6A70T320S6387 Later	1957-60	HPI-1
Governor	1954-55	BEPAMN80A122	Pre-filter	1954-60	BFJSJ1-501
.. .. . Later	1955	BEPMZ80A130	1954-60	BKB32S630
.. .. .	1956	BEPMZ80A146	Nozzle holder	1954-60	BDL10S6125
.. .. . Later	1956-58	BEPAMZ80A136	1954-60	BDL10S6125
.. .. .	1958-60	BEPBMZ80A136	Nozzle	1954-59	F2-8
Coupling	1954-57	BZKG31-538	Filter	1959-60	F2B-22
		 Later		

COMMER 5 and 7 ton 1949: 5 and 7 ton Forward Control 1950-54

Battery	1949-51	SG11A	Horn	1949-53	*069213	LAMPS— <i>continued</i>		
.. .. .	1952-54	GT11A	Inspection lamp sockets ..	1949-54	301187	Head, Export Europe		
Coil, ignition	1949	*45039A	LAMPS			Head, Export Europe (not France) ..	1949-50	*B50445K
Control box	1950-54	*45012A/D	Head, Home			1951-52	*50963A
.. .. .	1949-50	37065E	R.H.D., dip left (L.H.)	1949-51	*50445K	1953-54	51339A
.. .. . Later	1950-52	*37076E non-dip (R.H.)	1949-51	*50446K	1951-52	*50962A
.. .. .	1952-54	*37139D	R.H.D., dip left			Head, Export France	1953-54	*51341A
Distributor	1949	*40116D/E	(L.H. and R.H.)	1951-52	*50954A	1951-52	*50804D
.. .. .	1950	*40116F	1952	50941A	Head, Export U.S.A.	1953-54	51343A
.. .. .	1951-52	*40116H Later	1953-54	51336A	1949-53	52108A
.. .. .	1952	*40310A	Head, Export			Side	1954	52139B
.. .. .	1953-54	40359A/B	R.H.D., dip left	1949-51	*50445K	1949	*53063B
.. .. .	1954	40359D/E	1951-52	50954A	Stop tail and number plate	1949	*53063B
Fuse box	1949-52	*385175	1952	50941A	Relay, field exciter	1949-51	33099A
.. .. .	1952-54	033240	1953-54	51336A	Starting motor	1949-51	*26028A
.. .. . Later	1949-50	*22446A	L.H.D., dip right	1949-51	*A50445K (temporary)	1951	26077A
Generator	1950-52	*22435A/B	1951-52	*50804D	1952-53	26086A
.. .. .	1952-54	*22456A/B	1953-54	*51337A	1954	26094A

* See Supersession Chart
L.H.D. .. Left hand drive
A60

† State voltage when ordering
R.H.D. .. Right hand drive

§ Serviced by C.A.V. Ltd.

L.H. .. Left hand R.H. .. Right hand

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



COMMER 5 and 7 ton 1949: 5 and 7 ton Forward Control 1950-54—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			SWITCHES—continued			Windshield wipers—cont'd		
Horn push and dipper ..	1949-50	*380168	Windshield wiper ..	1952-54	31248A	Outer casing ..		
" " " " ..	1951-54	*31325A	Knob ..		*316366	Wheelbox to control box		
Ignition and lighting ..	1949-51	*34037A				Nearside ..	1949-51	739937
Knob ..	1952	31194A				Offside ..	1949-51	739937
Oil ..	1949-54	*316284	Windshield wipers			Wheelbox to wheelbox	1952	*739965
Knob ..			Motor ..	1949-50	*75053J	" " " " ..	1953-54	*739979
Oil ..	1949-54	31146A	" " " " ..	1952	*75074J	4", nearside wheelbox	1949-51	740032
Knob ..		*315258	" " " " ..	1953-54	75144A	3", offside wheelbox ..	1949-54	740031
Panel ..	1949-54	31113A	Control box ..	1949-51	72591A	Guide tube ..	1949-51	735895
Knob ..		315112	Wheelbox ..	1949-51	72590A/K	Grommet, wheelbox ..	1949-51	734458
Solenoid, starting motor (temporary) ..	1951	76022A	Crosshead and rack assy.	1949-51	736364	" " " " ..	1952	729423
Solenoid, starting motor	1952-54	*76411D	Cut to 4 1/8" ..	1952-54	736307	" " " " ..	1953-54	734458
Solenoid operating ..	1949-54	31115A	Inner cable rack ..	1949-51	736024	Arm ..	1949-51	*735080
Knob ..		*317315	Outer casing			" left hand ..	1952-54	*737629
			Motor to wheelbox ..	1949-51	*739832	" right hand ..	1952-54	*737628
			" " " " ..	1952-64	739833	Blade ..	1949-54	727759

COMMER 5 ton Forward Control 1955-58: 7 ton Forward Control (Petrol and Rootes TS3 Diesel) 1955-60: 10/12 ton Tractor (Rootes TS3 Diesel) 1957-60

Battery (Petrol) ..	1955-59	GT11A	LAMPS—continued			SWITCHES—continued		
" (Diesel) ..	1955-60	BT11A	Head, Export			Solenoid operating (Diesel, serviced by C.A.V.) ..	1958	1823410
Coil, ignition ..	1955	STXT19E	L.H.D., dip right ..	1955	*51337B	" " " " (Diesel) ..	1959-60	31810A
Control box ..	1955-60	*45012B	" " " " Later	1956-59	*51337D/E	Knob ..	1955-60	*317315
" " " " Later	1955-60	*45054D/L	Head, Export Europe (not France) ..	1955	*51337F/K	Trafficator (when fitted)	1955-60	31248A/B
" " " " (serviced by C.A.V.)	1958	*37139E	ditto ..	1956-59		Windshield wiper ..	1955-60	316366
ditto ..	1959-60	37183A/H	ditto ..	1959-60		Knob ..	1956-60	312954
Distributor ..	1955-60	37183K & L	ditto ..	1960		Trafficators (when fitted) ditto ..	1955-60	*053830
Flasher unit ..	1957	1687010	Head, Export France ..	1958-60	51339A		1955-60	54050A
Fuse box ..	1955-56	40359E/F	Head, Export Canada ..	1958-60	51339B/H	Windshield wipers		
" " " " Export Canada	1958-60	*35003A	Number plate illumination	1955-60	58230A/E	Motor ..	1955-58	75144A
Generator ..	1955-56	35010A	Side ..	1955-60	53433A/E	" " " " ..	1959-60	75289B/D
" " " " (serviced by C.A.V.)	1957-59	033240	Stop tail ..	1955-60	52139B/F	Wheelbox ..	1960	75398A
ditto ..	1959-60	033239	Reflex reflector ..	1955-60	53178E/J	" " " " ..	1955-58	72560K
Horn (alternative) ..	1955	*371137A	Relay, horn (when twins fitted) ..	1956-60	57073B	Crosshead and rack assy. Cut to 40 1/8" ..	1955-58	736307
Low note ..	1955	*22483A	Starting motor (Petrol) ..	1955-60	*33116B	Crosshead and rack assy. Outer casing	1959-60	743722
High note (optional) ..	1956-60	*22483B	" (Diesel, serviced by C.A.V.) ..	1955-60	26094A	Motor to wheelbox ..	1955-58	739833
Inspection lamp sockets ..	1957-60	22489B/D	ditto ..	1959-60	1340010	ditto Left hand ..	1959-60	743708
			Steering column control ..	1955-60	1320131	ditto Right hand	1959-60	743709
			Suppressor (when fitted)	1956-60	32937A/B	Wheelbox to wheelbox	1955	*739979
					78106A	End tube " " "	1956-58	739932
						" " " " ..	1955-58	740031
						Arm, left hand ..	1955-56	*737629
						" " " " ..	1957-58	742275
						" " " " ..	1959-60	54711558
						" " " " ..	1955-56	*737628
						" " " " ..	1957-58	*742274
						" " " " ..	1959-60	54711557
						Blade ..	1955-58	727759
						" " " " ..	1959-60	737897
						8-pin plug (Tractor) ..	1957-60	809797
						" " " " socket (Tractor) ..	1957-60	809798

§ FUEL INJECTION EQUIPMENT (Rootes TS3 Engine)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump ..	1955-59	NL3F80-96	Venturi ..	1955-56	BEPKE85-99V
" " " " ..	1960	NL3F80-181	" " " " ..	1957-59	BEPKE85-117
Governor ..	1955	LP9	" " " " ..	1960	BEPKE85-131
" " " " ..	1956-59	LPB25	Nozzle holder ..	1955-60	BKBL52S656
" " " " ..	1960	LPB34	Nozzle ..	1955-56	BDLL10S6134
Coupling ..	1955-57	FCB3	" " " " ..	1957-60	BDLL10S6213
" " " " ..	1958-60	FCB5	Filter ..	1955-59	F2-13
Feed pump ..	1955-57	DFP3-13	" " " " ..	1960	F2B-13
" " " " ..	1958-60	DFP3-26			

COMMER 6 1/2 and 7 ton 1949-50

Battery ..	1949-50	SG11A	Generator ..	1949-50	*22446A	LAMPS—continued		
Coil, ignition ..	1949-50	*45012A/D	" " " " Later	1950	*22435A/B	Head, Export		
Control box ..	1949-50	37065E	Horn ..	1949-50	069344	R.H.D., dip left ..	1949-50	*50445K
" " " " Later	1950	*37076E	Inspection lamp sockets ..	1949-50	301187	L.H.D., dip right ..	1949-50	*A50445K
Distributor ..	1949	*40116D/E				Side ..	1949-50	52108A
" " " " Later	1949	*40116F	LAMPS			Stop tail and number plate	1949-50	*53063B
" " " " ..	1950	*40116H	Head, Home			Relay, field exciter ..	1950	33099A
			R.H.D., dip left (L.H.)	1949-50	*50878A	Starting motor ..	1949-50	*26028A
			" non-dip (R.H.)	1949-50	*50880A			

* See Supersession Chart § Serviced by C.A.V. Ltd. L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



COMMER 6½ and 7 ton 1949-50—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			Windshield wipers			Windshield wipers—cont'd		
Horn push and dipper ..	1949-50	*380148	Motor	1949-50	*75053J	Outer casing ..		
Ignition and lighting ..	1949-50	*34037A	Control box ..	1949-50	72591A	Wheelbox to control box		
Oil	1949-50	31146A	Wheelbox	1949-50	72590A/K	Nearside	1949-50	739937
Knob	—	*315258	Crosshead and rack assy.	1949-50	736364	Offside	1949-50	739937
Panel	1949-50	31113A	Inner cable rack ..	1949-50	736024	4" nearside wheelbox	1949-50	740032
Knob	—	315112	Outer casing ..			3" offside wheelbox ..	1949-50	740031
Solenoid, starting motor	1949-50	31115A	Motor to wheelbox ..	1949-50	*739832	Arm	1949-50	*735098
Knob	—	*317315				Blade	1949-50	727759

COMMER 8 ton Tractor Trailer 1950

Battery (Petrol)	1950	SG11A	LAMPS			SWITCHES		
(Diesel)	1950	STXW19E	Head, Home			Horn push and dipper ..	1950	*380148
Coil, ignition (Petrol) ..	1950	*45012A/D	R.H.D., dip left (L.H.)	1950	*50445K	Ignition and lighting ..	1950	*34014B
Control box (Petrol) ..	1950	*37076E	non-dip (R.H.)	1950	*50446K	Solenoid operating		
(Diesel, serviced by C.A.V.) ..	1950	1688010	Head, Export			(Diesel)	1950	*317075
Distributor (Petrol) ..	1950	40135E/H	R.H.D., dip left ..	1950	*50445K	Starting motor (Petrol)	1950	76404B
Fuse box	1950	*385175	L.H.D., dip right ..	1950	*A50445K	Warning light (ignition)		
Generator (Petrol) ..	1950	*22435A/B	Side	1950	52108A	(Petrol)	1950	*38015B
Pulley	—	228080	Stop tail and number plate	1950	*53063B	Windshield wipers		
Generator (Diesel, serviced by C.A.V.) ..	1950	1131090	Starting motor	1950	*26035A	Motor	1950	75129A
Horn	1950	069344	(Diesel, serviced by C.A.V.) ..	1950	1332600	Arm	1950	*735096
						Blade	1950	727802

§ FUEL INJECTION EQUIPMENT (Perkins R6 Engine)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1950	BPE6A70R320S6302	Pre-filter	1950	BFJSJ1-501
Governor	1950	BEPAMN80A122	Nozzle holder	1950	BKB35S87
Coupling	1950	BZKG31-538	Nozzle	1950	BDL110S6133
Feed pump	1950	BFPK22P68	Filter	1950	F2-8
Primer	1950	BFPUE2-54Z			

COMMER 'Avenger' Coach (Petrol, 12 volt) 1949-60

Battery	1949-50	LMXBE	LAMPS,—continued			Steering column control ..	1955-60	32937A/B
"	1951-54	WT17E	Head, Export			Suppressor	1955-60	78106A
"	1955-60	MX17T	R.H.D., dip left ..	1949-51	*50445K	SWITCHES		
Coil, ignition	1949	MT19E	" Later	1951-52	*50954A	Horn push and dipper ..	1949-50	*380168
"	1950-55	*45039A	"	1952	50941A	"	1951-54	*31325A
"	1956-60	*45012A/D	"	1953-55	51336A	Ignition and lighting ..	1949-51	*34037A
Control box (serviced by C.A.V.)	1949-54	*45054D/L	"	1956-60	51336B/J	Knob	1952-60	31194A/B
ditto	1949-58	1686020	L.H.D., dip right ..	1949-51	*A50445K	"	1952-54	*316284
ditto	1955-58	1687010	" Later	1951-52	*50804D	Oil	1955-60	316285
ditto	1959-60	1687011	"	1953-54	*51337A	Panel	1949-60	31146A/B
Distributor	1949	*40116D/E	"	1955	*51337B	Knob	—	*315258
"	1950-52	*40116H	" Later	1956-59	*51337D/E	Panel	1949-60	31113A/D
"	1952	*40301B/D	Head, Export Europe (not France) ..	1959-60	*51337F/K	Knob	1949-56	315112
"	1953-54	*40359A/B	ditto	1949-50	*B50445K	Solenoid, starting motor (temporary) ..	1957-60	*315143
"	1954-60	40359D/F	ditto	1951-52	*50963A	Solenoid, starting motor	1951	76022A
"	1949-60	*37137A	ditto	1953-55	51339A	Solenoid operating ..	1952-60	*76411D/E
Fuse box	1949-58	1150150	ditto	1956-59	51339B/H	Solenoid operating ..	1949-60	31115A
Generator (serviced by C.A.V.)	1949-58	1150152	ditto Later	1959-60	58230A/E	Knob	—	*317315
ditto	1949-54	*069213	Head, Export France ..	1951-52	*50962A	Windshield wiper ..	1952-54	31248A
Horn	1949-54	*069213	"	1953-55	51341A	Knob	—	*316366
Low note	1954-55	*69011F/J	"	1956-59	51341B/E	Windshield wipers		
"	1956-60	69046A/F	"	1960	58231A/E	Motor	1952-54	75144A
High note (optional) ..	1954-55	*69012F/J	"	1949-53	52108A	Wheelbox	1952-54	72560A/K
"	1956-60	69047A/F	Side	1954-60	52139B/F	Crosshead and rack assy.		
Inspection lamp sockets ..	1949-60	301187	"	1949	*53063B	Cut to 41 1/8" ..	1952-54	736307
Junction box	1955-60	78265A	Stop tail and number plate	1949	*53063B	Outer casing ..		
LAMPS			Relay, field exciter ..	1949-51	33099A	Motor to wheelbox ..	1952-54	739833
Head, Home			Relay, horn (when twins fitted)	1956-60	*33116B	Wheelbox to wheelbox	1952-54	*739979
R.H.D., dip left (L.H.)	1949-51	*50445K	Starting motor	1949-51	*26028A	End tube	1952-54	740031
" non-dip (R.H.)	1949-51	*50446K	" (temporary)	1951	26077A	Grommet, wheelbox ..	1952-54	734458
" dip left Later	1951-52	*50954A	"	1952-53	26086A	Arm, left hand	1952-54	*737629
"	1952	50941A	"	1954-60	26094A	" right hand	1952-54	*737628
"	1953-55	51336A				Blade	1952-54	727759
"	1956-60	51336B/J						

COMMER 'Avenger' (Rootes TS3 Diesel, 24 volt) 1954-60

Battery	1954-60	MT19E	LAMPS			Relay, horn (when twins fitted)	1956-60	33164A
Control box (serviced by C.A.V.)	1954-58	1687050	Head, Home and Export			Starting motor (serviced by C.A.V.)	1954-58	1332970
ditto	1959-60	1687051	Dip left	1954	51477A	ditto	1959-60	1332971
Fuse box	1954-60	*37137A	"	1955	51477B	Steering column control ..	1955-60	32937A/B
Generator (serviced by C.A.V.)	1954-58	1151160	"	1956-60	51477D/H	SWITCHES		
ditto	1959-60	1151161	Head, Export			Dipper	1955-60	31284A/D
Horn	1954	*069430	L.H.D., dip right ..	1954	51490A	Horn push and dipper	1954	*31325A
Low note	1955	*69041B	" Later	1954	51490B	Lighting and master ..	1955-60	31194B
"	1956-60	69055A	"	1955	51490D	Knob	—	316285
High note (optional) ..	1955	*69042B	" Later	1955-60	51490E/J	Panel	1955-60	31113A/D
"	1956-60	69056A	Head, Export Europe (not France) ..	1954	51492A	Knob	1955-56	315112
"	1956-60	69056A	ditto	1955	51492B	"	1957-60	315143
Inspection lamp sockets ..	1957-60	301187	ditto	1956-60	51492D/H	Solenoid operating ..	1955-58	31115A/E
Junction box	1954-60	78265A	Side	1954-56	†53210A/D	"	1959-60	31810A
			Stop tail and number plate	1954	52251A/B	Knob	1955-60	*317315
			Stop tail Later	1954	*†53063B	Stop lamp	1955-59	31082E/J
					53178B/D	"	1960	31802D

* See Supersession Chart † Quote voltage when ordering § Serviced by C.A.V. Ltd. L.H. .. Left hand R.H. .. Right hand continued
 L.H.D. .. Left hand drive R.H.D. .. Right hand drive
 A62 Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



COMMER 'Avenger' (Rootes TS3 Diesel, 24 volt) 1954-60—continued

§ FUEL INJECTION EQUIPMENT						
Unit	Year	Part No.	Unit	Year	Part No.	
Fuel pump	1954-59	NL3F80-96	Venturi	1954-56	BEPKE85-99V	
"	1960	NL3F80-181	"	1957-59	BEPKE85-117	
Governor	1954-55	LP9	"	1960	BEPKE85-131	
"	1956-59	LPB25	Nozzle holder	1954-60	BKBL52S656	
"	1960	LPB34	Nozzle	1954-56	BDLL10S6134	
Coupling	1954-57	FCB3	"	1957-60	BDLL10S6213	
"	1958-60	FCB5	Filter	1954-59	F2-13	
Feed pump	1954-57	DFP3-13	"	1960	F2B-13	
"	1958-60	DFP3-26				

COMMER Fire Tender or Pump Chassis 1952-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1952-53	GT11A	LAMPS—continued			SWITCHES—continued		
"	1954	6CFBE	L.H.D., dip right	1952-53	*50804D	Petrol pump	1952-53	31201B
"	1955-59	W11E	" " " Later	1952-54	*51337A	Knob	—	314026
"	1960	GT11A	" " " " "	1955	*51337B	Solenoid, starting motor	1952-60	*76411D/E
Coil, ignition	1952-55	*45012A/D	" " " " "	1956-59	*51337D/E	Solenoid operating	1952-60	31115A/E
"	1956-60	*45054D/L	" " " " Later	1959-60	*51337F/K	Knob	—	*317315
Control box	1952-53	*37139D	Head, Export Europe	1952-53	*50963A	Windshield wiper	1952-54	31248A
(serviced by C.A.V.)	1954-58	1687010	(not France)	1952-55	51339A	Knob	1952-56	*316366
"	1959-60	1687011	ditto	1956-59	51339B/H	"	1957-60	312954
Distributor	1952-53	40210A/B	ditto	1959-60	58230A/E	Windshield wipers		
"	Later	*40301B/D	Head, Export France	1952-53	*50962A	Motor	1952-58	75144A
"	1954	40359A/B	" " " " Later	1952-55	*50341A	"	1959-60	75289B
"	Later	40359D/F	" " " " " "	1956-59	*50341B/E	"	1960	75398A
Flasher unit (when fitted)	1957	*35003A	" " " " " "	1960	58231A/E	Wheelbox	1952-58	72560A/K
"	1958-60	35010A	Head, Export U.S.A.	1952-55	51343A	"	1959-60	72660A
Fuse box	1952-53	033240	"	1956-60	51343B/E	Crosshead and rack assy.		
"	1952-53	*37130A	Number plate illumination	1955-60	53343A	Cut to 41	1952-58	736307
"	1954-60	*37137A	Side	1952-53	52108A	Outer casing		
Generator	1952-53	22456A/B	"	1954-60	52139B/F	Motor to wheelbox	1952-58	739833
(serviced by C.A.V.)	1954-58	1150150	Stop tail and number plate	1952-54	*53063B	" " " (L.H.)	1959-60	743708
"	1959-60	1150152	Stop tail	1955-60	53178E/J	" " " (R.H.)	1959-60	743709
Horn	1952-56	*069213	Reflex reflector	1955	57073B	Wheelbox to wheelbox	1952-53	*739979
Low note (alternative, 1956)	1956-60	69046A/F	Starting motor	1952-53	26086A	"	1956-58	739932
High note (optional)	1956-60	69047A/F	"	1954-60	26094A	End tube	1952-58	740031
Inspection lamp sockets	1952-60	301187	Steering column control	1955-60	32937A/B	"	1959-60	740746
Junction box	1955-57	78265A	Suppressor (when fitted)	1955-60	78106A	Ferrule, casing retaining	1956-58	738410
LAMPS			SWITCHES			Grommet, wheelbox	1952-58	734458
Flasher, front and rear (optional)	1957-60	52314A	Dipper	1955-60	31284A/D	Arm, left hand	1952-53	*737629
Head, Home			Horn push and dipper	1952-54	*31325A	" " " " "	1956	*737629
R.H.D., dip left	1952-53	*50954A	Ignition and lighting	1952	34055A	" " " " "	1957-58	742275
"	Later	51336A	Knob	1953-60	31194A/D	" " " " "	1959-60	54711558
"	1953-55	51336A	"	1953-54	*31628A	" right hand	1952-53	*737628
"	1956-60	51336B/J	"	1955-60	316285	"	1956	*737628
Head, Export			Oil level indicator	1952-54	31146A	"	1957-58	742274
R.H.D., dip left	1952-53	*50954A	Knob	—	*315258	Blade	1959-60	54711557
"	Later	51336A	Panel	1952-60	31113A/D	"	1952-58	727759
"	1953-55	51336A	Knob	1952-56	315112	"	1959-60	737897
"	1956-60	51336B/J	"	1957-60	*315143	8-pin plug	1956-60	809797
						" socket	1956-60	809798

COOPER 'Monaco' Sports (Coventry Climax Engine) 1959-60

Ammeter	1959-60	36001D	Horn	1959-60	*70063F	SWITCHES		
Battery	1959-60	RCPRI1A	LAMPS			Horn push and dipper	1959-60	31438B
Coil, ignition	1959-60	45075D	Head			Lighting	1959-60	31126F
Control box	1959-60	37204J	R.H.D., dip left	1959-60	51534B/E	Knob	—	316129
Distributor	1959-60	40566B	Number plate illumination	1959-60	53518A	Petrol pump	1959-60	31201D
Fuse box	1959-60	*37137A	Side	1959-60	52325B	Knob	—	314026
Generator	1959-60	22290A/E	Starting motor	1959-60	25063F	Starting motor	1959-60	76427D

DAIMLER 27 h.p. Limousine 1946-53

Ammeter	1949-51	*36048B	LAMPS—continued			SWITCHES—continued		
"	1952-53	36002D	Side	1947-53	52098A	Solenoid operating	1946-53	*317063
Battery	1946-53	HRLT23D	" (Hooper bodies)	1951-53	52165A	Stop lamp	1946-53	31281B
Coil, ignition	1946-53	*45012A/D	Stop tail	1953	53194B	Spring	—	315543
Control box	1946-48	*37032A/B	Mirror			Terminal block	1946-53	37101A
"	1949-53	*37067A/F	Left hand	1946-53	062590	Trafficators	1946-53	54022D
Distributor	1946	*40045A	Right hand	1946-53	062587	Warning lights		
"	1947-53	*40137A/F	Interior	1946-53	062560	Ignition	1946-53	318604
Fuse box	1947-53	*385221	Starting motor	1946-53	*270299	Oil	1953	318604
Generator	1946-53	*22447A	Steering column control	1946-53	32712A	Vacuum	1946-53	*318534
Horn			SWITCHES			Windshield wipers		
Low note	1946-50	*69021A	Battery master	1946-53	76605B	Motor	1946-50	*75074H
"	1951-53	*69011F	Dipper	1946-53	31284A	"	1951-53	*75074J
High note	1946-50	*69022A	Foglamp	1946-53	31201B	Wheelbox, with switch	1946-53	72567A/E
"	1951-53	*69012F	Knob	—	*316205	" less switch	1946-53	72568A/H
Inspection lamp sockets	1946-53	38604A	Heater/Fan	1946-53	*78222A	Crosshead and rack assy.		
LAMPS			Knob	—	*768502	Cut to 57	1946-53	738223
Fog	1946-53	*55029E	Ignition and lighting	1946-50	*34021A	Outer casing		
Head, Home	1946-53	50533A	"	1951-53	34055A	Motor to wheelbox	1946-53	*739832
Head, Export	1946-53	50628A	Panel	1946-53	*314722	Wheelbox to wheelbox	1946-53	739937
Inspection	1950-53	*060090	" (alternative)	1946-53	*78236A	3", offside wheelbox	1946-53	740031
Number plate illumination	1946-53	*53034A	Knob	—	*768439	Grommet, wheelbox	1946-53	735349
Pass	1946-53	*55010A	Reverse lamp	1946-53	31281B	Arm	1946-53	*735078
Side	1946	*52084A	Solenoid, starting motor	1946-53	76022A	Blade	1946-53	727707

* See Supersession Chart § Serviced by C.A.V. Ltd. L.H. . . Left hand R.H. . . Right hand L.H.D. . . Left hand drive R.H.D. . . Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



DAIMLER 36 h.p. Limousine 1946-53

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1949-51	*36048B	Mirror			Warning lights		
Battery	1952-53	36002D	Left hand	1946-53	062590	Ignition	1946-53	318604
Coil, ignition	1946-53	HRLT23D	Right hand	1946-53	062587	Oil	1953	318604
Control box	1953	HRLT17D	Interior	1946-53	062560	Vacuum	1946-53	*318534
Distributor	1946-53	*45012A/D	Starting motor	1946-53	*270299	Windshield wipers		
Fuse box	1946-48	*37032A/B	Steering column control ..	1946-53	32717A	Motor	1946-50	75053J
Generator	1949-53	*37067E				" Later	1950	*75074H
Horn	1946-53	40077D				"	1951-52	*75074J
Low note	1946-53	*385221				"	1953	75183A
High note	1946-53	*22447A				Wheelbox, with switch	1946-52	72567A/H
Inspection lamp sockets ..	1946-53	38604A				" less switch ..	1946-52	72568A/E
						"	1953	72628
						Crosshead and rack assy.		
						Cut to 52 $\frac{3}{4}$ "	1946-52	738499
						Crosshead and rack assy.	1953	741268
						Outer casing		
						Motor to wheelbox ..	1946-52	*739832
						"	1953	740770
						Wheelbox to wheelbox	1946-52	*738009
						"	1953	740889
						End tube "	1946-52	740031
						"	1953	740746
						Grommet, wheelbox ..	1946-52	729423
						Arm	1946-52	*735057
						"	1953	*741454
						Blade	1946-52	727759
						"	1953	*737682

DAIMLER 2½ litre Models (except 'Consort') 1946-53

Battery	1946-53	SLT13A	LAMPS—continued			Terminal block	1951-53	37101A
Coil, ignition	1946-53	*45012A/D	Head, Export France	1953	*51218A	Trafficators	1946-49	54022D
Control box	1946-48	*37030A	Head, Export U.S.A.	1951-53	*50937A	"	1950-53	*54039A
"	1949	37046A	ditto (Hooper bodies)	1951-53	*50980A			
"	1950-53	*37076E	Number plate illumination	1946-47	*53034A	Warning lights		
Distributor	1946-47	*40047A/D	Pass	1950-53	53097E	Flasher	1952-53	38052B
"	1948-49	*40137A/F	Side	1948-53	55084B	Heater	1951-53	38052B
"	1950-53	40175E/F	"	1946-47	*52060A	Ignition	1946-48	*318534
Flasher unit	1952-53	*35003A	"	1948	52098A	Main beam	1952-53	38052B
Fuse box	1949	*385221	"	1949	*52060A			
" (cigar lighter) ..	1950-53	37110A	"	1950	52120E			
Generator	1946-53	*385184	" (U.S.A.)	1951-53	52150B			
" Later	1946-49	*22447A	" (U.S.A.)	1951-53	52177A			
Horn	1949-53	*22436A	Stop tail	1950-51	*53156D	Windshield wipers		
Low note	1946-53	*69021A	"	1952-53	53226A	Motor	1946-49	†75066A
High note	1946-53	*69022A	" (U.S.A.)	1952-53	53153E	"	1950	*75075J
Inspection lamp sockets ..	1946-53	38604A	Mirror	1946-51	*580593	"	1951-52	*75075K
Junction box	1946-53	78264A	" Later	1951	062548	" Later	1952-53	75153A
			" (right hand)	1952-53	*580733	Bracket, with shaft and		
			" (left hand)	1952-53	*580736	coupling	1946-48	734453
			Starting motor	1946-50	*255721	ditto	1949	737089
			Steering column control ..	1951-53	25521B/D	Shaft, short	1946-49	737243
			ditto Later	1946-49	322323	Coupling	1946-49	729036/S
				1949-53	32803A/F	Link, primary	1946-48	735448
						"	1949	737095
						" secondary	1946-48	733817
						"	1949	737097
						Clutch housing	1946-48	735691
						Wheelbox, with switch	1949	737357
						" less switch	1950-53	72612A
						Crosshead and rack assy.	1950-53	72613A
						Cut to 50 $\frac{3}{4}$ "	1950-53	738499
						Outer casing		
						Motor to wheelbox ..	1950-53	*739907
						Wheelbox to wheelbox	1950-52	*739944
						"	1953	*739979
						End tube "	1950-53	740031
						Grommet, wheelbox ..	1950-53	729423
						Arm	1946-49	*735098
						"	1950-53	*736418
						Blade	1946-49	727707
						"	1950-53	*737482
						" Later	1953	*737682

DAIMLER 2½ litre 'Consort' 1950-53

Battery	1950-53	SLT13A	LAMPS			LAMPS—continued		
Coil, ignition	1950-53	*45012A/D	Fog	1953	*55055B	Head, Export Europe		
Control box	1950-53	*37076E	" (special orders)	1953	55084B	(not France)	1950-52	*B50852B
Distributor	1950-53	40175E/F	Head, Home			ditto	1953	*B51216A
Fuse box	1950-53	37110A	R.H.D., dip left	1950-52	*50852B	Head, Export France	1953	*51218A
Generator	1950-52	*22435A/B	"	1953	50913A/D	Head, Export U.S.A.	1950-53	*50937A
" Later	1952-53	*22456A/B	" Later	1953	*51216A	Reverse, tail and number		
Horn			Head, Export			plate	1950-53	53116A
Low note	1950-53	*69021A	R.H.D., dip left	1950-52	*50852B	Side	1950-53	52120E
High note	1950-53	*69022A	"	1953	50913A/D	Stop tail and number plate	1950-53	53117A
Inspection lamp sockets ..	1950-53	39513A	" Later	1953	*51216A	Stop tail and reverse		
Junction box	1950-53	78264A	L.H.D., dip right	1950-53	*A50852B	" Later	1953	53221A
			" Later	1953	*A51216A	Starting motor	1950-53	25521B/D
						Steering column control ..	1950-53	32803A/F

* See Supersession Chart
L.H.D. .. Left hand drive

† No longer available—refer to Wiper Conversion Set Section
R.H.D. .. Right hand drive

L.H. .. Left hand R.H. .. Right hand

continued



DAIMLER 2½ litre 'Consort' 1950-53—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			Terminal block	1950-53	37101A	Windshield wipers—cont'd		
Dipper	1950-53	31284A	Trafficators	1950-53	*54039A	Crosshead and rack assy.	1950-53	736177
Ignition and lighting ..	1950-53	34063A				Outer casing		
Panel	1950-53	*31209A				Motor to wheelbox ..	1950-53	739870
Knob	1950-53	*316205	Windshield wipers			Wheelbox to wheelbox ..	1950-53	*739944
Reverse lamp	1950-53	31281B	Motor	1950	*75075J	End tube	1950-53	740031
Solenoid, starting motor ..	1950-53	*76411D	"	1951-52	*75075K	Grommet, wheelbox ..	1950-53	734652
Solenoid operating	1950-53	*31239A	" Later	1952-53	75153A	Arm	1950-53	*736418
Stop lamp	1950-53	31281B	Wheelbox, with switch ..	1950-53	72567A/H	Blade	1950-53	*737482
Spring	—	315543	" less switch ..	1950-53	72568A/E			

DAIMLER 3 litre 'Regency' Saloon and Coupé 1953

Battery	1953	GT11A	LAMPS—continued			SWITCHES—continued		
Coil, ignition	1953	*45012A/D	Number plate and reverse	1953	53161D	Panel	1953	*78259A
Control box	1953	*37139D	Side	1953	53210A	Knob	—	768662
Distributor	1953	*40280A/B	" (U.S.A.)	1953	*52162A	Petrol gauge (Coupé) ..	1953	*31390A
Flasher unit	1953	*35003A	" (Coupé)	1953	52175A	Solenoid, starting motor ..	1953	*76411D
Fuse box	1953	033239	" (coupé, U.S.A.) ..	1953	52176A	Solenoid operating	1953	31115A
Generator	1953	*22456A/B	Stop tail	1953	53199B	Knob	—	*317335
Horn			" (Coupé)	1953	53178D	Stop lamp	1953	31281B
Low note	1953	*69011F	Stop tail and flasher ..			Spring	—	315543
High note	1953	*69012F	(U.S.A.)	1953	53153E	Windshield wiper	1953	31113A
Horn relay	1953	*33116B	Mirror	1953	620800	Knob	—	*316491
Inspection lamp sockets ..	1953	38604A	Starting motor	1953	25521B/D	Terminal block	1953	37101A
Junction box	1953	78266A	Steering column control ..	1953	32871A/B	Trafficators	1953	54044A
LAMPS			SWITCHES			Windshield wipers		
Fog	1953	55043E	Blower (Coupé)	1953	31113A	Motor	1953	75152A
Head, Home			Knob	—	*316498	Wheelbox	1953	*72548A/K
R.H.D., dip left	1953	*51216A	Dipper	1953	31284A	Crosshead and rack assy.		
Head, Export			Foglamp	1953	31113A	Cut to 50 mm	1953	738499
R.H.D., dip left	1953	*51216A	Knob	1953	*316499	Outer casing		
L.H.D., dip right	1953	*A51216A	Heater/Fan	1953	78250A	Motor to wheelbox ..	1953	*739907
Head, Export Europe ..			Knob	—	*768663	Wheelbox to wheelbox ..	1953	*739979
(not France)	1953	*B51216A	Ignition	1953	31287A	End tube	1953	740031
Head, Export France ..	1953	*51218A	Interior light (Coupé) ..	1953	31113A	Grommet, wheelbox ..	1953	734652
Head, Export U.S.A. ..			Knob	—	*316497	Arm, left hand drive ..	1953	*737571
(Hooper bodies)	1953	*51217A	Lighting	1953	31303A	" right hand drive ..	1953	*737570
			Knob	—	316637	Blade	1953	738724

DAIMLER 'Conquest' ('Century') Saloon 1954-58

Battery	1954-58	GT9A	LAMPS—continued			SWITCHES—continued		
Coil, ignition	1954-55	*45012A/B	Number plate and reverse	1954-58	53161D	('Century')	1958	78314A
" Later	1955-58	*45054A/J	Side	1954-57	53210A/F	Knob	—	768975
Control box	1954-55	*37138A/D	"	1958	52250B	Reverse lamp	1955-58	31281B
"	1956-58	37182F/H	Side and flasher (U.S.A.) ..	1954-58	*52162B/E	ditto (Borg Warner		
Distributor	1954	40394A	Stop tail	1954-55	53199B	models)	1957-58	*31077E
" Later	1954	40394B/D	Stop tail, flasher and reflex	1956-58	53410B	Solenoid, starting motor ..	1954-56	*76411D/E
"	1955-57	40424A/E	Stop tail and flasher ..			1957-58	*76443A	
"	1958	40531A	(U.S.A.)	1954-55	53153E	Switch, circuit breaker ..		
Flasher unit (U.S.A.) ..	1954-57	*35003A	Reflex reflector	1955	57072A	(Borg Warner models) ..	1957-58	*31077E
"	1958	35010A	Starting motor	1954-58	25521B/D	Solenoid operating	1954-55	31115A
Flasher relay	1956-58	33117D	Steering column control ..	1954	32909A/B	Knob	—	315047
Fuse box	1954-58	033239	ditto	1955-58	32926A/H	Solenoid operating ..		
Generator	1954-55	22258D	ditto ('Conquest') ..	1956	32909A/B	('Conquest')	1956	31115E
"	1956-58	22258E/F	SWITCHES			Knob	—	*317335
Horn			Blower	1956	31113D	Stop lamp	1954-58	31281B
Low note	1954	*69011F	Knob	—	*316498	Spring	—	315543
"	1955-58	69046A/E	Dipper	1954-58	31284A	Windshield wiper	1954-58	31113A/D
High note	1954	*69012F	"	1956-57	31113D	Knob	1954-55	*315135
"	1955-58	69047A/E	Foglamp	1956	*316499	" (brown)	1956	*316491
Inspection lamp sockets ..	1954-58	38604A	Knob ('Conquest') ..	1956	316370	" (black)	1956-58	316371
Junction box	1954-58	78266A	" ('Century')	1956-58	316370	Terminal block	1954-58	37101A/B
LAMPS			Heater/Fan	1954-55	78250A/D	Trafficators	1954-58	54044A/E
Driving	1956-58	55132D	Knob	1954	*768663	Windshield wipers		
" (France)	1958	55161A	"	1955	768378	Motor	1954-55	*75174F
Fog	1954-55	55043E	Ignition ('Conquest') ..	1954-56	31287A/B	"	1956-57	*75200B
"	1956-58	55128D	Ignition and starting ..			"	1958	75296B
" (France)	1956-58	55160B	('Century')	1956-58	31593A	Wheelbox	1954-55	72636D
Head, Home			Lighting	1954	31303A	"	1956-58	72660A
R.H.D., dip left	1954-55	51336A	Knob	—	316637	Crosshead and rack assy.	1954-55	*743234
"	1956-58	51336B/J	Lighting	1955-58	31428B/E	Cut to 42 mm	1956-58	*743231
Head, Export			Knob (brown)	1955-56	312622	Outer casing		
R.H.D., dip left	1954-55	51336A	" (black)	1956-58	312550	Motor to wheelbox ..	1954-55	740901
"	1956-58	51336B/J	" (Borg Warner			Wheelbox to wheelbox ..	1956-58	744149
L.H.D., dip right	1954	*51337A	models)	1957-58	313653	"	1954-55	740982
"	1955	*51337B	Panel rheostat	1954-55	*78259A	End tube	1956-58	744150
"	1956-58	*51337D/E	Knob	—	768378	Arm, left hand drive ..	1954-58	747476
Head, Export Europe ..			Panel rheostat	1956	78314A	"	1954-55	*741293
(not France)	1954-55	51339A	('Conquest')	1956	768662	" right hand drive ..	1956-58	745072
ditto	1956-58	51339B/H	Knob	—	78299B	"	1954-55	*741292
Head, Export France ..	1954-55	*51341A	('Century')	1956-57	78299B	Blade	1956-58	745071
"	1956-58	*51341B/E	Knob	—	313600		1954-58	738724

DAIMLER 'Conquest' Roadster and Drophead Coupé 1954-57

Battery	1954-57	GT9A	Flasher unit	1955-57	*35003A	Horn		
Coil, ignition	1954-55	*45012B	Flasher relay	1955-57	33117A	Low note	1954	*69011J
" Later	1955-57	*45054A/H	Fuse box	1954-57	033239	High note	1955-57	69046A/E
Control box	1954-55	*37138D	Generator	1954-55	22258D	"	1954	*69012J
"	1956-57	37182F/H	"	1956-57	22258E	Inspection lamp sockets ..	1954-57	69047A/E
Distributor	1954-57	40424A/E				Junction box	1954-57	38604A
								78266A

* See Supersession Chart

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



DAIMLER 'Conquest' Roadster and Drophead Coupé 1954-57—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS			Reflex reflector	1955-57	57072A	SWITCHES—continued		
Driving	1954-57	55132B	Starting motor	1954-57	25521D	Windshield wiper	1954-57	31113A/D
Flasher, front (Coupé) ..	1956-57	*52246B	Steering column control ..	1954-57	32926A/H	Knob	1954-55	*315135
Fog (Roadster)	1954-55	55128B				Terminal block	1956-57	*316491
" (Coupé)	1954-55	55043E	SWITCHES			Trafficators	1954-57	37101B
" (France)	1956-57	55128B	Dipper	1954-57	31284A	Windshield wipers	1954-57	54044D/E
Head, Home and Export			Foglamp	1956-57	31113D	Motor	1954-55	*75174E
Vertical dip	1954-57	51535A	Knob	—	*316499	Wheelbox	1956-57	*75200B
" " " " Later	1957	51535D/F	Heater/Fan	1954-55	78250D	" " " "	1954-55	72636D
Head, Export France ..	1954	51591A	Knob	—	768378	" " " "	1956-57	72660A
" " " "	1955	51591B	Ignition	1954-57	31287A/B	Crosshead and rack assy.	1954-55	*743234
" " " "	1956	51591D	Lighting	1954	31303A	Cut to 42 $\frac{3}{8}$ "	1956-57	*743231
Number plate illumination			Knob	—	316637	Outer casing		
(Roadster)	1954-55	53093E	Lighting	1955-57	31428B/D	Motor to wheelbox ..	1954-55	740901
(Coupé)	1956-57	53093H	Knob	—	312622	" " " "	1956-57	744149
Number plate illumination			Panel	1954	78250D	Wheelbox to wheelbox	1954-55	740982
and reverse (Coupé) ..	1954-55	53161D	Knob	1955	*78259A	" " " "	1956-57	744150
Reverse (Roadster) ..	1955	53378A	Knob	1954-55	768378	End tube " " " " ..	1954-57	740746
" (Coupé)	1956-57	53378A	Reverse lamp	1954-57	31281B	Arm, left hand drive		
Side (Roadster)	1954-55	52175B	Solenoid, starting motor	1954-57	*76411E	Coupé	1954-55	*741293
" (Coupé)	1956-57	52175B	Solenoid operating	1954-57	31115A/B	Roadster	1954	*741293
Side and flasher (Coupé)	1954-55	*52162E	Knob	1954-55	315042	" " " "	1955	741837
Stop tail (Roadster) ..	1954-55	*53372A	" " " "	1956-57	*317335	Arm, left hand drive	1956-57	745072
" (Coupé)	1956-57	*53372A	Stop lamp	1954-57	31281B	" " right hand drive	1954-55	*741292
Stop tail and flasher			Spring	—	315543	" " " "	1956-57	745071
(Coupé)	1954-55	53153E				Blade	1954-57	738724

DAIMLER DC27 Ambulance 1949-54

Ammeter	1949	*369274	LAMPS—continued			SWITCHES—continued		
Battery	1950-54	*36104A	Stop tail and reverse ..	1949-50	*53143B	Stop lamp	1949-54	31281B
Coil, ignition	1949-54	HRLT23D	ditto	1951-54	53203B	Spring	1954-54	315543
Control box	1949	*45012A/D	ditto (U.S.A.)	1951-54	53183B	Windshield wiper ..	1949-54	31201B
Distributor	1950-54	*37048E	Starting motor	1950-54	*270244	Knob	1949-54	*316206
Fuse box	1949-54	40179A/D	Steering column control	1949-54	26043A	Terminal block	1949-54	37101A
Generator	1949-52	*22435A/B			32808B/F	Trafficators	1949-54	*54039A
Horn	1949-54	*069399	SWITCHES			Warning lights		
LAMPS			Battery master	1949-54	76605B	Ignition	1949-54	*38013B
Fog	1949-54	*55055B	Bell push	1949-54	76201A	Main beam	1949-54	38052B
Head, Home	1949-54	*50445K	Dipper	1949-54	31226B	Oil	1949-54	*38042A
R.H.D., dip left (L.H.)	1949-54	*50446K	Foglamp	1949-54	*316204	Windshield wipers		
non-dip (R.H.)	1949-54	*50446K	Knob	—	*78249A	Motor	1949-51	*75055K
Head, Export	1949-54	*50445K	Heater or fan	1949-54	768378	" " " "	1953-54	75152A
R.H.D., dip left	1949-54	*50445K	Knob	—	31201B	" " " "	1949-54	72614
L.H.D., dip right	1949-54	*A50445K	Ignition	1949-54	*31201B	Crosshead and rack assy.		
Head, Export Europe			Knob	—	*316216	Cut to 15 $\frac{1}{8}$ "	1949-54	738987
(not France)	1949-54	*B50445K	Interior	1949-54	*31051A	Cap, rubber	1953-54	760234
Head, Export France ..	1949-54	*50790E	Lighting	1949-54	*34058A	Outer casing		
Head, Export U.S.A. ..	1949-54	*50804D	Panel	1949-54	31201B	Motor to wheelbox		
Side	1949-54	52139B	Knob	—	*316205	Left hand drive ..	1949-54	*739855
" (U.S.A.)	1951-54	*52162A	Reverse lamp	1949-54	31281B	Right hand drive ..	1949-52	*739855
			Solenoid, starting motor	1949	76022A	" " " "	1953-54	*739884
			Solenoid operating ..	1949-54	*76411D	End tube " " " " ..	1949-54	740031
					*317067	Arm	1949-54	738929
						Blade	1949-54	738930

DAIMLER 'Empress' Saloon: 'Regency' (and 'Sportsman'): 'Regina' Limousine 1955

Battery	1955	GT11A	LAMPS—continued			SWITCHES—continued		
Coil, ignition	1955	*45012B	Head, Export Europe			Reverse lamp	1955	31281B
" " " " Later	1955	*45054A	(not France)			Solenoid, starting motor	1955	*76411E
Control box	1955	*37139E	('Empress' & 'Regency')	1955	51700A	Solenoid operating ..	1955	31115A
Distributor			('Regina')	1955	*B50979A	Knob	—	315042
('Empress' and 3 $\frac{1}{2}$ litre			Head, Export France ..	1955	51701A	Stop lamp	1955	31281B
'Regency')	1955	40429D	('Empress' & 'Regency')	1955	50981B	Spring	—	315543
(4 $\frac{1}{2}$ litre 'Regency' and			('Regina')	1955		Windshield wiper ..	1955	31430A
'Regina')	1955	40476A	Head, Export U.S.A. ..	1955	51646A	Knob	—	312626
Flasher unit	1955	*35003A	('Empress' & 'Regency')	1955	53278B	Terminal block	1955	37101B
Flasher relay	1955	33117A	Number plate illumination	1955	53378A	Windshield wipers		
Fuse box	1955	37110A	Reverse	1955		Motor		
Generator	1955	*22456B	Side	1955	52175B	('Empress')	1955	*75183D
" " " " Later (except			('Empress' & 'Regency')	1955		(Other models, L.H.D.)	1955	*75235A
'Regina')	1955	*22483A	Side and flasher	1955	*52162B	(" " " " R.H.D.)	1955	*75236A
Horn	1955	69046A	('Regina')	1955	*53372A	Wheelbox	1955	72636D
Low note	1955	69047A	Stop tail	1955	57072A	('Empress')	1955	72671A
High note	1955	38604A	Reflex reflector	1955		(Other models) ..	1955	
Inspection lamp sockets	1955	78266A	Starting motor	1955	25521D	Crosshead and rack assy.		
Junction box	1955		('Empress' and 3 $\frac{1}{2}$ litre	1955		'Empress' Cut to 54 $\frac{3}{8}$ "	1955	741262
LAMPS			'Regency')	1955	26043A	Other models		
Driving	1955	55132B	(4 $\frac{1}{2}$ litre 'Regency' and	1955	32925B	Cut to 44 $\frac{3}{8}$ "	1955	741264
Flasher, front	1955	*52246A	'Regina')	1955	32947A	Outer casing		
Fog	1955	55128B	Steering column control	1955	31284A	Motor to wheelbox		
Head, Home	1955		('Regency')	1955	31472A	('Empress')	1955	740969
R.H.D., dip left			('Regency')	1955	31113A	(Other models) ..	1955	745227
('Empress' & 'Regency')	1955	51698B	SWITCHES			Wheelbox to wheelbox		
('Regina')	1955	*50979A	Dipper	1955	315042	('Empress')	1955	740776
Head, Export	1955		Door light ('Regina') ..	1955	31113A	(Other models) ..	1955	740746
R.H.D., dip left			Foglamp	1955	315042	End tube	1955	
('Empress' & 'Regency')	1955	51698B	Knob	—	31113A	Arm		
('Regina')	1955	*50979A	Heater motor	1955	315042	('Empress')	1955	*741454
L.H.D., dip right			Knob	—	31287A	(Other models, L.H.D.)	1955	745081
('Empress' & 'Regency')	1955	51699B/D	Ignition	1955	31428B	(" " " " R.H.D.)	1955	745080
('Regina')	1955	*A50979A	Lighting	1955	312622	Blade	1955	738724
			Knob	—	78314A	(Other models) ..	1955	738734
			Panel	1955	768662			
			Knob	—				

* See Supersession Chart L.H.D. .. Left hand drive R.H.D. .. Right hand drive



DAIMLER 3½ litre 'One-O-Four' Saloon 1956-59: 'One-O-Four' Lady's Model 1956: 4½ litre Limousine 1956-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter (Lady's Model)	1956	36222B	LAMPS—continued			SWITCHES—continued		
Battery	1956-60	GT11A	Side (3½ litre)	1956-59	52175D	Stop lamp	1956-60	31082B/H
Coil, ignition	1956-60	*†45054H/K	" (4½ litre)	1957-60	52175D	Windshield wiper	1956-57	31430B
Control box	1956-59	*37189H/J	Side and flasher (4½ litre)	1956	52162E	"	1958-60	31302D
Distributor (3½ litre)	1956-57	37303A/B	Stop tail (3½ litre)	1956-59	*53372A	Knob (black)	1956-57	312626
" Later	1958-59	40524A	" (4½ litre)	1956	*53372A	" (brown)	1956	312644
"	1958-59	40429A/D	Stop tail and reflex (4½ litre)	1957-59	53377B	"	1958-60	*317621
"	1959	40524A	Reflex reflector (3½ litre)	1956-59	57072B	Terminal block	1956-60	37101B
Flasher unit	1956-60	40476A	" (4½ litre)	1956	57072B	Trafficators (3½ litre)	1956-59	54044E
" (4½ litre)	1956-57	*‡35003A	Starting motor			Warning lights (Lady's Model)		
"	1958-60	‡35010A	(3½ litre)	1956-58	25521D	Ignition	1956	38100A
Flasher relay (3½ litre)	1956-59	‡33117D	" Later	1958-59	25533D	Main beam	1956	38143A
" (4½ litre)	1956-57	33117D	(4½ litre)	1956-60	26043A	Oil pressure	1956	38144A
Fuse box	1956-59	37110A	" alternative)	1958-60	26038A	Trafficator	1956	38143A
Generator	1956	*22483A	Steering column control			Windshield wipers		
"	1957-58	*22483B/D	(3½ litre Saloon)	1956-57	32925D	Motor, left hand drive	1956-58	*75235A
"	1959	*22456F	" (Lady's Model)	1956	32926A/H	" right hand drive	1959-60	75310A
" (alternative)	1959	*22483B/D	" Lady's Model)	1956	32926A/H	"	1956-58	*75236A
" Later	1959-60	22489B/D	All Models	1958-60	32926A/H	"	1959-60	75311A
Horn			SWITCHES			Wheelbox	1956	*72671A
Low note	1956-60	69046B/F	Blower (Lady's Model)	1956	*31498A	"	1957	72660A
High note	1956-60	69047B/F	Knob	—	313600	" (3½ litre)	1958-59	72636D
Inspection lamp sockets	1956-60	38604A	Blower (other models)	1956-60	31113D	" (4½ litre)	1958-60	72660A
Junction box	1956-60	78266A	Knob	—	*316498	Crosshead and rack assy.		
LAMPS			Dipper	1956-60	31284A/D	(3½ litre)	1956-59	*743231
Boot (3½ litre)	1956-59	53235B	Door light (3½ litre)	1956-59	31175F	(4½ litre)	1956-57	*743231
Driving			Foglamp (Lady's Model)	1956	*31498A	"	1958 60	*741278
(3½ litre)	1956-59	55132B	Knob	—	313600	Outer casing		
" (France)	1958-59	55161A	Foglamp (other models)	1956-60	31113D	Motor to wheelbox		
(4½ litre)	1956-57	55132B	Knob	—	*316499	(3½ litre)	1956 59	745227
"	1958-60	*55159A	Heater (4½ litre)	1957-60	31685A	(4½ litre)	1956-57	745227
" (France)	1958-60	55208A	Ignition (except Lady's Model)	1956-60	31287B/F	"	1958-60	744892
Flasher, front			Ignition and starting			Wheelbox to wheelbox		
(3½ litre, U.S.A.)	1956-59	*52246B	(Lady's Model)	1956	31593A	(3½ litre)	1956-59	745226
(4½ litre)	1957-60	53359A/E	Interior, dash (4½ litre)	1957-60	31113D	(4½ litre)	1956-57	745226
Flasher, rear (4½ litre)	1957-59	*52278B	Knob	—	*316497	(4½ litre)	1958-60	744891
Flasher, repeater (4½ litre)	1957-60	52326B	Interior, rear (4½ litre)	1957-60	*31686A	"	1956-60	740746
Fog			Lighting	1956-60	31428D/H	End stop	1956-60	740746
(3½ litre)	1956-59	55128D	Knob (brown)	1956-60	312622	Ferrule, casing retaining		
" (France)	1956-59	55160B	" (black)	1956	312550	Grommet, wheelbox		
(4½ litre)	1956-57	55128D	" (Borg Warner Models)	1957-58	313653	(4½ litre)	1958-60	740811
"	1958-60	55196A	Panel (Lady's Model)	1956	78299B	Arm, left hand drive		
" (France)	1956-57	55160B	Knob	—	313600	(3½ litre)	1956-59	745081
"	1958-60	55160B	Panel (other models)	1956-60	78314A	(4½ litre)	1956-57	745081
Head, Home			Knob	—	768662	"	1958-59	741810
R.H.D., dip left	1956-59	51698B	Reverse lamp	1956-60	31281B	Arm, left hand drive	1960	54712081
" Later	1959-60	51698D	ditto (Borg Warner Models)	1957-58	*31077E	Arm, right hand drive		
Head, Export			Solenoid operating	1956	*76411E	(3½ litre)	1956-59	745080
R.H.D., dip left	1956-59	51698B	(except Lady's Model)	1956-60	*76443A	(4½ litre)	1956-57	745080
" Later	1959-60	51698D	Switch, circuit breaker			"	1958-59	741810
L.H.D., dip right	1956-59	51698B	(Borg Warner Models)	1957-58	*31077E	Arm, right hand drive	1960	54712081
"	1956-60	51699B/D				Blade (3½ litre)	1956-59	738734
Head, Export Europe						" (4½ litre)	1956-57	738734
(not France)	1956-60	51700A				"	1958-60	737897
Head, Export France	1956-60	51701A						
Head, Export U.S.A.	1956-60	51646A						
Number plate illumination	1956-60	53278B						
Reverse	1956-60	53378A						

DAIMLER 'Majestic' 1959-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1959-60	GT11A-3	LAMPS—continued			SWITCHES—continued		
Coil, ignition	1959-60	*45054K	Head, Home			Lighting	1959-60	31428H
Control box	1959-60	37303A	R.H.D., dip left	1959	51698B	Panel	1959-60	78331A
Distributor	1959-60	*40614A/B	" Later	1959-60	51698D	Reverse lamp	1959	31281B
Flasher unit	1959-60	35010A	Head, Export			"	1960	*31077E
Fuse box	1959-60	033239	R.H.D., dip left	1959	51698B	Solenoid, starting motor	1959-60	*76443A
Generator	1959	*22456F	" Later	1959-60	51698D	Windshield wiper	1959-60	*31427E
" (alternative)	1959	*22483D	L.H.D., dip right	1959-60	51699B/D	Warning lights		
" Later	1959-60	22489B/D	Head, Export Europe			Flasher	1959-60	38124D
Horn			(not France)	1959-60	51700A	Ignition	1959-60	38100A
Low note	1959-60	69046F	Head, Export France	1959-60	51701A	Oil	1959-60	38144A
High note	1959-60	69047F	Head, Export U.S.A.	1959-60	51646A	Windshield wipers		
Inspection plug and socket	1959-60	38604A	Number plate illumination	1959-60	53278B	Motor, left hand drive	1959-60	75310A
LAMPS			Reverse	1959-60	53378A	Motor, right hand drive	1959-60	75311A
Boot	1959-60	53235B	Roof	1959-60	56061B	Wheelbox	1959-60	72673B
Driving	1959-60	55132B	Side	1959-60	52426B	Crosshead and rack assy.		
" (France)	1959-60	55161A	Stop tail	1959-60	53377B	Cut to 35 3/8"	1959-60	744254
Flasher, front			Starting motor	1959-60	25533D	Outer casing		
" (U.S.A.)	1959-60	52337A	Steering column control	1959-60	32926H	Motor to wheelbox	1959-60	54710655
"	1959-60	52345A	SWITCHES			Wheelbox to wheelbox	1959-60	745226
Flasher, rear			Blower	1959-60	*31557A	End tube	1959-60	740746
"	1959	*52272D	Dipper	1959-60	31248D	"	1959	741845
" (U.S.A.)	1960	*52278B	Foglamp	1959-60	*31557A	Arm, left hand drive	1960	54711558
"	1959-60	53686D	Ignition and starter	1959-60	*31678D	"	1959	741844
Fog	1959-60	55128B	Interior	1959	*31411A	" right hand drive	1960	54711557
" (France)	1959-60	55160A	"	1960	*31378A	Blade	1959-60	737897

* See Supersession Chart
L.H.D. .. Left hand drive

† Suitable replacement after 1957
R.H.D. .. Right hand drive

‡ U.S.A. only on 3½ litre

§ Australia only

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



DAIMLER SP250 Sports 1960

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1960	36263A	LAMPS—continued			SWITCHES—continued		
Battery	1960	BT9A	Fog	1960	55213A/B	Panel	1960	*31851A
Coil, ignition	1960	45102D	Head, Home			Reverse lamp	1960	31696A
Control box	1960	37299A	R.H.D., dip left ..	1960	58260A/D	Solenoid, starting motor	1960	*76465A
Distributor	1960	40676A/D	Head, Export			Stop lamp	1960	31882A
Flasher unit	1960	35020A	R.H.D., dip left ..	1960	58260A/D	Windshield wiper ..	1960	31836B
Fuse box	1960	033283	L.H.D., dip right ..	1960	58560A			
Generator	1960	22700D	Head, Export France ..	1960	58561A	Windshield wiper		
Generator (temporary alternative)	1960	*22704A	Number plate illumination	1960	53093H/J	Motor	1960	75371A
Horn			Side	1960	52426B	Wheelbox	1960	72693B
Low note	1960	69046F	Stop tail	1960	53818A/B	Crosshead and rack assy.	1960	*743223
High note	1960	69047F	Reflex reflector	1960	575883	Outer casing		
LAMPS			Starting motor	1960	25533D	Motor to wheelbox ..	1960	54711646
Driving	1960	55212A/B	Steering column control ..	1960	33549A	Wheelbox to wheelbox	1960	54711647
Flasher, front	1960	52337A	ditto (alternative)	1960	33556A/B	End tube		740746
" " (U.S.A.)	1960	52345A	SWITCHES			Arm, left hand drive ..	1960	54711565
Flasher, rear	1960	52459A	Dipper	1960	31800A	" right hand drive ..	1960	54711566
" " (U.S.A.)	1960	52460A	Ignition and starting ..	1960	31799B	Blade	1960	737910
			Lighting	1960	31788B			

DELLOW MOTORS Sports Mk. III 1952-54: Mk. IIC 1955-57: Mk. V Lightweight 1955-57

Ammeter	1952	*36151A	LAMPS—continued			SWITCHES—continued		
" " " " Later	1952-57	*36117B	Head, Export			Stop lamp	1952-54	31281B
Battery	1952-54	SLG13E	R.H.D., dip left ..	1952-54	*50985A	Spring	—	315543
" " " " " "	1955-57	SLT13	" " " " " "	1955-57	50988A	Warning lights		
Coil, ignition	1952-54	*45016A	Number plate illumination	1952-54	A53093E	Flasher	1955-57	38067A
" " " " " "	1955-57	*45012A	" " " " " "	1955-57	53093E	Ignition	1952-54	*38012B
Control box	1955-57	*37172A	Side	1952	*A52040A	" " " " " "	1955-57	*38065A
Distributor	1952-54	40286A	" " " " " "	1953-54	A52182A	Main beam	1955-57	*38069A
" " " " " "	1955-57	40402A/N	" " " " " "	1955-57	*52182A	Windshield wipers		
Fuse box	1952-57	*37137A	Stop tail	1952-54	*A53178D	Motor	1952-54	*75121A
Generator	1952-54	22009E/F	" " " " " "	1955-57	53178D	" " " " " "	1955-57	*75120A
" " " " " "	1955-57	22258D	Reflex reflector	1955-57	57031A	Coupling bar	1953-57	732227
Horn	1952-54	069343	Relay	1952-54	33154A	Bearing, passenger side	1953-57	731721
" " " " " "	1955-57	069344	Starting motor	1952-54	26009A/D	Arm, left hand	1952-54	*732927
LAMPS			" " " " " "	1955-57	25022A/L	" " " " " "	1955-57	735111
Dash	1952-54	*A56010A	SWITCHES			" right hand	1952-54	*732926
" " " " " "	1955-57	56010A	Dipper	1952-53	31001A	" " " " " "	1955-57	735110
Flasher, rear (Mk. IIC) ..	1955-57	53362A	" " " " " "	1955-57	*31263A	Blade	1952-57	727784
Flasher, side (Mk. V) ..	1955-57	52240A	Horn and dipper Later	1953-54	*31263A			
Head, Home			Ignition and lighting ..	1952-57	31270A			
R.H.D., dip left ..	1952-54	*50985A	Knob	—	316285			
" " " " " "	1955-57	50988A						

DIAMOND MOTORS Pedestrian Controlled Battery Vehicle 1951-56

Horn	1951-56	*069213	LAMPS			SWITCH		
Horn push	1951-56	76205A	Side	1951-56	52034A	Lighting	1951-56	31291A
Junction box	1951-56	78264A	Tail and number plate ..	1951-56	*53041B			

DODGE 61C, 100C and 101C 1947-48: 120C 1947: 122C 1947-48

Ammeter	1947-48	36047D	Control box .. Later	1948	37065E	SWITCHES		
Coil, ignition			Distributor	1947-48	40090A/E	Dipper	1947-48	31284A
6 volt	1947	*45016A	Fuse box (6 volt) ..	1947	*385221	Ignition and Lighting ..	1947-48	*344540
12 volt	1947-48	*45020A	Horn (6 volt)	1947	069343	Warning lights		
Control box (6 volt) ..	1947	*37063A	" (12 volt) .. Later	1947-48	069344	6 volt	1947	*38012B
" " (12 volt) Later	1947-48	*37032A				12 volt	1947-48	*38013B

* See Supersession Chart L.H.D. .. Left hand drive R.H.D. .. Right hand drive



DODGE Petrol Models 1949-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery (suitable replacement) ..	1955-57	GT9A	LAMPS—continued			SWITCHES—continued		
" " " " ..	1958	MT13A	Head, Export			Lighting and horn push (F.C.) ..	1958-60	31769B/M
" " " " ..	1959-60	FRT9A-8	R.H.D., dip left ..	1950-51	*50799D	" " " " ..		
Coil, ignition ..	1949-50	*45020A/B	" " " " Later ..	1951	*50959A	Lighting, horn push and flasher (when fitted, F.C.) ..	1958-60	*31794A/J
" " " " ..	1951-56	*45012A/B	" " " " ..	1952	*50992A	Panel ..	1949-54	*31276A
" " " " ..	1957-60	*45054A/J	" " " " ..	1953-55	51344A	" (F.C. and S.F.C.) ..	1957	*31276A
Control box ..	1949-50	37065E	" " " " ..	1956-59	51344B	" (N.C.) ..	1957	*31498A
" " " " ..	1951-52	*37076E	L.H.D., dip right ..	1959-60	51344D/F	Knob ..	—	31287I
" " " " ..	1953-57	*37139D/E	ditto (Tractor and Bus only) ..	1950-51	*A50799D	Panel (F.C. and N.C.) ..	1958-60	*31498A
" " " " Later ..	1958-60	37183H	ditto ..	1951	*50960A	Knob ..	—	31287I
" " " " (Light Bus) ..	1959-60	*37207F	ditto ..	1951-52	*50528M	Solenoid, starting motor ..	1949-60	*76411D/E
Distributor ..	1949-54	40166A	ditto ..	1953-54	*51345A	Solenoid operating ..	1949-57	*31071A
" " " " ..	1955-56	40444A/D	ditto ..	1955	*51345B	ditto (S.F.C. & N.C.) ..	1958-60	*31071A
" " " " ..	1957	40467D	ditto ..	1956-60	*51345D/F	Stop lamp ..	1953-60	31082B/E
" " " " (Australia) ..	1958-60	40444D/E	Head, Export Europe (not France) ..	1950-51	*B50799D	Windshield wiper ..	1957-60	*31498A
" " " " ..	1960	40467D	ditto ..	1951-52	*50961A	Knob ..	—	31287I
Fuse box ..	1949-52	*37137A	ditto ..	1953-55	51346A	Warning lights		
" " " " ..	1953-60	033239	ditto ..	1956-60	51346B/E	Ignition ..	1949-56	*38013B
Generator ..	1949-50	*22446A	Side ..	1949-51	52154A	" (N.C.) ..	1957	38158A
" " " " ..	1951-52	*22435A/B	" " " " ..	1952-53	*52079A	" (S.F.C.) ..	1957	38100A
" " " " ..	1953-55	*22456A/B	" " " " Later ..	1953-56	*52040A	" " " " ..	1958	*38013B
" " " " ..	1956	*22483A	" (Bus, special orders) ..	1957-58	*52040A	" (F.C. and N.C.) ..	1958-60	38158A
" " " " ..	1957-59	*22483B/D	" (alternative) ..	1956	*52079A	Windshield wipers		
" " " " Later ..	1959-60	22489D	" (S.F.C.) ..	1957-58	*52079B	Motor ..	1949-56	75091A
Horn ..	1949-60	*069399	" (N.C. and Bus, special orders) ..	1957-60	52250B	Special orders (S.F.C.) ..	1957-58	75091A
Low note (alternative) ..	1955	*69011J	" (F.C.) ..	1958-60	52321A	Knob ..	1957-60	75289A
" " " " ..	1956-60	69046A/F	Stop tail ..	1949-57	Serviced by Butlers Ltd.	Wheelbox ..	1957-60	72660A
High note (optional) ..	1955	*69012J	Reflex reflector ..	1956-57	57032B	Crosshead and rack assy. ..	1957-60	72660A
" " " " ..	1956-60	69047A/F	" (N.C. S.W.B. Tipper) ..	1958-60	57044A	Outer casing ..	1957-60	743722
Horn relay (when twins fitted) ..	1956-60	*33116B	Starting motor ..	1949	26025A/H	Motor to wheelbox ..	1957-60	743708
LAMPS			" " " " ..	1950-55	26050A	Left hand ..	1957-60	743709
Flasher (when fitted) ..	1958-60	53367D	ditto ..	1956-60	26100B	Right hand ..	1957-60	740746
Head, Home			Steering column control ..	1955-58	32942A/B	End tube ..	1957-60	735156
R.H.D. (L.H.) ..	1949	50606B	ditto (N.C.) ..	1959-60	32937B	Arm ..	1949-56	735156
" (R.H.) ..	1949	50707A	SWITCHES			" (S.F.C.) ..	1957-58	745081
R.H.D., dip left ..	1950-51	*50799D	Dipper ..	1949-60	31284A/B	" (N.C.) ..	1957-60	745080
" " " " ..	1951	*50959A	" (Australia) ..	1955	31277A	right hand (N.C.) ..	1957-60	727803
" " " " ..	1952	*50992A	Ignition and lighting ..	1949-56	*34018A/B	" " " " ..	1957	*737683
" " " " ..	1953-55	51344A	ditto (F.C. & S.F.C.) ..	1957-58	*34018B	Blade ..	1949-57	727803
" " " " ..	1956-59	51344B	ditto (N.C.) ..	1957-60	31270B	" (N.C.) ..	1957	*737683
" " " " Later ..	1959-60	51344D/F	Knob ..	—	316285	" " " " ..	1958-60	741680

DODGE (Perkins Diesel) P6 1951-60: P4 1958-60 (12 volt)

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery (suitable replacement) ..	1955-57	MM17	LAMPS—continued			SWITCHES—continued		
ditto (P4) ..	1958	MT13A	L.H.D., dip right ..	1951	*A50799D	Lighting and horn push (F.C.) ..	1958-60	31769B
ditto ..	1959-60	STXT19E	" " " " Later ..	1951	*50960A	" " " " ..		
ditto (P6) ..	1958	MM17	" " " " ..	1952	*50528M	Lighting, horn push and flasher (when fitted) (F.C.) ..	1958-60	*31794A
ditto ..	1959-60	HRT21E	" " " " ..	1953-54	*51345A	Panel ..	1951-56	*31276A
Control box ..	1951-57	*37139D/E	" " " " ..	1955	*51345B	" (F.C. and S.F.C.) ..	1957-58	*31276A
" " " " ..	1957-60	37183H	Head, Export Europe (not France) ..	1956-60	*51345D/F	" (N.C.) ..	1957-58	*31498A
" " " " (Bus, serviced by C.A.V.) ..	1951-53	1685030	ditto ..	1951	*B50799D	Knob ..	1957-58	31287I
ditto ..	1954-60	1688030	ditto ..	1951-52	*50961A	Panel ..	1959-60	*31498A
Fuse box ..	1951-60	033239	ditto ..	1953-55	51346A	Knob ..	—	31287I
Bus ..	1951-58	*37137A	Side ..	1956-60	51346B/E	Solenoid operating (serviced by C.A.V.) ..	1951-60	1823410
(serviced by C.A.V.) ..	1959-60	1800700	" " " " ..	1951	52154A	Stop lamp ..	1954-60	31082B/H
Diesel heater (serviced by C.A.V.) ..	1951-60	1800020	" " " " Later ..	1952-53	*52079A	Windshield wiper ..	1957-60	*31498A
Generator ..	1951	*22456A/B	" (Bus) ..	1953-54	*52040A	Knob ..	—	31287I
Bus (serviced by C.A.V.) ..	1951-53	D5LFA10	" (all other models) ..	1954-55	53210A	Warning light ..	1951-57	*38013B
" " " " ..	1954-60	1130090	" " " " ..	1955	*52079A	" " " " ..	1958-60	38158A
Horn ..	1951-60	*069399	" (Bus, special orders) ..	1956	*52040A	Windshield wipers		
Low note (alternative) ..	1956-60	69046A/F	" (alternative) ..	1957-58	*52040A	Motor ..	1951-56	75091A
High note (optional) ..	1956-60	69047A/F	" (S.F.C.) ..	1957-58	*52079A	S.F.C. (special orders) ..	1957-58	75091A
Horn relay (when twins fitted) ..	1956-60	*33116B	" (N.C. and Bus, special orders) ..	1957-60	52250B	All other models (special orders) ..	1957-60	75289A/B
LAMPS			" (F.C.) ..	1958-60	52321A	Wheelbox ..	1957-60	72660A
Flasher (optional) ..	1958-60	53367D	Stop tail ..	1951-57	Serviced by Butlers Ltd.	Crosshead and rack assy. ..	1957-60	743722
Head, Home			Starting motor (serviced by C.A.V.) ..	1951-55	BS512L66	Outer casing ..	1957-60	743708
R.H.D., dip left ..	1951	*50799D	ditto ..	1956-59	1330660	Motor to wheelbox ..	1957-60	743709
" " " " ..	1951	*50959A	ditto (P6) ..	1960	1320061	Left hand ..	1957-60	740746
" " " " ..	1952	*50992A	ditto (6 ton 4-speed) ..	1960	1320080	Right hand ..	1957-60	735156
" " " " ..	1953-55	51344A	ditto (P4) ..	1959-60	1330661	End tube ..	1957-60	735156
" " " " ..	1956-59	51344B	Steering column control ..	1955-58	32942A/B	Arm ..	1951-56	735156
" " " " Later ..	1959-60	51344D/F	" " " " ..	1959-60	32937B	" (S.F.C.) ..	1957-58	745081
Head, Export			SWITCHES			" left hand (N.C.) ..	1957-60	745080
R.H.D., dip left ..	1951	*50799D	Dipper ..	1951-60	31284A/D	right hand (N.C.) ..	1957-60	727803
" " " " ..	1951	*50959A	Heater plug (serviced by C.A.V.) ..	1951-60	1823420	" " " " ..	1957	*737683
" " " " ..	1952	*50992A	" " " " ..	1959-60	31403H	Blade ..	1957-58	727803
" " " " ..	1953-55	51344A	Isolating (P6) ..	1959-60	*34018A/B	" (S.F.C.) ..	1957-58	*737683
" " " " ..	1956-59	51344B	Lighting and main ..	1951-56	*34018B	" (N.C.) ..	1957	741680
" " " " Later ..	1959-60	51344D/F	ditto (F.C. and S.F.C.) ..	1957-58	31270B/E	" " " " ..	1958-60	741680
			ditto (N.C.) ..	1957-60	316285			
			Knob ..	—				

* See Supersession Chart
 L.H. .. Left hand
 F.C. .. Forward Control
 R.H. .. Right hand
 N.C. .. Normal Control
 L.H.D. .. Left hand drive
 S.F.C. .. Semi-Forward Control
 R.H.D. .. Right hand drive
 S.W.B. .. Short Wheelbase
 Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



DODGE (Perkins Diesel) P6 1951-60: P4 1958-60 (12 volt)—continued

§ FUEL INJECTION EQUIPMENT (Perkins P4 Engine)					
Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1958	BPE4A60S310S6383	Primer	1958-60	HP1-1
"	1959-60	BPE4A60U310S6383	Pre-filter	1958-60	BFJSJ1-501
Governor	1958	BEPAMZ80A134	Nozzle holder	1958-60	BKB32S630
"	1959-60	BEPBMZ80A134	Nozzle	1958-60	BDL110S6133
Coupling	1958-60	BZKG31-538	Filter	1958	F2-8
Feed pump	1958-60	BFPK22P70	"	1959-60	F2B-22
Venturi	1958-60	BEPK50-50-107			
§ FUEL INJECTION EQUIPMENT (Perkins P6 Engine)					
Fuel pump	1951	BPE6A60Q310S554	Primer	1951-57	BFPUE2-54Z
"	1952	BPE6A60Q310S6237	"	1958-60	HP1-1
"	1953-57	BPE6A60S310S6321	Pre-filter	1951-60	BFJSJ1-501
"	1957-58	BPE6A60S310S6381	Venturi	1951	BEPK50-50-65
"	1959-60	BPE6A60U310S6381	"	1952-53	BEPK50-50-77
Governor	1951	BEPMZ80A67	"	1954-58	BEPK50-50-101
"	1952-56	BEPMZ80A99	"	1959-60	BEPK50-50-107
"	1956-58	BEPAMZ80A99	Nozzle holder	1951-54	BKB35S87
"	1959-60	BEPBMZ80A133	"	1955-60	BKB32S630
Coupling	1951-60	BZKG31-538	Nozzle	1951-60	BDL110S6133
Feed pump	1951-52	BFPK22N1	Filter	1951-54	BFA5P1
"	1953	BFPK22N68	"	1955-58	F2-8
"	1954-56	BFPK22P68	"	1959-60	F2B-8
"	1957-60	BFPK22P70			

DODGE (Perkins R6 Diesel) 24 volt 1954-58: 12 volt 1959-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Control box (serviced by C.A.V.)	1954-58	1688010	LAMPS—continued			SWITCHES—continued		
Control box	1959-60	37183H	Head, Export Europe (not France)	1954	*51649A	Lighting, horn push and flasher (when fitted, F.C.)	1958	31821A
"	Later	1960	ditto	1955-58	51641A	ditto	1959-60	*31794F
Fuse box	1954-55	033239	ditto	1959-60	51346B/E	Panel	1954-56	*31276A
"	1956-58	033263	Side	1954	+52154A	" (F.C. and S.F.C.)	1957	*31276A
"	1959-60	033239	"	1955	*52079A	" (S.F.C.)	1958	*31276A
" (Diesel heater, serviced by C.A.V.)	1954-60	1800020	" (alternative)	1956	*52079A	" (N.C.)	1957	*31498A
Generator (serviced by C.A.V.)	1954-58	1131090	" (S.F.C.)	1957-58	*52079A	Knob	1958-60	*31498A
"	1959	*22456F	" (Bus)	1957	*52040A	Panel (F.C. and N.C.)	—	312871
"	Later	1959-60	" (alternative, S.F.C.)	1958	*52040A	Knob	—	312871
" (power steering, serviced by C.A.V.) (F.C.)	1958	1108020	" (N.C. and Bus, special orders)	1957-58	52251B	Solenoid operating (serviced by C.A.V.)	1954-60	1823410
" (power steering, F.C.)	1959	*22524A/F	" (N.C.)	1959-60	52250B	Stop lamp	1954-57	31082D/E
ditto	1960	22528A/D	" (F.C.)	1958	52284A	"	1958	31486A
Horn	1954-58	069405	"	1959-60	52321A	Windshield wiper	1959-60	31082E
"	1959-60	*069399	Reflex reflector (F.C. S.W.B.)	1956-57	57032A	Knob	1957-60	*31498A
Low note (alternative)	1955	*69041B	Tipper	1958-60	57044A/B	Warning light	1958	38186A
"	1956-58	69055A	Starting motor (serviced by C.A.V.)	1954-55	1332880	"	1959-60	38158A
"	1959-60	69046F	ditto	1956-58	1332990	Windshield wipers (special orders)	1954-56	75202A
High note (optional)	1955	*69042B	ditto	1959-60	1320061	Motor	1957-58	75202A
"	1956-58	69056A	Steering column control	1955-58	32756A	" (S.F.C.)	1957-58	75290A/B
"	1959-60	69047A	ditto	1958	32756B/D	" (N.C.)	1959-60	75289B
Horn relay (when twins fitted)	1956-58	*33164A	ditto	1959-60	32937B	Wheelbox (N.C.)	1957-60	72660A
ditto	1959-60	*33116B				Crosshead and rack assy. (N.C.)	1957-60	743722
LAMPS			SWITCHES			Outer casing		
Flasher (optional)	1958	53368D	Dipper	1954-60	31284A/D	Motor to wheelbox		
"	1959-60	53367D	Heater plug (serviced by C.A.V.)	1954-60	1823420	Left hand (N.C.)	1957-60	743708
Head, Home			Isolating (F.C.)	1958-60	31403F/H	Right hand (N.C.)	1957-60	743709
R.H.D., dip left	1954	*51650A	Lighting and main	1954-56	*34018B	End tube (N.C.)	1957-60	740746
"	1955-58	51639A/D	ditto (F.C. & S.F.C.)	1957	*34018B	Arm	1954-56	735156
"	1959-60	51344D/F	ditto (S.F.C.)	1958	*34018B	" (S.F.C.)	1957-58	735156
Head, Export			ditto (N.C.)	1957-60	31270B	" left hand (N.C.)	1957-60	745081
R.H.D., dip left	1954	*51650A	Knob	—	316285	" right hand (N.C.)	1957-60	745080
"	1955-58	51639A/D	Lighting and horn push (F.C.)	1958	31809A	Blade	1954-56	727803
"	1959-60	51344D/F	ditto	1959-60	31769K	" (S.F.C.)	1957-58	727803
L.H.D., dip right	1954	*51648A				" (N.C.)	1957	*737683
"	1955-58	51640A/B					1958-60	741680
"	1959-60	*51345D/F						

§ FUEL INJECTION EQUIPMENT
(Perkins R6 Engine)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1954	BPE6A70R320S6302	Feed pump	1954-55	BFPK22P68
"	1955-57	BPE6A70R320S6360	"	1956-60	BFPK22P70
"	Later	1957-58	Primer	1954-57	BFPUE2-54Z
"	1959-60	BPE6A70T320S6387	"	1958-60	HP1-1
Governor	1954	BEPAMN80A122	Pre-filter	1954-60	BFJSJ1-501
"	1955	BEPMZ80A130	Nozzle holder	1954-60	BKB32S630
"	1956	BEPMZ80A146	Nozzle	1954-60	BDL10S6125
"	Later	1956-58	Filter	1954-58	F2-8
"	1959-60	BEPAMZ80A136	"	1959-60	F2B-22
"	1959-60	BEPBMZ80A136			
Coupling	1954-60	BZKG31-538			

* See Supersession Chart † When ordering, quote voltage § Serviced by C.A.V. Ltd. F.C. .. Forward Control N.C. .. Normal Control
S.F.C. .. Semi-Forward Control S.W.B. .. Short Wheelbase L.H.D. .. Left hand drive R.H.D. .. Right hand drive
A70 Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



DODGE (Leyland 0.350 Diesel) 24 volt 1958-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery (suitable replacement)	1958	MT11A	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
ditto	1959-60	MT13A	Head, Export			Lighting, horn push and flasher (when fitted, F.C.)	1958-60	31821A/E
ditto (Heavy Bus)	1959-60	HRT21E	R.H.D., dip left	1958-60	51639B/E	Panel	1958-60	*31498A
ditto (Finland)	1959-60	MT21E	L.H.D., dip right	1958-60	51640B/E	Knob	—	312871
Control box (serviced by C.A.V.)	1958-60	1688010	Head, Export Europe (not France)	1958-60	51641B/E	Solenoid operating (serviced by C.A.V.)	1958-60	1823410
Fuse box	1958-60	033263	Side (F.C.)	1958-60	52284A	Stop lamp	1958-60	31486A
Generator (serviced by C.A.V.)	1958-60	1131060	" (N.C.)	1958-60	52251A	Windshield wiper	1958-60	*31498A
ditto (power steering)	1959-60	1108020	Reflex reflector	1958-60	57044A	Knob	1958-60	312872
Horn			Starting motor (serviced by C.A.V.)	1958	1333310	Warning light	1958-60	38186A
Low note	1958-60	69055F	ditto	1959-60	1333311	Windshield wiper (N.C.)		
High note (optional)	1958-60	69056F	Steering column control (N.C.)	1958	32756A/D	Motor	1958-60	75290A/B
Horn relay (when twins fitted)	1958-60	*33164A	" (N.C.)	1959-60	32937B	Wheelbox	1958-60	72660A
LAMPS			SWITCHES			Crosshead and rack assy.	1958-60	743722
Flasher (when fitted, F.C.)	1958	53368D	Dipper	1958-60	31284A	Outer casing		
" " "	1959-60	53494B	Lighting and main (N.C.)	1958	31270B	Motor to wheelbox		
Head, Home			" " " Later	1958-60	31790A	Left hand	1958-60	743708
R.H.D., dip left	1958-60	51639B/E	Knob	—	316285	Right hand	1958-60	743709
			Lighting and horn push (F.C.)	1958-60	31809A/F	End tube	1958-60	740746
						Arm, left hand	1958-60	745081
						" right hand	1958-60	745080
						Blade	1958-60	741680
§ FUEL INJECTION EQUIPMENT (Leyland 0.350 Engine)								
Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1958-60	AAL6B75-66EL	Feed pump	1958-60	DFP6-3			
Governor	1958-60	RPB20A						

DOUGLAS 15/20/25 cwt. Electric Vehicles 1949

Horn	1949	*069213	SWITCHES			Windshield wiper		
LAMPS			Dipper	1949	31001A	Motor	1949	*75120A
Side	1949	52102A	Stop lamp	1949	31281B	Arm	1949	*735049
Tail and number plate	1949	*53041B	Spring	—	315543	Blade	1949	727802

DOUGLAS Battery Vehicle 1950-54

Fuse box	1950-54	*37137A	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
Horn	1950-54	*069213	Side	1950-54	52102A	Stop lamp	1950-54	31281B
Horn push	1950-54	76205A	Stop tail and number plate	1950	*53076E	Spring	—	315543
LAMPS			Tail and number plate	1951-54	*53041B	Windshield wiper		
Head, Home			Mirror	1950-54	62515A	Motor	1950-54	*75120A
R.H.D., dip left	1950-51	50874A	SWITCHES			Arm	1950-54	*735049
" " "	1952-54	*50959A	Dipper	1950-53	31001A	Blade	1950-54	727802

DOUGLAS 'Handyman' 1949-50

Horn	1949-50	70048D	SWITCHES			Windshield wiper		
LAMPS			Lighting and main	1949-50	34055A	Motor	1949-50	*75095A
Dash	1949-50	*A56044A	Stop lamp	1949-50	31281B	Arm	1949-50	*735096
Side	1949-50	A52036A	Spring	—	315543	Blade	1949-50	727802
Tail and number plate	1949-50	*A53007B						

ELVA 'Courier' (B.M.C. 1,500 c.c. Engine) 1959-60

Ammeter	1959	*36092A	Horn			LAMPS— <i>continued</i>		
"	1960	36266A/B	Low note	1959-60	69046F	Head, Home		
Battery	1959-60	BT7A	High note	1959-60	69047F	R.H.D., dip left	1959-60	*58232A/B
Coil, ignition	1959-60	*45053K	Horn relay	1959-60	*33116B	Head, Export		
Control box	1959-60	37182J & K	LAMPS			R.H.D., dip left	1959-60	*58232A/B
Distributor	1959	40600A	Flasher, front and rear	1959-60	52337A	Head, Export U.S.A.	1959-60	51343B/E
" " " Later	1959-60	40600B/D & F	Flasher, front (U.S.A.)	1959-60	52345A	Number plate illumination	1959-60	53093H/J
" " "	1960	40600E & H	Flasher, rear (U.S.A.)	1959-60	53600A/E	Side	1959-60	52325B
Fuse box	1959-60	033239				Stop tail	1959-60	53330D
Generator	1959-60	22265D/E				Starting motor	1959-60	25022M

* See Supersession Chart
L.H.D. . . Left hand drive

§ Serviced by C.A.V. Ltd. F.C. . . Forward Control N.C. . . Normal Control
R.H.D. . . Right hand drive
Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



ELVA 'Courier' (B.M.C. 1,500 c.c. Engine) 1959-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			SWITCHES—continued			Windshield wiper		
Direction indicator ..	1959-60	*31367B	Solenoid, starting motor	1959-60	*76411E	Motor	1959-60	75297E
Horn push and dipper ..	1959-60	31438B	Solenoid operating ..	1959-60	31363B	Wheelbox	1959-60	72693D
Ignition and lighting ..	1959-60	31270A	Stop lamp	1959-60	31440D	Crosshead and rack assy.	1959-60	743221
Knob	—	316285	Windshield wiper ..	1959-60	*31554A	Outer casing		
Panel	1959-60	*31554A	Knob	—	313690	Motor to wheelbox ..	1959-60	54711632
Knob	—	316135	Trafficators (when fitted)	1959-60	54044E	Wheelbox to wheelbox	1959-60	744219
						End tube	1959-60	740746
						Arm	1959-60	*741834
						Blade	1959-60	737897

ENCON MOTORS 'Clipper' 1954

Control box	1954	*37127H	SWITCHES			SWITCHES—continued		
Generator	1954	22008B	Starting motor	1954	76423A	Stop lamp	1954	31082D
Starting motor	1954	25037A	Coupling	—	764428			

FAIRTHORPE 'Electron' and 'Electron Minor' 1958-60

Ammeter	1958-59	*36117A	LAMPS			SWITCHES—continued		
" Later	1959-60	36264A	Head, Home			Lighting Later	1959-60	31788A
Coil, ignition	1958-59	*45054K	R.H.D., dip left ..	1958-60	58247A/D	Knob	—	316154
" Later	1959-60	45102E	Head, Export			Starting motor	1958-60	76427D
Control box	1958	37183H	R.H.D., dip left ..	1958-60	58247A/D	Stop lamp	1958-60	31082E/H
"	1959	37283B	L.H.D., dip right ..	1958-59	58190A	Windshield wiper ..	1959-60	*31851A
" Later	1959-60	37290D/E	" Later	1959-60	58190B/E	Warning light (oil) ..	1959-60	38192A
Distributor ('Electron') ..	1958	40465A	Head, Export U.S.A. ..	1958-60	51343B/E	Windshield wipers		
"	1959	40566B	Number plate illumination	1959-60	53093J	Motor		
" Later	1959-60	40677A	Stop tail and reflex ..	1958-60	53330D	'Electron' (optional) ..	1958-59	75296D
" ('Minor') ..	1958-59	40598B/D	Starting motor ..	1958	25022M	'Minor' (optional) ..	1958-59	*75244A
" Later	1959-60	40638A/B & D	" .. ('Electron')	1959-60	25063F	Both models .. Later	1959-60	75371A
" (high compression) ..	1959-60	40611B	" .. ('Minor') ..	1959-60	25022N/Q	Wheelbox	1958-60	*72674A
Flasher unit	1958-60	35020A	Steering column control ..	1958-59	*32750B	Crosshead and rack assy.		
Generator	1958	22258F	SWITCHES			'Electron'	1958-59	*743225
" ('Electron') ..	1959-60	22296A	Dipper	1958-59	31284D	Both models .. Later	1959-60	743235
" ('Minor') ..	1959-60	*22297A	" Later	1959-60	31800A	Outer casing		
Horn			Flasher	1958-59	*31635A	Motor to wheelbox ..	1958-60	54710362
Low note (optional) ..	1959-60	69046F	" Later	1959-60	31743B	Wheelbox to wheelbox	1958-60	54710363
High note (optional) ..	1959-60	69047F	Ignition	1958-59	*31449E	End tube	1958-60	740746
Horn relay (when fitted)	1959-60	33188A	" Later	1959-60	*31934A	Arm		
			Ignition and lighting ..	1958	31270B	'Electron'	1958-59	742298
			Lighting	1958-59	*31251D	'Minor'	1958-59	745075
			Knob	—	316154	Both models .. Later	1959-60	745071
						Blade	1958-60	738734

FAIRTHORPE 'Atomota' 1959-60; 'Zeta' 1960

Ammeter	1959	*36117A	LAMPS—continued			SWITCHES—continued		
" Later	1959-60	36264A	Head, Export			Starting motor	1959-60	76427D
Coil, ignition	1959	*45054K	R.H.D., dip left ..	1959-60	58247A/D	Stop lamp	1959-60	31082H
"	1960	45102E	L.H.D., dip right ..	1959-60	58190B/E	Windshield wiper ..	1959-60	*31851A
Control box	1959-60	37283B	Head, Export U.S.A. ..	1959-60	51343B/E	Windshield wipers		
" Later	1960	37290D/E	Number plate illumination	1959-60	53093H/J	(optional)		
Distributor			Stop tail and reflex ..	1959-60	53330D	Motor	1959	75296D
'Atomota'	1959-60	40352E	Starting motor	1959-60	25065A	"	1960	75371A
'Zeta' (high compression)	1960	40633A/E	Steering column control ..	1959-60	*32750B	Wheelbox	1959-60	*72674A
" (low compression)	1960	40634A/D	SWITCHES			Crosshead and rack assy.	1959	*743225
Flasher unit	1959-60	35020A	Dipper	1959	31284D	"	1960	743235
Generator ('Atomota') ..	1959-60	22258F/H	"	1960	31800A	Outer casing		
" ('Zeta') ..	1960	*22297A	Flasher	1959	*31635A	Motor to wheelbox ..	1959-60	54710362
Horn			"	1960	31743B	Wheelbox to wheelbox	1959-60	54710363
Low note (optional) ..	1959-60	69046F	Ignition	1959	*31449E	End tube	1959-60	740746
High note	1959-60	69047F	"	1960	*31934A	Arm		
Horn relay (when fitted)	1959-60	33188A	Lighting	1959	*31251D	"	1959	742298
LAMPS			"	1960	31788A	"	1960	745071
Head, Home			Knob	1959-60	316154	Blade	1959-60	738734
R.H.D., dip left ..	1959-60	58247A/D						

* See Supersession Chart L.H.D. .. Left hand drive R.H.D. .. Right hand drive



GEORGE FITT Invalid Carriage (Villiers Mk. VI Engine) 1951-55

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Horn	1951-55	*70001D	LAMPS—continued			SWITCHES		
Horn push	1951-55	76210A	Side	1951-52	*A52154A	Lighting	1951-55	*31159A
LAMPS			” Later	1952-55	*A52105A	Knob	—	*315044
Head, Home			Tail and number plate ..	1951-55	53140B	Solenoid, starting motor (De Luxe)	1951-55	76421B
R.H.D., dip left ..	1951-55	*50292D	Starting motor (De Luxe)	1951-55	25037A/B	Solenoid operating (De Luxe)	1951-55	*31071A

FRAZER NASH ‘Mille Miglia’, ‘Targa Florio’, ‘Sebring’ and Hard Top 1955

Battery	1955	GT7A	LAMPS—continued			SWITCHES—continued		
Bulb holder, panel light ..	1955	39007A	Head, Export			Ignition and lighting ..	1955	*34014B
Bulb	—	987	R.H.D., dip left ..	1955	50825A	Panel	1955	31201D
Coil, ignition	1955	*45039A	L.H.D., dip right ..	1955	A50825A	Knob	—	314026
Control box	1955	*37138D	Head, Export Europe (not France)	1955	B50825A	Solenoid, starting motor	1955	*76411E
Distributor	1955	40346A	ditto (alternative) ..	1955	51535A	Solenoid operating ..	1955	*31112E
Fuse box	1955	*37137A	Head, Export U.S.A. ..	1955	50942A	Warning lights		
Generator	1955	22258D	Number plate illumination	1955	53093E	Ignition	1955	*38015B
Horn			Side and flasher	1955	*52162B	Main beam	1955	38018B
Low note	1955	*69011J	Stop tail, flasher and reflex	1955	53377A	Windshield wiper		
High note	1955	*69012J	Petrol reserve valve ..	1955	78025A	Motor	1955	75158A
Horn relay	1955	*33116B	Starting motor	1955	25026B	Wheelbox	1955	72629A
LAMPS			Steering column control ..	1955	*32829B	Crosshead and rack assy. Cut to 33½”	1955	736177
Dash	1955	*56021A	SWITCHES			Outer casing		
Head, Home			Dipper	1955	31284A	Motor to wheelbox ..	1955	*739832
R.H.D., dip left (L.H.)	1955	50825A	Flasher	1955	31311A	Wheelbox to wheelbox	1955	739973
” non-dip (R.H.)	1955	*50826A				3”, offside wheelbox ..	1955	740031
						Arm	1955	*736418
						Blade	1955	*737653

FRISKY Saloon 1958: Coupé 1959: ‘Family Three’ 1960

Flasher unit	1958	35012A	LAMPS—continued			SWITCHES—continued		
”	1959-60	35024A	Stop tail and reflex ..	1958-60	53520D	Windshield wiper ..	1958-60	*31515A
Horn	1958-60	70141B	Steering wheel centre ..	1958-60	33504A	Knob	—	*318167
Horn push	1958-60	76205D	SWITCHES			Warning lights		
Junction box	1958-59	78266A	Flasher	1958-60	31743D	Flasher (green)	1958-60	38191A
LAMPS			Ignition	1958-59	31974B	Ignition (red)	1958-60	38189A
Flasher (side)	1958-60	52424A	”	1960	31973B	Main beam (dark red) ..	1958-60	38190A
Head, Home			Lighting	1958-60	*31822D	Neutral gear (green) ..	1958-60	38191A
R.H.D., dip left ..	1958-60	58267B/E	Knob	—	316133	Oil (amber)	1958-59	38192A
Head, Export U.S.A. ..	1958-59	*51337D/E	Stop lamp	1958-60	31082J	Reverse gear (amber) ..	1958-59	38192A

LEONARD GUNDLE ‘Handy Motor’ 3-wheel Delivery Van 1951-55

Battery	1951-55	PUW7E-4	LAMPS			LAMPS—continued		
Horn	1951-54	*70001D	Head, Home	1951-54	55043E	Tail and number plate ..	1951-52	*53041B
”	1955	70048F	”	1955	*55098A	” Later	1952-55	*53007B
Horn push	1951-55	76210A	Side	1951-55	52036A	SWITCH		
						Lighting	1951-55	31224B

HARBOROUGH CONSTRUCTION Battery Vehicle (12 volt) 1951-54

Horn	1951-54	*069213	LAMPS			SWITCH		
Horn push	1951-54	*31071A	Side	1951-54	52034A	Lighting	1951-54	31291A
Junction box	1951-54	78264A	(alternative)	1951-54	52102A			
			Tail and number plate ..	1951-54	*53041B			

* See Supersession Chart L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



HEALEY 16 h.p. Roadster 1948-49

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1948-49	*369047	LAMPS—continued			SWITCHES—continued		
Battery	1948-49	SLG11E	Reverse, tail and number plate	1948-49	53116A	Solenoid operating ..	1948-49	*31151A
Coil, ignition	1948-49	*45012A/D	Roof	1948-49	*56017B	Stop lamp	1948	31281B
Control box	1948-49	37065E	Side and pass	1948-49	50417F	Spring	—	315543
Distributor	1948-49	40081A/F	Stop tail and number plate	1948-49	53117A	Windshield wiper	1948	*31131A
Fuse box	1948-49	*385221	Mirror	1948-49	*580651	"	1949	31201B
Generator	1948-49	*22447A	Starting motor	1948-49	*270299	Knob	—	*315998
Horn			Steering column control ..	1948-49	*32772A	Terminal block	1948-49	37082A
Low note	1948-49	*69021A	SWITCHES			Warning lights		
High note	1948-49	*69022A	Alpine	1948	*31135A	Alpine	1948	*38019B
LAMPS			Dipper	1948-49	31284A	Flasher (U.S.A.)	1949	*38042A
Head, Home			Foglamp	1948	*31130A	Ignition	1948-49	*38013B
R.H.D., dip left (L.H.)	1948	*50445K	Knob	1949	*315996	Main beam	1949	*38013B
non-dip (R.H.)	1948	*50446K	Ignition	1949	31287A	Windshield wiper		
dip left (Sports lens)	1948	*50694F	Ignition and lighting ..	1948	*34018A	Motor	1948-49	75062J
non-dip (Sports lens)	1948	*50695F	Lighting	1949	31091B	Wheelbox	1948-49	*72548A
dip left (L.H.)	1949	*50793B	Panel	1948	*78218A	Crosshead and rack assy.	1948-49	736307
non-dip (R.H.)	1949	*50362F	Knob	—	*768500	Outer casing		
Head, Export			Panel	1949	31201B	Motor to wheelbox	1948-49	*739855
R.H.D., dip left	1948	*50445K	Knob	—	*315997	Wheelbox to wheelbox	1948-49	*739971
L.H.D., dip right	1948	*A50445K	Petrol reserve valve ..	1948-49	*31133A	3", offside wheelbox ..	1948-49	740031
Head, Export Europe (not France)	1948	*B50445K	Solenoid, starting motor	1948-49	76022A	Grommet, wheelbox ..	1948-49	733695
						Arm	1948-49	*736416
						Blade	1948-49	736414

HEALEY 16 h.p. Saloon 1948-49

Ammeter	1948-49	*369270	LAMPS—continued			SWITCHES—continued		
Battery	1948-49	SLG11E	Head, Export			Solenoid operating ..	1948-49	*31112A
Coil, ignition	1948-49	*45012A/D	R.H.D., dip left	1948	*50445K	Stop lamp	1948	31281B
Control box	1948-49	7065E	L.H.D., dip right	1948	*A50445K	Spring	—	315543
Distributor	1948-49	40081A/F	Head, Export Europe (not France)	1948	*B50445K	Trafficator	1948-49	031046
Fuse box	1948-49	*385221	Reverse, tail and number plate	1948-49	53116A	Windshield wiper	1948	314091
Generator	1948-49	*22447A	Roof	1948-49	*56017B	"	1949	31201B
Horn			Side and pass	1948-49	50417F	Knob	—	*315998
Low note	1948-49	*69021A	Stop tail and number plate	1948-49	53117A	Terminal block	1948-49	37082A
High note	1948-49	*69022A	Starting motor	1948-49	*270299	Trafficators	1948	54022D
LAMPS			Steering column control ..	1948-49	*32772A	"	1949	*54018D
Head, Home			SWITCHES			Warning light	1948-49	*318534
R.H.D., dip left (L.H.)	1948	*50445K	Dipper	1948-49	31284A	Windshield wiper		
non-dip (R.H.)	1948	*50446K	Foglamp	1948	*31130A	Motor	1948-49	*75062J
dip left (Sports lens)	1948	*50694F	Knob	1949	*31201B	Wheelbox	1948-49	*72548A
non-dip (Sports lens)	1948	*50695F	Ignition	1949	*315996	Crosshead and rack assy.	1948-49	736177
dip left (L.H.)	1949	*50793B	Ignition and lighting ..	1948	*34036A	Cut to 34 $\frac{1}{8}$ "	1948-49	736177
non-dip (R.H.)	1949	*50362F	Lighting	1949	31091B	Outer casing		
			Panel	—	*316113	Motor to wheelbox	1948-49	739870
			Knob	—	*316113	Wheelbox to wheelbox	1948-49	739937
			Petrol reserve valve ..	1948-49	*31134	3", offside wheelbox ..	1948-49	740031
			Solenoid, starting motor	1948-49	76022A	Grommet, wheelbox ..	1948-49	729423
						Arm	1948-49	*737481
						Blade	1948-49	736414

HEALEY 'Sportsmobile' 1949

Ammeter	1949	*369270	Starting motor	1949	*270299	Terminal block	1949	37082A
Battery	1949	SLG11E	Steering column control ..	1949	32749A/H	Trafficators	1949	*54018D
Coil, ignition	1949	*45012A/D	SWITCHES			Warning lights		
Control box	1949	37065E	Dipper	1949	31284A	Ignition	1949	*38015B
Distributor	1949	40081A/F	Foglamp	1949	31201B	Petrol reserve	1949	*38015B
Fuse box	1949	*385221	Knob	—	*315996	Trafficator	1949	38018A
Generator	1949	*22447A	Ignition and lighting ..	1949	*34051A	Windshield wiper		
Horn			Interior light	1949	31201B	Motor	1949	*75064J
Low note	1949	*69021A	Knob	—	*314683	Wheelbox	1949	*72548A
High note	1949	*69022A	Map light	1949	31201B	Crosshead and rack assy.	1949	736177
LAMPS			Knob	—	*314683	Cut to 34 $\frac{1}{8}$ "	1949	736177
Head, Home			Panel	1949	31201B	Outer casing		
R.H.D., dip left	1949	*50445K	Knob	—	*315997	Motor to wheelbox	1949	739870
Side	1949	*52118A	Petrol reserve valve ..	1949	*31133A	Wheelbox to wheelbox	1949	*739960
" (U.S.A.)	1949	*52130A	Reverse lamp	1949	*31077D	3", offside wheelbox ..	1949	740031
Stop tail and reverse ditto (U.S.A.)	1949	*53143B	Solenoid operating	1949	*317063	Trafficator	1949	729423
			Trafficator	1949	031046	Grommet, wheelbox ..	1949	737575
			Windshield wiper	1949	31201B	Arm	1949	*738719
			Knob	—	*315998	Blade	1949	736414

* See Supersession Chart L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive



HEALEY 'Silverstone' 1950

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1950	*36018B	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
Battery	1950	SLG11E	Number plate illumination	1950	53093D	Windshield wiper	1950	31201B
Coil, ignition	1950	*45012A/D	Side	1950	52139E	Knob	—	*315998
Control box	1950	37076E	Stop tail	1950	*53151B/D	Warning lights		
Distributor	1950	40081A/F	Mirror	1950	*580733	Ignition	1950	*38013B
Generator	1950	*22435A/B	Starting motor	1950	*270299	Main beam	1950	38052B
Horn	1950	*069213	Steering column control	1950	*32829A	Petrol reserve	1950	*38042A
			ditto Later			Windshield wiper		
LAMPS						Motor	1950	*75084K
Head, Home			SWITCHES			Wheelbox	1950	72590A
R.H.D., dip left (L.H.)	1950	*50895B	Dipper	1950	*31267A	Crosshead and rack assy.	1950	736364
" non-dip (R.H.)	1950	*50896B	Ignition and lighting	1950	31194A	Outer casing		
Head, Export			Knob	—	316285	Motor to wheelbox	1950	*739832
R.H.D., dip left	1950	*50895B	Panel	1950	31201B	3", offside wheelbox	1950	740031
L.H.D., dip right	1950	*A50895B	Knob	—	*315997	Arm	1950	*737571
Head, Export Europe			Petrol reserve valve	1950	*31133A	Blade	1950	*737482
(not France)	1950	*B50895B	Starting motor	1950	76423A			
Head, Export U.S.A.	1950	50873B	Coupling	—	764428			

HEALEY 'Tickford' Saloon 1951-54

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1951-54	*36110A	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
Battery	1951-54	SLG11E	Stop tail	1951-52	*53204A/B	Solenoid operating	1951-54	*31112A
Coil, ignition	1951-54	*45012A/D	" Later	1952-54	53174E	Trafficator	1951-54	031046
Control box	1951-54	37065E	Mirror	1951	062556	Windshield wiper	1951-54	31201B
Distributor	1951-54	40081A/F	Panel light bulb holder	1951-54	39007A	Knob	—	*315998
Fuse box	1951-54	*37137A	Petrol reserve valve	1951-54	78022A	Terminal block	1951-54	37082A
Generator	1951-52	*22435A/B	Starting motor	1951-54	26043A	Trafficators	1951-54	*54039A
" Later	1952-54	*22456A/B	Steering column control	1951	*32772A	Warning lights		
Horn			"	1952-54	32875A/D	Alpine	1951-54	38018B
Low note	1951-53	*69021A	SWITCH S			Ignition	1951	*318534
"	1954	*69011F	Dipper	1951-54	31284A	"	1952-54	38046A
High note	1951-53	*69022A	Foglamp	1951-54	31201B	Windshield wiper		
"	1954	*69012F	Knob	—	*315996	Motor	1951-54	*75067L
LAMPS			Ignition	1951-54	31287A	Wheelbox	1951-54	*72548A/K
Fog	1951	55043E	Interior light	1951-54	31201B	Crosshead and rack assy.		
Head, Home			Knob	—	*314683	Cut to 48"	1951-54	738499
R.H.D., dip left	1951	50973A	Lighting	1951-54	31091B	Outer casing		
" Later	1951	50982A	Knob	—	*316113	Motor to wheelbox	1951-54	*739907
"	1952-54	51065A	Panel	1951-54	31201B	Wheelbox to wheelbox	1951-54	*739961
Interior	1952-54	56047A	Knob	—	*315997	3", offside wheelbox	1951-54	740031
Number plate illumination	1951-54	53097D/E	Petrol reserve	1951-54	*31134A	Arm	1951-54	*737481
Roof	1951	*56017A	Solenoid, starting motor	1951-54	*76411D	Blade	1951-54	736414
Side	1953-54	52139A/F						

HEALEY 'Abbot' Drophead Coupé 1952-54

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1952-54	*36110A	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
Battery	1952-54	SLG11E	Panel light bulb holder	1952-54	39007A	Windshield wiper	1952-54	31201B
Coil, ignition	1952-54	*45012A/D	Petrol reserve valve	1952-54	78022A	Knob	—	*315998
Control box	1952-54	37065E	Starting motor	1952-54	26043A	Terminal block	1952-54	37082A
Distributor	1952-54	40081A/F	Steering column control	1952-54	32875A/D	Trafficators	1952-54	*54039A
Fuse box	1952-54	*37137A	SWITCHES			Warning lights		
Generator	1952	*22435A/B	Dipper	1952-54	31284A	Alpine	1952-54	38018B
" Later	1952-54	*22456A/B	Foglamp	1952-54	31201B	Ignition	1952-54	38046A
Horn			Knob	—	*315996	Windshield wiper		
Low note	1952-53	*69021A	Ignition	1952-54	31287A	Motor	1952-54	*75067L
"	1954	*69011F	Interior light	1952-54	31201B	Wheelbox	1952-54	*72548A/K
High note	1952-53	*69022A	Knob	—	*314683	Crosshead and rack assy.		
"	1954	*69012F	Lighting	1952-54	31091B	Cut to 48"	1952-54	738499
LAMPS			Knob	—	*316113	Outer casing		
Head, Home			Panel	1952-54	31201B	Motor to wheelbox	1952-54	*739907
R.H.D., dip left	1952-54	51065A	Knob	—	*315997	Wheelbox to wheelbox	1952-54	*739961
Interior	1952-54	56047A	Petrol reserve	1952-54	*31134A	3", offside wheelbox	1952-54	740031
Number plate illumination	1952-54	53097D/E	Solenoid, starting motor	1952-54	*76411D	Grommet, wheelbox	1952-54	729423
Side	1952-54	52139A/F	Solenoid operating	1952-54	*31112A	Arm	1952-54	*736418
Stop tail	1952	*53204A/B	Trafficator	1952-54	031046	Blade	1952-54	736414
" Later	1952-54	53174E						

HILLMAN 'Minx' All Models 1946-57: De Luxe Series III 1958-59

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1953-54	36170A	Control box Later	1948-51	37065E	Generator	1946-47	22449A
"	1955-56	36197A	"	1951-55	*37138B/D	"	1948	*22411A
"	1957-58	*36210A	"	1955-59	37182A/H	" Later	1948-49	*22250A
(special order, G.P.O. Estate Car)	1959	36248A	Distributor			"	1949-51	*22250E/F
Battery	1946-47	SG9A	S.V. Engine	1946-54	*40050A/J	"	1951-56	22258D
"	1948-49	GT9A	(Special and Estate Car)			"	1957-59	22258E/F
"	1950-58	GT9A	O.H.V. Engine	1955-56	*40050J	Horn		
"	1959	BT7A	(low compression) Later	1955-56	*40428A/B	Low note	1946-48	069344
" (cold climates)	1959	BT9A	O.H.V. Engine (high compression)	1956-59	40492A	" Later	1948-54	*69011F
Bulb holder			Flasher unit	1957-59	40530A	"	1955-59	69046A/F
Speedometer	1954-57	39007A	"	1953-55	*35003A	High note (optional)	1948-54	*69012F
Warning lights	1959	*54940878	"	1956	*35004A	"	1955-59	69047A/F
Bulb	1959	281	"	1957-59	35011A	Horn relay (when twins fitted)	1955-59	*33116B
Coil, ignition	1946-48	*45012A/D	Flasher relay	1953-57	33117A/D	Inspection lamp sockets		
"	1949-56	*45020A	Fuse box	1951-57	033239	(G.P.O. Estate Car)	1954-56	38604A
"	1957-59	*45053H/K	"	1958-59	033277	"	1957	39507A
Control box	1946-47	*37031A	" (manumatic gear)	1959	033239			
"	1948	37057E						



HILLMAN 'Minx' All Models 1946-57: De Luxe Series III 1958-59—continued

Table with columns: Unit, Year, Part No., Unit, Year, Part No., Unit, Year, Part No. It lists various car components like lamps, switches, and steering controls with their corresponding years and part numbers.

* See Supersession Chart L.H.D. ... Left hand drive R.H.D. ... Right hand drive Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



HILLMAN 'Minx' De Luxe Series IIIA 1959-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1959-60	†36267A	LAMPS			SWITCHES—continued		
Battery	1959-60	BT7A	Head, Home			Solenoid, starting motor	1959-60	76465A
" (cold climates) ..	1959-60	BT9A	R.H.D., dip left	1959-60	58548A	" throttle blipper		
Bulb holder, warning lights	1959-60	54945043	Head, Export Europe			" ('Easidrive')	1959-60	76521B
Bulb	—	281	(except France & Sweden)	1959-60	58406A	Stop lamp	1959-60	31802B
Coil, ignition	1959-60	45102E	Head, Export France ..	1959-60	58405A	Windshield wiper ..	1959-60	31869A
Control box	1959-60	37290D/E	Head, Export Sweden ..	1960	58655A	Knob	—	54330939
" ("Easidrive') ..	1959-60	37305A/B	Head, Export U.S.A. ..	1959-60	58549A	Warning lights		
" " Later	1959-60	37323A	Number plate illumination	1959-60	53278B	Flasher	1959-60	38191A
Distributor			Side and flasher	1959-60	52467B/D	Ignition	1959-60	38189A
High compression ..	1959-60	40681A	Stop tail, flasher and reflex	1959-60	53823B	Main beam	1959	38190A
" " Later	1960	40681B	ditto (U.S.A.)	1959-60	*53715A/B	Oil	1960	54360500
Low compression ..	1959-60	40682A	ditto (Estate Car)	1959-60	33188A	Windshield wipers		
" " Later	1960	40682B	Relay, horn	1959-60		Motor, left hand drive	1959-60	75389A
Flasher unit	1959-60	35011A	Sleeve, Lucas connector	1959-60	54190042	" right hand drive	1959-60	75388A
Fuse box	1959-60	033287	14 amp.	1959-60	54190043	Wheelbox	1959-60	72734A
" " Later	1959-60	033283	35 amp.	1959-60	25022N/Q	Crosshead and rack assy.		
Generator	1959-60	22700D	Starting motor	1959-60	32957A	Cut to 44"	1959-60	744256
" (temporary			Steering column control ..	1959-60	31610	Outer casing		
alternative)	1959-60	*22704A	Contact plate	—		Motor to wheelbox ..	1959-60	54711609
" ('Easidrive') ..	1959-60	22532A	SWITCHES			Wheelbox to wheelbox	1959-60	743706
" " Later	1960	22532B/D	Dipper	1959-60	31800A	End tube	1959-60	740746
Horn			Cap, rubber	—	54331425	Arm, left hand drive ..	1959-60	54711535
Low note	1959-60	69092A	Flasher	1959-60	31796A/B	" right hand drive ..	1959-60	54711534
High note	1959-60	69091A	Ignition and starting ..	1959-60	*31953A	Blade	1959-60	54711282
			Lighting	1959-60	31951A			
			Knob	—	54330749			

HILLMAN 'Minx Special' Series III 1958-59: 'Husky' Series I 1955-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1955-58	GT7A	LAMPS—continued			SWITCHES—continued		
" (cold climates) ..	1959-60	BT7A	Head, Export Europe			Flasher	1955-56	31423B
" " Later	1958	GTW7A	(not France)	1955	51339A	" " Later	1956-57	31533A
Coil, ignition	1955-56	*45020A	ditto	1956-57	51738B	" (U.S.A.)	1958-60	31737A/B
" " Later	1957-60	*45053H/J	ditto	1958-59	51989D/F	Ignition and lighting	1955-60	*31288A/D
Control box	1955-56	*37138D	(except France & Sweden)			Knob	1955-60	316285
" " Later	1957-59	37182H	Head, Export France ..	1955	58365A	Starting motor	1955-60	76423A
" " Later	1960	37182J	" " " Later	1956-57	*51341A	Coupling	1955-58	764428
" " Later	1960	37182K	Head, Export Sweden ..	1958-59	51990D/F	Stop lamp	1955-57	31281B
Distributor			Head, Export U.S.A. ..	1959-60	58366A	Spring	—	*315714
High compression ..	1955-57	*40050J	Head, Export U.S.A. ..	1960	58656A	Stop lamp	1958-60	31082E
ditto ('Special') ..	1958	40530A	" " " Later	1955-57	51343A	Cap	—	316072
ditto ('Husky') ..	1959	40530B	Number plate illumination	1958-60	51991D/E	Windshield wiper ..	1956-57	31192B
ditto " Later	1960	40530A/D	Side	1955-56	*52162B/E	Knob	—	317453
Low compression ..	1958	40492A	Side and flasher	1957	52240B	Warning light (main beam)		
ditto ('Special') ..	1959	40492B	" " " Later	1957	52372A	U.S.A.	1960	38118A
ditto ('Husky') ..	1959-60	40492B	Stop tail	1958-60	52403A/B	Windshield wipers		
ditto " Later	1960	40492D/E	Stop tail, flasher and reflex	1955-57	53178E/F	Motor	1955-56	*75200B
Flasher unit	1955	*35003A	("Special')	1958	53540A/B	" " " Later	1957-59	75296A/D
" " Later	1956	*35004A	(" " U.S.A.)	1959	*53648A/F	" " " Later	1960	75296E
Flasher relay	1955-56	35011A	(" " " U.S.A.)	1958	53444A/E	Wheelbox	1955-57	72663D/F
Fuse box	1955-57	33117A	(" " " U.S.A.)	1959	53753B	" " " Later	1958-60	72673A
" " Later	1958-60	033239	("Husky')	1958-60	53640A/D	Crosshead and rack assy.		
Generator	1955-56	033277	(" " U.S.A.)	1958	53685A	Cut to 41"	1955-56	*743231
" " Later	1957-60	22258D	(" " " U.S.A.)	1958-59	53754A	" " " Later	1957-60	743235
Horn			(" " " Later	1960	53752F	Outer casing		
Low note	1958	70141B	Reflex reflector	1956	*57035D	Motor to wheelbox ..	1955-57	745138
High note (optional)	1955-60	69046A/F	" " " "	1957	57095D	" " " Later	1958-60	743517
" " " "	1955-60	69047A/F	Starting motor	1957	57095D	Wheelbox to wheelbox	1955-57	745139
Horn relay (when twins			" " " "	1955-57	25022F/L	" " " "	1958-60	743706
fitted)	1955-60	*33116B	" " " "	1958-60	25022M	End tube	1955-60	740746
ditto	1959-60	*33116B	Steering column control ..	1960	25022N/Q	Ferrule, casing retaining	1955-60	740715
LAMPS			("Special')	1955-57	32927A/B	Arm, left hand drive ..	1955-57	745074
Head, Home			("Husky')	1958-60	33509B	" " " "	1958-59	741845
R.H.D., dip left ..	1955	51336A	Suppressor	1958-60	33507B	" " " "	1960	54711558
" " " "	1956-57	51736B/D	SWITCHES			" " " "	1955-57	745073
" " " "	1958-60	51971E/H	Dipper	1955-60	31284A/D	" " " "	1958-59	741844
						" " " "	1960	54711557
						Blade	1955-57	738724
						" " " "	1958-60	737897

HILLMAN 'Minx Special' Series IIIA 1959-60: 'Husky' Series II 1960

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter			Generator ('Easidrive') ..	1959-60	22532A	LAMPS—continued		
'Special' (optional, except			" " " Later	1960	22532B/D	Head, Export Sweden		
with 'Easidrive') ..	1959-60	36254A	Horn	1959-60	69092D	('Special')	1960	58655A/B
Battery	1959-60	BT7A	" " " "	1959-60		("Husky')	1960	58657A/B
" (cold climates) ..	1959-60	BT9A	LAMPS			Head, Export U.S.A.		
Coil, ignition	1959-60	45102E	Head, Home			('Special')	1959-60	58549A
Control box	1959-60	37290D/E	R.H.D., dip left			("Husky')	1960	*51779A/H
" ("Easidrive') ..	1959-60	37305A/B	("Special')	1959-60	58548A/B	Number plate illumination	1959-60	53278B
" " Later	1960	37323A	("Husky')	1960	51777J	Side and flasher		
Distributor			Head, Export			("Special')	1959-60	52467A/D
High compression ..	1959-60	40681A	R.H.D., dip left			("Husky')	1960	52403B
" " Later	1960	40681B	("Special')	1959-60	58548A/B	Stop tail, flasher and reflex		
Low compression ..	1959-60	40682A	("Husky')	1960	51777J	("Special')	1959-60	53823A/B
" " Later	1960	40682B	Head, Export Europe			(" " U.S.A.)	1959-60	53824A/B
Flasher unit	1959-60	35011A	(except France & Sweden)	1959-60	58406A/B	("Husky')	1960	*53648F
Fuse box	1959-60	033287	("Special')	1960	58359A	(" " U.S.A.)	1960	53753A/B
Generator	1959-60	22700D	("Husky')	1959-60	58405A/F	Starting motor	1959-60	25022M
" (temporary			Head, Export France			" " " "	1960	25022N/Q
alternative)	1959-60	*22704A	("Special')	1959-60	58360A	Steering column control		
			("Husky')	1960		("Special')	1959-60	33509B
						("Husky')	1960	33507B

* See Supersession Chart

† Optional (except with 'Easidrive')

R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



HILLMAN 'Minx Special' Series IIIA 1959-60: 'Husky' Series II 1960—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			SWITCHES—continued			Windshield wipers		
Dipper	1959-60	31800A	Solenoid, throttle blipper ('Special', 'Easidrive')	1959-60	76521B	Motor, left hand drive	1959-60	75389A
Cap, rubber	—	54331425	Solenoid operating ('Special', 'Easidrive')	1959-60	31872A	Motor, right hand drive	1959-60	75388A
Flasher	1959-60	31737B	Starting motor	1959-60	76423A	Wheelbox	1959-60	72734A
Ignition and lighting ('Special')	1959	31958A	Coupling	—	764466	Crosshead and rack assy. Cut to 44 3/4"	1959-60	744256
('Special' and 'Husky')	1960	31270F	Stop lamp	1959-60	31802B	Outer casing	1959-60	54711609
Knob	—	316285	Warning light (main beam) (U.S.A.)	1959-60	38118A	Motor to wheelbox	1959-60	743706
Solenoid, starting motor ('Special', 'Easidrive')	1959-60	*76465A				Wheelbox to wheelbox	1959-60	740746
						End tube	1959-60	54711535
						Arm, left hand drive	1959-60	54711534
						Arm, right hand drive	1959-60	54711282
						Blade	1959-60	

HINDLE SMART Battery Vehicle 1951-54

Fuse box	1951-54	*37137B	LAMPS—continued			Windshield wipers		
Horn	1951-54	*069213	Side	1951-54	52102A	Motor	1951-54	*75120A
Horn push	1951-54	76205A	Tail and number plate	1951-54	*53041B	Arm	1951-54	*735061
LAMPS			SWITCH			Blade	1951-54	727803
Head	1951-54	50730A	Lighting	1951-54	*34024A			

H.R.G. 9 h.p. 1946-52

Ammeter	1946-51	*369047	LAMPS—continued			SWITCHES		
"	1952	*36018B	Fog	1951-52	*55029E	Dipper	1946-52	31284A
Battery	1946-52	SLG11E	Head, Home			Ignition and lighting	1946-52	34055A
Coil, ignition	1946-52	*45039A	Left hand	1946-49	*50324A	Panel	1946-52	31201B
Control box	1946-49	*37031A	Right hand	1946-49	*50323A	Knob	—	314026
"	1950	37065E	Left hand Later	1949-50	*50458A	Starting motor	1946-52	76428A
"	1951-52	37057E	Right hand	1949-50	*50490A	Stop lamp	1946-52	31281B
Distributor	1946-50	*409641	R.H.D., dip left	1951-52	*50985A	Spring	—	315543
"	1951-52	40192A/D	Head, Export			Warning light	1949-52	*38013B
Fuse box	1946-52	*385175	Vertical dip	1949-50	*50458A	Windshield wipers		
Generator	1946-52	22449B	R.H.D., dip left	1951-52	*50985A	Motor	1946-52	75054A
" Later	1952	22449D	L.H.D., dip right	1951-52	50877B	Coupling bar	1946-52	*733472
Horn	1946-48	069344	Head, Export Europe (not France)	1951-52	50986A	Bearing, passenger side	1946-52	731721
"	1949-52	*69011F	Roof	1951-52	*56051A	Arm, left hand	1946-52	735119
Horn push	1946-52	31269A	Side	1946-52	52030A	" right hand	1946-52	735118
Junction box	1946-50	78266A	Stop tail and number plate	1946-52	*53031D	Blade	1946-52	727784
"	1951-52	78264A	Mirror	1946-52	*620128			
LAMPS			Starting motor	1946-48	*250231			
Dash	1946-49	*545179	"	1949-52	25017A			

H.R.G. 12 h.p. 1946-52

Ammeter	1946-51	*369047	LAMPS, Head, Home—continued			SWITCHES—continued		
"	1952	*36018B	Right hand	1949-50	*50490A	Stop lamp	1946-52	31281B
Battery	1946-52	SLG11E	R.H.D., dip left (L.H. and R.H.)	1951-52	*50985A	Spring	—	315543
Coil, ignition	1946-52	*45039A	Head, Export			Warning light	1949-52	*38013B
Control box	1946-48	*37032A	L.H. and R.H. ('Streamline')	1946	*50165A	Windshield wipers		
"	1949-50	37065E	L.H. and R.H.	1949-50	*50458A	Motor	1946-52	75054A
"	1951-52	37057E	R.H.D., dip left	1951-52	*50985A	Coupling bar	1946-52	*733472
Distributor	1946-48	*405507	L.H.D., dip right	1951-52	50877B	Bearing, passenger side	1946	731721
"	1949	40062A/E	Head, Export Europe (not France)	1951-52	50986A	Arm, left hand	1946-52	735119
"	1950-51	*40167B/E	Roof	1951-52	*56051A	" right hand	1946-52	735118
"	1951-52	*40167F/H	Side (Sports)	1946	52030A	Blade	1946-52	727784
Fuse box	1946-52	*385175	Stop tail and number plate	1946-52	*53031D	Windshield wipers ('Streamline')		
Generator	1946-48	*238311	Mirror	1946-52	*620128	Motor	1946-50	*75053J
"	1949-52	22449B	Starting motor	1946-48	*250231	"	1951-52	*75053K
" Later	1952	22449D	"	1949-52	25017A	Wheelbox	1946	*72548A/K
Horn	1946-48	069344	SWITCHES			Crosshead and rack assy.	1946	736121
"	1949-52	*69011F	Dipper	1946-52	31284A	Inner cable rack	1946	736024
Horn push	1946-52	31269A	Ignition and lighting	1946-52	34055A	Outer casing	1946	739844
Junction box	1946-50	78266B	Panel	1946-52	31201B	Motor to wheelbox	1946	739954
"	1951-52	78264B	Knob	1946-52	314026	Wheelbox to control box	1946	*739954
LAMPS			Starting motor	1946-52	76428A	Offside	1946	*739954
Dash	1949-50	56010A				Nearside	1946	740032
Fog	1951-52	*55029E				4" nearside wheelbox	1946	740031
Head, Home						3" offside wheelbox	1946-52	734458
Left hand ('Streamline')	1946	*50165A				Grammet, wheelbox	1946	735895
Right hand	1946	*50166A				Guide tube, wheelbox	1946	*735050
Left hand (Sports)	1946	*50324A				Blade	1946-52	727707
Right hand	1946	*50323A						
Left hand	1949-50	*50458A						

HUMBER 'Hawk' 1946-57

Ammeter	1946-48	364570	Control box	1946-48	*37032A	Distributor	1946-50	40070A/E
Battery	1946-47	SG9A	"	1949-52	37065E	"	1951-52	40218A/D
"	1948-57	GT9A	" Later	1952-56	*37138A/D	"	1953	40070A/E
Coil, ignition	1946-56	*45012A/D	"	1957	37182H	" Later	1953-54	*40376A/B
"	1957	*45054H				"	1955-56	*40430D
						" Later	1956-57	40491A/F

* See Supersession Chart

L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive

continued



HUMBER 'Hawk' 1946-57—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Flasher unit	1954-55	*35003A	LAMPS—continued			Warning lights		
"	1956	*35004A	Reverse lamp kit	1955	052993	Flasher	1953-54	*38069A
"	1957	35011A	Roof	1948	*540020	"	1955-57	38119A
Flasher relay	1953-57	33117A/B	Side	1949-54	56016A	" (De Luxe)	1957	38151A
Fuse box	1946-48	*385184	Side and flasher	1946-48	*52067A	Main beam	1951-54	*38069A
" (G.P.O.)	1952-57	033239	(U.S.A. and Canada)	1950-54	52139B	" (De Luxe)	1955-57	38118A
Generator	1951-52	*37131A	ditto	1949	*52152D	"	1957	38152A
"	1946-48	*22446A	ditto	1953	*52162B			
"	1949-52	*22250E/F	ditto	1955	*52162B			
"	Later	22258D	ditto	1956-57	52240B			
"	1957	22258E	ditto	1957	*52372A	Windshield wipers		
Horn			ditto	1949	*53120B	Motor	1946-48	†75066A
Low note	1946-48	*69021A	Stop tail	1949	*53027B	"	1949-50	*75053J
"	1949-55	*69011F/J	ditto (U.S.A. & Canada)	1946-48	53174E	"	1951	*75053K
"	1955-57	69046A/E	ditto	1950-52	53174E	"	1952	75150A
High note	1946-48	*69022A	ditto	1950-53	53173B	"	1953-54	*75174D
"	1949-55	*69012F/J	ditto	1953-54	*53226D	"	1955-56	*75200B
"	1955-57	69047A/E	Stop tail and reverse	1955	*53322A	"	1957	75296A
Horn relay	1955-57	*33116B	Stop tail, flasher and reverse	1956-57	53464A	Clutch housing	1946-48	737357
Junction box	1946-57	78266A	Tail and flasher indicator			Bracket, with shaft and coupling	1946-48	734489
LAMPS			Reflex reflector	Later		Shaft, short	—	737243
Boot	1946-48	56018A	Starting motor	1953-54	53174B	Coupling	—	729036/S
Clock illumination	1950-52	56041A	Home	1950-54	65424A	Link, primary	1946-48	733820
Head, Home			Export	1946-48	*255378	" secondary	1946-48	733819
R.H.D., dip left (L.H.)	1946-48	50176A	Steering column control	1949-57	25521B/D	Wheelbox	1949-52	*72548A/F
" non-dip (R.H.)	1946-48	50177A	Home	1946-48	323816	"	1953-54	72636A/D
" dip left (L.H.)	1949	*50793B	Export	1946-48	323822	" (De Luxe)	1955-57	72660A
" non-dip (R.H.)	1949	*50362F	Steering column control	1949-50	32791A/J	"	1957	*72688A
" dip left (L.H.)	1950-51	*50445K	ditto	1950-52	32844F	Crosshead and rack assy.		
" non-dip (L.H.)	1950-51	*50446K	ditto	1953-54	32870A/H	Cut to 50%	1949-52	738499
R.H.D., dip left (L.H. and R.H.)	Later	1951	ditto	1955-57	32908A/J	Crosshead and rack assy.	1953-55	*743231
"	1952-53	*50954A	SWITCHES			"	1956-57	743238
"	1953-55	50941A	Boot lamp	1946-48	359358	Outer casing		
"	1956-57	51336A	Dipper	1953-57	31284A	Motor to wheelbox	1949-52	739858
" (alternative)	1956-57	51736B/D	Door light	1949-54	31775A	"	1953-54	740816
Head, Export			Fog lamp	1949-50	*31212A	"	1955	745029
R.H.D., dip left	1949	*50793B	Knob	1949-50	*315995	Wheelbox to wheelbox	1956-57	743981
"	1950-51	*50445K	Heater or fan	1947-48	*78233A	End tube	1949-52	*739957
R.H.D., dip left (L.H. and R.H.)	Later	1951	Knob	—	*768523	"	1953-57	740814
"	1952-53	50941A	Heater or fan	1949-54	*31251A	Ferrule, casing retaining	1953-57	740031
"	1953-55	51336A	Knob	—	*316121	Grommet, wheelbox	1949-52	740746
"	1956-57	51736B	Ignition and lighting	1946-48	*34487A	Arm	1955-57	740715
" (alternative)	1956-57	51742B	"	1949-52	*34052A	" left hand drive	1951-52	735824
Vertical dip	1946-48	*50274A	"	1953-54	*34073A	"	1946-48	*735098
L.H.D., dip right	1949	A50793B	Knob	1955	34090A	"	1949-50	*737581
"	1950-51	*A50445K	Ignition and lighting	1955	34059E	"	1951-52	*737576
"	1951-52	*50804D	Panel	1956-57	*34073A	"	1953-54	*741293
"	1953	50973A	Knob (ivory)	1949-57	*31236B	" right hand drive	1955-57	745072
"	1953-55	*51337A & B	" (black, De Luxe)	—	317508	"	1949-52	*737529
"	1956	51737B	Reverse lamp	1957	31360A	"	1953-54	*741292
Head, Export Europe (not France)	1949	*B50793B	Roof lamp	1956-57	31281B	Blade	1955-57	745071
ditto	1950-51	*B50445K	Solenoid, starting motor	1949-54	*31378A	"	1946-48	727759
ditto	1951-52	*50963A	Solenoid operating	1946-48	76022A	"	1949	*737433
ditto	1953	50967A	ditto	1949-57	*76411D/E	"	1950-52	*738719
ditto	1953-55	51339A	ditto	1946-48	*317073	"	1953-57	738724
ditto	1956-57	51738B	ditto (De Luxe)	1949-52	*31195A	Laycock de Normanville overdrive equipment (optional extra)		
Head, Export France	1950-51	*50790E	Stop lamp	1953-57	31377A	Relay	1954-57	33157A
"	1951-53	*50962A	"	1946-54	*31373B	Solenoid, transmission gear	1954-57	*76505A/B
"	1953-55	51341A	" Spring	1955-57	31281B	Switches		
"	1956-57	51739B	"	1946-48	31082D/E	Control, left hand drive	1954-57	31496A/D
Head, Export N. America	1948-53	50811A	Windshield wiper	1949-54	*315543	ditto (De Luxe)	1957	*31628A
ditto	1953-55	51343A	Knob (ivory)	1949-57	*31236B	Control, right hand drive	1954-57	31483A/D
ditto	1956-57	51741B	" (black, De Luxe)	—	317507	ditto (De Luxe)	1957	*31627A
Head, Export Canada	1955	51509A	Trafficators	1946-48	313605	Gear lever	1954	*31077D
Number plate illumination	1949-54	53135A	"	1949-50	*54010A	Inhibitor	1955-57	31478A
"	1955-57	53278B	"	1951-52	*54018D			
"			"	1953-54	*54039A			
"			"		54044A/D			

HUMBER New 'Hawk' Series I and IA 1958-60

Battery	1958	GT9A	LAMPS—continued			Screenjet (optional)	1959-60	077025
Coil, ignition	1959-60	BT9A	Head, Export Europe (not France)	1958-59	51947A/B	Starting motor	1958-60	25521D
Control box	1960	*45053J/K	(except France & Sweden)			Steering column control	1958-60	32980A/E
Distributor	1958-59	37182H	Head, Export France	1959-60	58369A	SWITCHES		
Flasher unit	1960	37182K & L	"	1958-59	51948A	Dipper	1958-60	31284A/D
Fuse box	1958-59	40560A/B	"	1959-60	58370A	Flasher	1958-60	31625B/D
Generator	1960	40560D/E & F	Head, Export Sweden	1960	58609A	" (with overdrive)		
Horn	1958-60	35011A	Head, Export U.S.A.	1958-60	51949A	" L.H.D.	1958-60	31713A/B
Low note	1958-60	033239	"	1960	58492A	" R.H.D.	1958-60	31712A/B
High note	1958-60	22258E/H	Number plate illumination (Estate Car)	1958-59	53518A	Ignition and starting	1958-60	31637A/E
Horn relay	1958-60	69046F	"	1960	53630A	Lighting	1958-60	31426E
LAMPS			Number plate illumination and reverse	1958-60	575923	Knob	—	313097
Boot	1959-60	53788A	Reverse (Estate Car)	1958-60	*52246B	Reverse lamp	1958	31281B
Head, Home			Side and flasher	1958-60	52334B/K	"	1958-59	31826A
R.H.D., dip left	1958-60	51946B/D	Stop tail and flasher	1958-60	53547D/H	Screenjet (when fitted)	1960	31478A/B
Head, Export			" (U.S.A.)	1958-60	53643B/E	Solenoid, starting motor	1959-60	31363A
R.H.D., dip left	1958-60	51946B/D	Reflex reflector (dummy filler cap)	1958-60	576271	Stop lamp	1958-60	*76411E
						Windshield wiper	1958-60	31082E
						Knob	1958-60	*31668A
						"	1958	*316630
						"	1959-60	*54330748

* See Supersession Chart L.H.D. ... Left hand drive

† No longer available—refer to Wiper Conversion Set Section R.H.D. ... Right hand drive

L.H. ... Left hand R.H. ... Right hand

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



HUMBER New 'Hawk' Series I and IA 1958-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Warning lights			Windshield wipers—cont'd			Windshield wipers—cont'd		
Flasher	1958-60	38142A	Screenjet nozzle and bush			Arm, left hand drive		
Ignition	1958-60	38140B	Left hand	1959-60	72733A Later	1959-60	54710008
Main beam	1958-60	38141B/E	Right hand	1959-60	72731A	.. right hand drive	1958	†743528
Oil	1958-60	38148A/B	Crosshead and rack assy.	1958-60	744256 Later	1958-59	745653
			ditto (L.H.D. only)			.. right hand drive		
		 Later	1959-60	744254 Later	1959-60	54710009
Windshield wipers			Outer casing			Blade	1958	1958
Motor	1958	†75305B	Motor to wheelbox ..	1958	†744403	1959	54711280
.. .. . Later	1958-59	75310A	ditto Later	1958-59	745806 Later	1959-60	54711283
.. L.H.D.	1959-60	75374A	ditto (L.H.D.) ..	1959-60	54710508			
.. R.H.D.	1959-60	75361A	ditto (R.H.D.) ..	1959-60	54710509			
Wheelbox, L.H. ..	1958	†72696B	Wheelbox to wheelbox	1958	†744404			
.. .. . Later	1958	72701A	ditto Later	1958-59	745807			
.. .. . R.H.	1958	†72695A	ditto	1959-60	54710349			
.. .. . Later	1958	72700A	End tube	1958-60	740746			
.. .. . L.H.D.	1959	72718A	Ferrule, casing retaining	1958-60	740715			
.. .. . R.H.D.	1959	72717A	Arm, left hand	1958	†743529			
.. .. . L.H.D. and			.. left hand drive					
.. .. . R.H.D. Later	1959-60	72730A Later	1958-59	745652			

HUMBER 'Imperial' 1946-53: 'Pullman' 1946-54

Ammeter	1946-48	364570	LAMPS—continued			SWITCHES—continued		
Battery	1946-49	SG11A	Head, Export Europe			Panel	1947-54	31173B
.. .. .	1950-54	GT11A	(not France)	1950-51	*B50445K	Reverse lamp	1946-50	*31077A
Coil, ignition ..	1946-47	*45039A	ditto Later	1951-52	*50963A	Roof lamp	1948-54	*31182D
.. .. .	1948-53	*45012A/D	ditto	1953	50967A	Solenoid, starting motor	1946-49	76022B
.. .. .	1954	*45046A	ditto Later	1953-54	51339A	1950-54	*76411D
Control box .. .	1946-47	*37032A	Head, Export France ..	1951	*50790E	Solenoid operating ..	1946-54	*31174D
.. .. .	1948-49	37065E Later	1951-53	*50962A	Stop lamp	1946-54	31281B
.. .. .	1950-52	*37076E	Head, Export U.S.A. ..	1954	*51341A	Spring	—	*31571A
.. .. .	1953-54	*37139D	1948	50605H	Trafficator interrupter	1948-52	31177B
Distributor .. .	1946-47	*410700	1951-53	50811A			
.. .. .	1948-53	40135E/H Later	1953-54	51343A			
Low compression	1954	*40312A/F	Number plate illumination	1946-54	53121A			
.. .. . Later	1954	*40312H	Reverse, tail and number			Trafficators	1946-47	*539973
High compression	1954	40401A/F	plate	1946-47	53032B	1948-49	*54010A
Flasher unit .. .	1953-54	*35003A	ditto	1950	53116A	1950-51	*54040A
Fuse box (cigar lighter)	1946-52	*385184	Roof	1946-54	56016A	1952	*54048A
.. .. .	1953-54	032329	Side	1946-47	*52067A	1953-54	54044A/D
Generator .. .	1946-49	*22446A	1949-52	*52158D			
.. .. .	1950-52	*22435A/B Later	1952-54	52200A	Warning lights		
.. .. .	1953-54	*22456A/B	Side and flasher (U.S.A.)	1952-54	53222A	Flasher	1953-54	*38069A
Horn			Stop tail and number plate	1946-47	*53027B	Main beam	1951-54	*38069A
Low note	1946-50	*69021A	Stop tail and reverse ..	1948-52	*53115E			
.. .. .	1951-54	*69011F	1953-54	53177B			
High note	1946-50	*69022A	Stop tail and flasher			Windshield wipers		
.. .. .	1951-54	*69012F	(U.S.A.)	1951-53	53227A	Motor	1946	†75066A
Junction box .. .	1946-54	78266A	Mirror	1947-50	*75055K
LAMPS			Left hand	1946-54	062590	1951-52	*75055L
Boot ('Pullman') ..	1946-47	*622047	Right hand	1946-54	062587	1953-54	75152A
.. ('Imperial') ..	1946-47	*6018A	Interior	1950-53	062577	Clutch housing	1946	737357
.. .. .	1948-54	*56017B	Starting motor	1946	*270490	Bracket, with shaft and		
Bulb holder, stop tail	1950-54	*56037A	1947-49	26026A/B	coupling	1946	734489
Dash	1948	*56011A	1950-54	26041A/B	Shaft, short	—	737243
.. .. .	1951-52	*56045B	Steering column control ..	1946-47	*323616	Coupling	—	729036/S
Head, Home	1948-54	32775H/J	Link, primary	1946	733820
L.H. and R.H. .. .	1946-47	50203E				.. secondary	1946	*733819
.. .. .	1948	*50362F	SWITCHES			Wheelbox, with switch	1947-54	72597H
R.H.D., dip left (L.H.)	1949-51	*50445K	Door light	1948-54	31175A less switch ..	1947-54	72596D
.. non-dip (R.H.)	1949-51	*50446K	Foglamp	1946	31201B	Crosshead and rack assy.	1947-54	736307
.. dip left	1951	*50954A	Knob	1946	314026	Outer casing		
.. .. . Later	1952-53	50941A	Foglamp	1947-48	*31172A	Motor to wheelbox ..	1947-52	739868
.. .. .	1953-54	51336A	Heater or fan	1948-54	78203A	1953-54	*739832
Head, Export .. .			Knob	—	*768521	Wheelbox to wheelbox	1947-54	*739941
R.H.D., dip left ..	1949-51	*50445K	Ignition	1948-54	*312168	3", offside wheelbox ..	1947-54	740031
.. .. .	1950-51	*A50845K	Knob	—	—	Grommet, housing or		
L.H.D., dip right ..	1951-52	*50804D	and lighting	1946-47	*344874	wheelbox	1946-54	734181
.. .. .	1953	50973A	Lighting	1948-54	31183B	Arm	1946-54	*735078
.. .. .	1953-54	*51337A	Knob	—	315037	Blade	1946-54	727759

HUMBER 'Snipe' 1946

Battery	1946	SG11A	LAMPS—continued			Trafficators	1946	*539663
Coil, ignition .. .	1946	*45039A	Side	1946	*52067A	Windshield wipers		
Control box .. .	1946	*37032A	Stop tail and number plate	1946	*525123	Motor	1946	†75066A
Distributor .. .	1946	*410700	Mirror	1946	*621601	Clutch housing	1946	737357
Fuse box	1946	*385184	Starting motor	1946	*270490	Bracket, with shaft and		
Generator .. .	1946	*22446A	Steering column control ..	1946	*323616	coupling	1946	734489
Horn						Shaft, short	—	737243
Low note	1946	*69021A	SWITCHES			Coupling	—	729036/S
High note	1946	*69022A	Foglamp	1946	*314442	Link, primary	1946	733820
Junction box .. .	1946	78266A	Ignition and lighting ..	1946	*344874	.. secondary	1946	*733819
LAMPS			Reverse lamp	1946	*31077A	Grommet, housing .. .	1946	734181
Boot	1946	*560602	Roof lamp	1946	359358	Arm	1946	*735078
Head, Home .. .	1946	50203A/D	Solenoid, starting motor	1946	76022B	Blade	1946	727759
Reverse, tail and number			Solenoid operating .. .	1946	*317063			
plate	1946	*525133	Stop lamp	1946	31281B			
Roof	1946	*540020	Spring	—	—			

* See Supersession Chart † First 1,000 cars ‡ No longer available—refer to Wiper Conversion Set Section L.H. .. Left hand
 R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive
 A80 Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



HUMBER 'Super Snipe' 1946-57

Table with columns: Unit, Year, Part No., Unit, Year, Part No., Unit, Year, Part No. It lists various components like Ammeter, Battery, Coil, Control box, Distributor, Flasher unit, Generator, Horn, LAMPS, Head, Head, Home, Head, Export, Head, Export Europe, Vertical dip, Fuse box, Generator, Horn, LAMPS, Steering column control, SWITCHES, Cigar lighter knob, Dipper, Door light, Flasher, Foglamp, Heater or fan, Ignition, Ignition and lighting, Interior light, Lighting, Panel, Reverse lamp, Roof lamp, Glove box, SWITCHES—continued, Solenoid, starting motor, Solenoid operating, Stop lamp, Spring, Stop lamp, Trafficator, Windshield wiper, Knob, Trafficators, Warning lights, Ignition, Main beam (U.S.A.), Windshield wipers, Motor, Bracket, with shaft and coupling, Shaft, short, Coupling, Link, primary, secondary, Wheelbox, with switch, less switch, Crosshead and rack assy., Cut to 43, Outer casing, Motor to wheelbox, wheelbox, Arm, left hand drive, right hand drive, Blade, Overdrive equipment (optional), Relay, Solenoid, transmission gear, Switches, Control, L.H.D., R.H.D., Inhibitor.

HUMBER New 'Super Snipe' Series I and II 1959-60

Table with columns: Unit, Year, Part No., Unit, Year, Part No., Unit, Year, Part No. It lists components like Ammeter, Battery, Coil, Control box, Distributor, Flasher unit, Fuse box, Generator, Horn, LAMPS, Glove box, LAMPS—continued, Head, Home, R.H.D., dip left, Head, Export, R.H.D., dip left, Head, Export Europe, Vertical dip, Relay, Solenoid, transmission gear, Switches, Control, L.H.D., R.H.D., Inhibitor.

* See Supersession Chart L.H.D. ... Left hand drive † No longer available—refer to Wiper Conversion Set Section R.H.D. ... Right hand drive Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



HUMBER New 'Super Snipe' Series I and II 1959-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS—continued			SWITCHES—continued			Windshield wipers—cont'd		
Head, Export France ..	1959	51948A	Panel rheostat	1959-60	78331A	Crosshead and rack assy.		
Head, " " Later ..	1959-60	58370A	Reverse lamp	1960	78344A	Cut to 45°	1959-60	744256
Head, Export Sweden ..	1959-60	58609A	Knob " " Later ..	1959-60	54330752	Crosshead and rack assy.		
Head, Export U.S.A. ..	1959-60	51949A	Reverse lamp	1959	31826A	L.H.D. .. Later	1959-60	744254
Head, " " Later ..	1960	58492A	Screenjet (when fitted)	1959-60	*31077E	Outer casing ..	1959	745806
Number plate illumination (Estate Car) ..	1959-60	53630A	Solenoid, starting motor	1959-60	*76411E	Motor to wheelbox ..	1959-60	54710508
Number plate illumination and reverse ..	1959-60	575923	Stop lamp	1959-60	31082E	L.H.D. .. Later	1959-60	54710509
Reverse (Estate Car) ..	1959-60	*52246B	Windshield wiper ..	1959-60	*31668B	R.H.D. ..	1959	745807
Side and flasher ..	1959-60	52334B/K	Knob	—	*54330748	Wheelbox to wheelbox ditto .. Later	1959-60	54710349
Stop tail and flasher ..	1959-60	53547H	Warning lights ..			End tube	1959-60	740746
ditto (U.S.A.) ..	1959-60	53643E	Flasher	1959-60	38142A	Ferrule, casing retaining	1959-60	740715
Reflex reflector (dummy filler cap) ..	1959-60	576271	Ignition	1959-60	38140B	Arm, right hand ..	1959	745653
Screenjet (optional) ..	1959-60	077025	Main beam	1959-60	38141E	" " left hand ..	1959-60	54710009
Starting motor ..	1959-60	25521D	Oil	1959-60	38148B	" " " " Later	1959	745652
Steering column control ..	1959-60	33503B	Windshield wipers ..	1959	75310A	Blade " " " " Later	1959-60	54710008
SWITCHES			Motor	1959-60	75374A	" " " " " " Later	1959-60	54711280
Dipper	1959-60	31284A/D	" L.H.D. .. Later	1959-60	75361A	Overdrive equipment (optional)		
Flasher (With overdrive)	1959-60	31625B/D	" R.H.D. ..	1959-60	75361A	Relay	1959	33157B
Left hand drive ..	1959-60	31713A/B	Wheelbox	1959	72718A	" " " " " " 1960	1960	33174B
Right hand drive ..	1959-60	31712A/B	L.H.D.	1959	72717A	Solenoid, transmission gear	1959-60	*76517A/B
Ignition and starting ..	1959-60	31637A/E	L.H.D. and R.H.D. ..	1959-60	72730A	Switch		
Lighting	1959-60	31426E/H	Screenjet nozzle and bush			Inhibitor (long thread)	1959	31478A
Knob	—	54330759	Left hand	1959-60	72733A	" (short thread)	1960	31542A
			Right hand	1959-60	72731A			

INVACAR Invalid Carriage 1951-55

Battery	1951-55	PUW7E/4	LAMPS—continued			SWITCHES—continued		
Fuse box	1953-55	032339	Side	1951	A52154A	Lighting	1951-54	31201B
Horn	1951	70048D	" " " " ..	1952-53	A52182	Knob	—	314026
" " " " ..	1952-55	069225	" " " " ..		A/D	Starting motor	1953-55	76423A
Horn push	1951-55	76210A	Tail and number plate ..	1951	*A52105A	Trafficator	1951-55	31379A
Junction box	1951-55	78266A	Starting motor	1952-55	*53140B	Trafficators	1951-52	*54012A
LAMPS			SWITCHES	1953-55	*A53056A	" " " " ..	1953-55	54037A
Head	1951	*50292D	Dipper	1951-55	25037A	Windshield wiper		
" " " " ..	1952-53	*50306D				Motor	1951-55	*75121A
" " " " ..	1954-55	*50292D						

ISETTA (Gt. Britain) '300' 1957-60

Battery	1957-60	HO7A-8	LAMPS—continued			Reflex reflector	1957-59	*57075B
(special applications)	1960	BT7A	Head, Export Canada ..	1957-60	58148A/B	Steering column control ..	1957-60	33504A
Coil, ignition	1957-60	*45053H/J	Number plate illumination	1957-60	*53650A/B	Suppressor	1957-60	78105A
Flasher unit	1957-60	35012A	Side	1959-60	52391A/B	SWITCHES		
" " (Canada) ..	1957-60	35010A	Side and flasher (Canada)	1958-60	52338A/D	Dipper	1957-60	*31704A
Horn	1957-60	70141	Side and flasher plinth ..	1958-60	576987	Flasher	1957-60	31695A
Horn bracket	1957-60	705179	Stop tail	1957-59	53178F	Stop lamp	1957-60	31082E
LAMPS			Stop tail and number plate (Canada)	1958-60	53426A/B	Terminal block	1957-60	37101B
Flasher	1957-60	53362B	Stop tail and number plate plinth ..	1958-60	577091	Warning lights		
Head, Home	1957-58	58119B	Stop tail and reflex ..	1960	53520D	Flasher	1957-60	38102A
Vertical dip	1959-60	58415A	Tail, flasher and reflex ..	1958-60	53377B	Ignition	1957	38100A
R.H.D., dip left ..	1957-58	58119B	(Canada)	1958-60	576808	" " " " ..	1958-60	*319388
Head, Export	1959-60	58415A	Tail, flasher and reflex plinth ..	1958-60		Main beam	1957-60	38145A
Vertical dip	1957-58	58119B						
R.H.D., dip left ..	1959-60	58415A						

JAGUAR 1 1/2 litre Saloon 1946-48

Ammeter	1946-47	*369260	LAMPS, Head, Home—			SWITCHES—continued		
" " " " ..	1948	36071A	continued			Ignition	1946-48	31287A
Battery	1946-48	SLG11A	R.H.D., dip left (special equipment, L.H.) ..	1946-47	50161A	Lighting	1946-48	31056A
Coil, ignition	1946-48	*45020A/B	R.H.D., non-dip (special equipment, R.H.) ..	1946-47	50162A	Panel	1946-48	*314613
Control box	1946-47	*37036A	R.H.D., dip left (L.H.) ..	1948	50161A	Knob	1946-48	314437
" " " " ..	1948	37057E	" " " " " " " " ..	1948	50162A	Reverse lamp	1946-48	*31077A
Distributor	1946	*40057F/H	Head, Export			Roof lamp	1947-48	*314613
" " " " ..	1947-48	40091A/H	R.H.D., dip left ..	1947	*50385B	Knob	—	314437
Fuse box	1946-47	*385175	ditto (alternative)	1947	50289D	Solenoid, starting motor	1946-48	76022B
" " " " ..	1948	37110A	ditto (special equipment)	1947	50355A	Solenoid operating ..	1946-48	31361A
Generator	1946-48	22452A	Number plate illumination ditto (special equipment)	1946-47	*53064A	Stop lamp	1946-48	31281B
Pulley	—	228080	ditto .. Later	1946-47	*53051A	Trafficators	1946-48	539941
Horn			Side	1946-48	*53051A	Warning light	1946	*318732
Low note	1946-47	*69021A	Mirror	1946-48	52030A	" " " " ..	1947-48	*38020A
" " " " ..	1948	*69011F	Starting motor	1946-48	*580892	Windshield wipers		
High note	1946-47	*69022A	Mirror	1946-48	*255986	Motor	1946-48	†75066A
" " " " ..	1948	*69012F	Steering column control			Clutch housing	1946-48	737085
LAMPS			Home	1946	*323137	Bracket, with shaft and coupling	1946-48	737054
Boot	1946-48	56015A	Export	1947-48	32758F	Shaft, short	1946-48	737243
Fog	1946-48	*55009A	SWITCHES	1946-48	32730A	Coupling	1946-48	729036/S
Head, Home			Boot lamp	1946-48	359236	Link	1946-48	729234
R.H.D., dip left (with biflex, L.H.) ..	1946	*50181A	Foglamp	1946-48	*314613	Grommet, housing ..	1946-48	729423
R.H.D., non-dip (with biflex, R.H.) ..	1946	*50182A	Knob	1946-48	314437	" " " " " " ..	1946-48	729378
R.H.D., dip left (with tripod, L.H.) ..	1946-47	*50150D	Heater or fan	1947-48	78205A	Arm	1946-48	*735098
R.H.D., non-dip (with tripod, R.H.) ..	1946-47	*50151B	Knob	—	76842A	Blade	1946-48	727707

* See Supersession Chart
L.H.D. .. Left hand drive

† No longer available—refer to Wiper Conversion Set Section
R.H.D. .. Right hand drive

L.H. .. Left hand R.H. .. Right hand

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



JAGUAR 2½ litre 1946-51

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1946-47	*369260	LAMPS—continued			SWITCHES—continued		
"	1948	36071A	Head, Export Europe			Reverse lamp	1946-51	*31077A
"	1949-50	*36079A	(not France)	1949-51	B50778A	Roof lamp	1946-48	*314613
"	1951	36135A	ditto Later	1951	B50933A	Knob		314437
Battery	1946	SG11A	Head, Export France ..	1949-51	*50780A	Roof lamp	1949-51	*31198A
"	1947-48	SLT13A	ditto Later	1951	50935A	Knob		*315233
"	1949-51	GT11A	Head, Export U.S.A. ..	1949-51	50781A	Solenoid, starting motor	1946-49	*760080
Coil, ignition	1946-48	*45039A	ditto Later	1951	50936A	ditto Later	1949-51	*76411D
"	1949-51	*45012A/D	Number plate illumination	1946-48	*53051A	Solenoid operating ..	1946-48	31361A
Control box	1946-47	37046A	ditto	1949-51	*53149D	"	1949-51	31153A
"	1948-51	*37076E	ditto Later	1951	53215A	Knob		317324
Distributor	1946	40066A	Side	1946-48	*52043A	Windshield wiper ..	1949-51	31154A
"	1946	*40096A	"	1949-51	52137B	Knob		315140
"	1947	*40096B/D	"	1951	*52175A	Terminal block	1949-51	300990
"	1947	40092B/E	"	1951	52176A	Trafficators	1946-48	539941
"	1948	40156D	(U.S.A.)	1951	*52176A	"	1949	54003E
"	1949-51	40156E/F	Stop tail	1949-50	*52167B	"	1950-51	*54039A
Fuse box	1946-47	*385175	Stop tail and flasher	1950	*53146A	Warning lights		
"	1948-50	37110A	ditto	1950-51	*53196B	Heater	1949-51	39015A
"	1951	*37100D	ditto	1951	53178D	Ignition	1946-48	*38020A
Generator	1946-47	*22447A	ditto (U.S.A.)	1949-50	*53145B	"	1949-51	38048A
"	1948	*22429A	Mirror	1951	*53176B	Windshield wipers		
"	1949	*22429D/E	"	1946-48	*580892	Motor	1946-48	†75066A
"	1950-51	22429F/H	"	1950	062542	"	1949	*75063K
Horn			Starting motor	1951	062548	"	1950	*75055K
Low note	1946-47	*69021A	"	1946-47	*255721	"	1951	*75055L
"	1948-51	*69011F	"	1947-48	*25506A	Clutch housing	1946-48	737085
High note	1946-47	*69022A	"	1949-50	*25523A/D	Bracket, with shaft and		
"	1948-51	*69012F	"	1951	*25522B	coupling	1946-48	737054
Horn relay (R.H.D.) ..	1951	*33116B	Steering column control	1946	323770	Shaft, short	1946-48	737243
" (L.H.D.)	1951	33135B	"	1946	32759F	Coupling	1946-48	729036/S
LAMPS			"	1949-51	32801J	Link	1946-48	729234
Boot	1946-51	56015A	SWITCHES			Wheelbox	1949-51	*72548A/K
Fog	1946-50	*55009A	Boot lamp	1946-48	359236	Crosshead and rack assy.		
"	1951	55043E	"	1949-51	31175A	Cut to 44½	1949-51	736307
Head, Home			Dipper	1949-51	31284A	Outer casing		
R.H.D., dip left (L.H.)	1946-48	50163B	Foglamp	1949-51	31154A	Motor to wheelbox ..	1949-51	*739832
" non-dip (R.H.)	1946-48	50164B	Knob		315140	Wheelbox to wheelbox	1949-51	739932
" dip left (L.H.)	1949-51	50778A	Heater or fan	1946-48	*78263A	End tube	1949-51	740031
" non-dip (R.H.)	1949-51	*50779A	Knob		768424	Grommet, housing ..	1946-48	729423
" dip left (L.H.)	1949-51	*50779A	Heater or fan	1949-51	31154A	" scuttle	1946-48	729378
"	Later		Knob		315140	" wheelbox	1949-51	734181
" non-dip (R.H.)	1951	50933A	Ignition	1946-48	31287A	Arm	1946-48	*735098
"	Later		"	1949-51	31216A	"	1949	736423
Head, Export			Lighting	1946-48	31056A	" left hand	1950-51	*737596
R.H.D., dip left ..	1947-48	50307B	"	1949-51	31227A	" right hand	1950-51	*737595
"	1949-51	50778A	Knob		327074	Blade	1946-48	727707
L.H.D., dip right ..	1947-48	50489B	Panel	1946-48	*314613	"	1949	736428
"	1949-51	A50778A	Knob		314437	"	1950-51	*737572
"			Panel	1949-51	31154A	"		
"			Knob		315140			

JAGUAR 3½ litre Mk. V 1946-52; Mk. VII 1952-58

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1946-47	*369260	Generator	1948	*22429A	LAMPS—continued		
"	1948	36071A	"	1949	*22429D/E	Head, Export		
"	1949-50	*36079A	"	1950-52	*22429F/H	R.H.D., dip left ..	1947-48	50307B
"	1951	36135A	"	1953-58	*22462A/E	"	1949-51	50778A
Battery	1946	SG11A	Horn			"	1952-54	50933A
"	1947-48	SLT13A	Low note	1946-47	*69021A	R.H.D., dip left		
"	1949-50	GT11A	"	1948-53	*69011F	(L.H. and R.H.) ..	1955	*51505A
Coil, ignition	1946-50	*45039A	"	1954-58	*70063A/E	"	1956-58	*51762A
"	1951-55	*45012A/D	"	1951-52	*69032A	L.H.D., dip right ..	1947-48	50489B
"	1955	*45054D	High note	1953-54	*70063A	"	1949-51	A50778A
"	1956-58	*45067B/D	"	1946-47	*69022A	"	1952-54	A50933A
Control box	1946-47	37046A	"	1948-53	*69012F	"	1955	*51506A
"	1948-50	*37076E	"	1954-58	*70071A/E	"	1956-58	51763A
"	1951-53	*37118A	"	1951-52	*69033A	Head, Export Europe		
"	1953-56	*37139D/E	"	1953-54	*70071A	(not France)	1949-51	B50778A
"	1957-58	37183H	Horn relay (Home) ..	1951-53	33135B	(except countries listed)	1952-54	B50933A
Distributor	1946-47	*40080A	"	1951-53	*33116B	"	1955-58	51507A
"	1947	40093D	Inspection lamp sockets	1951-58	38604A	Head, Export France ..	1949-51	*50780A
"	1948-50	40149E/F	LAMPS			"	1951-54	50935B
7-1 compression ratio			Boot	1946-51	56015A	"	1955-58	51563A/B
(Standard)	1951-55	*40263A/B	Flasher, front	1955	*52222A	"	1953	51472A
ditto	1955	40435A	"	1955-58	52271A	Head, Export Switzerland		
ditto (Competition)	1955	40435A	"	1957-58	52343A	Head, Export Holland and		
(Standard)	1956-58	40435A	Fog	1946-50	*55009A	Switzerland	1955-58	51565B
8-1 compression ratio			"	1951	550435	Head, Export Norway and		
(Standard)	1951-53	*40276A/B	"	1955-56	55128B	Sweden	1953-54	51479A
(Competition)	1954-58	*40372A	"	1957-58	55174D	ditto	1955-58	51564A/B
(Special equipment)	1956-58	40445A/B	"	1955-58	55133B	Head, Export U.S.A. ..	1949-51	50781B
Flasher unit	1953-56	*35003A	Head, Home			"	1952-54	*50936A
"	1957-58	35010A	R.H.D., dip left (L.H.)	1946-48	*50163B	"	1955-58	51562A/B
Flasher relay	1953-58	33117A/D	" non-dip (R.H.)	1946-48	50164B	Map reading	1951-58	39006A
Fuse box	1946-47	*385175	" dip left (L.H.)	1949-51	50778A	Number plate illumination	1946-48	*53051A
"	1948-50	37110A	" non-dip (R.H.)	1949-51	*50779A	ditto	1949-51	53149D
"	1951-57	*37100D	" dip left (L.H.)	1952-54	50933A	ditto Later	1951-52	*53255A
"	1958	37263A	" non-dip (R.H.)	1952-54	*50934A	ditto	1953-58	53215A
Generator	1946-47	*22447A	R.H.D., dip left			Number plate and reverse		
Pulley		228080	(L.H. and R.H.) ..	1955	*51505A	(France)	1957-58	53556A
			"	1956-58	*51762A			

* See Supersession Chart
L.H. .. Left hand R.H. .. Right hand

† No longer available—refer to Wiper Conversion Set Section

‡ and reverse
L.H.D. .. Left hand drive R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



JAGUAR 3½ litre Mk. V 1946-52; Mk. VII 1952-58—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS—continued			SWITCHES—continued			Windshield wipers—cont'd		
Side	1946-48	*52043A	Panel	1951-58	31114A	Wheelbox	1949-50	*72548A/K
"	1949-51	52137B	Knob	—	315242	"	1951-52	72625A/E
"	1951-58	52175D	Petrol	1951-54	31304A	"	1952-58	72628A/H
" (U.S.A.)	1951	52167B	Knob	—	316645	Crosshead and rack Assy.		
"	1951-54	*52176A	Petrol	1955-58	31429A/D	Cut to 44 ¹¹ / ₁₆	1949-50	736307
Stop tail	1949-50	*53120B	Knob	—	316645	" " 54 ¹¹ / ₁₆	1951-52	738223
" (U.S.A.)	1949-50	*53145A	Reverse lamp	1946-58	*31077A/E	Crosshead and rack Assy.	1953-56	741262
"	1950-51	*53196B	Solenoid, starting motor	1946-49	*760080	Cut to 50 ¹¹ / ₁₆	1958	744257
"	1950	*53146A	ditto	1949-58	*76411D/E	Outer casing		
"	1950-51	*53176B	Solenoid operating	1946-48	31361A	Motor to wheelbox	1949-50	*739832
"	1951-54	53178D	"	1949-51	31153A	ditto	1951-52	738223
" (left hand)	1955-58	53340E/F	Knob	—	317324	ditto	1952-58	740713
" (right hand)	1955-58	53341E/F	Solenoid operating	—		Wheelbox to wheelbox	1949-50	739932
Mirror	1946-48	580892	Later	1951-58	31253A/E	ditto	1951-52	*739975
"	1950	*062542	Knob	—	317365	ditto	1952-58	740714
"	1951-52	062548	Step light	1951-54	31175A	End tube	1949-52	740031
Left hand (Export only)	1955-58	062590	Windshield wiper	1949-51	31154A	"	1952-58	740746
Right hand (Export only)	1955-58	062587	Knob	—	315140	Grommet, housing	1946-48	739423
Starting motor	1946-49	*270401	Windshield wiper	1951-52	31304A	"	1946-48	739378
"	1950-51	26032B	Knob	—	316623	Arm	1946-48	*735098
"	1951-58	26062A	Windshield wiper	1952-58	*31302A/D	"	1949	736423
Steering column control ..	1946	323770	Knob	—	316646	" left hand	1950-51	*737596
ditto	1947-48	32759F	Terminal block (4-way)	1949-58	300990	"	1951-52	*737571
ditto	1949-51	32801J	" (8-way)	1948-58	37082A	"	1952-55	*741290
ditto	1951-54	32847D	Trafficators	1946-48	539941	"	1956-58	745083
ditto	1955-58	32922A/D	"	1949	54003E	" right hand	1950-51	*737595
Suppressor	1955	78113A	"	1950-51	*54039A	"	1951-52	*737570
"	1956-58	78114A	"	1952-54	54044D	"	1952-55	*741291
			Warning lights			"	1956-58	745082
			Flasher	1955-58	38048A	Blade	1946-48	727707
			Bulb holder	—	305411	"	1949	736428
			Bezel and glass	—	305721	"	1950-52	*737572
			Heater	1949-51	39015A	"	1952-58	741680
			Ignition	1946-48	*38020A	Optional equipment:		
			"	1949-58	38048A	Borg Warner automatic transmission		
			Bulb holder	—	305414	Cover, selector	1954-58	397046
			Bezel and glass	—	305720	" illumination	1954-58	39022E
			Trafficator	1951-54	38048A	Starting motor	1954	*26085A
						"	1955-58	26097B/D
			Windshield wipers			Switches		
			Motor	1946-48	†75066A	Hydraulic pressure	1954-58	31393A
			"	1949	*75063K	Interrupter	1954-58	*31077A/E
			"	1950	*75055K	Solenoid, brake line		
			"	1951-52	*75088M	valve	1954-58	76502D/E
			"	1952-53	*75147E	Throttle	1954-58	31392A
			" (left hand drive)	1954-56	75231A	Laycock de Normanville		
			" (from Chassis	1957-58	*75291A	overdrive		
			" 760989) Later	1958	75319A	Relay	1954-57	33157A/B
			"	1957-58	75231A	"	1958	33174B
			" (from Chassis			Switches		
			" 780777) Later	1958	75308A	Centrifugal	1954-58	76102A
			Clutch housing	1946-48	737085	Interrupter (gear lever)	1954-58	*31077E
			Bracket, with shaft and			Rotary throttle	1954-57	31402A/B
			coupling	1946-48	737054	"	1958	31504B
			Shaft, short	1946-48	737243	Solenoid, transmission		
			Coupling	1946-48	729036/S	gear	1954	*76500E
			Link	1946-48	729234	ditto	1954-58	*76505A/B

JAGUAR Mk. VIII 1957-59; Mk. IX 1959-60

Ammeter	1957-60	36128A/B	LAMPS—continued			LAMPS—continued		
Battery	1957-59	GT11A	Fog	1957-60	55174D/E	Stop tail, flasher and reflex		
"	1960	FG11E	(France)	1957-60	55133E/F	Left hand	1960	53728A
Coil, ignition	1957-60	*45067D/H	Head, Home			Right hand	1960	53729A
Control box	1957	37183H	R.H.D., dip left	1957-60	51762A	U.S.A. (left hand)	1960	53759A
"	1958-59	*37189J	Head, Export			" (right hand)	1960	53760A
"	1959-60	37297A/B	R.H.D., dip left	1957-60	51762A	Mirror		
"	1960	37301B/D	L.H.D., dip right	1957-60	51763A	(Mk. IX)	1959-60	062564
Distributor (Mk. VIII)			Head, Export Europe			Left hand (Export only)	1957-60	062590
7-1 compression ratio ..	1957-59	40578A/D	(except countries listed)	1957-60	51507A	Right hand (Export only)	1957-60	062587
8-1	1957-59	40576A/D	Head, Export France	1957-60	51563B	Starting motor	1957-60	26062A
Distributor (Mk. IX) ..			"	1960	58588A	Steering column control		
8-1 compression ratio ..	1959-60	40640A/D	"			(Mk. VIII)	1957-59	32922D
9-1	1959-60	40665A/B	Head, Export Holland and			(Mk. IX)	1959-60	§32902H
Flasher unit	1957-60	35010A	Switzerland	1957-60	51565A/B	Slip ring (serviced by		
Flasher relay (Mk. VIII			Sweden, Export Norway and			Jaguar)	1959-60	§38266B
only)	1957-59	33117A/D	Germany	1957-59	51564B	Suppressor	1957-60	78114A
Fuse box	1957	*37100D	Head, Export Norway and					
Generator (Mk. VIII)			Germany	1959-60	51564B	SWITCHES		
Power steering	1958-60	37263A/B	Head, Export Sweden	1960	58632A	Dipper	1957-60	31284A/D
"	1957-59	*22462E	Head, Export Austria	1960	58633A	Flasher (Mk. IX)	1959-60	*31776B
"	1959	*†22524E	Head, Export Italy	1959-60	58293A	Heater or fan (Mk. VIII)	1957-59	31113A/D
"	1959-60	†22528A/D	Map reading light	1957-60	39006A	Knob, fan (Mk. VIII)	1957-59	31114E
"	1960	22803A	Number plate and reverse	1957-60	53215A	"	1957-59	316485
Horn			ditto (France)	1957-60	53556A	"	1959-60	54331265
Low note	1957-60	*70063E/F	Side	1957-60	52175D	" heater	1957-60	316486
High note	1957-60	*70071E/F	(Switzerland)	1960	52499A	Ignition (Mk. VIII)	1957-59	31187D/E
Inspection lamp sockets ..	1957-60	38604A	Stop tail and flasher			(Mk. IX)	1959-60	*31484B
			Left hand	1957-58	53340F	Lighting	1957-60	31428A/E
LAMPS			"	1959	53340H	Knob		316622
Flasher, front	1957-60	52271A/B	Right hand	1957-58	53341F	Map light	1957-60	31113A/D
" (U.S.A.)	1957-60	52343B	"	1959	53341H	Knob		316487
" (Switzerland)	1960	52500A						

* See Supersession Chart † No longer available—refer to Wiper Conversion Set Section ‡ Optional on Mk. VIII continued

§ On Mk. VIII when power steering fitted

A84 Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



JAGUAR Mk. VIII 1957-59; Mk. IX 1959-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES—continued			Windshield wipers			<i>Optional equipment:</i>		
Panel	1957-60	31114E	Motor, left hand drive	1957	*75291A	Borg Warner automatic transmission		
Knob	—	315242	ditto .. . Later	1957-60	75319B	Cover, selector (Mk. VIII) .. .	1957-59	397046
Petrol	1957-60	31429B/E	Motor, right hand drive	1957	75231A	illumination .. .	1957-60	39022E
Knob	—	316645	ditto .. . Later	1957-60	75308B	Starting motor .. .	1957-60	26097B/D
Reverse lamp .. .	1957-60	*31077E	Wheelbox (Mk. VIII) ..	1957-59	72628A/H	Switches		
Solenoid, starting motor	1957-60	*76411E	" (Mk. IX) .. .	1959-60	72719A	Hydraulic pressure valve .. .	1957-60	31393A
Solenoid operating	1957-60	31253E	Crosshead and rack assy. (Mk. VIII) .. .	1957-58	741262	Interrupter .. .	1957-60	*31077E
Knob	—	317365	ditto .. . Later	1958-59	744257	Solenoid, brake line		
Step light	1957-60	*31222D	Crosshead and rack assy. (Mk. IX) Cut to 58½"	1959-60	744258	Solenoid, gear holding		
Windshield wiper	1957-60	*31302D	Outer casing			Throttle	1957-60	*76502D/E
Knob	—	316646	Motor to wheelbox (Mk. VIII) .. .	1957-59	740713	Laycock de Normanville overdrive		
Terminal block (4-way) (Mk. VIII) .. .	1957-59	300990	" (Mk. IX) .. .	1959-60	54710694	Relay	1957	33157D
(Mk. IX)	1959-60	37101B	Wheelbox to wheelbox (Mk. VIII) .. .	1957-59	740714	"	1958-60	33174B
Terminal block (8-way) ..	1957-60	37082A	" (Mk. IX) .. .	1959-60	54710695	Switches		
Warning lights			End tube	1957-60	740746	Centrifugal (Mk. VIII only)	1957-59	76102A
Brake	1960	*38091A	Ferrule, casing retaining	1959-60	740715	Interrupter or top gear	1957-60	*31077E
Flasher	1957-60	38048A	Arm, left hand drive ..	1957-59	741847	Rotary throttle (Mk. VIII) .. .	1957-59	31402B
Bulb holder	—	305411	" " " " " " " " " "	1960	54711568	(Mk. IX)	1959-60	31504D
Bezel and glass .. .	—	305721	" " " " " " " " " "	1957-59	741846	Solenoid, transmission gear	1957-58	*76505B
Ignition	1957-60	38048A	" " " " " " " " " "	1960	54711567	ditto	1959-60	76515A
Bulb holder	—	305414	Blade	1957-59	738734			
Bezel and glass .. .	—	305720	" Later	1959-60	54710656			

JAGUAR 2.4 litre 1956-59; Mk. II 1960

Ammeter	1956-57	36206D	LAMPS—continued			SWITCHES—continued		
" Later	1957-59	36237A	Stop tail and flasher			Solenoid operating ..	1956-59	31253A/E
"	1960	36262A	Left hand	1956-59	53381D/H	Knob	—	*317370
Battery	1956-60	GT9A	Right hand	1956-59	53382D/H	Solenoid operating ..	1960	31967A
Bulb holder, panel light	1958-60	554734	Left hand	1960	53726A	Stop lamp	1958-60	31082B
Bulb	—	987	Right hand	1960	53727A	Windshield wiper .. .	1956-59	*31427B/D
Coil, ignition	1956-60	*45067B/H	U.S.A. (left hand) ..	1960	53757A	Knob	—	312613
Control box	1956	*37139E	" (right hand) .. .	1960	53758A	Windshield wiper .. .	1960	*31966B
"	1957-58	37183H	Screenjet			Warning lights		
" Later	1958-59	*37189J	Motor and jar	1960	077011A	Choke	1957-60	38147A
"	1959-60	37297A/B	"T" piece	1960	295091	Brake fluid level .. .	1960	*38075A
Distributor			Tubing	1960	*54711658	" Later	1960	*38091A
7-1 compression ratio ..	1957-60	40557A/B	Nozzle	1960	54711657	Windshield wipers		
8-1	1956-60	40528A/B	Starting motor	1956-60	25521D	Motor, left hand drive	1956-57	*75294A
Flasher unit	1956	*35003A	Steering column control ..	1956-59	32902F/H	ditto	1958	*75323A
"	1957-60	35010A	"	1960	33550A	ditto .. . Later	1958-60	75311A/B
Fuse box	1956-57	033239	Slip ring (serviced by Jaguar)	1956-59	38262A/E	Motor, right hand drive	1956-57	*75293A
"	1958-60	033242	ditto	1960	38271A	ditto	1958	*75322A
Generator	1956-59	*22483A/D	Steering column nacelle			ditto .. . Later	1958-60	75310A/B
" Later	1959-60	22489B/D	Nacelle, upper:			Wheelbox	1956-58	72677A
Horn			Conventional	1960	54360427	"	1959-60	72714A/B
Low note	1956-60	*70063D/F	" .. . Later	1960	54360623	Crosshead and rack assy.	1956-58	741262
High note	1956-60	*70071D/F	Overdrive	1960	54360426	ditto .. . Later	1958-60	744257
Inspection lamp sockets ..	1956-57	38604A	" .. . Later	1960	54360621	Outer casing		
Junction box	1960	78264B	Automatic	1960	54360425	Motor to wheelbox ..	1956-60	743818
LAMPS			" .. . Later	1960	54360619	Wheelbox to wheelbox	1956-60	743819
Flasher, front	1960	52479A	Cover, lower:			End tube	1956-60	740746
" (U.S.A.)	1960	52480A	Conventional	1960	54360363	Ferrule, casing retaining	1956-60	740715
Fog (when fitted) .. .	1956	55128D	" .. . Later	1960	54360624	Grommet, wheelbox ..	1959-60	740811
" Later	1956-59	55174A/D	Overdrive	1960	54360419	Arm, left hand drive ..	1956	*741293
"	1960	55232A	" .. . Later	1960	54360621	ditto	1957-58	741844
" (France, when fitted)	1956-59	55133B/F	Automatic	1960	54360420	ditto .. . Later	1958-59	746560
"	1960	55233A	" .. . Later	1960	54360620	ditto	1960	54711526
Head, Home			SWITCHES			Arm, right hand drive ..	1956	*741292
R.H.D., dip left .. .	1956-58	51767D	Choke warning light .. .	1960	31931A	ditto	1957-58	741845
"	1959-60	58225A	Dipper	1956-60	31284A	ditto .. . Later	1958-59	745651
Head, Export			Cap, rubber	—	360026	ditto	1960	54711525
R.H.D., dip left .. .	1956-58	51767D	Flasher	1956-59	31559E	Blade	1956-59	738734
"	1959-60	58225A	"	1960	31964E	" Later	1959	54710656
L.H.D., dip right .. .	1956-58	51791D/E	" (headlamp) .. .	1960	34314A	"	1960	54711282
"	1959-60	58226A	Hand brake	1960	31504D	<i>Optional equipment:</i>		
Head, Export Europe (except countries listed)	1956	51339D	Heater or fan (when fitted)	1956-59	31529A	Borg Warner automatic transmission		
ditto	1957-60	51738B/D	ditto	1960	31960A	Knob, selector	1960	54332201
ditto .. . Later	1960	58230E	Ignition	1956-59	31287B/F	Starting motor	1958-60	26097D
Head, Export France ..	1956	*51590B/E	"	1960	31962A	Switches		
"	1957-60	51886A	Interior light	1956-59	31527A	Hydraulic pressure ..	1958-60	31393A
" Later	1960	58231A/E	"	1960	31963A	Inhibitor	1958-59	31680A
Head, Export Norway, Sweden and Germany ..	1956-60	51792D/E	Lighting	1956-59	31426A/H	"	1960	31972A
Head, Export Sweden			Knob	1956-59	317603	Interrupter	1958-60	*31077E
Later	1960	58450A	Escutcheon plate .. .	—	305608	Solenoid, brake line ..	1958-60	76502E
Head, Export Italy .. .	1959-60	58230B/E	Lighting (special equipment) ..	1956-59	31524A/E	" gear holding	1958	*76459D
Head, Export Austria ..	1960	58634A	Knob	—	317603	Throttle	1959-60	76516B
Head, Export U.S.A. .. .	1956	51343B	Escutcheon plate .. .	—	305604	"	1958-59	31392A
"	1957-59	51741B	Lighting			Laycock de Normanville overdrive		
"	1960	*58497B	4-position	1960	31981A	Relay	1956-57	33157D/D
" Later	1960	58669A	3-position (U.S.A.) ..	1960	31902A	"	1958-60	33174B
Map reading	1960	52477A	Lever	—	54332270	Switches		
Number plate, boot and reverse	1956-60	53453A	Escutcheon plate .. .	—	54850095	Interrupter	1956-60	*31077E
ditto (France) .. .	1956-60	53557A	ditto (U.S.A.) .. .	—	54850094	Overdrive (L.H.) .. .	1960	31965B
Side (except Switzerland)	1960	52474A	Panel	1956-59	31528A	" (R.H.)	1960	34313A
Side and flasher .. .	1956-59	52264A	"	1960	31969A	Rotary throttle .. .	1958-60	31504D
ditto (Switzerland)	1960	52498A	Reverse lamp	1956-60	*31077E	Solenoid, transmission gear	1956-58	*76505B
			Screenjet	1960	31984A	ditto	1959-60	76515A
			Solenoid, starting motor	1956-60	*76411E			

* See Supersession Chart L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



JAGUAR 3.4 litre 1958-59: Mk. II 1960: 3.8 litre 1960

Table with 9 columns: Unit, Year, Part No., Unit, Year, Part No., Unit, Year, Part No. It lists various car components like Ammeter, Battery, Bulb holder, Distributor, Flasher unit, Generator, Horn, LAMPS, Head, Headlight, Ignition, Lamp, Map reading, Number plate, Side, Stop tail, Switches, and Throttle.

JAGUAR XK120 1949-54: XK140 1955-57: XK150 1958-60

Table with 9 columns: Unit, Year, Part No., Unit, Year, Part No., Unit, Year, Part No. It lists various car components for the XK series, including Ammeter, Battery, Bulb holder, Coil, Control box, Distributor, Flasher unit, Generator, Horn, Ignition, Lamp, Map reading, Number plate, Side, Stop tail, Switches, and Throttle.

* See Supersession Chart

L.H. ... Left hand R.H. ... Right hand L.H.D. ... Left hand drive R.H.D. ... Right hand drive

continued

