



Equipment Specification

JENSEN

JENSEN 3½ litre 1946-47

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter .. .	1946-47	*364391	LAMPS—continued			Trafficators .. .	1946-47	*539971
Battery .. .	1946-47	SLG13E	Tail .. .	1946-47	52114A	Warning light .. .	1946-47	*38015B
Coil, ignition .. .	1946-47	*45039A	Mirror .. .	1946-47	*62018A	Windshield wipers		
Control box .. .	1946-47	*37031B	Starting motor .. .	1946-47	26060A	Motor .. .	1946-47	*75074J
Distributor .. .	1946-47	*411052	Steering column control ..	1946-47	32751B	Wheelbox, with switch ..	1946-47	*72565A/J
Generator .. .	1946-47	238498	SWITCHES			" less switch ..	1946-47	*72564A/F
Horn .. .			Battery master .. .	1946-47	*768008	Crosshead and rack assy.		
Low note .. .	1946-47	*69021A	Dipper .. .	1946-47	31284A	Cut to 48 ½" .. .	1946-47	738499
High note .. .	1946-47	*69022A	Ignition and lighting ..	1946-47	*34035A	Outer casing		
Junction box .. .	1946-47	78266B	Petrol reserve valve ..	1946-47	*314422	Motor to wheelbox ..	1946-47	*739832
LAMPS			Reverse lamp .. .	1946-47	*31077A	Wheelbox to wheelbox ..	1946-47	*739971
Map reading light .. .	1946-47	39006A	Solenoid operating .. .	1946-47	*317075	End tube .. .	1946-47	740031
Number plate illumination .. .	1946-47	53580A	Stop lamp .. .	1946-47	31281B	Grommet, wheelbox ..	1946-47	734181
Side .. .	1946-47	*522968	Spring .. .	1946-47	315543	Arm .. .	1946-47	*737481
						Blade .. .	1946-47	*737572

JENSEN 4 litre 'Interceptor' 1950-55

Battery .. .	1950-55	GT11A	LAMPS—continued			Warning light (ignition) ..	1950-54	*38015B
Coil, ignition .. .	1950-55	*45012A/D	Head, Export Europe (not France) .. .	1950	B50825A	Holder .. .	1955	304994
Control box .. .	1950	37057E	dito .. .	1951-54	*50963A	Shade .. .	1955	305305
" " .. . Later	1951-52	*37076E	dito .. .	1955	51339A	Window .. .	1955	305303
Distributor .. .	1950-55	*40147D/H	Head, Export France .. .	1951	*50790E	Windshield wipers		
Flasher unit .. .	1954-55	*35003A	" "	1952-54	*50962A	Motor .. .	1950	*75074J
Flasher relay .. .	1954-55	33117A	Map reading light .. .	1955	*51590A	" .. .	1951-52	*75055J
Fuse box .. .	1952-55	033239	Number plate illumination .. .	1950-55	39006A	" .. .	1953-55	75152A
Generator .. .	1950	*22435A/B	Side .. .	1950-51	*52092A	Wheelbox (with switch) ..	1950	*72565A/J
" .. .	1951	*22436A	" .. .	1952	52139B	" (less switch) .. .	1950	*72564A/F
" .. . Later	1951-53	*22465A/E	Stop tail .. .	1952-55	*52182B	" .. .	1951-55	*72548A/K
Horn .. .	1953-55	22478A	Mirror .. .	1951-55	53178D	Crosshead and rack assy.		
Low note .. .	1950-55	*69011F	" .. .	1952-55	*062553	Cut to 48 ½" .. .	1950-55	738499
High note .. .	1950-55	*69012F	Reflex reflector .. .	1955	*57070A	" .. .	1955	741264
Horn relay .. .	1950-55	33135B	Starting motor .. .	1950-52	26043A	Outer casing		
Junction box .. .	1950-55	78266A	Steering column control .. .	1950-53	32751B	Motor to wheelbox ..	1950-55	*739832
LAMPS			dito .. .	1953-55	32893A/B	ditto .. .	1955	745277
Boot .. .	1952-55	53163A	Suppressor .. .	1951-55	78114A	Wheelbox to wheelbox ..	1950	*739971
Driving (De Luxe) .. .	1955	55120A	SWITCHES			ditto .. .	1951-52	*739960
Flasher, front .. .	1954-55	53210A	Dipper .. .	1950-55	31284A	ditto .. .	1953-55	*739979
Fog (De Luxe) .. .	1955	*55055B	Driving lamp (when fitted) .. .	1955	31201D	ditto .. .	1955	740031
Head, Home R.H.D., dip left .. .	1950	50825A	Knob .. .	—	318352	ditto .. .	Later	740746
" " (L.H.) .. .	1951	*50445K	Door light .. .	1952-55	*31222A	End tube .. .	1950-55	740746
" " non-dip (R.H.) .. .	1951	*50446K	Foglamp (when fitted) .. .	1955	31201D	Ferrule, casing retaining .. .	Later	740715
" " dip left .. .	1952	*50954A	Knob .. .	—	314026	Later	1955	734181
" " Later	1952-54	50941A	Ignition and lighting .. .	1950	*34035A	Grommet, wheelbox .. .	1950	733695
" " .. .	1955	51336A	Panel .. .	1951-55	31201B	Arm .. .	1950	*737481
(De Luxe)	1955	51546A	Knob .. .	—	314026	" left hand drive .. .	1951-54	*737596
Head, Export R.H.D., dip left .. .	1950	50825A	Reverse lamp .. .	1950-55	*31077A	" right hand drive .. .	1951-54	*737595
" " .. .	1951	*50445K	Solenoid, starting motor .. .	1950-55	*76411D/E	Blade .. .	1950-52	*737572
" " .. .	1952	*50954A	Solenoid operating .. .	1950-55	31282A	" .. .	1953-54	*737683
" " .. . Later	1952-54	50941A	Stop lamp .. .	1950-54	31281B	Overdrive equipment .. .		741680
" " .. .	1955	51336A	Spring .. .	—	315443	(special orders)		
L.H.D., dip right .. .	1950	A50825A	Stop lamp .. .	1955	31082B	Relay .. .	1953-55	33157A
" " .. .	1951	*A50445K	Windshield wiper .. .	1951-55	31201B	Switches .. .	1953-55	*31077A/D
" " .. .	1952-54	*50804D	Knob .. .	—	314026	Gear lever .. .	1953-55	*76500E/D
" " .. .	1955	*51337B	Trafficators .. .	1950-51	54022D	Solenoid, gearbox .. .	1953-54	*76505A
			" .. .	1952-53	*54035A	Overdrive control .. .	1953-55	031218
			" .. .	1953-54	54044D	Knob .. .	—	314026

JENSEN 54I and 54IR 1954-60

Battery .. .	1954-58	GTW 11A-2	Horn			LAMPS—continued		
" .. . Later	1958-60	BT11A	Low note .. .	1954-60	69046A/F	Number plate illumination .. .	1954-55	53093E
Coil, ignition .. .	1954-56	*45012D	High note .. .	1954-60	69047A/F	Number plate illumination .. .	1956-60	*53159B
" .. .	1957-60	*45054H/K	LAMPS			and reverse .. .	1954-55	*52182A/D
Control box .. .	1954-59	*37189D/J	Bonnet .. .	1954-58	53163A	Side .. .	1954-60	53178D
" .. .	1960	37304B	Boot .. .	1958-60	53264B	Stop tail .. .	1954-55	53305D
Distributor .. .	1954-56	*40147D/H	Driving (optional) .. .	1955-60	53132B	Stop tail and reflex .. .	1956-60	*062567
" .. .	1957-60	*40371A/F	Flasher, front .. .	1954-60	53359B/D	Mirror .. .	1954-55	*57070B
Flasher unit .. .	1954-55	*35003A	Flasher, rear .. .	1954-60	52337A	Reflex reflector .. .	1954-55	78030A
" .. .	1956-59	35010A	Fog (optional) .. .	1955-60	55128B	Petrol reserve valve .. .	1954-60	26043A
Fuse box .. .	1954-60	033239	Head, Home R.H.D., dip left .. .	1954-58	51546D/E	Relay, horn .. .	1954-60	33135B/D
Generator (54I) .. .	1954-57	*22483D	Head, Export R.H.D., dip left .. .	1959-60	51535D/F	Screenjet (541R) .. .	1958-60	077011
" (54IR) .. .	1958-59	22478D	" .. .	1959-60	51546D/E	Starting motor .. .	1954-60	32953A/B
" .. .	1960	22503D	" .. .	1959-60	51535D/F	Steering column control .. .	1954-60	78114B
						Suppressor (distributor) .. .	1956-60	78118A
						" (plug) .. .	1956-60	

* See Supersession Chart

L.H. ..

Left hand

R.H. ..

Right hand

L.H.D. ..

Left hand drive

R.H.D. ..

Right hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

JENSEN

JENSEN 54I and 54IR 1954-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			SWITCHES—continued			Windshield wipers—cont'd		
Choke	1956	*31557A 326346	Windshield wiper ..	1957	*31557A 317530	Outer casing ..	1954-56	743509
Knob	—		Knob	1958-60	31430A/D 316646	Motor to wheelbox ..	1957-60	744738
Dipper	1954-60	31284A/D	Windshield wiper ..	1958-60	31430A/D	"Wheelbox" to wheelbox ..	1954-56	743510
Door light	1958-60	*31222D	Knob	1954-60	316646	End tube	1957-60	744739
Flasher	1954-60	31250A/H	Terminal block	1954-60	37101E	Arm	1954-59	740746
Handle	—	*311132	Warning lights ..	1954	304994	Blade	1954-55	741836
Heater or fan	1955-56	*31251D/E	Holder	Later	38102A	"	1956-60	54711561
Ignition and lighting	1954-60	*34061B	Flasher	1954-60	38100A	Laycock de Normanville ..	1954-55	738735
Panel	1954-55	31201A	Ignition	1954-60	38101A	overdrive equipment ..	1956-60	737897
Knob	—	*314015	Petrol reserve	1954-56	38162A	Relay	1954-55	33157A
Panel	1956-60	31557A	"	1957-60		"	1956-59	33135B
Knob	—	*317352	Windshield wipers ..	1954-56	*75200B	"	1960	33213B
Petrol reserve	1954-60	31201A/D	Motor	1957	75296A	Cover, rubber	1954-60	340786
Knob	1954-55	314026	"	1958-60	75311A	Switches ..	1954-60	*31077D/E
"	1956-60	*314421	Wheelbox	1954-56	*72665A	Gear lever	1954-60	*31824A
Reverse lamp	1956-60	*31077E	"	1957-60	72660A	Isolating	1960	76505A
Solenoid, starting motor	1954-60	*76411D/E	Crosshead and rack assy ..	1954-56	*743220	Solenoid	1954-57	76517A
Solenoid operating	1954-55	*31282A	"	1957	743221	"	1958-60	
"	1956-60	31363A	"	1958-60	744254			
Windshield wiper	1954-56	31201A						
Knob	—	*317506						

JENSEN 'JNSN' 6 ton Lightweight 1946-47

Battery	1946-47	6CXBE W13	LAMPS			SWITCHES		
Control box	1946-47	*37032A	Side	1946-47	52081F	Cab light	1946-47	31201B
Generator	1946-47	*22446A	Stop tail and number plate ..	1946-47	*53007B	Knob	—	314026
Horn	1946-47	*069206	Starting motor (serviced by C.A.V.) ..	1946-47	1330070	Dipper	1946-47	31284A
Horn push	1946-47	76205B				Trafficator	1946-47	*310380
Junction box	1946-47	78265A				Trafficators	1946-47	*053830

JENSEN 'Jen-Tug' 30 cwt. Tractor 1946-54

Battery	1946-52	SG13E	Horn	1946-52	069343	SWITCHES—continued		
"	1952-54	GT9A	"	1952-53	*069206	Ignition and lighting ..	1946-54	*34022B
Coil, ignition	1946-52	*45016A	"	1954	*069399	Panel	1946-54	*31276A
"	1952-54	*45020A	Horn push	1953-54	76225A	Starting motor	1946-52	*764150
Control box	1946-50	*37035H	LAMPS			Coupling	1952-54	76423A
"	1951-52	*37102A/D	Head, Home	1946-52	50406D	Trafficator	1946-54	764428
"	1952-54	*37138A/B	Side	1946-52	51026A	Trailer security	1953-54	31384A
Distributor	1946-52	40286A	"	1952-54	A52036A	Trafficators	1946-52	053831
"	1953	40357A	Tail and number plate	1946-52	*A53007B	"	1952-54	*053830
Fuse box	1946-52	*385221	ditto	1952-54	*53007B	Windshield wipers ..		
"	1952-53	033239	Starting motor	1946-48		Motor	1946-49	*75120A
"	1953-54	*37137A	"	1949-52	*270301	"	1950-52	*75121A
Generator	1946-48	22409A	Suppressor	1952-54	26009A	Arm	1952-54	*75120A
"	1949-50	*22251E/F	"	1953-54	25022A/F	Blade	1946-49	*735098
"	1951	22409B/H			78105A	"	1950-54	*735049
"	1951-52	22409J	SWITCHES				1946-49	727707
"	1952-54	22258D	Dipper	1946-54	31284A	Blade	1950-54	727803

JENSEN Lightweight Commercial Vehicle 1954-55

Ammeter	1954	*36117A	LAMPS—continued			SWITCHES		
"	1955	36155A	Head, Export	1954-55	51336A	Dipper	1954-55	31284A
Battery	1954	CX13A	R.H.D., dip left	1955	51337B	Foglamp	1955	31201B
"	1955	MT19E	L.H.D., dip right	1955		Knob	—	314026
Control box	1955	*37139A	Head, Export Europe	1955	51339A	Lighting	1954	*34022B
Fuse box	1955	033239	(not France)	1955	*51590A	Panel	1954-55	34065A
Generator	1955	*22456A	Head, Export France	1955	53101E	Knob	—	314026
Horn	1954-55	*069399	Number plate illumination	1954	52139B	Trafficator	1954-55	31379A
Junction box	1954-55	78265A	Side	1955	*52238A	Trafficators	1954	053830
LAMPS			Stop tail and number plate	1955	*53007B	Windshield wipers ..		
Head, Home	1954-55	51336A	"	1955	53178F	Motor	1954-55	*75120A
R.H.D., dip left	1954-55		Reflex "reflector"	1954-55	57033D	Arm	1954-55	*735049
			Panel light bulb holder	1954-55	39007A	Blade	1954-55	727803
			Starting motor (serviced by C.A.V.)	1954-55	1330070	"	1954-55	

§ FUEL INJECTION EQUIPMENT (Perkins P6 Engine)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1954-55	BPE6A60S310S6321	Venturi	1954-55	BEPK50-50-101
Governor	1954-55	BEPMZ80A99	Nozzle holder	1945-55	BKB32S630
Coupling	1954-55	BZKH31-538	Nozzle	1954-55	BDL110S6133
Feed pump	1954-55	BFPK22P68	Filter	1954	BFA5P1
Primer	1954-55	BFPUE2-54Z	"	1955	F2-8
Pre-filter	1954-55	BFJSJ1-501			

* See Supersession Chart

§ Serviced by C.A.V. Ltd.

L.H.D. ... Left hand drive

R.H.D. ... Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

JENSEN—JOWETT
JENSEN 'Tempo 1500' 1958-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1958-60	SG9E	LAMPS—continued	1958-60	53101E/J	Warning lights		
Coil, ignition	1958-60	*45053K	Number plate illumination	1958-60	52391A	Flasher (shade and window)	1958-60	*54360085
Control box	1958-60	37182H	Side	1958-60	53377B	Ignition (shade and window)	1958-60	*319388
Distributor	1958	*40499A	Stop tail and reflex	1958-60	25022M			
"	1959-60	40499B/D & F	Starting motor	1958-59	25022N/Q			
Flasher unit	Later	*40499E & H	"	1960				
Fuse box	1958-60	35010A	SWITCHES					
Generator	1958-60	033239	Heater	1958-60	*31814A	Windshield wipers		
Horn	1958-60	22293A	Knob	1958-60	312892	Motor	1958-60	75342D
LAMPS	1958-60	70141B	Horn push and dipper	1958-60	31438B	Link set	1958-59	745965
Engine compartment	1958-60	53163A	Ignition and lighting	1958-60	*31288A	" "	Later	54712397
Flasher, rear	1958-60	*52272D	Solenoid, starting motor	1958-60	*76411E	Arm, left hand	1958-59	54710492
Flasher, side	1958-60	53362B	Solenoid operating	1958-60	*31071A	" right hand	1958-59	54711547
Head, Home			Stop lamp	1958-60	31082H	" "	Later	54710491
R.H.D., dip left	1958-60	51336E	Windshield wiper	1958-60	*31819A	Blade	1958-60	54711546
Head, Export			Knob	1958-60	312872			*737941
R.H.D., dip left	1958-60	51336E		—				

JOWETT 'Javelin' 1948-54

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1948-49	SLG11E	LAMPS—continued			SWITCHES—continued		
"	1950-54	GT9A	Head, Export Europe	1948-50	*B50792B	Solenoid, starting motor	1948-49	76022B
Coil, ignition	1948-54	*45020A/B	(not France)	ditto	*B50445K	Solenoid operating	1950-54	*76411D
Control box	1948-51	37065E	ditto	Later	*50963A	"	1948-51	31150B
Distributor	1948-52	*37138A/B	ditto	1951-54	51339A	"	1952	31272A
"	1953-54	40115H	Head, Export France	1951	*50790E	Stop lamp	1953-54	*31294A
Flasher unit	1952-54	*40317A	"	1951-52	*50962A	Spring	1948-54	31281B
Flasher relay (U.S.A.)	1952-54	33117A	"	1953-54	*51341A	Trafficator	1948-54	031046
Fuse box	1948-49	033239	Number plate illumination	1950-51	*53186A	Windshield wiper	1948-51	*31148A
Generator	1948-49	*22431A	ditto	Later	53224A	"	1952	*31348A
"	1949-51	*22250E/F	ditto	1951	53093E	Trafficators	1953-54	*31399A
"	1951-54	22258D	Side	1951-54	52139B	"	1948-50	*54014D
Horn			" (U.S.A.)	1951-54	*52162A	Warning light (ignition)	1951-54	*54041A
Low note	1948-54	*69011F	Stop tail	1948-49	53099A	"	1948-51	*318534
High note	1948-54	*69012F	"	1950	*53150B	"	1952-54	*38069A
Horn relay	1951-54	33116B	Mirror	1948-54	*53204B	Windshield wipers		
LAMPS			Panel light bulb holder	1952-54	*062532	Motor	1948-50	*75055K
Head, Home			Starting motor	1948-49	39020B	"	1951	*75055L
R.H.D., dip left (L.H.)	1948-50	*50792B	Steering column control	1948	*25012A/D	Wheelbox	1952-54	75152A
" non-dip (R.H.)	1948-50	*50578E	ditto	Later	25025A/D	Crosshead and rack assy.	1948-51	72590A/K
" dip left (L.H.)	1951	*50445K	Slip ring (horn push)	1948-51	32764D	Crosshead and rack assy.	1952-54	736364
" non-dip (R.H.)	1951	*50446K	"	1952-54	38252A	Outer casing		
R.H.D., dip left	Later	*50954A	"	1952-54	38258A	Motor to wheelbox	1948-51	739844
"	1952-53	50941A	SWITCHES			"	1952-54	*739855
"	1953-54	51336A	Dipper	1948-54	31284A	Wheelbox to wheelbox	1948-51	739937
Head, Export			Heater or fan	1948-51	*31147A	"	1952-54	*739955
R.H.D., dip left	1948-50	*50792B	"	1952	*31347A	End tube	1948-54	740031
"	1951	*50445K	"	1953-54	*31407A	Grommet, wheelbox	1948-54	735349
"	Later	*50954A	Ignition and lighting	1948-51	34038B	Arm	1948-50	737524
"	1951-52	50941A	"	1952-54	31270A	" left hand drive	1951-54	*737581
L.H.D., dip right	1948-50	*51336A	Knob	1952	*316416	" right hand drive	1951-54	*737529
"	1951	*A50792B	Panel	1948-51	*31149A	Blade	1948-50	*737433
"	Later	*A50445K	"	1952	*31349A	"	1951	*738719
"	1951-53	*50804D	"	1953	*31400A	"	1952-54	*738724
"	1953-54	*51337A						

JOWETT 'Javelin' De Luxe 1948-54

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1950	*36098A	LAMPS, Head, Home—			Mirror	1950-54	*062532
"	1951	36135A	continued			Starting motor	1950-54	25025A/D
"	1952-54	36155A	R.H.D., dip left	Later	*50954A	Steering column control	1950-54	32876A
Battery	1950-54	GT9A	"	"	50941A	Slip ring (horn push)	1950-52	38252A
Coil, ignition	1950-54	*45020A/B	Head, Export	1951-54	51336A	"	1953-54	38258A
Control box	1950-51	37065E	R.H.D., dip left	1948-50	*50792B	SWITCHES		
"	1951-54	*37138A/B	"	1951	*50445K	Dipper	1950-54	31284A
Distributor	1950-52	40115H	"	1951-52	*50954A	Foglamp	1950	31201B
"	1953-54	*40317A	"	1952-53	50941A	Knob	—	*316218
Flasher unit	1952-54	*35003A	"	1953-54	51336A	Heater or fan	1950-54	31201B
Flasher relay (U.S.A.)	1952-54	33117A	L.H.D., dip right	1948-50	*A50792B	Knob	1950-51	*316217
Fuse box	1951-54	033239	"	1951	*50804D	Ignition	1952-54	*316244
Generator	1950-51	*22250E/F	"	1951-53	*51337A	Lighting	1952-54	*34061A
"	1951-54	22258D	"	1951-54	*51337A	Knob	—	31303A
Horn			Head, Export Europe	1948-50	*B50792A	Panel	1950-54	316622
Low note	1950-54	*69011F	(not France)	ditto	*B50445K	Knob	—	31201B
High note	1950-54	*69012F	ditto	1951	*50919B	Knob	1950-51	*316220
Horn relay	1950-54	33116B	ditto	Later	*50963A	Reverse lamp	1952-54	*31750I
Inspection lamp sockets	1952-54	38604A	ditto	1951-53	51339A	Solenoid, starting motor	1950-54	*76411D
LAMPS			ditto	1953-54	*50962A	Stop lamp	1952-54	31258A
Boot	1948-50	*53056A	Head, Export France	1951	*50790E	Spring	1952-54	31281B
Boot and bonnet	1953-54	53163A	"	1951-52	*50962A	Trafficator	1950-54	*315723
Fog	1950	*55063B	"	1953-54	*51341A	Windshield wiper	1950-54	*316219
"	1951	*55077A	Number plate illumination	1950-51	*53186A	Knob	1950-51	*317502
"	1952-54	*55085A	"	1952-54	53097E	Trafficators	1950	*54014D
Head, Home			"	1952-54	53223A	"	1951-54	*54041A
R.H.D., dip left (L.H.)	1948-50	*50792B	Reverse	1951	*52139B			
" non-dip (R.H.)	1948-50	*50578E	Side	1951-54	*52162A			
" dip left (L.H.)	1951	*50445K	" (U.S.A.)	1951-54	*52162A			
" non-dip (R.H.)	1951	*50446K	Stop tail	1950	*53150B			
			"	1950-54	*53204B			

* See Supersession Chart

L.H. ... Left hand

R.H. ... Right hand

L.H.D. ... Left hand drive

R.H.D. ... Right hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

JOWETT
JOWETT 'Javelin' De Luxe 1948-54—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Windshield wipers			Windshield wipers—cont'd			Windshield wipers—cont'd		
Motor	1948-50	*75055K	Outer casing			Arm	1950	*737524
"	1951	*75055L	Motor to wheelbox ..	1948-51	739844	" left hand drive ..	1951-54	*737581
"	1952-54	75152A	"	1952-54	*739855	" right hand drive ..	1951-54	*737529
Wheelbox	1948-50	72590A/K	Wheelbox to wheelbox ..	1948-51	739937	Blade	1950	*737433
Crosshead and rack assy.			"	1952-54	*739955	"	1951-52	*738719
Cut to 27 ½"	1948-51	736177	End tube	1948-54	740031	"	1953-54	738724
Crosshead and rack assy.	1952-54	736364	Grommet, wheelbox ..	1948-54	735349	"		

JOWETT 'Jupiter' Sports 1951-54

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter (plate fixing) ..	1951-52	36135A	LAMPS—continued			SWITCHES—continued		
(clamp fixing) ..	1951-54	36155A	Head, Export U.S.A. ..	1951	50942A	Trafficator ..	1951-54	031046
Battery ..	1951-52	SLG11E	Number plate illumination ..	1952-54	51067B	Windshield wiper ..	1951-54	31201B
"	1953-54	GT9A	Side	1951-54	53093E	Knob	1951-52	*316226
Coil, ignition	1951-54	*45012A/D	Stop tail	1951-52	52139B	Trafficators	1951-54	*317502
Control box	1951	37065E	Mirror	1952-54	53178D	Warning lights		
"	1952	*37076E	Dipper	1951-54	*53204B	Red glass	1951-54	*38013B
Distributor	Later	*37139D	Foglamp	1951-54	*062567	Green glass	1951-54	*38042A
" (Racing Model)	1951-52	40115H	Panel light bulb holder ..	1951-54	39020B	Blue glass	1951-54	*38081A
Fuse box	1952-54	*40317A	Starting motor	1951-54	25025A/D	Windshield wipers		
Generator	1951-54	40318A/B	Steering column control ..	1951-52	32764D	Motor	1951	*75075K
Horn			Slip ring	1951-52	38252A	"	1952	*75088M
Low note	1951-54	*69011F	"	1952-54	38258A	Outer casing	1951-54	75151A
High note	1951-54	*69012E	SWITCHES			Motor to wheelbox ..	1951-54	72590A/K
Horn relay	1951-54	*33116B	Dipper	1951-54	31284A	Windbox to wheelbox ..	1951-54	*739967
LAMPS			Foglamp	1951-54	31201B	End tube	1951-54	740031
Head, Home			Knob	1951-52	*316288	Grommet, wheelbox ..	1952-54	734697
R.H.D., dip left (L.H.) ..	1951	50825A	Heater or fan	1951-54	*317503	Arm, left hand drive ..	1951-54	*737661
non-dip (R.H.)	1951	*50826A	Knob	1951-52	316225	" right hand drive ..	1951-54	*737660
R.H.D., dip left	1952-54	51065A	Ignition and lighting ..	1951-53	*316244	Blade	1951-52	*737516
Head, Export			"	1953-54	*34067A	"	1953-54	737681
R.H.D., dip left	1951	50825A	Knob	1951-54	31270A	Overdrive equipment (optional)		
L.H.D., dip right	1951	51065A	Panel	1951-54	316285	Relay	1953-54	33094A
"	1952-54	A50825A	Knob	1951-52	31201B	Switches	1953-54	*31077A
Head, Export Europe (not France)	1951	B50825A	Solenoid, starting motor ..	1951-54	*317501	Gear lever	1953-54	*76500A
ditto	1952-54	B51065A	Solenoid operating	1951-53	*76411D	Solenoid, gearbox ..	1953-54	
Head, Export France	1953-54	*51056A	Stop lamp	1951-54	*31289A			
			Spring	1951-54	31281B			
					*315723			

JOWETT 10 cwt. 'Bradford' Van 1946-54

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1946-50	*369001	LAMPS, Head, Home—continued			SWITCHES—continued		
"	1951-52	*36110A	Non-dip (R.H.)	1946-52	*50570B	Panel	1946-52	*314129
Battery	1946-50	SG11E	dito (alternative)	1947-52	50646A/B	Solenoid, starting motor ..	1953-54	*31400A
"	1951-52	GT7A	R.H.D., dip left	1953	51344A	Solenoid operating	1953-54	*76411D
Coil, ignition	1946-50	*45016A	Head, Export	1953-54	*51407A	Starting motor	1946-47	*31294A
"	1951-54	*45020A/B	Vertical dip	1946	*50303A	Panel	1953-54	*764247
Control arm	1946	*310254	" (alternative)	1947-50	50569B	Stop lamp	1946-52	*76429A
"	1947-48	31143A	R.H.D., dip left	1953	50645E	Spring	—	*31281B
Control box	1949-52	31124B	L.H.D., dip left	1953	51344A	Windshield wiper	1953-54	*315723
"	1946	*37050A	L.H.D., dip right	1953-54	*51407A	Trafficators	1946-50	*31399A
"	1947-48	*37033A	"	1953-54	51345A	"	1951-52	*54002A
"	1949-50	37081E	Head, Export Europe (not France)	1953	51346A	"	1953-54	*31404D
"	1951-52	37065E	dito	1953-54	*51408A	Warning lights	1946-50	*318504
Distributor	1946	409607	Head, Export France	1953	51411A	Main beam	1951-52	*38015B
"	1947-52	40121A/H	Side	1946	*52003A	Windshield wipers		
Fuse box	1953-54	40347A	Stop tail and number plate	1946	*52139B	Motor	1946-50	*75047A
Generator	1946	*302329	Stop tail	1947-52	*524752	"	1951-52	75128A
"	1947-48	*222836	Tail and number plate	1953-54	*53060A	"	1953-54	75179A
"	Later	222433A	Mirror	1946	*53178D	Wheelbox	1953-54	72590A/K
"	1949-50	*22251F	Panel light bulb holder	1951-54	*52020A/F	Crosshead and rack assy	1953-54	
"	1951-52	*22250F	Starting motor	1946-49	25031D	L.H.D., Cut to 25 ½"	1953-54	736364
Horn	Later	22258D	"	1950	25022A/F	R.H.D., " 41 ½"	1953-54	736307
"	1952-54	069348	Generator	1949-52	*062500	Outer casing		
Junction box	1951-54	*069399	Control arm	1949-52	*062574	Motor to wheelbox	1953-54	739868
	1946-52	78266A	Control box	1949-50	39007A	L.H.D. and Utility	1953-54	739866
LAMPS			Distributor	1949-52	255901	R.H.D., except Utility	1953-54	
Head, Home			Generator	1949-50	25022A/F	Wheelbox to wheelbox		
Vertical dip (L.H.)	1946	*50141A	SWITCHES			Utility only	1953-54	739932
Non-dip (R.H.)	1946	*50142A	Ignition	1953-54	31287B	End tube	1953-54	740031
Vertical dip (L.H.)	1946-52	50569B	Lighting and horn	1953-54	*34085A	Arm	1946-52	735065
ditto (alternative)	1947-52	50645A/B	" ignition	1946-52	*34020B	Blade	1946-52	*737529
						"	1953-54	727802
							1953-54	738724

JOWETT De Luxe Van and 6 Light Utility 1949-52

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1949-50	*369001	Control arm	1949-52	31124B	Generator	1951-52	*22250F
"	1951-52	*36110A	Control box	1949-50	37081E	"	1952	22258D
Battery	1949-50	SG11E	Distributor	1949-52	40121A/H	Horn	1949-50	069343
"	1951-52	GT7A	Generator	1949-50	*22251F	"	1951-52	069344
Coil, ignition	1949-50	*45016A				Junction box	1949-52	78266A
"	1951-52	*45020A/B						

* See Supersession Chart

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

R.H.D. ..

Right hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

JOWETT-KARRIER

JOWETT De Luxe Van and 6 Light Utility 1949–52—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS			Panel light bulb holder ..	1949-52	39007A	Warning lights ..	1949-50	*318504
Head, Home			Starting motor ..	1949	*255901	" "	1951-52	*38015B
Vertical dip (L.H.) ..	1949-50	50569B	" " ..	1950	25031D	Windshield wipers		
Non-dip (R.H.) ..	1949-50	*50570B	" " ..	1951-52	25022A/F	Motor ..	1949-50	75073A
Vertical dip (L.H.) ..	1951-52	50645E	SWITCHES	1949-52	*34020B	Coupling bar ..	1951-52	75129A
Non-dip (R.H.) ..	1951-52	50646E	Ignition and lighting ..	1949-52	*314129	Starting motor ..	1949-50	727293
Head, Export			Panel ..	1949-52	*76429A	Stop lamp ..	1949-52	*732907
Vertical dip ..	1949-50	50659B	Starting motor ..	1949-52	31281B	Spring ..	1949-52	731721
Stop " tail and number plate ..	1949-52	*53060A	Stop lamp ..	1949-52	*315723	Trafficators ..	1949-50	731533
ditto (De Luxe Van)	1949-52	*53029A	Spring ..	1949-52	54002A	Arm, left hand ..	1949-52	735132
Mirror	1949-52	*62006A	Trafficators ..	1951-52	*54036A	" right hand ..	1949-52	727707
			"			Blade ..	1949-52	

KARRIER 'Bantam' 1946-60

Ammeter	1946-50	*369263	LAMPS—continued		SWITCHES—continued		
Battery		1946-50	SG11A	Head, Export		Lighting (British Railways Model)	1950	
" (Petrol) ..		1951-59	GT11A	R.H.D., dip left	1951	Lighting and ignition ..	1946	
" ..		1960	BT11A	" " Later	1951	..	1947-50	
" (Diesel) ..		1955-60	STXT19E	1952-53	50945A	..	*344544	
Coil, ignition ..		1946	*45020A	" "	50941A	Knob ..	34054A	
" ..	Later	1947-56	*45012A/D	1954	51336A	Panel ..	*34014B	
" ..		1956-57	*45054D/H	1955-56	*50954A	Knob ..	31285A	
" ..		1958	*45053J	1957-60	50941A	Panel ..	31113A	
Control box ..		1959-60	*45054K/M	1951	*A50445K	Knob ..	315112	
" ..		1946-47	*37032A	1951-53	*50804D	Panel (except Tractor) ..	31248A	
" ..		1948-52	37065E	" "	51337A	Knob ..	31649S	
" ..	Later	1952-54	*37138A/B	1955-59	*50804D	Panel (except Tractor) ..	31113A/D	
" ..		1953-56	37182A	1960	50973A	Later	315112	
" ..	(Petrol) ..	1955-56	*37139E	1951	*B50445K	Knob ..	315143	
" ..	(Diesel) ..	1955-56	37182H	1951-53	*50963A	Solenoid operating (Diesel, serviced by C.A.V.) ..	1823410	
" ..	Later	1957-60	37182K & J	ditto ..	1954	Starting motor ..	76428A	
Distributor ..		1946	*406319	dito ..	1955-56	" " (Petrol) ..	76404B	
" ..		1947-50	*409624	dito ..	1957-59	Coupling ..	76423A	
" ..		1951-53	40218A/D	(except France & Sweden) ..	1960	Trafficator ..	76446G	
" ..	Later	1953	40070A/E	1951-53	*50962A	Windshield wiper ..	31379A	
" ..		1954-56	*40376A/B	" "	*51341A	Knob ..	31248A/B	
" ..		1957-59	40491A/F	1954	58585A	" ..	316366	
Flasher unit (when fitted) ..		1959-60	40667A/B	1960	50811A	1953-57	312954	
Fuse box ..		1960	35010A	Number plate illumination ..	1955-60	53343A	1956-60	312954
" ..	Later	1948-52	*385221	Side ..	1946	52036A	1955-56	31379A
" ..		1952-56	033240	" ..	1947-48	*52003A	1953-60	31248A/B
" ..	(Diesel heater, serviced by C.A.V.) ..	1956-60	033239	" ..	1949	52153A	1953-57	*316366
Generator ..		1958-60	1800020	" ..	1950	52154A	1958-60	312954
" ..	Later	1946-48	22455A/B	1951-60	*52139B/F	Trafficators (when fitted) ..	1955	*053830
" ..		1948-49	*22446A	Stop tail and number plate ..	1951-54	*53063B	ditto ..	54050A
" ..		1950	*22435A/B	Stop tail (except Tractor) ..	1955-60	53178E/J	Later	1955-56
" ..		1951-52	*2250F/E	Tail and number plate ..	1949-53	*53007B	Warning light ..	38015B
" ..	(Petrol) ..	Later	1952-56	Magneto (British Railways Model) ..	1950	44088A/D	Windshield wipers	
" ..	(Diesel) ..		1955-56	22258D	Reflex reflector (except Tractor) ..	1955-60	Motor ..	
Horn ..		1957-60	22258E/H	ditto ..	1955-60	57073B/D	1946-52	*75027A
Low note ..		1946-57	*069213	Starting motor ..	1946-50	*255378	" ..	*75074J
High note (optional) ..		1957-60	69046E/F	ditto (Petrol) ..	1951-60	25521B/D	1953-60	75144A/B
" ..	Later	1957-60	69047E/F	ditto (Diesel, serviced by C.A.V.) ..	1955-56	BS512L66	1953-60	72560A/K
Horn relay (when twins fitted) ..		1957-60	*33116B	ditto (Diesel) ..	1957	26133A/B	Crosshead and rack assy.	
Junction box (Tractor Models only) ..		1948-50	78265A	ditto ..	1958-59	26133D/E	Cut to 40 $\frac{1}{2}$ " ..	736307
LAMPS				ditto ..	1959-60	26133H & K	Outer casing ..	
Head, Home				Later	1956-60	32937A/B	Motor to wheelbox ..	1953-60
Non-dip ..		1946	50129A	Steering column control ..	1956-60	331397	Wheelbox to wheelbox ..	1953
Vertical dip ..	Later	1946-50	*50285A	Brush ..	1956-57	333189	ditto ..	*739965
R.H.D., dip left (L.H.) ..		1951	*50445K	" ..	1958-60	End tube ..	1955-60	
R.H.D., non-dip (R.H.) ..		1951	*50446K	Battery master (British Railways Model) ..	1950	Ferrule, casing retaining Grommet, wheelbox ..	1956-60	
R.H.D., dip left ..	Later	1951	*50954A	Dipper ..	1956-60	1953	739833	
" ..		1952-53	50941A	Heater, Diesel (serviced by C.A.V.) ..	1956-60	1953		
" ..		1954	51336A	Horn push and dipper ..	1823420	1953-55	*739979	
" ..		1955-56	*50954A	1946-50	*380148	1953-60	739932	
" ..		1957-60	50941A	1951-56	*31325A	1953-60	740031	
LAMPS				Ignition (British Railways Model) ..	1950	1953	738410	
Head, Home				" ..	*314144	1953-60	729423	
Non-dip ..				" ..	" ..	1953-60	734458	
Vertical dip ..	Later			" ..	" ..	1946-52	*735061	
R.H.D., dip left (L.H.) ..				" ..	" ..	1953-56	*737629	
R.H.D., non-dip (R.H.) ..				" ..	" ..	1955-60	742275	
R.H.D., dip left ..	Later			" ..	" ..	1953-56	*737628	
" ..				" ..	" ..	1956-60	742274	
" ..				" ..	" ..	1946-52	727802	
" ..				" ..	" ..	1953-60	727759	

§ FUEL INJECTION EQUIPMENT

(Standard 23CV Engine 1955-60)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump .. .	1955-56	DPA3246020	Nozzle holder—continued ..	1959-60	BKB40S697K
" "	1957	DPA3246070	Nozzle .. .	1955-58	BDN4SP6188
" "	1958	DPA3246071	" .. .	1959-60	BDN4SP6263
" "	1959-60	DPA3246103	Filter .. .	1955-58	F4-1
Nozzle holder .. .	1955-58	BKB40S697	" .. .	1959-60	F4B-3

KARRIER 'Cob' 1947-48

* See Supersession Chart
R.H.D. . . Right hand drive

§ Serviced by C.A.V. Ltd.

J.H. — Left hand

R.H. Right hand

LHD Left hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P).



Equipment Specification

KARRIER

KARRIER 3 ton CK3 1946-52

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter ..	1946-50 1951-52	*369263 36001D	LAMPS Head, Home	1947-48	*50262A	Starting motor ..	1946-47	*270490
" ..	1951-52	36001D	R.H.D., dip left (L.H.)	1947-48	*50263A	" ..	1948	26026A/B
Battery ..	1946-52	SG11A	" dip left (L.H.)	1949	*50445K	" ..	1949-50	*26035A
Coil, ignition ..	1946-49 1950-52	*45039A *45012A/D	" dip left (L.H.)	1949	*50446K	" ..	1951-52	26041A/B
Control box ..	1946-47 1948-50 1950-52	*37032A 37065E *37076E	" dip left (L.H.)	1950	*50878A	SWITCHES		
" ..	Later	1952	" dip left (L.H.)	1951-52	*50880A	Horn push and dipper ..	1946-50	*380168
Distributor ..	1946-49 1950-52	*410700 40135E/H	" dip left (L.H.)	1951-52	*50445K	Ignition and lighting ..	1946-50	*34014B
Fuse box ..	1948-52 Later	*385221 033240	Head, Export	1947-48	*50262A	Panel ..	1951-52	34055A
" ..	1952	033240	R.H.D., dip left ..	1949-52	*50445K	Starting motor ..	1946-49	*31285A
Generator ..	1946-49 1950-52	*22446A *22435A/B	L.H.D., dip right ..	1947-48	*A50262A	" .. Later	1949-50	76428A
" ..	Later	1952	Head, Export Europe (not France) ..	1949-52	*A50445K	Stop lamp ..	1951-52	76404B
Horn ..	1946-52	*069213	Head, Export Europe (not France) ..	1949-52	*B50262A	Spring ..	1946-52	31281B
Inspection lamp sockets ..	1946-52	39507A	Head, Export France	1951-52	*B50445K	Warning light (ignition) ..	1946-50	*38015B
			Side ..	1947-49	*50962A	" ..	1951-52	38046A
			Stop tail and number plate ..	1950	*52003A	Windshield wipers		
			" ..	1951-52	*52154A	Motor ..	1946-52	*75027A
			Stop tail and number plate ..	1947-48	*52079A	Arm ..	1946-52	*735061
			" ..	1949	*53328B	Blade ..	1946-52	727802
			" ..	1950-52	*53008D			
			" ..	1950-52	*53063B			

KARRIER 'Gamecock' (Municipal and Industrial) 1953-60

Battery (Petrol) ..	1953-59	GT11A	LAMPS—continued			Trafficators ..	1954-55	*053830
" (Diesel) ..	1960	BT11A	Head, Export France ..	1953-55	*51341A	" .. Later	1955-59	54050A
Coil, ignition ..	1955-60	STXT19E	" ..	1956-60	*51341B/E			
" ..	1955-55	*45012A/D	" ..	1960	58231A/E			
Control box ..	1956-60	*45054D/M	Number plate illumination ..	1955-60	53343A			
" ..	1955-54	*37139D	Side ..	1953-60	52139A/F			
" ..	1955-59	37183A/H	Stop tail ..	1953-54	*53063B			
Distributor ..	1953	37183K & L	Reflex reflector ..	1955-60	53178E/J			
" ..	1954	*40305D	Starting motor ..	1953-54	57073B/D			
" ..	Later	40359A/B	(Petrol) ..	1955-60	26086A			
Flasher unit (when fitted)	1957	*35003A	(Diesel, serviced by C.A.V.) ..	1955-58	26094A			
Fuse box ..	1958-60	35010A	ditto ..	1959-60	1340010			
" ..	1953-57	033239		1959-60	1320061			
Generator ..	1953-54	*37137A	Steering column control ..	1955-60	32937A/B			
" ..	1955-56	*22456A/B	Suppressor (G.P.O.) ..	1953-59	78106A			
" ..	1957-59	*22483A						
Horn ..	1960	22489B/D	SWITCHES					
" ..	1955-56	*069213	Battery master (G.P.O.) ..	1953-59	76605A/B			
Low note (alternative) ..	1955-56	*69011J	Dipper ..	1955-60	31284A/D			
" ..	Later	69046A/F	Flasher (when fitted) ..	1957-60	31564A/D			
High note (optional) ..	Later		Heater (Diesel) ..	1959-60	31425A/B			
Horn relay (when twins fitted) ..	1956-60	*33116B	Knob ..	—	5430528			
Junction box ..	1957-60	78265A	Horn push and dipper ..	1953-54	*31325A			
LAMPS			Lighting and ignition or main ..	1953-60	31194A/E			
Flasher (optional) ..	1957-60	52314A	Knob ..	—	316285			
Head, Home R.H.D., dip left ..	1953-55	51336A	Solenoid, starting motor ..	1953-60	*76411D/E			
" ..	1956-60	51336B/J	Solenoid operating (Petrol) ..	1955-60	31115A/E			
Head, Export R.H.D., dip left ..	1953-55	51336A	Knob ..	—	*317315			
" ..	1956-60	51336B/J	(Diesel, serviced by C.A.V.) ..	1955-58	1823410			
L.H.D., dip right ..	1953-54	*51337A	(Diesel) ..	1959-60	31810A			
" ..	1955	*51337B	Knob ..	—	*317315			
" ..	1956-59	*51337D/E	Trafficator (when fitted) ..	1954-60	31379A			
Head, Export Europe (not France) ..	1953-55	51339A	(G.P.O.) ..	1953-54	031046			
" ..	1956-59	51339B/H	Windshield wiper ..	1955-59	031296			
" ..	1959-60	58230A/E	Later	1955-60	31248A/B			
				1960	34266A			
				1955-56	*316366			
				1957-60	312954			
						Plug, 8-pin ..	1953-58	809797
						Socket, 8-point ..	1953-58	809798

§ FUEL INJECTION EQUIPMENT (Rootes TS3 Engine 1955-58)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump ..	1955-58	NL3F80-97	Nozzle—continued	1957-58	BDLL10S6213
Governor ..	1955	LP9	Feed pump ..	1955-57	DFP3-13
" ..	1956-58	LPB25	Venturi ..	1958	DFP3-26
Coupling ..	1955-57	FCB3	" ..	1955-56	BEPKE85-99V
" ..	1958	FCB5	" ..	1957-58	BEPKE85-117
Nozzle holder ..	1955-58	BKBL52S656	Filter ..	1955	F2-9
Nozzle ..	1955-56	BDLL10S6134	" ..	1956-58	F2-13
(Perkins C305 Engine 1959-60)					
Fuel pump ..	1959	DPA3264003	Filter ..	1959	F4-3
" ..	1960	DPA3264035	" ..	1960	F4B-3
Nozzle holder ..	1959-60	BKB325630	Thermostart ..	1959-60	285-2A
Nozzle ..	1959-60	BDL110S6267			

* See Supersession Chart
R.H.D. ... Right hand drive

§ Serviced by C.A.V. Ltd.

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

KARRIER-LAGONDA

KARRIER $\frac{1}{4}$ / $\frac{1}{2}$ ton Passenger Chassis 1957-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1957-60	STXWT 19E	LAMPS—continued			SWITCHES—continued		
Coil, ignition	1957-60	*45054 D/M	Head, Export Europe (not France) .. .	1957-59	51339B/H	Solenoid operating (Diesel, serviced by C.A.V.) ..	1957-60	1823410
Control box	1957-59	37183H	ditto .. Later	1959-60	58230A/E	Starting motor (Petrol) ..	1957-60	76423A
"	1960	37183K & L	Head, Export France ..	1960	58231A/E	Coupling ..	1957-58	764428
Distributor	1957-59	40491A/B	Number plate illumination ..	1957-60	53343A	Windshield wiper ..	1957-60	31248B
Fuse box	1960	40667A	Side	1957-60	52139F	Knob	1959-60	764466
Generator	1957-59	*22483D	Stop tail	1957-60	53178F/J	Terminal block ..	1959-60	312954
Horn	1960	22489B/D	Reflex reflector	1957-60	57073B	Warning light (ignition) ..	1957-60	*38065A
"	1957	*069213	Starting motor (Petrol) ..	1957-60	25521D			
Low note	1957-60	69046E/F	" .. (Diesel) ..	1957	26133B			
High note (optional)	1959-60	69047F	" .. " .. Later	1958-60	26133D/E			
Horn relay (when twins fitted)	1959-60	*33116B	Steering column control ..	1957-60	26133H & K			
LAMPS			Suppressor	1957-60	32937A/B			
Head, Home R.H.D., dip left	1957-60	51336B/J	SWITCHES		78106A			
Head, Export R.H.D., dip left	1957-60	51336B/J	Dipper	1957-60	31284A/D			
L.H.D., dip right	1957-59	*51337D/E	Heater (Diesel, serviced by C.A.V.) ..	1957-60	1823420			
" " " Later	1959-60	*51337F/K	Ignition and lighting or main	1957-60	*31288A/D			

§ FUEL INJECTION EQUIPMENT

(Rootes TS3 Engine 1957-58)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1957-58	NL3F80-97	Nozzle ..	1957-58	BDLL10S6213
Governor	1957-58	LPB25	Feed pump	1957	DFP3-13
Coupling	1957	FCB-3	"	1958	DFP3-26
"	1958	FCB-5	Venturi	1957-58	BFPKE85-117
Nozzle holder	1957-58	BKBL52S656	Filter	1957-58	F2-13
(Perkins C305 Engine 1959-60)					
Fuel pump	1959	DPA3264003	Filter	1959	F4-3
"	1960	DPA3264035	Thermostat	1960	F4B-3
Nozzle holder	1959-60	BKB325630		1959-60	285-2A
Nozzle	1959-60	BDL110S6267			

LAGONDA $2\frac{1}{2}$ litre 1949-52

Ammeter	1951-52	36144A	LAMPS—continued			SWITCHES—continued		
Battery	1949-52	SG11E	Head, Export Europe (not France) .. .	1949-50	*B50445K	Solenoid, starting motor ..	1949	76022B
Coil, ignition	1949-52	*45012A/D	ditto	1951-52	*50963A	ditto .. Later	1949-52	*76411D
Control box	1949-52	37105A	Head, Export France ..	1951-52	*50962A	Solenoid operating ..	1949-52	*31071A
"	Later	37139D	Number plate illumination ..	1949-52	53093E	Stop lamp ..	1949-52	31281B
Distributor	1949-50	40125A/D	Reverse tail	1949-52	52120D	Tractor ..	1949-52	031046
"	1951-52	40125E/F	Side	1949-52	52047A	Windshield wiper ..	1949-52	*31322A
Fuse box	Later	40264A/B	Stop tail	1949	*53082B	Terminal block ..	1951-52	37082A
Generator	1949-52	*37107A	Petrol reserve valve	1949-52	53194B	(U.S.A.) ..	1951-52	37101A
Horn	Later	23000A/J	Starting motor	1949-50	78006A	Tractor ..	1949-52	*54039A
"	1952	*22462A/E	"	1949-50	*270244	Warning lights ..	1949-52	38019B
Low note	1949-52	*69021A	Later	1950-52	26043A	Choke	1949-52	38013B
High note	1949-52	*69022A	Steering column control ..	1949-52	32756A	Ignition	1949-52	38042A
LAMPS			SWITCHES			Petrol reserve	1949-52	
Fog	1949-52	*55055B	Battery Master	1949-52	*76604A	Windshield wipers ..		
Head, Home R.H.D., dip left (L.H.)	1949-50	*50445K	Choke warning light	1949-52	*31323A	Motor	1949-50	*75062J
"	1949-50	*50446K	Dipper	1949-52	31284A	"	1951-52	*75062K
"	1951-52	*50954A	Foglamp	1949-52	*31320A	Wheelbox	1949-52	75161A
Head, Export R.H.D., dip left	1949-50	*50445K	Ignition and lighting	1949-52	*34018A	Crosshead and rack assy. ..	1949-52	*72548A/K
"	1951-52	*50954A	Interior light	1949-52	*31276A	Cut to 55 $\frac{1}{16}$	1949-52	738223
L.H.D., dip right	1949-50	*A50445K	Petrol gauge	1949-52	*31321A	Outer casing ..	1949-52	739858
"	1951-52	*50804D	Petrol reserve	1949-52	31295A	Motor to wheelbox ..	1949-52	739956
			Reverse lamp	1949-52	*31319A	Wheelbox to wheelbox ..	1949-52	740031
				1949-52	*31077A	End tube	1949-52	
						Arm	1949-52	*736418
						Blade	1949-52	736414

LAGONDA 3 litre Saloon and Coupé 1954-58

Ammeter	1954-58	36144A	Horn Low note	1954-57	*69011F	LAMPS—continued		
Battery	1954-58	SG11E	High note	1958	69046F	Head, Export U.S.A.. . .	1956-57	51067B
(Export)	1954-58	STGW11E	ditto	1954-57	*69012F	Head, Export Mexico ..	1956-58	51482E
Coil, ignition	1954-58	*45012D	Number plate illumination	1958	69047F	and reverse	1954-58	53097E
Control box	1954-55	*37139D	Horn relay	1954-58	33135B	Side (2-door)	1954-55	52139B
"	Later	37183A/H	Inspection lamp sockets	1954-58	301187	(4-door)	1955	*52162B
Distributor	1954-58	40125F	LAMPS			Stop tail	1954-55	52240D
Flasher relay	1955-58	33117A/D	Fog	1954-58	*55055B/D	Stop tail and flasher	1955-58	53174E
" (headlamp)	1958	*33116B	Head, Home R.H.D., dip left	1954-55	51065A	Petrol reserve valve	1954-57	53330A/D
Flasher unit	1958	35010A	R.H.D., dip left	1956-58	51560A	"	1958	78006A
Fuse box	1954-55	*37130A	Head, Export " R.H.D., dip left	1956-58	51561A	Starting motor	1954-58	26043A
" (horn)	1954-58	*37137A	Head, Export France	1956-58		Steering column control	1954-58	32756A
Generator	1954-58	*22462A/E				Slip ring	1954-58	348048
						Suppressor	1954-58	78105A

* See Supersession Chart \$ Serviced by C.A.V. Ltd. L.H. . . Left hand R.H. . . Right hand L.H.D. . . Left hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

LAGONDA—LANCHESTER

LAGONDA 3 litre Saloon and Coupé 1954–58—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			SWITCHES—continued			Windshield wipers		
Battery master ..	1954	*76604A	Solenoid, starting motor	1954-58	*76411D/E	Motor ..	1954-58	*75236A
" ..	1955-58	76605A	Solenoid operating	1954-58	*31071A	Wheelbox ..	1954-58	72639D
Dipper ..	1954-55	31284A	Stop lamp ..	1954-58	31281B	Crosshead and rack assy.	1954-58	741264
Foglamp ..	1954-58	*31320A/B	Trafficator ..	1954	031046	Cut to 49 $\frac{1}{2}$ " ..	1954-58	740867
Heater ..	1954-58	*31328A	Under-bonnet light ..	1955-57	*31327A	Outer casing ..	1954-58	740782
Ignition and lighting ..	1954-58	*34018A/B	Windshield wiper ..	1954-58	*31532A	Motor to wheelbox ..	1954-58	740746
Interior light ..	1954	*31276A	Knob ..	—	*31302A	Wheelbox to wheelbox ..	1954-58	740715
" ..	1958	*31327A	Terminal block ..	1954-58	37101A/B	End tube ..	1954-58	741300
Map light ..	1955-58	*31536A	Trafficators ..	1954-55	54044D	Ferrule, casing retaining ..	1954-58	74075
Panel ..	1954-55	*31321A	Warning lights ..	—	—	Arm ..	1954	741294
" Knob ..	Later	*78315A	Ignition ..	1954-58	*38013B	" ..	1955	745080
Petrol and oil gauge ..	1954-58	768913	Petrol ..	1954-58	*38042A	" ..	1958	738734
Petrol reserve ..	1954-58	*31295B				Blade ..	1954-55	738735
Reverse lamp ..	1954-58	*31319A				" ..	1955-58	738735
		*31077D/E						

LAMBOURNE, C. F. 'Lamb-Kar' 1952–54

Battery ..	1952-54	GU11E	LAMPS			SWITCHES		
Fuse box ..	1952-54	*385211	Side ..	1952-54	52139B	Ignition ..	1952-54	31201B
Horn ..	1952-54	*069239	Tail and number plate ..	1952-54	*53140B	Knob ..	—	314026
Horn push ..	1952-54	31269A	Panel light bulb holder ..	1952-54	39007A	Windshield wipers ..	1952-54	*75121A

LANCHESTER 10 h.p. LD10 1946–51

Battery ..	1946-51	SG9A	LAMPS—continued			SWITCHES—continued		
Coil, ignition ..	1946-51	*45012A/D	Head, Export			Panel ..	Later	1951
Control box ..	1946-50	*37031A	Vertical dip ..	1948-51	50654A	Knob ..	—	*31113A
" ..	1951	37057E	Number plate illumination ..	1946-47	*53045B	Starting motor ..	1946-51	*316490
Distributor ..	1946-47	*409929	" ..	1948	*53061A	Stop lamp ..	1946-51	76428A
" ..	1948-51	40112A	Side ..	1951	53093E	Spring ..	—	31281B
Generator ..	1946-51	22449B	" ..	1946-47	52057A	Trafficators ..	1946-50	315543
" ..	Later	1951	22449D	1948	*52078A	" ..	1951	*54014D
Horn ..			Stop tail ..	1951	52078A	Windshield wipers ..	1946-50	*54041A
Low note ..	1946-50	*69021A	Mirror ..	1946-51	*62007A	Motor ..	1946-51	75066A
" ..	1951	*69011F	Starting motor ..	1946-51	*25000A/D	Clutch housing ..	1946-51	737085
High note ..	1946-50	*69022A	Steering column control ..	1946-51	32711A/F	Bracket, with shaft and coupling ..	1946-50	735395
" ..	1951	*69012F				Shaft, short ..	1946-50	737243
Inspection lamp sockets ..	1946-51	301187	SWITCHES			Coupling ..	1946-50	729036/S
LAMPS			Battery master ..	1951	76605B	Grommet, housing ..	1946-50	734181
Fog ..	1951	*55029E	Dipper ..	1946-51	31284A	Arm ..	1946-51	*735050
Head, Home ..	1946	*50098A	Heater or fan ..	1951	*78221A	Blade ..	1946-51	727707
" ..	Later	*50211A	Knob ..	—	768378			
" ..	1948-51	*50623A	Ignition and lighting ..	1946-51	*344890			
			Panel ..	1946-50	*359350			
			Knob ..	1951	*78235A			
					768378			

LANCHESTER 14 h.p. 1952–53

Battery ..	1952-53	GT11A	LAMPS—continued			SWITCHES—continued		
Coil, ignition ..	1952-53	*45012A/D	Head, Export Europe ..	1952-53	*50963A	Solenoid operating ..	1952-53	31115A
Control box ..	1952-53	*37138A/B	ditto ..	1953	51339A	Knob ..	—	*317335
Distributor ..	1952-53	40294A	Head, Export France ..	1952-53	*50962A	Stop lamp ..	1952-53	31281B
" ..	Later	1953	Later ..	1953	51342A	Spring ..	—	315543
Flasher unit ..	1953	*35003A	Number plate and reverse ..	1952-53	53161D	Windshield wiper ..	1952-53	31113A
Fuse box ..	1952-53	033239	Side ..	1952-53	53210D	Knob ..	—	*316491
Generator ..	1952-53	22258D	Side and flasher (U.S.A.) ..	1952-53	*52162A	Terminal block ..	1952-53	31010A
Horn ..			Stop tail ..	1952-53	53199B	Trafficators ..	1952	*54041A
Low note ..	1952-53	*69011F	Stop tail and flasher ..	1952-53	53153E	Windshield wipers ..	1952-53	54044A/D
High note ..	1952-53	*69012F	(U.S.A.) ..	1952-53	25521B/D	Motor ..	1952-53	75152A
Inspection lamp sockets ..	1952-53	38604A	Starting motor ..	1952-53	32866A/H	Wheelbox ..	1952-53	*72548A/K
Junction box ..	1952-53	78266A	Steering column control ..	1952-53		Crosshead and rack assy.	1952-53	
" ..	Later	1953				Cut to 45 $\frac{1}{2}$ " ..	1952-53	
SWITCHES			Dipper ..	1952-53	31284A	Outer casing ..	1952-53	736307
Head, Home ..			Heater or fan ..	1952-53	78250A	Motor to wheelbox ..	1952-53	*739907
Non-dip ..	1952	*50623A	Knob ..	—	*768663	Wheelbox to wheelbox ..	1952-53	739937
Dip left ..	1953	*50954A	Ignition and lighting ..	1952-53	31194A	End tube ..	1952-53	740031
" ..	Later	*51336A	Knob ..	—	316287	Grommet, wheelbox ..	1952-53	734652
Head, Export ..			Panel ..	1952-53	31113A	Arm, left hand drive ..	1952-53	*737603
Vertical dip ..	1952-53	50654A	Knob ..	—	*316492	right hand drive ..	1952-53	*737602
L.H.D., dip right ..	1952-53	*50804D	Reverse lamp ..	1952-53	31281B	Blade ..	1952-53	*738719
" ..	Later	1953	Solenoid, starting motor	1952-53	*76411D	" ..	1953	738724

LANCHESTER 'Sprite' 1955–56

Ammeter ..	1955-56	36224A	Flasher unit (U.S.A.) ..	1955-56	*35003A	Horn ..		
Battery ..	1955-56	GT7A	Flasher relay (U.S.A.) ..	1955-56	33117D	Low note ..	1955-56	69046B/E
Coil, ignition ..	1955-56	*45054H	Fuse box ..	1955-56	033239	High note ..	1955-56	69047B/E
Control box ..	1955-56	37182D/F	Generator ..	1955-56	22258D	Inspection lamp sockets ..	1956	38604A
Distributor ..	1955-56	*40507A/D	" ..	Later	22258E	Junction box ..	1955	78266A
" ..	Later	1956	40547A/D					

* See Supersession Chart

† No longer available—refer to Wiper Conversion Set Section

L.H.D. ... Left hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

LANCHESTER—LEA FRANCIS

LANCHESTER 'Sprite' 1955-56—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS			Starting motor ..	1955-56	25058D	SWITCHES—continued		
Driving	1955	55132A	Steering column control ..	1955-56	32969B	Windshield wiper ..	1955	*31557A
Fog	1955	55128A	SWITCHES			Knob	1956	*31498A
Head, Home			Blower	1955-56	*31557A	Trafficators ..	1955-56	316371
R.H.D., dip left	1955	51336A	Knob	—	312897	Warning lights ..	1955-56	54044E
Head, Export	1956	51336B/J	Dipper	1955-56	31284A	Gear selection ..	1955-56	*38153A
R.H.D., dip left	1956	51336A	Ignition and lighting ..	1955-56	31194D	Oil pressure ..	1955-56	38144A
L.H.D., dip right	1955	51336B/J	Knob	1955	316435	Trafficator ..	1955-56	38143A
Head, Export Europe	1956	*51337D/E	Knob	1956	316285	Windshield wipers ..		
(not France)	1955	51339A	Panel	1955-56	78299B	Motor	1955-56	*75200A
ditto	1956	51339B/H	Knob	—	313600	Wheelbox	1955-56	72660A
Head, Export France	1955	*51341A/B	Reverse lamp ..	1955-56	31281B	Crosshead and rack assy. ..	1955-56	*743231
Number plate illumination and reverse	1955-56	53161D	Switch circuit breaker ..	1956	*31077E	Outer casing ..		
Side	1955-56	53210D	(Borg Warner transmission) ..	1956	*76411E	Motor to wheelbox ..	1955-56	743149
Side and flasher (U.S.A.)	1955-56	*52162E	Solenoid, starting motor ..	1955-56	31115E	Wheelbox to wheelbox ..	1955-56	744150
Stop tail and flasher	1955-56	53410B	Solenoid operating ..	1955-56	*317379	End tube	1955-56	740746
			Knob	—	31082E	Arm, left hand drive ..	1955-56	745072
			Stop lamp	1955-56		” right hand drive ..	1955-56	745071
						Blade	1955-56	738724

LANCIA 'Appia' and 'Flamina' Coupés 1959-60

LAMPS			Windshield wipers ('Appia')			Windshield wipers—cont'd		
Stop tail and flasher ('Appia', U.S.A.) ..	1959-60	53541A	Motor	1959-60	75213A	Outer casing ..	1959-60	744327
('Flamina')	1959-60	53639A	Wheelbox	1959-60	72699B	Motor to wheelbox ..	1959-60	744217
(,, U.S.A.)	1959-60	53710A	Crosshead and rack assy. ..	1959-60	*743212	Wheelbox to wheelbox ..	1959-60	740746
						End tube	1959-60	743527
						Arm	1959-60	737897
						Blade	1959-60	

LARMAR ENGINEERING Invalid Carriage 1948-54

Ammeter	1948-50	*369076	LAMPS			SWITCHES		
Battery	1952-54	SG9E	Head	1948-54	50129A	Ignition and lighting ..	1948-49	34055A
Coil, ignition	1948-50	*45036A	Side	1948-54	*A52066A	Solenoid, starting motor ..	1952-54	76022B
Distributor	1948-50	40079D	Tail and number plate ..	1948-54	*A53056A	Solenoid operating ..	1952-54	*31071A
Horn	1948-54	069343	Mirror	1949-54	*62003A	Windshield wipers ..		
Horn push	1948-54	76205A	Regulator	1948-49	*33018A	Motor	1948-54	*75127A
			Starting motor ..	1952-54	25032A	Arm	1948-54	*735031
						Blade	1948-54	727801

LAYTON SPORTS CARS 'Jomar' (T.V.R.) 1959-60

Ammeter	1959-60	*36117B	LAMPS—continued			SWITCHES—continued		
Battery	1959-60	BT7A	Flasher, rear (U.S.A.) ..	1959-60	53600A/E	Lighting	1959-60	*31251A
Bulb holder, warning light	1959-60	*54940878	Head, Home	1959-60	51336B/J	Knob	—	316154
Bulb	—	281	Head, Export U.S.A. ..	1959	58493A	Panel light	1959-60	31201D
Coil, ignition	1959-60	*45054J/M	”	1960	58618A	Knob	—	314026
Control box (Climax Engine)	1959-60	37298A/B	Number plate illumination ..	1959-60	53093B	Solenoid, starting motor ..	1959-60	*76411E
(Ford Engine)	1959-60	37182H	Panel	1959-60	52405B	ditto .. Later	1960	*76445A
ditto	Later	37182J & K	Side	1959-60	*52182D	Stop lamp	1959-60	31082E
Distributor (Climax Engine)	1959-60	40566B	Stop tail and reflex ..	1959-60	53377B	Windshield wiper ..	1959-60	31201D
(Ford Engine)	1959-60	40402J	Starting motor (Climax Engine) ..	1959-60	25063E/F	Knob	—	314026
Flasher unit	1959-60	35011A	(Ford Engine)	1959	25022M	Warning lights ..	1959-60	38192A
Fuse box	1959-60	37110A	”	1960	25022N/Q	Flasher	1959-60	38190A
Generator (Climax Engine)	1959-60	22290A/E	Steering column control ..	1959-60	33553A	Main beam	1959-60	
(Ford Engine)	1959-60	22258E/H	Stator tube	—	54300350	Windshield wipers ..		
Horn Low note	1959-60	69046F	SWITCHES			Motor	1959-60	75296E
High note	1959-60	69047F	Dipper (U.S.A.)	1959-60	31780D	Wheelbox	1959-60	72694A
Horn relay	1959-60	33188A	Fan	1959-60	31800A	Crosshead and rack assy. ..	1959-60	*743214
LAMPS			Knob	—	31201D	Outer casing ..		
Flasher, front and rear	1959-60	52337A	Flasher	1959-60	31201D	Motor to wheelbox ..	1959-60	54711025A
Flasher, front (U.S.A.)	1959-60	52345A	Ignition and starting ..	1959-60	31912A	Wheelbox to wheelbox ..	1959-60	54711026A
						End tube	1959-60	740746
						Arm	1959-60	745650
						Blade	1959-60	737897

LEA FRANCIS 14 h.p. 1946-54

Ammeter	1949-54	36052B	Fuse box	1949-54	*37107A	LAMPS—continued		
Battery	1946-50	SG11A	Generator	1946-49	*22447A	Fog	1951	*55055B
Coil, ignition	1951-54	GT11A	”	1950-53	*22435A/B	”	1952-54	*55094A
”	1946-48	*45020A	Later	1953-54	*22456A/B	Head, Home R.H.D., dip left (L.H.) ..	1946-50	*50325A/B
Control arm (6 light Saloon)	1949	31143A	Horn Low note	1946-49	*69002B	” non-dip (R.H.) ..	1946-50	*50326A/B
Control box	1946-48	*37032A	”	1949-54	*69011F	” dip left (L.H.) ..	1950	*50445K
”	1949	37065E	High note	1946-49	*69003B	” Mk. V and VI) ..	1950	
Distributor	1946-48	*40576F	”	1949-54	*69012F	” non-dip (R.H., Mk. V and VI) ..	1950	*50446K
”	1949-53	*40148A/F	LAMPS			” dip left	1951	*50954A
”	Later	40245B/D	Boot (Saloon)	1951-54	53163A	”	1952	50941A
			Fog	1946-50	*55010A	”	1953-54	51336A

* See Supersession Chart

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

continued



Equipment Specification

LEA FRANCIS

LEA FRANCIS 14 h.p. 1946-54—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS—continued			Starting motor .. .	1946-48	*255378	Windshield wipers		
Head, Export			ditto .. .	1949	*255721	Motor (4 Light Saloon	1946-50	*75066A
Vertical dip	1950	50349A/B	ditto (6 Light Saloon)	1949	*255378	and Utility) .. .	1949	*75068K
R.H.D., dip left (Mk. V and VI)	1950	*50445K	ditto .. .	1950-54	25521B/D	" (6 Light Saloon)	1950	*75063K
R.H.D., dip left	1951	*50954A	Steering column control .. .	1946-48	322890	" .. .	1951-52	*75063L
" "	1952	50941A	ditto (4 Light Saloon	1949-50	32738A	" .. .	1953-54	75158A
L.H.D., dip right	1950	*50445K	and Utility)	1950	32738A	Clutch housing .. .	1946-50	735691
" "	1951-52	*50804D	ditto .. .	1951-54	32845F	Bracket, with shaft and		
" "	1953-54	*51337A	coupling .. .			coupling .. .	1946-50	735395
Head, Export Europe	1950	*B50445K	Battery master .. .	1946-54	76605B	Shaft, short .. .	1946-50	737243
(not France) .. .	1951-52	*50963A	Foglamp .. .	1946-54	31201B	Coupling .. .	1946-50	729036/S
ditto .. .	1953-54	51339A	Knob .. .	—	314403	Link .. .	1946-50	737274
Number plate illumination	1946-50	*53064A	Heater or fan .. .	1950-53	*78211A	Wheelbox .. .	1949	72560A/K
(Saloon Mk. V and VI)	1950	53097E	Knob .. .	—	768473	Crosshead and rack assy.		
Number plate illumination	1951-54	*53097E	Ignition and lighting .. .	1946-54	*34026D	Cut to 49" .. .	1949	738499
(Estate Car) .. .	1951-54	*53064A	Panel .. .	1946-48	31201B	" " 49" .. .	1950	736307
Roof .. .	1946-52	*56017B	Knob .. .	1949-54	*31024A	" " 49" .. .	1951-54	738499
" .. .	1953-54	56047A	Reverse lamp .. .	1949-50	*31068A	Outer casing .. .		
Side .. .	1946-48	*52042A	Knob .. .	—	*314665	Motor to wheelbox .. .	1949	*739832
" .. .	Later	52070A	Reverse lamp (6 Light	1949-50	*31077A	" " "	1950	739868
" .. .	1949-50	*52092A	Saloon)	1951-54	*31077A	" " "	1951-52	*739855
" (Mk. V and VI)	1951-54	52160A	Solenoid, starting motor	1946-49	*760080	Wheelbox to wheelbox .. .	1949	*739971
" (Mk. V and VI,	1950	52151B	Solenoid operating .. .	1946-48	*31071A	End tube .. .	1949-54	740031
U.S.A.) .. .	1950-54	*52130A	" .. .	1949-53	*31071A	Grommet, housing .. .	1946-50	733874
Stop tail .. .	1948	*53091A	Stop lamp .. .	1946-54	*31318A	" scuttle .. .	1946-50	729378
" .. .	1951	53199B	Spring .. .	—	31281B	" wheelbox .. .	1949	734458
Stop tail and flasher	1950	53183B	Windshield wiper .. .	1949-54	*314691	" "	1950	735824
(Mk. V and VI, U.S.A.) .. .	1951-54	53153E	Knob .. .	—	315543	Arm (4 Light Saloon and	1951-54	733874
Stop tail and reverse	1950-52	53203B	Trafficators .. .	1946-49	*54018D	Utility) .. .	1946-50	*735050
" .. .	Later	53198B	" .. .	1950-54	*54039A	" (6 Light Saloon) .. .	1949	*736418
Mirror .. .	1946-48	*580785	Warning lights .. .			Blade (4 Light Saloon	1951-54	*736418
" .. .	1949	*62030A	Ignition .. .	1946-48	*318505	and Utility) .. .	1946-50	727707
" .. .	1950-54	*062574	Side lamp .. .	1949-54	*38013B	" (6 Light Saloon) .. .	1949	736428
Panel light bulb holder	1950-54	39007A	Side lamp .. .	1949-54	*38042A	" .. .	1951-52	736428
Relay, side lamp .. .	1949-54	33052A				" .. .	1953-54	736412

LEA FRANCIS 18 h.p. 4 Light Saloon 1951-54

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter .. .	1951-54	36052B	LAMPS—continued			SWITCHES—continued		
Battery .. .	1951-54	GT11A	Head, Export Europe	1951-52	*50963A	Solenoid, starting motor	1951-54	*76411D
Coil, ignition .. .	1951-54	*45012A/D	(not France) .. .	1951-52	*51339A	Solenoid operating .. .	1951-52	*317063
Control box .. .	1951-54	*37076E	ditto .. .	1953-54	*53111A	Stop lamp .. .	1951-54	*31318A
Distributor .. .	1951-52	40206D/E	Number plate illumination .. .	1951	*53111A	Spring .. .	—	315543
" .. .	Later	40239A/B	Roof .. .	1952-54	53097E	Windshield wiper .. .	1951-54	31281B
Flasher unit .. .	1952-54	*35003A	Side .. .	1952-54	530617B	Knob .. .	—	*314691
Fuse box .. .	1951-54	*37107A	" (U.S.A.) .. .	1952-54	56047A	Trafficators .. .	1951	*54018D
Generator .. .	1951-52	*22435A	Stop tail .. .	1951	*52130A	" .. .	1952-54	*54039A
Horn .. .	Later	1952-53	Stop tail and flasher (U.S.A.) .. .	1953-54	53199B	Warning lights .. .	1951-54	*38013B
Low note .. .	1951-54	*69011F	Stop tail and reverse .. .	1952-54	53153E	Ignition .. .	1951-54	*38042A
High note .. .	1951-54	*69012F	Mirror .. .	1951-54	*062574	Side lamp .. .	1951-54	*38042A
LAMPS			Panel light bulb holder .. .	1951-54	39007A	Windshield wipers .. .		
Boot .. .	1951-54	53163A	Relay, side lamp .. .	1951-54	33052A	Motor .. .	1951-52	*75063L
Fog .. .	1951-54	*55094A	Starting motor .. .	1951-52	26045A	Wheelbox .. .	1951-54	*75158A
Head, Home R.H.D., dip left .. .	1951-52	*50954A	Steering column control .. .	1951-54	26041A/B	Crosshead and rack assy.		
" .. .	Later	1952	50941A			Cut to 49" .. .	1951-54	738499
" .. .	1953-54	51336A	SWITCHES			Outer casing .. .		
Head, Export R.H.D., dip left .. .	1951-52	*50954A	Battery master .. .	1951-54	76605B	Motor to wheelbox .. .	1951-52	*739855
" .. .	Later	1952	Foglamp .. .	1951-54	31201B	" " "	1952-54	*739907
" .. .	1953-54	51336A	Knob .. .	—	314403	Wheelbox to wheelbox .. .	1951-54	*739960
L.H.D., dip right .. .	1951-52	*50804D	Heater or fan .. .	1951-53	*78211A	End tube .. .	1951-54	740031
" .. .	1953-54	*51337A	Knob .. .	—	768473	" scuttle .. .	1951-54	736418
			Ignition and lighting .. .	1951-54	*34026D	" wheelbox .. .	1951-54	736428
			Panel .. .	1951-54	*31024A	Arm .. .	1951-54	736412
			Reverse lamp .. .	1951-54	*31077A	Blade .. .	1951-52	736412

LEA FRANCIS 18 h.p. 6 Light Saloon 1950-53

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter .. .	1950-53	36052B	LAMPS—continued			LAMPS—continued		
Battery .. .	1950-53	GT11A	Head, Home	1952-53	*55094A	Number plate illumination .. .	1950-53	53100A
Coil, ignition .. .	1950-53	*45012A/D	R.H.D., dip left (L.H.)	1950	*50445K	Roof .. .	1951	*56017A
Control box .. .	1950-53	*37076E	" non-dip (R.H.)	1950	*50446K	Side .. .	1952-53	56047A
Distributor .. .	1950-52	40206D/E	" dip left .. .	1951-53	*50954A	" (U.S.A.) .. .	1950-53	52151B
" .. .	Later	40239A/B	Head, Export	1950	*50445K	Stop tail (U.S.A.) .. .	1950	*52130A
Flasher unit .. .	1952-53	*35003A	dip left .. .	1951-53	*50954A	Stop tail and flasher (U.S.A.) .. .	1953	53145B
Fuse box .. .	1950-53	*37107A	L.H.D., dip right .. .	1950	*51336A	Stop tail and reverse .. .	1950	*53143B
Generator .. .	1950-52	*22435A/B	" .. .	1951-53	*50804D	" .. .	1950	53203B
Horn .. .	Later	1952-53	Head, Export Europe (not France) .. .	1950	*B50445K	Mirror .. .	1951-53	53198B
Low note .. .	1950-53	*69011F	dip left .. .	1951-52	*50963A	Panel light bulb holder .. .	1950-53	*062574
High note .. .	1950-53	*69012F	ditto .. .	1953	51339A	Relay, side lamp .. .	1950-52	33052A
LAMPS			ditto .. .	Later		Starting motor .. .	1950-52	26045A
Bonnet .. .	1952-53	53163A				" .. .	1952-53	26041A/B
Fog .. .	1950	*55063B				Steering column control .. .	1951-53	32738A
" .. .	1951	*55055B				" .. .	1951-53	32845F

* See Supersession Chart
L.H.D. ... Left hand drive

† No longer available—refer to Wiper Conversion Set Section
R.H.D. ... Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)

L.H. ... Left hand

R.H. ... Right hand

continued



Equipment Specification

LEA FRANCIS—LLOYD

LEA FRANCIS 18 h.p. 6 Light Saloon 1950–53—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			SWITCHES—continued			Windshield wipers—cont'd		
Battery master ..	1950-53	76605B	Windshield wiper ..	1950-53	31201B	Crosshead and rack assy.		
Foglamp ..	1950-53	31201B	Knob ..	—	*314691	Cut to 44 $\frac{1}{2}$ " ..	1950	736307
Knob ..	—	314403	Trafficators ..	1950-51	*54018D	" 49 $\frac{1}{2}$ " ..	1951-53	738499
Heater or fan ..	1950-52	*78211A	" ..	1952-53	*54039A	Outer casing		
Knob ..	—	768473	Warning lights			Motor to wheelbox ..	1950	739868
Ignition and lighting ..	1950-53	*34026D	Ignition ..	1950-53	*38013B	" "	1951-52	*739855
Panel ..	1950-53	*31024A	Side lamp ..	1950-53	*38042A	" "	1953	*739907
Reverse lamp ..	1950-53	*31077A	Windshield wipers			Wheelbox to wheelbox ..	1950-53	*739960
Solenoid, starting motor ..	1950-53	*76411D	Motor ..	1950	*75063K	End tube ..	1950-53	740031
Solenoid operating ..	1950-52	*317063	" ..	1951-52	*75063L	Grommet, wheelbox ..	1950	735824
Stop lamp ..	1953	*31318A	" ..	1953	75158A	Arm ..	1951-53	733874
Spring ..	1950-53	31281B	Wheelbox ..	1950-53	*72548A/K	Blade ..	1950-52	736428
		315543				" ..	1953	736412

LEA FRANCIS 1½ litre Sports 1949: 2½ litre Sports 1950–54

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter ..	1949-54	36052B	LAMPS—continued			SWITCHES—continued		
Battery ..	1949	SG11A	Head, Export Europe (not France) ..	1952	*50963A	Stop lamp ..	1949-54	31281B
	1950-54	GT11A	ditto ..	1953-54	51339A	Spring ..	—	315543
Coil, ignition ..	1949-54	*45012A/D	Map reading ..	1949	*56021A	Windshield wiper ..	1950-54	31201B
Control box ..	1949	37065E	Number plate illumination ..	1949-54	53097E	Knob ..	—	*314691
" ..	1950-54	*37076E	Roof ..	1949-50	*56017B	Trafficators ..	1949-50	*54018D
Distributor ..	1949	*40148A/F	Side ..	1950-54	56047A	Warning lights ..	1949-54	*54039A
" ..	1950-52	40206D/E	" (U.S.A.) ..	1950-54	52151B	Ignition ..	1949-54	*38013B
Flasher unit ..	Later	40239A/B	Stop tail and number plate ..	1949	*52130A	Side lamp ..	1949-54	*38042A
Fuse box ..	1952-54	*35003A	Stop tail ..	1951-54	*53031D	Windshield wipers ..		
Generator ..	1949	*37107A	Mirror ..	1950-54	53143B	Motor ..	1949	75051D
	1949-50	*22447A	Panel light bulb holder ..	1949-54	53199B	" ..	1950	*75063K
	1950-52	*22435A/B	Relay, side lamp ..	1949-54	062574	" ..	1951-52	*75063L
	1953-54	*22456A/B	Starting motor ..	1949	39007A	Coupling bar ..	1953-54	75158A
Horn ..	1949	*69002B	" ..	1950-52	33052A	Bearing, passenger side ..	1949	732191
Low note ..	1950-54	*69011F	Steering column control ..	1949-50	26045A	Wheelbox ..	1950-54	731721
High note ..	1949	*69003B	" ..	1951-54	26041A/B	Crosshead and rack assy. Cut to 44 $\frac{1}{2}$ " ..	1950	736307
" ..	1950-54	*69012F	Steering column control ..	1949-50	32738A	" 49 $\frac{1}{2}$ " ..	1951-54	738499
LAMPS			" ..	1951-54	32845F	Outer casing ..		
Fog ..	1952-54	*55094A	SWITCHES			Motor to wheelbox ..	1950	739868
Head, Home R.H.D., dip left (L.H.)	1949-50	*50793B	Battery master ..	1949-54	76605B	" ..	1951-52	*739855
" non-dip (R.H.)	1949-50	*50362P	Foglamp ..	1949-54	31201B	Windshield wiper ..	1950-54	*739907
" dip left ..	1951-52	*50954A	Knob ..	—	314403	Wheelbox to wheelbox ..	1950-54	*739960
" ..	Later	50941A	Heater or fan ..	1950-53	*78211A	End tube ..	1950-54	740031
Head, Export R.H.D., dip left	"	51336A	Knob ..	—	768473	Grommet, wheelbox ..	1950	735824
" ..	Later	*50954A	Ignition and lighting ..	1949-54	*34026D	Arm, "left hand" ..	1949	733874
" ..	Later	50941A	Panel ..	1949-54	*31024A	" right hand" ..	1949	*732927
L.H.D., dip right ..	1953-54	51336A	Reverse lamp ..	1949-54	*31077A	Blade ..	1950-54	*732926
L.H.D., dip right ..	1952-53	*50804D	Solenoid, starting motor ..	1949	*760080	" ..	1949	727784
" ..	Later	*51337A	Solenoid operating ..	1950-54	*76411D	Blade ..	1950-52	736428
			" ..	1953-54	*31318A	" ..	1953-54	736412

LEWIS, H. T. Pedestrian Controlled Battery Vehicle 1951–55

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Junction box ..	1951-55	78264A	LAMPS—continued			SWITCH		
LAMPS Side ..	1951-55	52034A	Tail and number plate ..	1951-55	*53041B	Lighting ..	1951-55	31201B
			2-pin plug ..	1951-55	*545025	Knob ..	—	314026
			2-pin socket ..	1951-55	770419			

LIGHT DELIVERY VEHICLES 'Bi-Van' and 'Tri-Van' 1949–51

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Alternator ..	1951	47068H	LAMPS			SWITCHES		
Battery ..	1949-51	PUW7E-4	Head, Home ('Bi-Van') ..	1949-51	*50306D	Dipper ..	1949-50	*380521
Coil, ignition ..	1951	*45036A	('Tri-Van') ..	1949-51	*50292D	Ignition ..	1949-51	31246A
Horn ..	1949-51	*70001D	Side ('Tri-Van') ..	1949-51	A52036A	Lighting ..	1949-51	*31254A
Horn push ..	1949-51	76204A	Tail and number plate ('Bi-Van') ..	1949-51	*53140B			
Rectifier ..	1951	*47072A	('Tri-Van') ..	1949-50	*A53007B			
			" ..	1951	*53133A			

LLOYD '650' Roadster 1948–50

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter ..	1948-50	*364576	LAMPS			SWITCHES—continued		
Battery ..	1948-50	SG9E	Head, Home Vertical dip (L.H.) ..	1948-50	*50647D	Stop lamp ..	1948-50	31281B
Coil, ignition ..	1948-50	*45016A	Non-dip (R.H.) ..	1948-50	*50648B	Spring ..	—	315543
Control arm ..	1948-50	31168A	Stop tail and number plate ditto (Export) ..	1948-50	*A53071B	Trafficators ..	1948-49	*54012A
Control box ..	1948-50	37081E/H	Starting motor ..	1948-50	*A53029A	Warning light (ignition) ..	1948-50	54037A
Distributor ..	1948-50	40094A/D	SWITCHES					*38012B
Generator ..	1948-50	*22433A	Ignition and lighting ..	1948-50	*34006B	Windshield wipers Motor ..	1948-50	*75121A
Horn ..	1948-50	069343	Panel ..	1948-50	*314142	Bearing, passenger side ..	1948-50	731721
			Starting motor ..	1948-50	76428A	Arm, left hand ..	1948-50	735119
						" right hand ..	1948-50	735118
						Blade ..	1948-50	727784

* See Supersession Chart L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive



Equipment Specification

LOTUS—MEYNELL
LOTUS Mk. VII and Mk. VIII (Ford 100E Engine) 1958

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter ..	1958	36001D	LAMPS	1958	55132B	SWITCHES	1958	31291A
Coil, ignition ..		*45053J	Driving ..	1958	55128B	Dipper ..	1958	*31631A
Control box ..	1958	37182H	Fog ..	1958	55118A	Ignition ..	1958	31126E
Distributor ..	1958	40402A/N & Q/T	Number plate illumination ..	1958	*52182D	Lighting (Mk. VII) ..	1958	31183H
Fuse box ..	1958	033239	Side ..	1958	53330D	" (Mk. VIII) ..	1958	*76411E
Generator ..		22258F	Stop tail ..	1958	25022M & N/Q	Solenoid, starting motor ..	1958	31082E
Horn ..	1958	70141B	Starting motor ..	1958		Stop lamp ..	1958	31082E
Horn push (Mk. VIII) ..	1958	76229A	Steering wheel centre (Mk. VII) ..	1958	76231A			

LOTUS Mk. IX (Climax or M.G. Engine) 1958-59

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter ..	1958-59	*36117A	Horn ..	1958-59	70141B	Starting motor ..	1958-59	25022M
Coil, ignition ..	1958-59	*45054K	LAMPS			" "	1959	25063B
Control box ..	1958-59	37182H	Flasher, front (U.S.A.) ..	1958-59	52338A	SWITCHES		
" .. Later	1959	37204E	Flasher, rear (U.S.A.) ..	1958-59	53600A	Flasher (U.S.A.) ..	1958-59	31476B
Distributor (Climax Engine) ..	1958-59	40566A/B	Head, Home ..	1958-59	51960A	Horn push and dipper ..	1958-59	31438A
(M.G. Engine) ..	1958-59	40510B/D	Side ..	1958-59	*52182D	Lighting ..	1958-59	*34018A
Flasher unit (U.S.A.) ..	1958-59	35010A	Stop tail ..	1958-59	53178F/J	Solenoid, starting motor ..	1958-59	*76411E
Fuse box ..	1958-59	*37137A	Stop tail and number plate ..	1958-59	53244B/D	Solenoid operating ..	1958-59	*31071A
Generator (Climax Engine) ..	1958-59	22265E	Reflex reflector ..	1958-59	*57035D	Stop lamp ..	1958-59	31082E
(Climax Engine) .. Later	1959	22290A						
(M.G. Engine) ..	1958-59	22258F						

LOTUS 'Elite' 1959-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter ..	1959-60	*36246B	LAMPS—continued			SWITCHES—continued		
Battery ..	1959-60	FRVZ9A	Head, Home ..	1959-60	58260A/D	Heater ..	1959-60	*31900A
Bulb holder, warning lights ..			R.H.D., dip left ..	1959-60	58260A/D	Knob ..	—	*54331339
Flasher and main beam ..	1960	*860547	Head, Export ..	1959-60	58263B	Ignition and starting ..	1959-60	*31846A
Ignition ..	1960	*861113	R.H.D., dip left ..	1960	58560A	Lighting ..	1959-60	31662A
Bulb ..	1960	987	L.H.D., dip right ..	1960	58561A	Knob ..	—	*54332710
Coil, ignition ..	1959-60	*45054K	Head, Export Europe ..	1959-60	58631A	Solenoid, starting motor ..	1959-60	*76411E
Control box ..	1959	*37187L	(except France & Sweden)	1959-60	*52463A	Windshield wiper ..	1959-60	*31954A
" .. ("95") ..	1959-60	37307A/B	Head, Export France ..	1959-60	52449B	Knob ..	—	*318167
Distributor ..	1959-60	40566B	Head, Export Sweden ..	1959-60	53819A	Warning light (flasher) ..	1959	38102A
Flasher unit ..	1959-60	35010A	Number plate illumination ..	1959-60	33188A	Shade and window ..	1960	54360259
Fuse box ..	1959-60	*37131A	Side ..	1959-60	33209A	Windshield wipers ..		
Generator ..	1959-60	22296A	Stop tail and reflex ..	1959-60	25063B/D	Motor ..	1959-60	75311A
Horn ..			Relay, horn ..	1959-60	25063E	Wheelbox ..	1959-60	72686B
Low note ..	1959-60	69046F	Relay, lighting ..	1959-60		Crosshead and rack assy. ..	1959-60	74425B
High note ..	1959-60	69047F	Starting motor ..	1959		Outer casing ..	1959-60	54710413
LAMPS			" .. Later	1959-60		Motor to wheelbox ..	1959-60	54710551
Flasher, front .. (N.A.D.A.) ..	1959-60	52337A	SWITCHES			Wheelbox to wheelbox ..	1959-60	740746
" .. ("N.A.D.A.") ..	1959-60	52345A/B	Dipper ..	1959-60	31800A	End tube ..	1959	745082
Flasher, rear .. (N.A.D.A.) ..	1959-60	*52462A	Door pillar ..	1959-60	*31222A	Arm	745650
" .. ("N.A.D.A.") ..	1959-60	53861A	Flasher ..	1959-60	*31905A	" .. Later	1959	54711569
			Knob ..	—	*311097	Blade	738734

LOTUS Mk. VII Series II 1960

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Coil, ignition (Austin A40 and Ford 100E Engine) ..	1960	*45053M	Generator (Austin A40 and Ford 100E Engine) ..	1960	22700D	Starting motor (Austin A40 and Ford 100E Engine) ..	1960	25022N/Q
(Ford 105E Engine) ..	1960	45111D	ditto (temporary alternative) (Ford 100E Engine) ..	1960	*22704A	(Ford 105E Engine) ..	1960	25071A/D
Control box (Austin A40 Engine) ..	1960	37183L	(Ford 100E Engine) ..	1960	22258H	Steering wheel centre ..	1960	76231A/D
(Ford 100E Engine) ..	1960	37182K	Horn ..	1960	70141A			
("105E" ..) ..	1960	37290D	LAMPS			SWITCHES		
Distributor (Austin A40 Engine) ..	1960	40675B	Driving ..	1960	55132E	Driving lamp ..	1960	*31851A
(Ford 100E Engine) ..	1960	*40706A	Fog ..	1960	55128E	Horn ..	1960	34307A
("105E" ..) ..	1960	40652B/F	Side ..	1960	*52182D	Ignition ..	1960	31889A
Fuse box ..	1960	033283	SWITCHES			Lighting ..	1960	31788B
			Foglamp ..	1952	31248A	Starting motor ..	1960	76427D
			Knob ..	—	315042	Stop lamp ..	1960	31802D

MEYNELL (See also Paramount) 'Cub' Mk. I, 'Vixen' and 'Flying Fox' Roadster and Coupé Mk. I 1952

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter ..	1952	*36072D	LAMPS—continued			SWITCHES—continued		
Battery ..	1952	GT7A	Head, Export Europe (not France) ..	1952	*50961A	Panel ..	1952	*31251A
Coil, ignition ..	1952	*45200A/B	Head, Export France ..	1952	*50978A	Knob ..	—	315042
Control box ..	1952	37065E	Number plate illumination ..	1952	53093E	Starting motor ..	1952	*764150
" .. Later	1952	*37138A/B	Side ..	1952	52139B	Windshield wiper ..	1952	31248A
Distributor ..	1952	40286A	Stop tail ..	1952	52178D	Knob ..	—	315042
Fuse box ..	1952	033239	Mirror ..	1952	062587	Trafficators ..	1952	*54039A
Generator ..	1952	22258D	" (Coupé) ..	1952	*625759	Warning light holder (ignition) ..	1952	304994
Horn ..			Starting motor ..	1952	26009A	Windshield wipers ..		
Low note ..	1952	*69011F	Steering column control ..	1952	32843D/F	Motor ..	1952	75151A
High note ..	1952	*69012F	SWITCHES			Wheelbox ..	1952	72590A/K
LAMPS			Foglamp ..	1952	31248A	Crosshead and rack assy. ..	1952	738764
Fog ..	1952	*55094A	Knob ..	—	315042	Cut to 31" ..	1952	740482
Head, Home ..			Ignition ..	1952	31287A	Outer casing ..	1952	739973
R.H.D., dip left ..	1952	*50959A	Interior light ..	1952	*31251A	Motor to wheelbox ..	1952	740031
Head, Export ..			Knob ..	—	315042	Wheelbox to wheelbox ..	1952	740482
R.H.D., dip left ..	1952	*50959A	Lighting ..	1952	*31251A	End tube ..	1952	740031
L.H.D., dip right ..	1952	*50528M	Knob ..	—	315042	Arm, left hand ..	1952	*737431
						Arm, right hand ..	1952	*737430
						Blade ..	1952	727707

* See Supersession Chart

N.A.D.A. .. North American Dollar Area

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

M.G.

M.G. 1½ litre 1947-53

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter (Saloon)	1947-53	*36028F	LAMPS—continued			SWITCHES—continued		
" (Tourer)	1947-50	*369269	Head, Export			Panel .. .	1947-53	31201B
Battery	1947-52	SG9A	R.H.D., vertical dip			Knob .. .	—	*314683
"	1953	GT9A	Saloon .. .	1949-50	*50458A	Reverse lamp .. .	1947-53	*31077A
Coil, ignition	1947-53	*45020A	R.H.D., dip left			Starting motor .. .	1947-49	*76406E
Control box	1947-49	37057E	Tourer .. .	1949-50	*50821D	Adaptor plate .. .	—	78275A
" "	1950-52	37065E	Saloon .. .	1951	*50995A	Starting motor .. .	1949-53	76423A
" "	Later	*37138A/B	R.H.D., dip left	Later	*50985A	Coupling .. .	—	764428
Distributor	1947-52	40089A/E	" " "	1952	*51078E	Stop lamp, R.H.D. .. .	1947-53	31144A
" (Tourer)	1949-50	40162A/E	L.H.D., dip right	1949	*50775E	" L.H.D. .. .	1947-53	31093A
"	1953	*40058D/F	" " "	1950-51	*A50821D	Tractor (Saloon) .. .	1947-48	*539669
Fuse box	1952-53	033240	" " "	Later	*50775E	" .. .	1950-52	*54014D
Generator	1947-49	22449A	" " "	1951	*51016A/F	" .. .	1953	*54035A
" (Tourer and U.S.A.)	1949	22452A	" " "	1952	50877B	" .. .	1953	54044A/D
"	1950-52	*22250E/F	Head, Export Europe		*51080E	Warning light (ignition)		
" (Tourer)	1950	*22257A	(not France) .. .	1950-51	*B50821D	Saloon .. .	1947-53	*318534
"	Later	22258D	ditto .. .	Later	*50996A	Tourer .. .	1947-50	*38013B
Horn	1947-52	*069399	ditto .. .	1951	*51015A/F	" .. .	1951-52	*318534
Low note	1953	*69011F	ditto .. .	1952	50986A	Windshield wipers		
High note	1953	*69012F	ditto .. .	1952	*51079E	Motor (Saloon) .. .	1947-50	*75074H
Horn relay	1953	*33116B	Reverse, tail and number		53032B	" (Tourer) .. .	1951	*75074J
Junction box	1950-53	78264A	plate .. .	1947-53	52030A	Coupling bar (Tourer) .. .	1949-51	75051D
LAMPS			Side .. .	1947-51	52134B	Bearing, passenger side	1952-53	75144A
Fog	1947-50	*55010A	" (Tourer, U.S.A.) .. .	1949	*52197A	(Tourer) .. .	1949-51	731721
Head, Home		*55029E	Stop tail and number plate	1947-53	*53027B	Wheelbox, with switch	1947-53	*72565A/J
R.H.D., vertical dip	1947-48	*50459A	Mirror .. .	1947-50	*62011A	" less switch .. .	1947-53	*72564A/F
Saloon (L.H.)	1949-50	*50458A	" .. .	1951-52	*062581	Crosshead and rack assy.		
R.H.D., non-dip			Panel light bulb holder .. .	1951-53	062595	Cut to 42" .. .	1947-53	736307
Saloon (R.H.)	1949-50	50753A	Starting motor .. .	1947-53	39007A	Outer casing .. .		
R.H.D., dip left			" .. .	1947-53	*255378	Motor to wheelbox .. .	1947-53	*739832
Tourer (L.H.)	1949-50	*50821D	Suppressor .. .	1950-53	25022A/L	Wheelbox to wheelbox .. .	1947-51	739937
R.H.D., non-dip				1951-53	78105A	End tube .. .	1947-53	740031
Tourer (R.H.)	1949-50	*50798D	SWITCHES			Ferrule, casing retaining	1947-51	738410
R.H.D., dip left			Dipper .. .	1947-48	31226B	Grommet .. .	1947-53	734697
Saloon (L.H.)	1951	*50821D	" .. .	1949-53	*31142A	Arm .. .	1947-53	*735050
R.H.D., non-dip			Cap .. .	—	360026	" left hand .. .	1952-53	*737596
Saloon (R.H.)	1951	*50798D	Foglamp .. .	1947-48	*314722	" (Tourer) .. .	1949-51	*732927
R.H.D., dip left	Later	*50995A	Knob .. .	1949-53	31201B	" right hand .. .	1952-53	*737595
" "	1952	*50985A	Ignition .. .	1947-53	*314683	(Tourer) .. .	1949-51	*732926
" "	1953	*51078E	Lighting .. .	1947-53	31287A	Blade (Saloon) .. .	1947-51	727707
" "	1953		Knob .. .	—	31091B	" (Tourer) .. .	1952-53	*737682
" "	1953			—	315002	" .. .	1949-51	727784

M.G. 'Midget' 1946-55: MGA 1956-59: MGA 1600 1959-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1946-50	*369269	Generator (temporary alternative)	1960	*22704A	LAMPS, Head, Export—continued		
"	1951-53	36153A	" (Twin Cam) .. .	1958-60	*22295A	R.H.D., dip left .. .	1949-51	*50821D
"	1954-55	36181B/D	(Police Car) .. .	1958-60	*22483D	" Later .. .	1951	*50995A
Battery	1946-49	SG9A	Horn .. .	1946-49	069248	" .. .	1952	*51014A
"	1950-55	GT9A	Low note .. .	1950-55	*69011F	" .. .	1952	*50985A
" (MGA)	1956-59	SG9E	" .. .	Later	69046A/F	" .. .	1953	*51078A
" (MGA 1600)	1959-60	STG29E	High note .. .	1950-55	*69012F	" .. .	1954	*51344A
Bulb holder, panel light	1951-55	39007A	Horn push .. .	1955-60	69047A/F	" .. .	1955-59	*51344B
Bulb	1960	554734	" .. .	1954-60	76205A/D	" .. .	1959-60	*51344D/F
"	—	987	Inspection lamp sockets .. .	1951-53	39507A	L.H.D., dip right .. .	1949-51	*50821D
Coil, ignition	1946-54	*45020A	LAMPS			" .. .	1951	*50775D
"	1955	*45053A	30 m.p.h. warning .. .	1946-48	*545145	" .. .	1952	51016E
"	1956-60	*45054	D/M	1949	56040A	" .. .	1952	50877B
Control box	1946-47	*37031A	" .. .	1946-48	*545138	" .. .	1953	*51080A
"	1948-49	37057E	Flasher, rear .. .	1949	*56042A	" .. .	1954-55	*51080A & B
"	1950-52	*37138A/D	" (U.S.A.) .. .	1960	52337A	L.H.D., dip right .. .	1949-51	*51345D/F
"	Later	*37182A/H	Fog (optional) .. .	1949-53	53600D	" .. .	1951	*50821D
"	1956-59	37182J	" .. .	1954-60	*55063B	" .. .	1952	*50996A
"	1959	37183K	" .. .	Later	55128B	" .. .	1952	*51015E
" (Twin Cam)	1960	37182K & L	Bracket .. .	1960	55128E	" .. .	1952	50896D
" (Police Car)	1958-60	*37189J	Head, Home		056117	" .. .	1953	*51079E
Distributor	1946-49	*40048A/F	R.H.D., dip left (L.H.) .. .	1946-47	*50103A	(except France & Sweden) .. .	1954-59	*51346B/E
"	1950-52	40162A/E	" non-dip (R.H.) .. .	1946-47	*50102A	" .. .	1959-60	52872A/B
"	1953	40368D/E	" dip left (L.H.) .. .	1948	*50474A	Head, Export France .. .	1954-55	51411A
"	Later	40367D/E	" non-dip (R.H.) .. .	1948	*50475A	" .. .	1956-59	51411B
"	1955	40488A	" vertical dip .. .	(L.H.)	1949	Head, Export Sweden .. .	1959-60	58273A/B
"	1956-59	40510A	" non-dip (R.H.) .. .	1949	*50458A	Head, Export U.S.A. .. .	1950-51	58451A/B
"	1959-60	40510B/D & F	" dip left (L.H.) .. .	1949-51	*50490A	" .. .	1951	*510821D
" (Twin Cam)	1960	40718A	" non-dip (R.H.) .. .	Later	*50821D	" .. .	1952	*50106E
Flasher unit	1954-56	*35003A	dip left .. .	1949-51	*50798D	" .. .	1952	50877B
"	1957-60	35010A	(L.H. and R.H.) .. .	Later	*50995A	" .. .	1953	51405A
Fuse box	1952-55	033240	" .. .	1952	*51014A	" .. .	1954-60	51467A
"	1956-60	033239	" .. .	1952	*50985A	Head, Export N. America (except U.S.A.) .. .	1958-60	51533D/F
Generator	1946-49	22452A	" .. .	1953	*51078E	Map reading .. .	1949	56040A
"	1950-52	*22257A	" .. .	1953		Cover .. .	1956	574825
"	Later	22265A/B	" .. .	1954-55		" .. .	1957-60	573914
"	1956	22258D/E	" .. .	1956-59	51344A	Lens .. .	1956-60	573915
"	Later	22258E/F	" .. .	Later	51344B	Gasket .. .	1956-60	573916
"	1960	22700D	Head, Export Vertical dip .. .	1949	*50458A	Number plate illumination .. .	1949-60	53093E/J
						dito .. .	Later	53836B

* See Supersession Chart

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

M.G.

M.G. 'Midget' 1946-55: MGA 1956-59: MGA 1600 1959-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS—continued			SWITCHES—continued			Warning lights—continued		
Side	1946-51	52030A	Foglamp	1946-53	*31276A	Main beam bulb holder	1959-60	554734
" " " . .	1952-54	*52197A	"	1955	31248B	Bulb	1959-60	987
Side and flasher (U.S.A.)	1953-54	52134B	Knob	1955	316390	Petrol reserve	1950-53	38054A
" " " . .	1954-55	52134A	Foglamp	1956-60	*31515A	"	1954-55	38101A
" " " . .	1956-59	*52236A	Knob	—	312866	Windshield wipers		
" " " (U.S.A.)	1960	52425D	Headlamp flasher (when fitted)	1959-60	31898A	Motor	1946-53	75051D
Stop tail and number plate	1946-49	*53029A	Horn push and dipper	1946-50	*380191	"	1954-55	75144A
Stop tail	1950	*53197A	Ignition	1954-55	31187D	Coupling bar	1956-59	75297A/D
" "	1951-52	*53220A	Ignition and lighting	1946-53	*34018A	Bearing, passenger side	1959-60	75297E
Stop tail and flasher	1953-55	53178D/E	Lighting	1954-60	*31251A/E	Wheelbox, with switch	1954-55	72659A
Stop tail and flasher	1956-60	53330D	Knob	1954-55	*316136	" less switch	1954-55	72658A
Mirror	1946-50	580435	Map light	1956-60	316154	Crosshead and rack assy, Cut to 46"	1956-60	*72674A/B
" (optional)	1954	*062604	Knob	—	316102	Crosshead and rack assy, Outer casing	1954-55	738499
" (left hand)	1956-60	062590	Panel	1946-51	*31276A	Motor to wheelbox	1954-55	738499
" (right hand)	1956-60	062587	"	1952-53	78294A	Wheelbox to wheelbox	1954-55	738499
Reflex reflector	1953	*57035A	Knob	—	*768896	Outer casing	1956-60	743221
" Later	1953-54	*57052A	Panel	1954-55	*31251A	Motor to wheelbox	1954-55	739832
Relay, flasher	1955	57031A	Knob	—	316137	Wheelbox to wheelbox	1956-60	743664
Relay, foglamp (U.S.A.)	1951-59	33117A/D	Panel	1956-59	78311A	Outer casing	1954-55	*739979
Relay, headlamp flasher (when fitted)	1958-60	33169B	Knob	1960	78346A	End tube	1956-60	743665
Sleeve, Lucas connector	1959-60	33135B	Panel	1956-60	768945	Ferrule, casing retaining	1954-55	740031
14 amp.	1960	54190042	Starting motor	1946	76428A	Grommet, wheelbox	1953	740746
35 amp.	1960	54190043	"	1947-48	*76406E	Arm, left hand	1946-52	740811
Starting motor	1946-49	*255378	"	1949	76428A	" right hand	1953	735111
"	1950-57	25022A/L	Coupling	1950-60	76423A	" left hand	1946-52	*732926
"	1958-59	25022M	Stop lamp	1954-60	764428	" right hand	1953	735110
"	1960	25022N/Q	Windshield wiper	1956-60	*31515A	" left hand	1954-55	*737517
Suppressor (when fitted)	1951-54	78114A	Knob	—	312865	" right hand	1956-57	745084
"	1959	78106A	Warning lights	—	—	" left hand drive	1956-57	745075
SWITCHES			Flasher	1953	*38013B	Later	1957-60	745083
Auxiliary	1954	31248A	"	1954-55	38102A	right hand drive	1957-60	745082
Knob	—	316390	Ignition	1956-60	38132A	Later	1957-60	727784
Dipper	1953-60	31284A/D	Head, Export France	1954-55	51346A	Blade	1946-53	737680
Flasher	1953-60	31250A/H	"	1956-59	51346B/E	"	1954-55	738724
Knob	1953-55	*311132	Head, Export Sweden	1955-59	51467A	Trafficators (Saloon)	1954	54044D
Lever	1956-60	*311097	Head, Export U.S.A.	1958-59	51533D/F	(R.H.D.)	1955-59	54044D/E
Flasher unit (L.H.D. and optional R.H.D.)	1955-56	*35003A	Number plate illumination and reverse	1954-59	53317A	Windshield wipers	1954-55	*75192D
"	1957-59	35010A	Side	1954-59	52139B/D	Motor	1954-55	75296A/D
Fuse box	1954-59	033239	Side and flasher (L.H.D. and optional R.H.D.)	1955	*52162B	"	1956-59	75296E
Generator	1954-56	22258D	ditto	1956-59	52240B	Later	1959	72645D
" Later (Police Car)	1956-59	22258E/F	Stop tail and flasher	1954	*53298A	Windshield wipers	1954-55	*75192D
Distributor	1954-56	*40414A & E	"	1955-59	53377A/B	Motor	1954-55	75296A/D
" Later	1956	40509A/D	Head, Export France	1955-59	51411A	"	1956-59	75296E
"	1957	40510A	"	1959	51411B	Later	1959	75296E
"	1958	40587A	Head, Export Sweden	1955-59	51346B/E	Windshield wiper	1954-59	31248A/B
"	1959	40587B/D	Head, Export Canada	1958-59	51467A	Knob	—	316391
Flasher unit (L.H.D. and optional R.H.D.)	1955-56	*35003A	Number plate illumination and reverse	1954-59	51533D/F	Trafficators (Saloon)	1954	54044D
"	1957-59	35010A	Side	1954-59	52139B/D	(R.H.D.)	1955-59	54044D/E
Fuse box	1954-59	033239	Side and flasher (L.H.D. and optional R.H.D.)	1955	*52162B	Windshield wipers	1954-55	*75192D
Generator	1954-56	22258D	ditto	1956-59	52240B	Motor	1954-55	75296A/D
" Later (Police Car)	1956-59	22258E/F	Stop tail and flasher	1954	*53298A	"	1956-59	75296E
Horn	1954-55	*69011F/J	"	1955-59	53377A/B	Later	1959	743221
"	1956-59	69046A/F	Head, Export Europe (not France)	1954-55	51346A	Windshield wipers	1954-55	*75192D
Gauze and rubber	1957-59	707083	"	1956-59	51346B/E	Motor	1954-55	75296A/D
High note	1954-55	*69012F/J	Head, Export Europe (except France & Sweden)	1954-55	51411A	"	1956-59	75296E
"	1956-59	69047A/F	"	1956-59	51411B	Later	1959	743221
Gauze and rubber	1957-59	707083	Head, Export Sweden	1955-59	51346B/E	Windshield wipers	1954-55	*75192D
Grommet	1957-59	690936	Head, Export U.S.A.	1958-59	51467A	Motor	1954-55	75296A/D
LAMPS			Number plate illumination and reverse	1954-59	51533D/F	"	1956-59	75296E
Fog			Side	1954-59	52139B/D	Later	1959	743221
Head, Home R.H.D., dip left	1954-55	51538A	Side and flasher (L.H.D. and optional R.H.D.)	1955	*52162B	Windshield wipers	1954-55	*75192D
"	1956-59	51538B	ditto	1956-59	52240B	Motor	1954-55	75296A/D
Head, Export R.H.D., dip left	1954-56	51344A	Stop tail and flasher	1954	*53298A	"	1956-59	75296E
" Later	1956-59	51344B	"	1955-59	53377A/B	Later	1959	743221

M.G. 'Magnet' 1954-59

Ammeter	1954-59	*36180A/B	LAMPS—continued			SWITCHES—continued		
Battery	1954-58	GT9A	L.H.D., dip right	1954	*51345A	Panel	1954-59	*31251A/D
"	1959	BT9A	"	1955	*51345B	Knob	1954-56	316137
Coil, ignition	1954	*45020A	Head, Export Europe (not France)	1954-55	*51345D/F	Reverse lamp	1954-59	*31077A
"	1955-56	*45053A/D	"	1956-59	51346A	Solenoid, starting motor	1954-59	*76411K/E
Control box	1954-55	*45054H/K	ditto	1954-55	51346B/E	Solenoid operating	1954-59	31253A/E
"	1956-59	*37138A/D	(except France & Sweden)	1956-59	51411A	Knob	1954	317362
" Later	1959	37182A/H	Later	1959	58272A/B	"	1955-56	317372
Distributor	1958-59	*37189H/J	Head, Export France	1954-55	51411B	Stop lamp	1954-59	317381
" Later	1956	*40414A & E	"	1955-59	51411B	Windshield wiper	1954-59	31248A/B
"	1957	40510A	Head, Export Sweden	1955-59	51346B/E	Knob	—	316391
"	1958	40587A	Head, Export Canada	1958-59	51467A	Trafficators (Saloon)	1954	54044D
"	1959	40587B/D	Number plate illumination and reverse	1954-59	51533D/F	(R.H.D.)	1955-59	54044D/E
Flasher unit (L.H.D. and optional R.H.D.)	1955-56	*35003A	Side	1954-59	52139B/D	Windshield wipers	1954-55	*75192D
"	1957-59	35010A	Side and flasher (L.H.D. and optional R.H.D.)	1955	*52162B	Motor	1954-55	75296A/D
Fuse box	1954-59	033239	ditto	1956-59	52240B	"	1956-59	75296E
Generator	1954-56	22258D	Stop tail and flasher	1954	*53298A	Later	1959	743221
" Later (Police Car)	1956-59	22258E/F	"	1955-59	53377A/B	Windshield wipers	1954-55	*75192D
Horn	1954-55	*69011F/J	Head, Export Europe (not France)	1954-55	51346A	Motor	1954-55	75296A/D
"	1956-59	69046A/F	"	1956-59	51346B/E	"	1956-59	75296E
Gauze and rubber	1957-59	707083	Head, Export Sweden	1955-59	51467A	Windshield wiper	1954-59	31248A/B
High note	1954-55	*69012F/J	Head, Export Canada	1958-59	78105A	Knob	—	316391
"	1956-59	69047A/F	Number plate illumination and reverse	1954-59	78106A	Trafficators (Saloon)	1954-55	54044D
Gauze and rubber	1957-59	707083	Side	1955-59	53377A/B	(R.H.D.)	1955-59	54044D/E
Grommet	1957-59	690936	Side and flasher (L.H.D. and optional R.H.D.)	1955	*52162B	Windshield wipers	1954-55	*75192D
LAMPS			ditto	1956-59	52240B	Motor	1954-55	75296A/D
Fog			Stop tail and flasher	1954	*53298A	"	1956-59	75296E
Head, Home R.H.D., dip left	1954-55	51538A	"	1955-59	53377A/B	Later	1959	743221
"	1956-59	51538B	Head, Export Europe (not France)	1954-55	51346A	Windshield wipers	1954-55	75296A/D
Head, Export R.H.D., dip left	1954-56	51344A	"	1956-59	51346B/E	Motor	1954-55	75296E
" Later	1956-59	51344B	Head, Export Sweden	1955-59	51467A	"	1956-59	743221

* See Supersession Chart

L.H.D. .. . Left hand drive R.H.D. .. . Right hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

M.G.—MORGAN

M.G. 'Magnette' Mk. III 1959–60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Generator	1959	22297A	Reflex reflector	1959-60	57113A	Windshield wipers—cont'd	1959-60	72713A/B
"	1960	22700D	Relay, horn	1959-60	33188A	Wheelbox	1959-60	72707A
" (temporary alternative)	1960	*22704A	Sleeve, Lucas connector	1959-60	54190042	Driver side	1959-60	744254
Horn	1959-60	69046F	14 amp.	1959-60	54190043	Passenger side	1959-60	744133
Low note	1959-60	69047F	35 amp.	1959-60	54190119	Crosshead and rack assy.	1959-60	54710207
High note	1959-60	69047F	Twin	1960	25022M	Outer casing	1959-60	54710208
LAMPS			Starting motor	1959	25022N/Q	Motor to wheelbox	1959-60	740746
Head, Home	1959-60	58251A/F	"	1960	31781A/D	Wheelbox to wheelbox	1959-60	740715
R.H.D., dip left	1959-60	58251A/F	SWITCHES		31793B	End tube	1959-60	740811
Head, Export	1959-60	58251A/F	Dipper	1959-60	31800A	Ferrule, casing retaining	1959-60	744134
R.H.D., dip left	1959-60	58252A/F	Flasher	1959-60	31885A	Grommet, wheelbox	1959-60	74411539
L.H.D., dip right	1959-60	58252A/F	Heater	1959-60	31828A	Arm, left hand drive	1959	54711538
Head, Export Europe (except France & Sweden)	1959-60	58253A/E	Ignition and starting	1959	*31781A/D	" right hand drive	1959	5473907
Head, Export France	1959-60	58254A/E	Lighting	1959-60	31841A/D	Blade	1959	54711283
Head, Export Sweden	1959	58315A/E	Panel light	1959-60	31840A/D	"	1960	54711283
" " Later	1959	58446A/D	Reverse lamp	1959-60	31849A	Windshield wipers (later)		
" " Later	1960	*58545B	Solenoid, starting motor	1959-60	76465A	From Chassis No. 11012		
Head, Export U.S.A.	1959	58255A/B	ditto	Later	76464A	Motor, left hand drive	1960	75357A
"	1960	*58488A/D	ditto (automatic)	1960	76464A	" right hand drive	1960	75358A
Number plate illumination	1959-60	53763A	transmission)	1959	*76466A	Wheelbox		
dito	Later	53814A	Stop lamp	1959-60	31882A	Driver side	1960	72707A
Reverse	1959-60	53787A/D	Windshield wiper	1959-60	31839A/D	Passenger side	1960	72713A/B
Side and flasher			Warning lights			Crosshead and rack assy.	1960	744254
Left hand	1959-60	52432A/E	Ignition, bulb holder	1959-60	863511	Outer casing		
Right hand	1959-60	52433A/E	Main beam, bulb holder	1959-60	554734	Motor to wheelbox	1960	54710207
Left hand (N. America)	1959-60	52434A/E	Bulb	—	987	Wheelbox to wheelbox	1960	54710208
Right hand	1959-60	52435A/E	Windshield wipers			End tube	1960	740746
Stop tail and flasher			Motor, left hand drive	1959-60	75358A	Ferrule, casing retaining	1960	740715
Left hand	1959-60	53792A/E	" right hand drive	1959-60	75357A	Grommet, wheelbox	1960	740811
Right hand	1959-60	53793A/E	Windshield wipers			Arm, left hand drive	1960	54711538
Left hand (N. America)	1959-60	53794A/E	Motor, left hand drive	1959-60	75358A	" right hand drive	1960	54711539
Right hand	1959-60	53795A/E	"			Blade	1960	54711283

MIDLAND VEHICLES Battery Vehicle 1951–55

Horn	1951-55	*069206	LAMPS—continued			Trafficators	1951-55	54028D
Horn push	1951-55	76205A	Tail and number plate	1951-55	*53041B	Windshield wipers		
Junction box	1951-55	78264A	Mirror	1951-55	62515A	Motor	1951-55	*75120A
LAMPS			SWITCHES			Arm	1951-54	*735045
Head	1951-55	50124B	Stop lamp	1951-55	31281B	Blade	1951-54	727802
Side	1951-55	Serviced by Butlers Ltd.	Spring	—	315543			

MORGAN 3-wheeler 1948–52

Ammeter	1948-52	*369047	Inspection lamp sockets	1948-52	*39511A	Panel light bulb holder	1948-52	39007A
Battery	1948-52	SLG11E	LAMPS			Starting motor	1948-50	*250498
Coil, ignition	1948-52	*45016A	Dash	1948-50	A56031A	"	1951-52	25043A
Control box	1948-52	*332179	Head, Home	1952	*A56030A	SWITCHES		
Distributor	1948-52	40286A	Dipper	1948-52		Dipper	1948-52	*359831
Generator	1948-52	22005B	Ignition and lighting	1948-52		Ignition and lighting	1948-52	*344694
Horn	1948-52	069225	Non-dip (R.H.)	1948-52		Starting motor	1948-52	*764150
Horn push	1948-52	*76213A	Tail and number plate	1948-52	*A53007B	Warning light (ignition)	1948-52	*38012B

MORGAN 'Plus Four' 1946–60

Ammeter	1946-50	*36036A	Distributor—continued ('Vanguard' Eng.)	1959-60	40548D	LAMPS—continued	1955-60	52337A
Battery	1951-60	36023F	Flasher unit (Export), Coupé & Special Orders	1955-57	*35003A	Flasher, front and rear	1955-60	53600B
(2-seater and Coupé)	1950-51	SLG11E	ditto	1958-59	35010A	Flasher, rear (U.S.A.)	1960	
(2-seater)	1952-55	SG9E	ditto	1960	35020A	Fog (U.S.A. and Special Orders)	1946-51	*55063B
(2-seater Tourer)	1956-58	STXW9E	ditto	1951-53	37134A	ditto	1952-55	*55049B
(4-seater)	1946-55	SLG11A	"	1953-59	033240	ditto	1955-60	55128B
"	1956-58	SLTW11A	Later	1960	033285	Head, Home		
"	1959	SLG11A	Generator	1946-48	*228137	R.H.D., non-dip	1946-47	*50102A
"	1960	STGK9E	"	1949-50	22449A	"	1948-50	50753A
Bulb holder, panel light	1946-60	39007A	"	1951-53	*22250E/F	"	1951	*50798D
Bulb	—	987	"	1953-55	22258D	dip left	1952-53	*50995A
Coil, ignition	1946-57	*45012A/D	"	1956-60	22258E/H	"	1953	*51353A
Control box	1946-48	*332202	Horn	1946-52	069344	"	1954	51344A
"	1949-50	37057E	"	1953-55	*69012F/J	"	1955	51336A
"	1951-53	*37048E	Horn push	1956-60	69047D/F	"	1956-60	51336B/J
"	Later	*37138A/D	(2 and 4-seater)	1946-54	*76208A	Head, Export		
"	1953-55	37182H	(Coupé)	1946-54	*76211A	Vertical dip	1946-47	*50291A
"	1956-59	37182H	Horn push	1955-60	*76211B/D	R.H.D., dip left	1949-50	*50458A
Distributor	1946-47	406345	Inspection lamp sockets	1946-60	39507A	R.H.D., dip left	1951	*50821D
"	1948-50	*409639	Junction box	1946-50	78266A	"	1952-53	*50995A
"	1951-54	*40201A/B	LAMPS	1951-55	78264A	"	1953	*51353A
" (TR2/3 Engine)	1955-57	*40403D	Flasher, front (Export, Coupé and Special Orders)	1955-58	*52246A	"	1954-55	*51336A
"	1958-59	*40480A	(U.S.A.)	1960	52345A	"	1955-60	51336B/J
"	1960	40698A	L.H.D., dip right	—		"	1951	*A50821D
"	1960	40698B	(Export, Coupé and Special Orders)	1955-58		"	1952	50877B
"	Later	40698B	(U.S.A.)	1960		"	1953	*50775E
" ("Vanguard" Eng.)	1956-57	*40365D				"	1953-54	*51355A
"	1958	40559A						

* See Supersession Chart

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

continued



Equipment Specification

MORGAN
MORGAN 'Plus Four' 1946-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS, Head, Export— continued			SWITCHES—continued			Windshield wipers—cont'd		
L.H.D., dip right ..	1954	*51337A	Solenoid operating ..	1951-58	31253A/B	Outer casing ..		
" " "	1955	*51337B	Knob ..	1959-60	31377A	Motor to wheelbox ..	1951-52	*739855
" " "	1956-59	*51337D/E	Starting motor ..	1951-54	*317364	(Coupé) ..	1953-55	739870
" " "	1959-60	*51337F/K	Stop lamp ..	1946-50	317362	(2-seater) ..	1954	739868
Head, Export Europe (not France) ..	1951-53	*50996A	Spring ..	1946-50	76428A	(2 and 4-seater) ..	1955	739868
ditto .. Later	1953-54	*51354A	Trafficator ..	1946-48	31281B	(All Models) ..	1956-60	739868
ditto ..	1954-55	51339A	Windshield wiper ..	1949-60	*31379A	Wheelbox to wheelbox ..	1951-55	*739956
ditto .. Later	1956-59	51339B/H	Knob ..	1951-57	31248A/B	(Coupé) ..	1954	*739979
ditto .. Later	1959-60	58230A/B	" ..	1951-54	*316375	(2-seater) ..	1955	*739979
Head, Export U.S.A. ..	1951-53	*50775E	" ..	1955-57	315042	(2 and 4-seater) ..	1956-60	*739979
" " "	1953	*51355A	" ..	1958-60	316393	(All Models) ..	1951-60	740031
Number plate illumination Side ..	1954-60	51509A/E	Trafficators (when fitted) ..	1946-55	*54039A	End tube ..	1946-55	729313
" " "	1955-60	53093E/J	Warning lights ..	1956-60	54044E	Grommet (Coupé) ..	1946-55	729313
Stop tail and number plate ..	1946-52	52030A	Ignition ..	1946-50	*38013B	(Housing or wheelbox) ..	1946-50	729313
" " "	1952-60	*52182B	" ..	1951-57	38059A	(Scuttle) ..	1946-50	729378
Stop tail and number plate ..	1946-50	*53031D	" ..	1958-60	38145A	Arm ..		
" " "	1951-54	53178D	Main beam ..	1951-52	38052B	L.H.D. and R.H.D. ..	1946-50	735099
Stop tail ..	1955-58	53178E/H	" ..	1953-57	38059A	(Coupé) ..	1951-55	737678
Starting motor ..	1946-48	*250231	" ..	1958-60	38150A	L.H.D. (Coupé) ..	1951-55	737651
" " ..	1949-50	25017A	Windshield wipers ..	1946-50	*75066A	L.H. (2-seater) ..	1946-53	735103
" " ..	1951-54	25526A/J	Motor (Coupé) ..	1951-52	*75074J	R.H. ..	1946-53	735102
" " .. (TR2/3 Eng.)	1955-60	25541H	" ..	1953-55	75144A	L.H. (4-seater) ..	1946-50	735111
" " .. ('Vanguard' Eng.)	1959-60	25550A	" .. (2 and 4-seater)	1946-50	*75059A	" ..	1951-52	735103
SWITCHES			" .. (4-seater)	1951-54	*733147	R.H. ..	1946-50	735110
Dipper ..	1949-59	31284A/D	" .. (2-seater)	1951-53	*733147	" ..	1951-52	735102
Fan ..	1960	31800A	1954	75150A	" ..	1953	735107	
Knob ..	1955	31248B	" .. (2 and 4-seater)	1955	75150A	L.H.D. (2 and 4-seater) ..	1946-55	737814
Flasher (when fitted) ..	1955-60	31476A/B	" .. (All Models) ..	1956-60	75150A/B	R.H.D. ..	1954-55	737815
Foglamp (when fitted) ..	1951-57	31248A/B	Shaft, short (Coupé) ..	1946-50	737243	L.H.D. ..		
Knob ..	1958-60	31434B	Coupling (Coupé) ..	1946-50	729036/S	(Coupé and 4-seater) ..	1956	742159
Knob ..	1951-54	*316374	Coupling bar ..	1946-50	727293	R.H.D. ..		
" ..	1955	315042	(2 and 4-seater) ..	1951-54	732968	(Coupé and 4-seater) ..	1956	742158
" ..	1956-57	*316374	(4-seater) ..	1951-53	732968	L.H.D. and R.H.D. ..		
Ignition and lighting ..	1946-50	*34027B	(2-seater) ..	1951-53	732968	(Coupé and 4-seater) ..	1957-60	742291
Horn ..	1951-60	31270A/B	Wheelbox (Coupé) ..	1951-54	*72548A/K	L.H.D. ..		
Knob ..	1951-54	*316425	" ..	1955	72662A	Blade ..	1946-50	727784
Panel ..	1955-60	316276	" ..	1954	72629A/D	(Coupé) ..	1946-50	727784
Panel ..	1946-50	31201B	(2-seater) ..	1955	72629A/D	" .. (and 4-seater) ..	1951-55	*737653
" ..	1951-57	31248A/B	(2 and 4-seater) ..	1955	72629A/D	(2-seater) ..	1956-60	737680
Knob ..	1958-60	*31557A	(All Models) ..	1956-60	72629A/D	(4-seater) ..	1946-53	727809
Knob ..	1946-50	314026	Crosshead and rack assy. ..	1951-55	736177	R.H.D. ..	1946-52	727809
" ..	1951-54	*316373	(Coupé) ..	1954	736307	(2-seater Tourer) ..	1953	727784
" ..	1955-57	315042	(2-seater) ..	1955	736307	L.H.D. and R.H.D. ..		
Solenoid, starting motor	1951-59	*76411D/E	(2 and 4-seater) ..	1956-60	736307	(2-seater Tourer) ..	1954-55	737811
" " "	1960	*76465B	(All Models) ..	1956-60	736307	(2 and 4-seater) ..	1956-60	737811

MORGAN 'Four-Four' (Standard Engine) 1949-50

Ammeter ..	1949-50	*36036A	LAMPS—continued			Windshield wipers		
Battery ..	1949-50	SLTW11A	Head, Home			Motor (Coupé) ..	1949-50	*75066A
(4-seater) ..	1949-50	SLTW11E	Non-dip ..	1949	*50490A	" .. (2 and 4-seater) ..	1949	*75059A
(2-seater and Coupé) ..	1949-50	402032	1950	50753A	" ..	1950	732480	
Coil, ignition ..	1949	*45012A/D	Head, Export			Clutch housing ..	1949-50	737412
Control box ..	1950	37057D	Vertical dip ..	1949-50	*50458A	Coupling bar ..	1949	*725151
Distributor ..	1949-50	*409639	Side ..	1949-50	52030A	(2 and 4-seater) ..	1950	727293
Generator ..	1949	*228139	Stop tail ..	1949-50	*53031B	R.H. ..	1949-50	735111
Horn" ..	1950	22449A	Starting motor ..	1949-50	25017A	" ..	1949-50	735110
Horn push ..	1949-50	069344	SWITCHES			Bearing ..	1950	732583
(Coupé) ..	1949-50	76205B	Dipper ..	1949-50	*360007	Arm ..		
(2 and 4-seater) ..	1949-50	76218A	Ignition and lighting ..	1949-50	34055A	(Coupé) ..	1949-50	735099
Inspection lamp sockets ..	1950	39507A/B	Panel ..	1949	*314014	L.H. (2-seater) ..	1949-50	735103
Junction box ..	1949	*770017	" ..	1950	031218	R.H. ..	1949-50	735102
" ..	1950	78266A	Starting motor ..	1949	*764251	L.H. (4-seater) ..	1949-50	735111
LAMPS			Stop lamp ..	1949-50	76428A	R.H. ..	1949-50	735110
Fog or pass ..	1949	*55049A	Trafficator ..	1949	*315725	Blade ..	1949-50	727784
" " "	1950	*55063A	Trafficators (Coupé) ..	1949-50	31190A	(Coupé) ..	1949-50	727804
			Warning light (ignition) ..	1949-50	*38013B	" .. (2 and 4-seater) ..	1949	727809

MORGAN 'Four-Four' Series II (Ford Engine) 1956-60

Ammeter ..	1956-60	36226A	Flasher relay ..	1956-58	33117D	LAMPS		
Battery ..	1956-58	GLT7A	Fuse box ..	1956-60	033240	Flasher, front (Coupé, Export & Special Orders) ..	1956-58	*52246A
" ..	1959-60	BT7A	Generator ..	1956-60	22258E/H	ditto ..	1959-60	*52337A
Coil, ignition ..	1956-60	*45053D/K	Horn ..	1956-57	*69012J	ditto (U.S.A.) ..	1960	*52345A
Control box ..	1956-60	37182H	" ..	1958-60	69047F	Flasher, rear (U.S.A.) ..	1959-60	*52337A
Distributor ..	1956-60	*40402H/N & Q/T	Horn push ..	1956-60	*76211B/D	Fog" (L.H.D. and optional R.H.D.) ..	1960	53600B
Flasher unit (Coupé, Export & Special Orders)	1956-57	*35003A	Inspection lamp sockets ..	1956-60	39507A		1956-60	55128B
ditto ..	1958-60	35010A	Junction box (L.H.D.) ..	1956-57	78264A			

* See Supersession Chart
L.H.D. .. Left hand drive

† No longer available—refer to Wiper Conversion Set Section
R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

MORGAN—MORRIS

MORGAN 'Four-Four' Series II (Ford Engine) 1956–60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS— <i>continued</i>			SWITCHES	1956-60	31284A/D	Trafficators (when fitted)	1956-60	54044E
Head, Home R.H.D., dip left	1956-60	51336B/J	Dipper	1956-60	31476A/B	Warning lights	1956-60	38145A
Head, Export R.H.D., dip left	1956-60	51336B/J	Flasher (when fitted)	1956-60	31248B	Ignition	1956-60	38150A
L.H.D., dip right	1956-60	*51337D/E & F/K	Foglamp (when fitted)	1956-57	*316374	Main beam	1956-60	
Head, Export Europe (not France)	1956-58	51339E	Knob	—	313619	Windshield wipers		
ditto	1959-60	58230A	Foglamp (when fitted)	1958-60	31434B	Motor	1956-60	75150A/B
Head, Export France	1956-60	*51590A/H	Knob	—	316276	Wheelbox	1956-60	72629A/D
Number plate illumination	1956-60	53093H	Ignition and lighting	1956-60	31270B	Crosshead and rack assy.		
Side	1956-60	*52182D	Panel	1956-57	31248B	Cut to 44 1/2"	1956-60	736307
Stop tail	1956-58	53178F	Knob	—	315042	Outer casing	1956-60	
ditto	1959-60	53330D	Solenoid, starting motor	1956-60	*76411E	Motor to wheelbox	1956-57	739868
Starting motor	1956-58	25022F/L	ditto, Later	1960	*76445A	Wheelbox to wheelbox	1958-60	*739979
" "	1959	25022M	Solenoid operating	1956-60	31377A	End tube	1956-60	740031
" "	1960	25022N/Q	Trafficator (when fitted)	1956-60	*31306A	Arm, left hand drive	1956-57	742156
			Windshield wiper	1956-60	*31557A	" right hand drive	1956	742157
			Knob	—	316393	" left hand drive and	1957-60	742295
						right hand drive	1956-60	
						Blade	1956-60	737811

MORRIS 8 h.p. 1946–48

Battery	1946-48	SG9E	LAMPS— <i>continued</i>			Windshield wipers		
Coil, ignition	1946-48	*45016A	Stop tail and number plate	1946-48	*53060B	Motor	1946-48	†75065A
Control box	1946	*37033A	Mirror	1946-48	*580574	Clutch housing	1946-48	735471
"	1947-48	37081H	Starting motor	1946-48	*250405	Bracket, with shaft and	1946-48	734747
Distributor	1946	*406335	SWITCHES	1946-48	*360020	coupling	1946-48	737243
"	Later	1946-48	Dipper	1946-48	*344484	Shaft, short	1946-48	729036/S
Generator	1946-48	22448B	Ignition and lighting	1946-48	*314146	Coupling	1946-48	
Horn	1946-48	069343	Panel	1946-48	*764401	Link	1946-48	737285
LAMPS			Starting motor	1946-48	31281B	Grommet, scuttle	1946-48	729378
Head, Home R.H.D., dip left (L.H.)	1946-48	*50089A	Stop lamp	1946-48	*531571A	Arm (Saloon)	1946-48	*735048
non-dip (R.H.)	1946-48	*50088A	Spring	—	*353932	Blade (Saloon)	1946-48	727802
Head, Export			Trafficators (Saloon)	1946-48	*38012B			
Vertical dip	1948	50426A	Warning light (ignition)	1946-48				

MORRIS 10 h.p. 1946–48

Ammeter	1946	*364536	LAMPS, Head, Home— <i>continued</i>			Trafficators	1946-48	*539671
"	1947-48	*364576	R.H.D., non-dip (R.H.)	1946-48	*50453A	Warning light (ignition)	1946-48	*38013B
Battery	1946-48	SG9A	Later	1946-48	*524982	Windshield wipers		
Coil, ignition	1946-48	*45020A	Side	1946-47	*52110A	Motor	1946-48	†75066A
Control box	1946	*37031A	1948	1948	*524753	Clutch housing	1946-48	735471
"	1947-48	37057E	Stop tail and number plate	1946-47	*53060B	Bracket, with shaft and	1946-48	734453
Distributor	1946	*405569	Mirror	1946-48	*620708	coupling	1946-48	737243
"	Later	1946-47	*40058A	Starting motor	*255378	Shaft, short	1946-48	729036/S
Generator	1946-48	22449A	Dipper	1946-48	31284A	Coupling	1946-48	
Horn	1946-48	069344	Ignition and lighting	1946	*344472	Link, primary	1946-48	734457
Junction box	1946-48	78264A	Panel	1947-48	*34041B	secondary	1946-48	734455
LAMPS			1946-48	*314090	Grommet, housing	1946-48	734458	
Head, Home R.H.D., dip left (L.H.)	1946	*50454A	Stop lamp	1946-48	*315739	Scuttle	1946-48	729378
non-dip (R.H.)	1946	*50455A	Spring	—	*315714	Arm	1946-48	*735048
" dip left (L.H.)	Later	*50452A				Blade	1946-48	727802

MORRIS 'Minor' 2-door Saloon and Tourer 1948–56: 4-door Saloon 1951–56: 'Traveller' 1954–56

Battery	1948-56	GT7A	LAMPS			LAMPS, Head, Export— <i>continued</i>		
Coil, ignition	1948-54	*45020A/B	Head, Home			L.H.D., dip right	1948-50	A50529B
"	1955-56	*45053A/D	R.H.D., dip left (L.H.)	1948-50	50529B	" " (2-door)	1951	A50529B
Control box	1948-52	37065E	" dip left (L.H., 2-door)	1948-50	*50537B	" " (4-door)	1951	*A50445K
"	Later	*37138B/D	1951	50529B	" " Later	1951-53	*50804D	
Distributor	1948-52	37182A/H	" non-dip (R.H., 2-door)	1951	*50537B	" " "	1953-54	*51338A
"	Later	40251F	" dip left (L.H., 4-door)	1951	*50445K	Head, Export Europe	1954-56	*51337A & D/E
"	1953-56	*40299E & L	" non-dip (R.H., 4-door)	1951	*50446K	(not France)	1948-50	B50529B
"	Later	40494A	" dip left (L.H., 4-door)	1952	50941A	dip (2-door)	1951	B50529B
"	1953	40333A	" non-dip (R.H., 4-door)	1953	*51335A	dip (4-door)	1951	*B50445K
Flasher unit (L.H.D.)	1954-56	*35003A	R.H.D., dip left (L.H. and R.H.)	1951-52	51336A	dip .. Later	1951-52	*50963A
Flasher relay (L.H.D.)	1954-56	33117A	1952	51336B/J	dip ..	1952	*51340A	
Fuse box	1952-56	033239	1953	51336B/J	1953-56	Later	1953-56	51339A & B/H
Generator	1948-49	*22250A	1953	50941A	1953	1953-56	51339A & B/H	
"	Later	*22250E/F	1953-54	*51335A	1954	1954-56		
"	1949-52	22258D	1954	51336A	1954			
"	1952-55	22258E	1955-56	51336B/J	1955			
Horn	1948-56	*069399	Head, Export	1948-50	50529B	Head, Export France	1950	50822B
Low note (U.S.A. and Canada)	1950-55	*69011F/J	" dip left	1950	50529B	dip (2-door)	1951	50822B
"	1956	69046A	" Later	1951-52	*50954A	dip .. Later	1951-52	*50790E
High note (U.S.A. and Canada)	1950-55	*69012F/J	" "	1952	50941A	dip ..	1952	*50962A
"	1956	69047A	" "	1953	*51335A	1953-56		
			" "	1953-54	51336A	1953-56		
			" "	1955-56	51336B/J	1954-56		
						Head, Export U.S.A. and Canada	1948-49	A50529B
						dip ..	1950-52	*50804M
						dip ..	1953-56	51343A & B/E
						Number plate illumination	1950-56	53101E/J
						dip (4-door)	1951	53093E
						dip ('Traveller')	1954-56	53093E

* See Supersession Chart
L.H.D. ... Left hand drive

+ No longer available—refer to Wiper Conversion Set Section
R.H.D. ... Right hand drive

L.H. ... Left hand
R.H. ... Right hand

continued



Equipment Specification

MORRIS

MORRIS 'Minor' 2-door Saloon and Tourer 1948-56: 4-door Saloon 1951-56: 'Traveller' 1954-56—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS—continued			SWITCHES—continued			Windshield wipers		
Side ..	1950-56	52139B/F	Panel ..	1948-56	*31140A	Motor ..	1948-50	*75088L
Side/Flasher (L.H.D.) ..	1953-55	*52162A/B	Starting motor ..	1948-50	*764401	" ..	1951-56	75151A
	1956	52240D	Coupling ..	1951-56	76423A	Wheelbox ..	1948-52	72590A/K
Stop tail ('Traveller') ..	1954-56	53178D/F	Stop lamp ..	1954-56	31082B/E	Crosshead and rack assy.	1953-56	72642A/E
" (Export) ..	1949	*53102D	Trafficator (2-door) ..	1948-53	31190A	Cut to 31" ..	1948-50	738006
	1950	*53102D	" (4-door) ..	1951-52	031046	Outer casing ..	1951-56	738764
Stop tail and number plate ..	1948-49	*53029A	Knob ..	Later	31250A	Motor to wheelbox ..	1948-56	740482
ditto ..	1951	53200A	Trafficator ..	1952-53	31190A	Wheelbox to wheelbox ..	1951-56	739973
ditto ..	1952-53	*53197A	" (2-door,	1952-53	*311132	ditto (Export) ..	1948-50	739973
Stop tail and flasher ..	1953-54	53288A	Tourer &	1954	31190A	End tube ..	1948-56	740031
Mirror ..	1955-56	53330A/D	'Traveller')	1955-56	31190A	Arm, left hand (2-door)	1948-54	737445
" ..	1951	062556	(4-door) ..	1956	031296	ditto (4-door) ..	1950-54	*737431
" ..	1952-56	062592	Windshield wiper ..	1948-54	*31271A	ditto ('Traveller')	1955-56	*737431
Reflex reflector ('Traveller') ..	1954-56	57052A/B	Knob ..	—	*315094	ditto (Saloon and	1956	742273
Panel light bulb holder ..	1948-55	39015A	Windshield wiper ..	1955-56	*31515A	Tourer) ..	1956	742273
Starting motor ..	1948-56	25022A/F	Knob ..	—	316388	Arm, right hand (2-door)	1948-54	737444
Suppressor ..	1951-53	78105A	Trafficators ..	1948-49	*54017B	ditto (4-door) ..	1950-54	*737430
" ..	1954-55	78106A	(2-door) ..	1950-51	*54040A	ditto ..	1955	*737430
SWITCHES			" ..	1951-52	*54048A	ditto ('Traveller')	1955-56	737444
Dipper ..	1948-56	31284A	" (R.H.D.) ..	1952-53	*54049A	ditto (Saloon and	1956	742272
Flasher ..	1954-55	31250A/F	(4-door) ..	1951-52	*54049A	Tourer) ..	1956	742272
Knob ..	—	*311132	" (R.H.D.) ..	1953	54041A	Blade (2-door) ..	1948-54	727802
Flasher ..	1956	031296	("Traveller" and 4-door)	1954-56	54044D	" (4-door) ..	1950-54	727707
Ignition ..	1948-56	31287A	(R.H.D.) ..	1956	54044D	("Saloon and	1955-56	727707
Lighting ..	1948-55	31126B	Warning light (ignition) ..	1948-56	*38013B	Tourer) ..	1955-56	727802
Knob ..	1956	*31251A				" ('Traveller') ..	1955-56	727802
	—	*316117						

MORRIS 'Minor 1000' Series III and 'Traveller' 1957-60

Battery ..	1957	GT7A	LAMPS—continued	Head, Export France ..	1957-59	51739B	SWITCHES—continued	Horn push and indicator	1957	31633B
	1958-60	BT7A		" " Later	1959-60	58271A	" " " flasher ..	1958-59	31756D/F	
Coil, ignition ..	1957-60	*45053			1960	58231B	" " " trafficator	1958-59	31755D/F	
Control box ..	1957-59	37182H & J		Head, Export Sweden ..	1959-60	58450A	Ignition ..	1957-60	31287B/F	
	1960	37183K & L			1960	58456B	Lighting ..	1957-60	*31251A/E	
Distributor ..				Head, Export U.S.A. ..	1957-59	51741B	Knob ..	—	316154	
High compression ..	1957-58	40561B			1960	*58497A	Panel ..	1957-60	31140B	
" "	Later	1958-59	40561D/H & K	Number plate illumination ..	1957-60	53101H/J	Starting motor ..	1957-60	76423A	
" "	1960	40561J & L		ditto (Denmark) ..	1960	53836A/B	Coupling ..	—	764428	
Low compression ..	1957-58	40569A		ditto ('Traveller', Denmark) ..	1960	53837A/B	Boot, rubber ..	—	860556	
" "	Later	1958-59	40569B/F	Side ..	1957-60	52139E	Stop lamp ..	1957-60	31082E/J	
" "	1960	40569J		Side flasher ..			Trafficator ..	1960	31924A	
Flasher unit (L.H.D.) ..	1957-60	35010A	Left hand drive ..	1957-60	52240B	Windshield wiper ..	1957-60	*31515A		
Flasher relay (L.H.D.) ..	1957-60	33117D	(Switzerland) ..	1960	52338A	Knob ..	—	312865		
Fuse box ..	1957-60	033239	Stop tail ('Traveller') ..	1957-60	53178F/H	Trafficators ..				
Generator ..	1957-59	22258E/H	Left hand ..	1957-60		Right hand drive	1957-60	*54049E		
" "	(temporary alternative)	1960	22700D	Right hand ..	1957-60	53576A	(2-door and 'Traveller')	1957-60	54044E	
Horn ..			Stop tail and reflex ..	1957-60	53577A	Warning lights (bulb holders)				
Low note ..	1957-60	69046E/F	Left hand ..	1957-60	53577A	Ignition and oil pressure	1959-60	863511		
High note (N. America and optional) ..	1957-60	69047E/F	Right hand ..	1957-60	53576A	Main beam ..	1959-60	554734		
LAMPS			Stop tail and flasher ..	1957-60	53577A	Bulb ..	—	987		
Head, Home R.H.D., dip left ..	1957-60	51736B/D	Left hand (L.H.D.) ..	1957-60	53577A	Windshield wipers ..				
	1960	51336B/J	Right hand (L.H.D.) ..	1957-60	53576A	Motor ..	1957	75213A		
Head, Export R.H.D., dip left ..	1957-60	51736B/D	Reflector ..	1957-58	57052B	" ..	1958-59	75295B/D		
	1960	51336J	(Traveller') ..	1959-60	57124A	Wheelbox ..	1957-60	75295E		
L.H.D., dip right ..	1957-60	51737B	(Switzerland) ..	1960	57098A	Crosshead and rack assy.	1957-60	72693A/B		
	1960	*51337F/K	Mirror ..	1957	062592	Outer casing ..	1957-60	743251		
Head, Export Europe (not France) ..	1957-59	51738B/D	" ..	1958-59	062636A/B	Motor to wheelbox ..	1957-60	744546		
(except France & Sweden) ..	1959-60	58270A	Sleeve, Lucar connector ..	1960	54190042	Wheelbox to wheelbox ..	1957-60	744547		
ditto ..	"	58230A/E	14 amp. ..	1960	54190043	End tube ..	1957-60	740746		
	Later	1960	35 amp. ..	1960	51336B/J	Ferrule, casing retaining	1957-60	740715		
			Starting motor ..	1957-59	78106A	Grommet, wheelbox ..	1957-60	740811		
				1960		Arm, left hand ..	1957-60	745075		
			Suppressor (when fitted) ..	1958-60		" right hand ..	1957-60	745084		
			Dipper ..	1957-60	31284A/D	Blade ..	1957-60	738734		
			Flasher ..	(N. America) ..	31760A					
				1958	31883A					
				1959	31883A					
				Later	31883A					

MORRIS 'Mini-minor' 850 1959-60: Quarter Ton 'Minivan' 1960

Battery ..	1959-60	GLT7A	Horn ..	1959-60	70141B	LAMPS—continued	Side and flasher (Export)	1959-60	52338A/D
" (cold climates) ..	1959	BLT7A	LAMPS				Stop tail and flasher ..		
(Van)	1960	GLT9A	Flasher, front (Home) ..	1959-60	52337A		Left hand ..	1959-60	53797B
Bulb holder, panel light and parcel shelf ..	1959-60	554734	Head, Home R.H.D., dip left ..	1959-60	58388A/E		Right hand ..	1959-60	53798B
Bulb ..	—	987	Head, Export R.H.D., dip left ..	1959-60	58388A/E		Left hand (N. America) ..	1959-60	53799B
Coil, ignition ..	1959-60	*45113D	R.H.D., dip right ..	1959-60	51336B/J		Right hand ..	1959-60	53800B
Control box ..	1959	37290A/B	L.H.D., dip right ..	1959-60	*51337F/K		(Van) ..	1960	53833A
" ..	1960	37290D	Head, Export Europe (except France & Sweden) ..	1959-60	58230A/E		(U.S.A.) ..	1960	53846A
Distributor ..	1959-60	40648A/D & F	Head, Export France ..	1959-60	58231A/E		Sleeve, Lucar connector ..		
" (low grade fuel, special orders) ..	1959-60	40648E & H	Head, Export Sweden ..	1959-60	58456B		14 amp. ..	1959-60	54190042
Flasher unit ..	1959-60	35020A	Head, Export U.S.A. ..	1959-60	58456B		25 amp. ..	1959-60	54190043
Fuse box ..	1959-60	033283	Number plate illumination ..	1959-60	*58497B		14 amp. twin ..	1959-60	54190119
Generator ..	1959-60	22700D	ditto ..	Later	53101H/J		Starting motor ..	1959	
" (temporary alternative) ..	1959-60	*22704A	ditto (De Luxe) ..	1959-60	53093H/J		" ..	1960	*25075A
			ditto ..	Later	58386A/B		" .. (alternative) ..	1960	*25071A/B

* See Supersession Chart

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)

continued

A105



Equipment Specification

MORRIS

MORRIS 'Mini-minor' 850 1959-60: Quarter Ton 'Minivan' 1960—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES								
Dipper	1959-60	31800A	SWITCHES—continued			Windshield wipers—cont'd		
Flasher	1959-60	31945B	Windshield wiper	1959-60	31780B	Outer casing	1959-60	54711059
Heater	1959-60	78339A				Motor to wheelbox	1959-60	54711060
Knob	Later	78384A	Windshield wipers			Wheelbox to wheelbox	1959-60	740746
Ignition	—	54331278	Motor	1959	75315D	End tube	1959-60	54711556
Lighting	1959-60	31899A	"	1960	75385A	Arm, left hand drive	1959-60	54712031
Starting motor	1959-60	31788B	"	Later	75385B	ditto	Later	1960
Stop lamp	1959-60	76438B	Wheelbox	1959-60	72728A	Arm, right hand drive	1959-60	54711555
		31802D	Crosshead and rack assy.	1959-60	743209	ditto	Later	1960
						Blade	1959-60	54712030
						"	Later	1960
								54711613

MORRIS 'Cowley' Van and Pick-up Truck 1950-53

Ammeter	1950-52	*36072D	LAMPS, Head, Export— continued			Starting motor	1950-53	25021A/F
"	Later	36149A	R.H.D., dip left	1950-51	*50445K	Suppressor	1950-53	78105A
Battery	1950-53	GT9A	"	1951-52	*50954A	SWITCHES		
Coil, ignition	1951-53	*4520A/B	"	1952	50941A	Dipper	1950-53	31284A
Control box	1950-52	37065E	"	1953	*51335A	Ignition	1950-53	31287A
"	Later	37138D	"	1953	51336A	Lighting	1950-53	31126B
Distributor	1950	40152B	L.H.D., dip right, pilot	1950-51	*A50793B	Knob	—	54711617
"	1951-53	*40237A/B	type	1950-51	*A50445K	Panel	1950-53	31271A
Fuse box	1950-52	*38521I	L.H.D., dip right	1950-51	*50804D	Knob	Later	1953
"	Later	033239	"	1951-52	*51338A	Panel	—	315062
Generator	1950-52	*22250E/F	"	1953	*51337A	Starting motor	1950-53	78292A
"	1952-53	22258D	"	1953	*B50793B	Coupling	—	768890
Horn	1950-52	*069399	Head, Export Europe (not France), pilot type	1950-51	*B50445K	Windshield wiper	1950-53	*31199A
LAMPS			Head, Export Europe (not France)	1950-51	*B50963A	Trafficators	1950	54036A
Head, Home			ditto	1951-52	*51340A	Warning lights	—	
R.H.D., dip left, pilot			ditto	1953	51339A	Ignition	1950-53	*38013B
type (L.H.)	1950-51	*50793B	Head, Export France, pilot	1950-51	50679E	Main beam	1950-53	*38087A
R.H.D., non-dip, pilot			type	1950-51	*50790E	Windshield wipers	Motor	1950
type (R.H.)	1950-51	*50362F	Head, Export France	1951-52	*50962A	"	1951	*75084K
R.H.D., dip left (L.H.)	1950-51	*50445K	"	1953	*51341A	"	1952-53	75143A
R.H.D., non-dip (R.H.)	1950-51	*50446K	"	1953	51342A	Wheelbox	1950-52	72590A/K
R.H.D., dip left			"	1953	51343A	Crosshead and rack assy.	Later	1952-53
(L.H. and R.H.)	Later	*50954A	Head, Export U.S.A.	1953	53101E	Cut to 39 $\frac{1}{2}$ "	1950-53	72629A/D
"	"	50941A	Number plate illumination	1950-53	56022D	Outer casing	—	736307
"	"	*51335A	Roof	1950-53	56022D	Motor to wheelbox	1950-53	740482
Head, Export		51336A	Side	1950-53	52139B	Wheelbox to wheelbox	1950-53	739972
R.H.D., dip left, pilot			Stop tail	1950-53	53178D	End tube	1950-53	740031
type	1950-51	*50793B	Panel light bulb holder	1950-53	39015A	Arm, left hand	1950-53	737496
						" right hand	1950-53	737495
						Blade	1950-53	727803

MORRIS 'Cowley' Saloon 1955-59

Ammeter	1955-56	36182B	LAMPS—continued			SWITCHES—continued		
"	1957-59	36234A	Head, Export Europe (not France)	1955	51339A	Heater or blower		
Battery	1955-56	GT9A	ditto	1956	51339B/H	(optional)	1956	31126B
"	1957	GT7A	ditto	1957-59	51738B/D	Knob	—	316162
"	1958	BT7A	ditto	1955	*51341A	Ignition	1955-56	31497A
"	1959	GT9A-3	Head, Export France	1956	*51341B/E	Ignition and lighting	1957-59	31655A
Coil, ignition	1955-59	*45053A/L	"	1957-59	51739B	Knob	—	316449
Control box	1955	*37138D	Head, Export U.S.A.	1955	51741B/E	Lighting	1955-56	31126B
"	Later	37182I	"	1956	51743B/E	Knob	—	316144
Distributor	1955-56	*40452B/E	Head, Export Canada	1957-58	51741D	Panel	1955-59	78311A
"	Later	40499A	Number plate illumination	1955-59	51987A/B	Knob	—	1955-56
Flasher unit (L.H.D.)	1955-56	*35003A	Side	1955-59	53093E/H	Starting motor	1955-59	768945
Fuse box	1955-59	033239	Side flasher (L.H.D.)	1955-59	52215A/D	Coupling	—	76423A
Generator	1955-56	40499B/D	Stop tail (R.H.D.) (L.H.)	1955-56	53216A/D	Boot, rubber	—	860556
"	Later	22258D	" (R.H.)	1955-56	53310D	Stop lamp	1955-59	31082D/H
Horn	1955-56	*069399	"	1957	53311D	Trafficators (R.H.D.)	1955-59	54044D/E
"	1957-59	69046E/F	"	1957	+53589A	Warning light (side lamp, bulb holder)	—	1956
Low note (U.S.A. and Canada)	1955	*69011J	"	1957-59	+53589B	Bulb	—	39007A
"	1956-59	69046A/F	L.H.D. (left hand)	1955-56	+53589E/F	—	—	987
High note (U.S.A. and Canada)	1955	*69012J	(right hand)	1955-56	53312D	Windshield wipers		
"	1956-59	69047A/F	"	1957	53590A	Motor	—	
Horn relay (U.S.A. and Canada)	1955-59	*33116B	"	1957-59	53590B	"	1956-57	*75238A
LAMPS			"	1957	53590E/F	"	1958-59	75295A
Head, Home			"	1957	53590H	"	1955-56	75212D/E
R.H.D., dip left	1955	51336A	"	1957	53590I	Wheelbox	—	72660A/B
"	1956	51336B/J	"	1957	53590J	Crosshead and rack assy.	Later	1956-59
"	1957-59	51736B/D	"	1957	53590K	Cut to 44 $\frac{1}{2}$ "	1957-59	*743232
Head, Export			"	1957	53590L	Outer casing	—	743235
R.H.D., dip left	1955	51336A	"	1957	53590M	Motor to wheelbox	1955-59	745150
"	1956	51336B/J	"	1957	53590N	Wheelbox to wheelbox	1955-59	745151
"	1957-59	51736B/D	"	1957	53590O	End tube	1955-59	740746
L.H.D., dip right	1955	*51337B	"	1957	78113A	Ferrule, casing retaining	1955-59	740715
"	1956	*51337D/E	"	1956-59	78106A	Arm, left hand	1955	741838
"	1957-59	51737B	"	1955	*062605	" right hand	1956-59	743524
SWITCHES			"	1956	062612	" right hand	1955	741839
Dipper			"	1956	25022F/L	" right hand	1956-59	743523
Heater or blower			"	1956	25022M	" right hand	1956-59	743523
(optional)			"	1955	78113A	Blade	1955-56	*738735
Knob			"	1955	31474A	"	1957-59	738797
			"	—	318378			

* See Supersession Chart † When trafficator fitted L.H. ... Left hand R.H. ... Right hand L.H.D. ... Left hand drive R.H.D. ... Right hand drive



Equipment Specification

MORRIS
MORRIS 'Oxford' Saloon Series I-III 1948-59: 'Traveller' Series I-IV 1953-60: 'Hindustan' Series I-III 1955-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1950-51	*36072D	LAMPS—continued			SWITCHES—continued		
" Later	1952-54	36149A	Head, Export Europe (not France) ..	1951	*B50445K	Dipper	1948-60	31284A/D
"	1954-56	36182B	ditto .. Later	1951-53	*50963A	Heater or fan	1948-54	78206A
Battery	1957-60	36234A	ditto ..	1953	*51340A	Knob	—	768378
"	1948-57	GT9A	ditto .. "	1953-56	51339A & B/H	Heater or fan .. Later	1954-55	31474A
"	1958-59	GT9A-3	ditto ..	1957-59	58008B	Knob	—	318378
Bulb holder, panel light ..	1950-54	39015A	(except France & Sweden)			Heater or fan	1956	31126B
ditto ('Traveller') ..	1955	39015A				Knob	—	316162
Bulb holder, warning light ..	1956	39007A				Ignition	1948-54	31287A
Bulb	—	987	Head, Export France, pilot type	1959-60	58268A	" .. Later	1954	31187D
Coil, ignition	1948-54	*45020A	Head, Export France ..	1948-51	50679E	" .. and lighting ..	1955-56	31497A
"	1955-60	*45053	1951	*50790E	Knob	—	31655A/E	
Control box	1948-52	37065E	" Later	1951-52	*50962A	Lighting	1948-56	31126B
" Later	1952-55	*37138A/D	1953	*51341A	Knob	1948-54	*316117	
"	1956-59	37182A/H	1955-56	*51342A	Panel	1955-56	316144	
" ('Hindustan')	1960	37183K & L	1957-59	58009B	Panel	1948	31140A	
Distributor	1948-49	40152A	Head, Export Sweden ..	1959-60	58269A	Knob	1949-51	*31217A
"	1950	40152B	1959-60	58008B/D	Panel	1948-51	315062	
" Later	1951-53	*40237A/B	1949-52	*50804D	Knob	1952-54	*78292A	
"	1953-54	40358A/B & D/H	1953-56	51343A & B/E	Panel	—	*768890	
"	1954-56	*40427D & F	1957-60	58011B	Panel	Later	1954-59	
High compression	1956	40499A	1959-60	58010B	Knob	1960	78311A	
"	1957-58	40570A	1948-51	53101E	Knob	1954-56	78346A	
Low compression	1959-60	40570B/D & F	1950-51	53093E	Panel ("Traveller") ..	1955	*78292A	
Flasher unit (L.H.D. and optional)	1954-56	*35003A	1952-54	53101E	Knob	—	768945	
ditto	1957-60	35010A	Number plate (Export) ..	1948-51	53093H	Starting motor ..	1948-49	76428A
Fuse box	1948-52	*37107A	" ("Oxford") ..	1955-56	53093H/J	" .. Later	1949-50	*764491
Generator	1952-60	033239	1955-56	53093H/J	Coupling	1951-60	76423A	
" Later	1949-52	*22250A	1955-57	53101H	Boot, rubber	1951-60	764428	
"	1952-56	*22258D	1958-60	53630A	Stop lamp	1954-60	860556	
"	1956-59	22258E/H	Side (U.S.A.)	1948-50	*52142D	Windshield wiper ..	1948-54	*31179A
"	1960	22700D	"	1951-54	52139B	Windshield wiper ..	—	315075
(temporary alternative) ('Hindustan')	1960	*22704A	1954-56	52215A/D	Knob	Later	1954-56	31248B
Horn	1948-49	069344	Side and flasher (L.H.D. and optional R.H.D.) ..	1955-60	52216A/D	Windshield wiper ..	1954-56	316393
Low note	1950-55	*69011F/J	1953-56	53178D/F	Knob	—	312865	
High note	1950-55	69046A/F	Stop tail ("Traveller") ..	1948-49	*53060A	Windshield wiper ..	1957-60	*31515A
"	1956-60	*69012F/J	Stop tail and number plate ..	1948-49	53131E	Trafficators	1948-49	*54013B
LAMPS	1948-49	56035E	Stop tail (Export) ..	1948-49	53102A	"	1950	*54036A
Boot	1948-49	*50793B	"	1952-53	53200A	"	1951-52	*54041A
Head, Home R.H.D., dip left, pilot type (L.H.)	1948-51	*50793B	Stop tail and reflex R.H.D. ..	1953-54	53197A	"	1952-53	54044A/D
R.H.D., non-dip, pilot type (R.H.)	1948-51	*50362F	Stop tail and reflex R.H.D. ..	1953-54	53288A	(R.H.D.) ..	1954-60	54044D/E
R.H.D., dip left (L.H.)	1951	*50445K	Stop tail and flasher	1955-56	53310B	Warning lights ..	—	
R.H.D., non-dip (R.H.)	1951	*50446K	Stop tail, flasher and reflex L.H.D. ..	1955-56	53311B	Ignition	1948-54	*38013B
R.H.D., dip left (L.H. and R.H.)	1951-52	*50954A	Left hand	1955-56	53312B	Main beam	1951-54	*38087A
"	1952	50941A	Right hand	1955-56	53313B	Windshield wipers ..	—	
"	1953	*51335A	Except U.S.A.	1957	53588B	Motor	1948-50	*75084K
"	1953-56	51336A & B/J	U.S.A.	1958-60	53588E/F	"	1951	*75084L
"	1957-58	58006B	"	1957	53588A	"	1951-54	75143A
"	1959-60	58006D/E	1958-60	53588E/F	Stop tail and flasher	—	1954	*75247A
Head, Export R.H.D., dip left, pilot type	1948-51	*50793B	Stop tail, flasher and reflex R.H.D. ..	1955-56	53312B	"	1956-57	*75238A
R.H.D., dip left	1951	*50445K	Left hand	1955-56	53313B	"	1956-59	75295A
"	1951-52	*50954A	Right hand	1955-56	53588B	Except U.S.A.	1959-60	75212D/E
"	1952	50941A	U.S.A.	1957	53588E/F	Windshield wiper	1948-52	72590A/K
"	1953	*51335A	"	1957	53590B	Motor	1953-54	72629A/D
"	1953-56	51336A & B/J	1958-59	53590E/F	"	1954-56	72666A	
"	1957-58	58006B	"	1960	53590H	"	1956-60	72680A/D
"	1959-60	58006D/E	Mirror	1948-51	*62031A	Crosshead and rack assy ..	—	
Head, Export L.H.D., dip right, pilot type	1948-51	*A50793B	"	1952-54	625926	Cut to 39 $\frac{1}{2}$ " ..	1948-54	736307
R.H.D., dip right	1951	A50445K	"	1955	*062605	Crosshead and rack assy ..	—	
"	1951-53	*50804D	"	1956-60	62612	Later .. Cut to 44 $\frac{1}{2}$ " ..	1954-56	*743232
"	1953-54	*51338A	Reflector, rear (Home) ..	1948-49	65423A	Outer casing ..	1957-60	743235
"	1954-56	*51337A/B & D/E	Reflex reflector ("Traveller") ..	1955-56	57052A/B	Motor to wheelbox ..	1948-54	740482
"	1957-60	58007A/E	Relay, flasher ("Traveller", U.S.A.) ..	1955	33117A	"	1954-60	741510
Head, Export Europe (not France), pilot type	1948-51	*B50793B	Relay, horn	1950-54	33095A	Wheelbox to wheelbox ..	1948-54	739972
			"	1954-60	*33116B	ditto .. Later	1954-60	745151
			Starting motor	1948	25021A/F	End tube	1948-54	740031
			"	1949-54	25021A/H	Ferrule, casing retaining ..	1954-60	740746
			"	1954-57	25022F/L	Arm, left hand	1948-54	740715
			"	1958-59	25022M	"	1954-55	741838
			"	1960	25022N/Q	"	1956-59	743523
			"	1955	25021F	"	1960	54711571
			Suppressor	1951-54	78105A	"	1948-54	*737525
			"	1955	78113A	"	1954-55	741839
			"	1956-60	78106A	"	1956-59	743524
			SWITCHES	1948-49	*31180A	Blade	1948-54	727759
			Boot lamp	1948-49		"	1954-56	*738735
						"	1957-60	737897

MORRIS 'Oxford' Saloon Series V 1959-60

Battery	1959-60	BT9A	Flasher unit	1959-60	35020A	LAMPS	1959-60	58251A/F
Bulb holder, panel light	1959-60	554734	Fuse box	1959-60	033285	Head, Home R.H.D., dip left	1959-60	58251A/F
Bulb	—	987	Generator	1959	*2297A	Head, Export R.H.D., dip left	1959-60	58252A/F
Coil, ignition	1959	*45103D	"	1960	22700D	Head, Export R.H.D., dip right	1959-60	58252A/F
Control box	1960	*45113D	"	1960	*22704A	Head, Export Europe (except France & Sweden)	1959-60	58253A/E
"	1959	37283A	"	1960		Head, Export France	1959-60	58254A/E
"	1960	37290D/E	Horn	1959-60	69046F			
Horn	1959	69046F	Low note	1959-60	69046F			
Low note	1960	69047F	High note (De Luxe and optional)	1959-60	69047F			

* See Supersession Chart

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

MORRIS

MORRIS 'Oxford' Saloon Series V 1959-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS—continued			SWITCHES—continued			Windshield wipers—cont'd		
Head, Export Sweden ..	1959	58315A/E	Ignition and starting ..	1959	31781D	Ferrule, casing retaining ..	1959-60	740715
" " Later ..	1959	58446A/D	1960 ..	31973B	Grommet, wheelbox ..	1959-60	740811	
" " ..	1960	*58545B	Lighting	1959-60	31837A/D	Arm, left hand drive ..	1959	744134
Head, Export U.S.A. ..	1959	58255A/B	Panel ..	1959-60	31828A	" right hand drive ..	1959	744133
" " ..	1960	*58488A/D	Reverse lamp (optional) ..	1959-60	31849A	1960 ..	1960	54711539
Number plate illumination ..	1959-60	53763A	Solenoid, starting motor ..	1959-60	*76465A	Blade	1959	54711538
ditto .. Later ..	1960	53814A	ditto .. Later ..	1960	76464A	"	1960	*737907
Side and flasher ..			ditto (automatic transmission) ..	1959	*76466A	Windshield wipers (later) (from Chassis No. 38193)		54711283
L.H.	1959-60	52422B/F	Stop lamp ..	1959-60	31882A	Motor (L.H.D.) ..	1960	75357A
R.H.	1959-60	52427B/F	Windshield wiper ..	1959-60	31836A/B	(R.H.D.) ..	1960	75358A
L.H. (N. America) ..	1959-60	52423B/F	Warning lights ..			Wheelbox ..		
R.H.	1959-60	52428B/F	Ignition, bulb holder ..	1959-60	863511	Driver side ..	1960	72707A
Stop tail, flasher and reflex ..	1959-60	53750A/B	Main beam, bulb holder ..	1959-60	554734	Passenger side ..	1960	72713B
ditto (N. America) ..	1959-60	53751A/B	Bulb	—	987	Crosshead and rack assy. ..	1960	744254
Relay, horn	1959-60	33188A	Windshield wipers ..			Outer casing ..		
Sleeve, Lucar connector ..			Motor, left hand drive ..	1959-60	75358A	Motor to wheelbox ..	1960	54710207
14 amp.	1959-60	54190042	" right hand drive ..	1959-60	75357A	Wheelbox to wheelbox ..	1960	54710208
35 amp.	1959-60	54190043	Wheelbox ..	1959-60	72713A/B	End tube ..	1960	740746
Starting motor	1959	25022M	Driver side ..	1959-60	72707A	Ferrule, casing retaining ..	1960	740715
" "	1960	25022N/Q	Passenger side ..	1959-60	744254	Grommet, wheelbox ..	1960	740811
SWITCHES			Crosshead and rack assy. ..	1959-60		Arm, L.H.D. ..	1960	54711538
Dipper	1959-60	31800A	Outer casing ..	1959-60	54710207	" R.H.D. ..	1960	54711539
Flasher	1959-60	31885A	Motor to wheelbox ..	1959-60	54710208	Blade	1960	54711283
Heater	1959-60	31828A	Wheelbox to wheelbox ..	1959-60	740746			

MORRIS 'Oxford' Taxi and Hire Car 1947-51

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1947-50	*364428	LAMPS			SWITCHES—continued		
"	1951	36047D	'For Hire' sign	1947-51	*52115A	Panel	1947-51	31201B
Battery	1947-51	SG13E	Head, Home ..			Knob	314026	
Coil, ignition	1947-51	*45020A	Dip left (L.H.)	1947-50	*50460D	Reverse lamp	1949-51	*31077A
Control arm	1947-51	*31090A	Non-dip (R.H.)	1947-50	*50461D	Solenoid, starting motor ..	1947-50	76022B
Control box	1947-48	*37032A/B	Dip left (L.H.)	1951	*50914B	Solenoid operating ..	1947-50	*31071A
"	1949-50	37065E	Non-dip (R.H.)	1951	*50915B	Starting motor	1951	76427A
"	1951	*37076E	Number plate illumination ..	1947-49	*53064A	Stop lamp	1947-51	31281B
"	Later	1951	" " "	1950	*53101A	Spring	—	*315714
Distributor	1947-49	40064A/F	Reverse	1951	53210F/H	Trafficators	1947-51	*54039A
"	1950-51	40142A/F	Side	1947-49	*52113A	Warning light (ignition) ..	1947-51	*38013B
Fuse box	1947-49	*385019	"	1950	52121A	Windshield wipers ..		
"	1950	*385221	"	1951	52154A	Motor	1947-50	*75074H
"	1951	033239	Stop tail	1951	53178D	Wheelbox (with switch) ..	1947-51	*75074J
Generator	1947-50	*22446A	Mirror	1947-51	*620128	(less switch)	1947-51	72583A/F
"	1951	*22435A/B	Starting motor	1947-50	*255378	Crosshead and rack assy. ..	1947-51	72584A/D
"	Later	1951	*22456A/B	"	78113A	Cut to 22 $\frac{1}{2}$ "	1947-51	736177
Horn	1947-49	*69008B	Suppressor	1951		Outer casing ..		
"	1950-51	*69040A	"	1951		Motor to wheelbox	1947-51	739833
Inspection lamp sockets ..	1947-51	39507A	SWITCHES			Wheelbox to wheelbox	1947-51	739937
Junction box	1947-51	78266A	Battery master	1947-51	76605B	End tube	1947-51	740031
"	1950-51	78264A	Ignition and lighting ..	1947-51	*34018B	Arm	1947-51	735064
						Blade	1947-51	727803

MORRIS 'Six' Saloon 1948-54

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1948-51	*36072D	LAMPS, Head, Export—continued			LAMPS—continued		
"	1952-54	36149A	R.H.D., dip left	1951	*50445K	Stop tail	1952-53	*53197A
Battery	1948-54	GT9A	" " " Later	1951-52	*50954A	"	1953-54	53288A
Coil, ignition	1948-53	*45039A	" " "	1952	50941A	Mirror	1948-50	*62031A
"	1954	*45012D	" " "	1953	*51335A	"	1951-52	062552
Control box	1948-52	*37076E	" " "	1953-54	51336A	Panel light bulb holder ..	1950-54	39015A
"	Later	1952-54	L.H.D., dip right, pilot type	1948-51	*A50793B	Starting motor	1948-54	25518A/E
Distributor	1948-49	40157B/D	L.H.D., dip right	1951	*A50445K	Suppressor	1951-54	78105A
"	1950-54	40181A	"	1951-52	*50804D	" (sparking plug)	1951-54	78113A
Flasher relay (U.S.A.) ..	1948-52	33095A	Head, Export Europe (not France), pilot type	1948-51	*B50793B	SWITCHES		
Fuse box	1948-52	*37107A	Head, Export Europe (not France)	1951	*B50445K	Boot lamp	1948-49	*31180A
"	Later	1952-54	ditto	1951-52	*50963A	Dipper	1948-54	31284A
Generator	1948-49	22434D	ditto	1953	*51340A	Heater or fan	1948-53	78206A
"	1950-53	*22435A/B	Head, Export France, pilot type	1948-51	*51339A	Knob	—	768378
Horn	1948-54	*22456A/B	Head, Export France (not France)	1951	*50790E	Heater or fan	1954	31248A
Low note	1948-54	*69011F	dito	1951-52	*50962A	Knob	—	316490
High note	1948-54	*69012F	dito	1953	*51341A	Ignition	1948-54	31287A
LAMPS			Head, Export France, pilot type	1948-51	*51342A	Lighting	1948-54	31126B
Boot	1949	56035E	Head, Export France	1951	*50679E	Knob	—	316117
Head, Home ..			dito	1951-52	*50790E	Panel	1948-52	*31217A
R.H.D., dip left, pilot type (L.H.) ..	1948-51	*50793B	dito	1953	*51342A	Knob	—	315062
R.H.D., non-dip, pilot type (R.H.) ..	1948-51	*50362F	Head, Export U.S.A.	1948-52	*50804D	Panel	1953-54	*78292A
R.H.D., dip left (L.H.) ..	1951	*50445K	dito	1953-54	*51343A	Knob	—	768890
R.H.D., dip left (R.H.) ..	1951	*50446K	Number plate illumination	1948-50	53093E	Starting motor	1948-50	*764401
R.H.D., dip left (L.H. and R.H.) ..	Later	*50954A	"	1951-52	53101E	"	1951-54	76423A
"	1952	50941A	"	1953-54	53093E	Coupling	1951-54	764428
"	1953	*51335A	"	1953-54	53101E	Stop lamp	1954	31082B
Head, Export	Later	51336A	" (U.S.A.)	1948-52	*52142D	Windshield wiper	1948-54	*31199A
R.H.D., dip left, pilot type	1948-51	*50793B	Stop tail	1948-49	*53151A	Knob	—	315075
			"	1950	*53102B	Trafficators	1948-49	*54013B
			"	1951	53200A	"	1950	*54036A
			"	1951-52		"	1951-52	*54041A
			"	1952-54		"	1952-54	54044D

* See Supersession Chart

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

continued



Equipment Specification

MORRIS
MORRIS 'Six' Saloon 1948-54—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Warning lights			Windshield wipers—cont'd			Windshield wipers—cont'd		
Ignition .. .	1948-54	*38013B	Motor .. .	1951	*75084L	Outer casing	1948-54	
Main beam .. .	1951-54	*38087A	" .. .	1952-54	75143A	Motor to wheelbox ..	1948-54	740482
Windshield wipers			Wheelbox .. .	1948-52	72590A/K	Wheelbox to wheelbox ..	1948-54	739972
Motor .. .	1948-50	*75084K	" .. .	1953-54	72629A/D	End tube .. .	1948-54	740031
			Crosshead and rack assy.			Arm, left hand .. .	1948-54	*737526
			Cut to 36 1/8" .. .	1948-54	736307	" right hand .. .	1948-54	*737525
						Blade .. .	1948-54	727759

MORRIS 'Isis' Saloon 1956-57: Series II 1958: 'Isis Traveller' 1956-57

Ammeter .. .	1956	36182B	LAMPS—continued			SWITCHES—continued		
" .. .	1957-58	36234A	Side and flasher (L.H.D. and optional R.H.D.) ..	1956-58	52216B	Starting motor .. .	1956-58	76423A
Battery .. .	1956-57	GT9A	Stop tail ('Traveller') ..	1956-57	53178F	Coupling .. .	—	764428
" .. .	1958	GT9A-3	Stop tail and reflex			Boot, rubber .. .	—	860556
Coil, ignition .. .	1956-58	*45054D/J	Saloon (when trafficators fitted)			Stop lamp .. .	1956-58	31082E
Control box .. .	1956-58	37183A/H	Left hand .. .	1956	53310D	Windshield wiper .. .	1956	31248B
Distributor .. .	1956-57	40442D	Right hand .. .	1956	53311D	Knob .. .	—	316393
Premium Petrol .. .	1958	40580A/B	Saloon (when trafficators fitted) .. .	1957	53589B	Windshield wiper .. .	1957-58	*31515A
Export, low grade Petrol .. .	1956-58	40470A	ditto .. .	1958	53589E	Knob .. .	—	312865
Flasher unit (L.H.D. and optional R.H.D.) .. .	1956	*35003A	Stop tail, flasher and reflex			Trafficators (R.H.D.) ..	1956-58	54044D/E
ditto .. .	1957-58	35010A	Saloon (L.H.D. and optional R.H.D.) ..			Windshield wipers		
Flasher relay ('Traveller') .. .	1956-57	33117D	Left hand .. .	1956	53312D	Motor .. .	1956-57	75295A
Fuse box .. .	1956-58	033239	Right hand .. .	1956	53313D	Wheelbox .. .	1958	75212D
Generator .. .	1956	*22483A	Except U.S.A. .. .	1957	53588B	Crosshead and rack assy. .. .	1956	72666A
" .. .	1957-58	*22483B/D	U.S.A. .. .	1958	53588E	Cut to 44 1/2" .. .	1957-58	*743232
Horn .. .			Mirror .. .	1956	062612	Outer casing .. .	1956-58	743235
Low note .. .	1956-58	69046A/F	Reflex reflector ('Traveller') .. .	1956-57	57052B	Motor to wheelbox .. .	1956-58	745150
High note .. .	1956-58	69047A/F	Starting motor .. .	1956-58	25521D	Wheelbox to wheelbox .. .	1956-58	745151
Horn relay .. .	1956-58	*33116B	Suppressor .. .	1956-58	78106A	End tube .. .	1956-58	740746
LAMPS			SWITCHES			Ferrule, casing retaining .. .	1956-58	740715
Head, Home R.H.D., dip left .. .	1956	51336B/J	Dipper .. .	1956-58	31284A	Arm, left hand .. .	1956-58	743524
R.H.D., dip left .. .	1957-58	51736B/D	Heater or fan .. .	1956	31126B	" right hand .. .	1956-58	743523
Head, Export R.H.D., dip left .. .	1956	51336B/J	Knob .. .	—	316162	Blade .. .	1956	*738735
L.H.D., dip right .. .	1957-58	51736B/D	Ignition .. .	1956	31497A	" .. .	1957-58	737897
Head, Export Europe (not France) .. .	1956	51339B/H	Ignition and lighting .. .	1957-58	31655A	Borg Warner automatic transmission (optional) .. .		
ditto .. .	1957-58	51738B	Lighting .. .	1956	31126B	Gear indicator quadrant .. .		
Head, Export France .. .	1956	*51341B/E	Knob .. .	—	316144	Left hand drive .. .	1957-58	56069A
Head, Export U.S.A. .. .	1957-58	*51739B	Panel rheostat .. .	1956-58	78311A	Right hand drive .. .	1957-58	56068A
Head, Export N. America (except U.S.A.) .. .	1957-58	*51741B	Knob .. .	1956	768930	Switch Cutout .. .	1957-58	*31077E
Number plate illumination .. .	1957-58	51987A/B	Solenoid, starting motor (automatic transmission) .. .	1957-58	*76443A	Borg Warner overdrive equipment (optional) .. .		
Saloon .. .	1956-58	53093H	Solenoid operating (automatic transmission) .. .	1957	*31446B	Relay .. .	1957-58	33177A
'Traveller' .. .	1956-57	53101H	ditto .. .	1958	*31247D	Switches .. .	1957-58	31632A/B
Side (when trafficators fitted) .. .	1956-58	52215B	Knob .. .	1957-58	313668	Kick-down .. .	1957-58	76112A/D

MORRIS 5 cwt. Van 1946-53

Ammeter .. .	1946	*364647	LAMPS			SWITCHES		
" .. .	1947	*364510	Dash	.. .	1951-53	A56029B	Dipper .. .	1946-53
" .. .	1948-53	36047D	Head, Home R.H.D., vertical dip .. .	1946-47	*50370A	Ignition and lighting .. .	1946-53	*360020
Battery .. .	1946-53	BNW9F	" dip left (L.H.D.) .. .	1948-49	*50632D	ditto (Export) .. .	1948-53	*344694
Bulb holder, panel light .. .	1950-53	39007A	" non-dip (R.H.) .. .	1948-49	*50633D	Starting motor .. .	1946-50	*34018A
Coil, ignition .. .	1946-53	*45016A	" dip left (L.H.) .. .	Later	50649B	Coupling .. .	1951-53	*764401
Control box .. .	1946-50	*33219S	" non-dip (R.H.) .. .	Later	50746B	Stop lamp .. .	1946-53	764428
" .. . (Export)	1948-53	37081H	Head, Export R.H.D., dip left .. .	1948-49	*50632D	Springs .. .	—	*315714
Distributor .. .	1946-53	*40056A/J	Later	1949-53	50649B	Trafficators .. .	1946-50	74015B
Fuse box .. .	1947-53	*37130A	Stop tail and number plate .. .	1947	*A53008B	Warning light (ignition) .. .	1951-53	*54043A
Generator .. .	1946-51	22007B	ditto .. .	1947-53	*A53060A	Windshield wipers		*38012B
" .. . Later	1951-52	22448B	Mirror .. .	1950-53	62515A	Motor .. .	1946-51	75121A
" .. . "	1952-53	22448D	Starting motor .. .	1946-50	250405	" .. .	1952-53	75165A
" .. . (Export)	1946-52	22448B	ditto .. .	1951-52	25032A	Arm .. .	1946-53	*735049
Horn .. .	1946-53	*069376	" .. .	1952-53	25037A	Blade .. .	1946-53	727802
Horn push .. .	1946-51	*762190	Suppressor .. .	1951-53	78105A			

MORRIS Quarter Ton Van and Pick-up Truck 1954-60

Battery .. .	1954-57	GT7A	Distributor	1954-55	*40299E	Generator	1946-53	
" .. .	1958-60	BT7A	"	1956	*40299L	"	1946-59	
Coil, ignition .. .	1954	*45020A	" (high compression)	1956	40494A	"	1960	
" .. .	1955-60	*45053	" .. .	" .. .	1958-59	40561B/H & K	" .. .	(temporary alternative) .. .		
Control box .. .	1954-56	*37138D	" .. .	" .. .	1960	40561J/L	Horn	1960	
" .. .	1956-58	37182A/H	" .. .	" .. .	1958-59	40569A	Low note (N. America)	1954-56	
" .. .	1959	37182J	" .. .	" .. .	1960	40569B/F	ditto	1954-55	
" .. .	1960	37183K & L	" .. .	" .. .	1960	40569J	High note (N. America)	1956-60	
			Fuse box	1954-60	40569K	ditto (and optional)	1960	
					033239		Horn push		

* See Supersession Chart

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

R.H.D. ..

Right hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

MORRIS

MORRIS Quarter Ton Van and Pick-up Truck 1954-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS			LAMPS—continued			Warning lights—continued		
Head, Home R.H.D., dip left	1954-55	51336A	Side	1954-60	52139B/E	Ignition bulb holder ..	1959-60	863511
" " "	1956	51336B/J	Stop tail ..	1954-60	53178D/H	Bulb ..	1959-60	987
" " "	1957-60	51736B/D	Reflex reflector ..	1955-60	57047A/D	Main beam, bulb holder ..	1954-57	39007A
" " " Later	1960	51336B/J	Sleeve, Lucar connector			" " "	1959-60	554734
Head, Export R.H.D., dip left	1954-55	51336A	14 amp. ..	1960	54190042	Bulb ..	—	987
" " "	1956	51336B/J	35 amp. ..	1960	54190043	Oil, bulb holder ..	1959-60	863511
" " " Later	1957-60	51736B/D	Starting motor ..	1954-57	25022F/L	Bulb ..	—	987
" " " Later	1960	51336B/J	" " ..	1958-59	25022M	Petrol reserve ..	1955	*38013B
L.H.D., dip right	1954	*51337A	Suppressor (when fitted)	1954-60	25022N/Q	Side lamp, bulb holder ..	1954	39007A
" " "	1955	*51337B			78106A	Bulb ..	—	987
" " "	1956	*51337D/E	SWITCHES			Windshield wipers		
" " "	1957-60	51737B	Dipper ..	1954-60	31284A/D	Motor ..	1954-56	75151A
" " " Later	1960	*51337F/K	Ignition ..	1954-60	31287A/F	" ..	1957	75213A
Head, Export Europe (not France)	1954-55	51339A	Lighting ..	1954-56	31126B	" ..	1958-59	75295B/D
ditto	1956	51339B/H	Knob ..	1957-60	*31251A/F	Later	1959-60	75295E
ditto	1957-59	51738B	Lighting ..		316154	Wheelbox ..	1954-56	72642A/E
(except France & Sweden) Later	1959-60	58270A	Knob ..		31082B/J	Crosshead and rack assy.	1957-60	72693A/B
ditto	1960	58230A/E	Panel ..	1954-60	31140A/B	Cut to 31 $\frac{1}{2}$ " ..	1954-56	738764
Head, Export France ..	1954-55	*51341A	Starting motor ..	1954-60	76423A	Crosshead and rack assy.	1957-60	743251
" " "	1956	*51341B/E	Coupling ..		764428	Outer casing ..		
" " "	1957-59	51739B	Boot, rubber ..	1954-60	860556	Motor to wheelbox ..	1954-56	740482
" " " Later	1959-60	58271A	Stop lamp ..	1954-60	31082B/J	" ..	1957-60	744546
Head, Export Sweden ..	1959-60	58231A/E	Windshield wiper ..	1954	*31217A	Wheelbox to wheelbox ..	1954-56	739973
Head, Export U.S.A. ..	1954-55	51343A	Knob ..		315062	" ..	1957-60	744547
" " "	1956	51343B/E	Windshield wiper ..	1955	31474A	End tube ..	1954-56	740031
" " "	1957-59	51741B	Knob ..		318378	" ..	1957-60	740746
Head, Export Canada ..	1959	*58497A/B	Windshield wiper ..	1956-60	*31515A	Ferrule, casing retaining ..	1957-60	740715
Number plate illumination	1954-60	51987A/B	Knob ..	1956	316388	Grommet, wheelbox ..	1957-60	740811
			Warning lights ..	1957-60	312865	Arm, left hand ..	1954-56	737444
			Flasher, bulb holder ..	1954-57	39007A	" right hand ..	1957-60	745075
			Bulb ..		987	" ..	1954-56	737445
			Ignition ..	1954	*38013B	Blade	1957-60	745084
						"	1954-56	727802
							1957-60	738734

MORRIS Quarter Ton Van (G.P.O.) 1954-60

Battery ..	1954-57	GT9A	Reflex reflector ..	1955-60	57047D	SWITCHES—continued		
" " "	1958-59	GT9A-3	Sleeve, Lucar connector	1960	54190042	Windshield wiper ..	1955-60	*31515A
" " "	1960	BT9A	14 amp. ..	1960	54190043	Knob ..	1955-59	316388
Bulb holder, panel light ..	1954	39015A	35 amp. ..	1960	—	Panel ..	1960	312865
Coil, ignition ..	1954	*45020A	Starting motor ..	1954-59	25022A/L & M	Trafficators ..	1954-58	54050A
" " "	1955-60	*45053	"	1960	25022N/Q	Warning lights ..		
Control box ..	1954-56	*37138D	Steering column control ..	1960	33526B	Bulb holder, ignition and oil pressure ..	1958-60	863511
" " "	Later	37182A/H	Slip ring ..	1960	38269A	Bulb holder, main beam ..	1958-60	554734
Distributor ..	1954-55	37183K & L	Suppressor (when fitted)	1954-60	78106A	Bulb	—	987
" " "	1956	*40299E	SWITCHES			Windshield wipers ..		
" " "	Later	40494A	Dipper ..	1954-60	31284A/D	Motor ..	1954-59	75143A
" " "	1956-59	40494B/D & F	Flasher ..	1960	31883A	" ..	1960	75295E
Flasher unit ..	Late	35012A/H	Horn push and trafficator ..	1958	31755D/F	Wheelbox ..	1954-59	72654A
Fuse box ..	1954-58	033239	Horn push and flasher ..	Later	31756F	Crosshead and rack assy. Cut to 44 $\frac{1}{2}$ " ..	1954-59	72693B
Generator ..	1954-56	22258D	Ignition ..	1958-59	31287A/B	Crosshead and rack assy. Outer casing ..	1960	736307
" " "	Later	22258E/F	" (Engineers' Van) ..	1958-60	31287F	Motor to wheelbox ..	1954-59	743251
" " "(temporary alternative)	1960	22700D	serviced by G.P.O.) ..	1958-60	31786A/B	" ..	1960	739858
Horn ..	1954-57	*22704A	Lighting ..	1954-57	31126B	Wheelbox to wheelbox ..	1954-59	744546
" " "	1958-60	069399	Knob ..	1958-60	*316117	End tube ..	1954-59	740031
LAMPS			Knob ..		316154	Ferrule, casing retaining ..	1954-59	738410
Flasher ..	1958-60	53778A	Panel ..	1954-60	31140A/B	Arm, left hand ..	1954-59	740715
Head Metal wings ..	1954-56	51336A & B/J	Starting motor ..	1954-60	76423A	" right hand ..	1960	737444
Rubber wings ..	1957-60	51736B/D	Coupling ..	1954-60	764428	" ..	1954-59	745075
Number plate illumination	1955-57	51026A	Boot, rubber ..	1954-60	860556	Blade	1954-59	727803
Side Stop tail ..	1954-60	53291A/B	Stop lamp ..	1954-60	31082B/J	"	1960	738734
		52139B/E	Trafficator ..	1954-57	031296	"	1960	
		53178D/H	Windshield wiper ..	1954	*31217A	"	1960	
			Knob ..		315062	"	1960	

MORRIS 10 cwt. Van 1946-50

Ammeter ..	1946-50	*364428	LAMPS, Head, Home—continued			Starting motor	1946-47	*256044
Battery ..	1946-50	BNW9A	R.H.D., vertical dip (L.H.)	1948-49	*50632D	"	1948-50	25516A/E
Coil, ignition ..	1946-50	*45020A/B	" non-dip (R.H.)	1948-49	*50633D	SWITCHES		
Control box ..	1946-47	*37003A	vertical dip (L.H.)	1949	50649A/B	Battery master ..	1946-50	76605B
" " "	1948-50	37057E	"			Dipper ..	1946-50	31284A
Distributor ..	1946-49	*406269	"			Ignition and lighting ..	1946-48	*34022A
" " "	1950	*40205A/B	"			Panel	1949-50	*34026A
Generator ..	1946-50	22449A	"			Starting motor ..	1946-50	31276A
Horn ..	1946-50	069344	"			Trafficator ..	1946-50	764150
LAMPS			"			Trafficators ..	1946-50	*31046
Head, Home			"			Warning light (ignition) ..	1946-50	*38013B
R.H.D., non-dip ..	1946	50129A	Head, Export			Windshield wipers ..		
" vertical dip (L.H.)	1947	*50370A	Vertical dip	1948-49	*50632D	Motor	1946-50	733179
" non-dip (R.H.)	1947	*50549A	Later	1949-50	50649A/B	Arm	1946-50	*735049
			Stop tail	1946-49	*53008B	Blade	1946-50	727802
			Stop tail	1950	*53060A			

* See Supersession Chart L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive



Equipment Specification

MORRIS—MORRIS COMMERCIAL

MORRIS Half Ton Van and Pick-up Truck 1954–60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter ..	1954-56	36149A	LAMPS—continued			SWITCHES—continued		
" ..	1957-60	36234A	Head, Export Europe	1954	*51340A	Starting motor ..	1954-60	76423A
Battery ..	1954-57	GT9A	(not France) ..	1954	51339A	Coupling ..	1954-60	764428
" ..	1958-59	GT9A-3	ditto .. Later	1954-55	51339B/H	Boot ..	1954-60	860556
Coil, ignition ..	1960	BT9A	ditto ..	1956	51738B/D	Stop lamp ..	1955-60	31082D/J
Control box ..	1954-56	*45020A/B	(except France & Sweden)	1957-59	51738B/D	Windshield wiper ..	1954	*31199A
" ..	1957-60	*45053A/M	Later	1959-60	58270A	Knob ..	—	315075
Distributor ..	1954-55	*37138A/D	Head, Export France ..	1954-55	51341A	Windshield wiper ..	1955-56	31474A
" ..	1956-59	37182A/H	" .. "	1956	51341B/E	Knob ..	—	318385
" ..	Later	37182I	" .. "	1957-59	51739B	Windshield wiper ..	1957-60	*31515A
Distributor ..	1954-56	40358D/E	Head, Export Sweden ..	1959-60	58271A	Knob ..	—	312865
" ..	1957-59	40499A/D & F	Head, Export U.S.A. ..	1954-55	58450A	Warning lights		
Flasher relay ..	1954-56	33117A	" .. "	1956	51343A	Flasher ..	1955-56	*38087A
Fuse box ..	1954-60	033239	Head, Export Canada ..	1958-60	51343B/E	Ignition ..	1954-56	*38013B
Generator ..	1954-55	22258D	Number plate illumination ..	1954-60	51310E/I	Main beam ..	1954-56	*38087A
" ..	1956-59	22258E/F	Roof ..	1954-60	56022D	Windshield wipers		
" ..	1960	22700D	Side (R.H.D.) ..	1954-56	52139B	Motor ..	1954-56	75143A
" ..	(temporary alternative)	40499E & H	Side and flasher (L.H.D.) ..	1954-56	*52162B/E	" ..	1957	75295A
Horn ..	1954-56	*22704A	Stop tail ..	1954-56	52162D	Windshield wipers		75212D/E
Low note (N. America) ..	1955	*069399	Stop tail, flasher and reflex ..	1957-60	*53178D/F	Motor ..	1954-56	75212F
" ..	1956-60	*69011J	ditto (U.S.A.) ..	1957-60	*53479D	Wheelbox or clutch housing ..	1954-56	72629A/D
High note (N. America) ..	1955	*69012J	Reflex reflector ..	1955-56	53634A	ditto ..	1957-60	72680A/D
ditto (and optional) ..	1956-60	69047A/F	Starting motor ..	1954-56	57047A/D	Crosshead and rack assy. ..	1954-56	736307
Horn relay (when twins fitted) ..	1955-60	*33116B	" ..	1957-59	25022A/L & M	Cut to 39" ..	1957-60	743235
LAMPS			Suppressor (when fitted) ..	1954-57	25022N/Q	" .. 44" ..	1957-60	743235
Head, Home R.H.D., dip left ..	1954	*51335A	" .. "	1958-60	78105A	Outer casing		
" ..	Later	51336A	Motor to wheelbox ..	1954-56	78106A	Motor to wheelbox ..	1954-56	740482
"	51336B/J	SWITCHES			Wheelbox to wheelbox ..	1954-56	745150
Head, Export R.H.D., dip left ..	1954	*51335A	Dipper ..	1954-60	31284A/D	End tube ..	1957-60	739972
" ..	Later	51336A	Ignition ..	1954-56	31287A	ditto ..	1957-60	740031
"	51736B/D	Ignition and lighting ..	1957-60	31655A	Ferrule, casing retaining ..	1957-60	740746
L.H.D., dip right ..	1954	*51338A	Knob ..	—	316449	Arm, left hand ..	1954-56	737496
" ..	Later	*51337A	Lighting ..	1954-56	31126B	" .. "	1957-59	743524
"	*51337B	Knob ..	1954	*316117	" .. "	1960	54711571
"	*51337D/E	Panel ..	1955-56	*78292A	right hand ..	1954-56	737495
"	51737B	Knob ..	1956	*768890	" .. "	1957-59	743523
			Panel ..	1957-59	768651	Blade ..	1954-56	727803
			Knob ..	1960	78311A	" ..	1957-60	737897
				1957-60	78346A	Blade ..	1946-53	
					768945			

MORRIS COMMERCIAL 15/20 cwt. PV 1946–53

Ammeter ..	1946-47	*364510	LAMPS, Head, Home— <i>continued</i>			LAMPS— <i>continued</i>		
" ..	1948-53	36047D	R.H.D., non-dip (R.H.) ..	1946-47	*50432A	Stop tail and number plate ..	1946-49	*53031D
Battery ..	1946-50	SLT13A	" .. dip left (L.H.) ..	1948-49	*50433A	ditto .. (G.P.O.) ..	1950-52	*53063B
" ..	1951-53	GT11A	" .. non-dip (R.H.) ..	1948-49	50434A	Mirror ..	1953	53295A
Coil, ignition ..	1946-53	*45020A/B	" .. dip left (L.H.) ..	1950	*50854D	Starting motor ..	1947-53	*620601
Control box ..	1946-47	*37031A	" .. non-dip (R.H.) ..	1950	*50855B	" ..	1948-48	*255378
" ..	1948-50	37057E	" .. dip left ..	1951	*50728D	Suppressor (distributor) ..	1950-53	*25533A/D
" ..	1951-52	37065E	(L.H. and R.H.) ..	1951	*51014A/F	" .. (plug) ..	1951-53	78114A
Distributor ..	1946-49	40069A/B	ditto .. Later	1951-53			1951-53	78106A
" ..	1950-53	40069D/H	Head, Export R.H.D., dip left ..	1950	*50854D	SWITCHES		
Fuse box ..	1952-53	033240	" .. "	1951	*50728D	Battery master (G.P.O.) ..	1951-53	76602B
Generator (L3-T3) ..	1946-49	24524A	" .. "	1951-53	*51014A/F	Horn push and dipper ..	1946-48	*31061B
" ..	1946-49	24494A	L.H.D., dip right ..	1950	*5A0584A	" ..	1949-53	*31076B
" ..	1950-52	*22250E/F	" ..	1951	*5A05728D	Ignition and lighting ..	1946-53	*34018A
" ..	Later	1952-53	" ..	1951-53	*51016A/F	Starting motor ..	1946-53	76427A
Horn ..	1946-53	*069213	Head, Export Europe (not France) ..	1950	*B50854D	Trafficator (G.P.O.) ..	1951-53	031296
Inspection lamp sockets ..	1946-53	*39506A	ditto ..	1951	*B50728D	Trafficators (G.P.O.) ..	1951-53	*053830
Junction box ..	1946-53	78266A	ditto ..	1951-53	*51015A/F	Warning light (ignition) ..	1946-53	*38013B
LAMPS			Number plate illumination ..	1953	53101E	Windshield wipers		
Dash ..	1949-53	56031A	Roof ..	1949-53	56022D	Motor ..	1946-47	*733068
Head, Home R.H.D., dip left (L.H.) ..	1946-47	*50431A	Side ..	1950-53	52139B	" ..	1948-53	*75049A
			Stop tail ..	1953	53178D	Arm ..	1946-53	735065
						Blade ..	1946-53	727803

MORRIS COMMERCIAL 25/30 cwt. LC3 1946–52

Ammeter ..	1946-49	*364428	Inspection lamp sockets ..	1946-52	39507A	LAMPS, Head, Export— <i>continued</i>		
" ..	1950-52	36047D	Junction box ..	1946-52	78266A	R.H.D., dip left (L.H. and R.H.) ..	1950	*50854D
Battery ..	1946-51	SLT13A	LAMPS			ditto ..	1951	*50728D
" ..	1952	GT11A	Dash (G.P.O.) ..	1951-52	56031A	L.H.D., dip right ..	1951	*51014A/F
Coil, ignition ..	1946-52	*45020A/B	Head, Home			" ..	1951	*A50854D
Control box ..	1946-47	*37031A	R.H.D., dip left (L.H.) ..	1946-49	50440A	" ..	1951	*A50728D
" ..	1948-49	37057E	" .. non-dip (R.H.) ..	1946-49	50441A	Head, Export Europe (not France) ..	1950	*B50854D
" ..	1950-52	37065E	" .. dip left (L.H.) ..	1950	*50854D	ditto ..	1951	*B50728D
Distributor ..	1946-49	*37138A/B	" .. non-dip (R.H.) ..	1950	*50855A	L.H.D., dip right ..	1951	*51016A/F
" ..	1950-52	40069A/B	" .. dip left ..	1951	*50728D	Head, Export Europe (not France) ..	1950	*B50854D
Fuse box ..	1952	033240	(L.H. and R.H.) ..	1951	*51014A/F	ditto ..	1951	*B50728D
Generator ..	1946-49	22449A	Vertical dip (L.H.) ..	1946-47	*50439A	Side ..	1946-48	*51015A/F
" ..	1950-52	*22250E/F	" .. (R.H.) ..	1946-47	*50465A	Stop tail and number plate ..	1946-52	*52154A
" ..	Later	1952	" .. (L.H.) ..	1948-49	*50427A	Mirror ..	1946-52	*53063B
Horn ..	1946-52	*069213	" .. (R.H.) ..	1948-49	*50464A	Panel light bulb holder ..	1946-52	*62528A
								39007A

* See Supersession Chart L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)

continued



Equipment Specification

MORRIS COMMERCIAL

MORRIS COMMERCIAL 25/30 cwt. LC3 1946-52—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Starting motor .. .	1946-48	*255378	SWITCHES—continued			Warning light (ignition) ..	1946-49	*318505
" " .. Later	1949	*25524A	Horn push and dipper ..	1946-52	*31329A	" " ..	1950-52	*38013B
	1949-52	25533A/B	dito (Export) ..	1946-52	*31061B	Windshield wipers		
Suppressor (distributor) ..	1951-52	78114A	Ignition and lighting ..	1946-49	*344540	Motor ..	1946-48	733071
" (plug) ..	1951-52	78106A	1946-52	*34018A	" (steel cab) ..	1949-52	733071	
SWITCHES			1950-52	*301296	" (Van) ..	1949-52	*75049A	
Battery master (G.P.O.)	1951-52	76602B	Starting motor ..	1946-52	031296	" (L.H.D.) ..	1951-52	75138B
			Trafficators (G.P.O.) ..	1951-52	*053830	Arm ..	1946-52	*735045
						Blade ..	1946-52	727802

MORRIS COMMERCIAL 25/35 cwt. 1946

Ammeter .. .	1946	*364428	LAMPS			SWITCHES—continued		
Battery .. .	1946	SLT13A	Head			Ignition and lighting ..	1946	*344540
Coil, ignition .. .	1946	*45020A	Non-dip .. .	1946	50129A	Starting motor ..	1946	76427A
Control box .. .	1946	*37031A	Side	1946	52036A	Adaptor plate ..	—	78275A
Distributor .. .	1946	40069A/B	Stop tail and number plate	1946	*53028B	Warning light (ignition) ..	1946	*318505
Generator .. .	1946	22449A	Starting motor .. .	1946	*255378	Windshield wipers		
Horn .. .	1946	069344				Motor ..	1946-48	733071
Junction box .. .	1946	78266A	SWITCHES			" (steel cab) ..	1949-52	733071
			Horn push and dipper ..	1946	*380150	" (Van) ..	1949-52	*75049A
						" (L.H.D.) ..	1951-52	75138B
						Arm ..	1946-52	*735045
						Blade ..	1946-52	727802

MORRIS COMMERCIAL 30 cwt. LC4 1953: LC5 (Petrol) 1954-60: LCO 1956-57: LCO5 (Diesel) 1958-60

Ammeter .. .	1954-60	36125A/B	LAMPS—continued			SWITCHES—continued		
Battery (Petrol) .. .	1953-59	GT11A	R.H.D., dip left ..	1956-59	51344B	Panel .. .	1953-54	31192A
" (Diesel) .. .	1958-59	MT19E	L.H.D., dip right ..	Later	51344D/F	Knob .. .	—	315062
Bulb holder, speedo, light .. .	1953-59	39007A	ditto .. .	1953	*50528M	Panel .. .	1955	31201D
Bulb, panel light .. .	1953-60	39010A	" "	1954	*51345A	Knob .. .	—	*312850
Bulb .. .	987		" "	1955	*51345B	Panel .. .	1956-60	*31557A
Coil, ignition .. .	1953-54	*45020A/B	Starting motor .. .	1956-60	*51345D/F	Knob .. .	—	316132
" "	1955	*45053A				Solenoid, starting motor (Diesel) ..	1956-60	*76443A
" "	1956	*45054D				Solenoid operating (Diesel) ..	1956-58	*31294A
" "	1957-60	*45053				Starting motor (Petrol) ..	1953-60	76423A
H/M						Coupling .. .	—	764428
Control box .. .	1953-54	37065E				Stop lamp .. .	1955-60	31082E/J
" "	Later	*37138A/D				Windshield wiper ..	1953-54	31192A
		37182A/H				Knob .. .	—	315062
" "	1956-59	37182I				Windshield wiper ..	1955	31201D
" "	Later	37182J				Knob .. .	—	318385
Distributor .. .	1953	40069D/H	Number plate illumination ..	1953-60	52139B/E	Windshield wiper ..	1956-60	*31557A
" .. .	1954-56	*40321E/F	Side .. .	1953-60	52178D/H	Knob .. .	—	316388
" .. .	1957-59	40496A/B	Stop tail .. .	1953-60		Windshield wiper ..	—	
" .. .	Later	40496D & F	Sleeve, Lucas connector ..			Knob .. .	—	
Fuse box .. .	1953-60	033239	14 amp .. .	1960	54190042			
Generator .. .	1953-55	22258D	35 amp .. .	1960	54190043	Warning lights .. .		
" .. .	1956-59	22258E/F	Starting motor (Petrol) ..	1953	25533A/B	Ignition .. .	1953-60	38049A
" .. .	1960	22700D	" (Diesel) .. .	1954-60	26043A	Main beam .. .	1953-60	38052B
" .. .	(temporary alternative)	1960	" "	1956-57	26122A			
Horn .. .	1953-58	*22704A	" "	1958-59	26135A	Windshield wipers .. .		
Junction box .. .	1959-60	*069213	" "	1960	26051J	Motor .. .	1953-60	75146A/B
LAMPS	1953-60	69046F	Suppressor (distributor) ..	1953-55	26051K/L	Wheelbox .. .	1953-60	72624A/H
Head, Home		78265A	" (plugs) .. .	1953-60	78114A	Crosshead and rack assy. .. .		
R.H.D., dip left .. .	1953	50992A			78106A	Left hand drive .. .	1953-60	738499
" " .. .	1954-55	51344A				Right hand drive .. .	1953-60	738987
" " .. .	1956-59	51344B				Outer casing .. .	—	
" " .. .	Later	51344D/F				Motor to wheelbox .. .	1953-60	739870
Head, Export						Wheelbox to wheelbox .. .	—	
R.H.D., dip left .. .	1953	50992A				Left hand drive .. .	1953-60	*739974
" " .. .	1954-55	51344A				End tube .. .	1953-60	740031
						Arm, left hand crank .. .	1953-60	737639
						" right hand crank .. .	1953-60	737640
						Blade .. .	1953-60	727803

MORRIS COMMERCIAL 30 cwt. LC4 1953: LC5 (Petrol) 1954-59: LCO5X (Diesel) 1958-59 (G.P.O. Models)

Ammeter .. .	1954-59	36125B	Distributor	1953	40069D/H	LAMPS—continued	
Battery (Petrol) .. .	1953-59	GT11A	" .. .	Later	1956-59	*40321E/F	Side .. .	1953-56
" (Diesel) .. .	1958-59	MT19E	Generator (Petrol)	1953-59	40496A/B	" .. .	*52105A
Bulb holder, speedo, light .. .	1953-59	39010A	Fuse box	1953-59	033239	Reflex reflector .. .	
Bulb, panel light .. .	1953-59	39007A	" .. .	Later	1956-59	22258D	Stop tail and number plate .. .	1953-59
Bulb .. .	987		"	1956-59	*22258E/F	" .. . (alternative) .. .	1955-59
Coil, ignition .. .	1953-54	*45020A	Horn	1953-59	*22483D	Starting motor (Petrol) .. .	1953
" .. .	1955	*45053D	Junction box	1954-59	*069213	" .. . (Diesel) .. .	1954-59
" .. .	1956	*45054E			78265A		" .. . (Diesel) .. .	26043A
" .. .	1957-59	*45053					" .. . (Diesel) .. .	26125A
H/M								
Control box (Petrol) .. .	1953-54	37065E	LAMPS					
" .. .	Later	*37138D	Head	1953	*50992A		
		37182E/H	"	1954-55	51344B/D		
		37183H	"	1956-59	51344B & D/F		

* See Supersession Chart L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive

continued



Equipment Specification

MORRIS COMMERCIAL

MORRIS COMMERCIAL 30 cwt. LC4 1953; LC5 (Petrol) 1954-59; LCO5X (Diesel) 1958-59 (G.P.O. Models)—cont'd

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			SWITCHES—continued			Windshield wipers		
Battery master ..	1953-59	76602B	Solenoid, starting motor (Diesel)	1958-59	*76443A	Motor	1953-55	75146A
Fuel gauge (Diesel) ..	1958-59	*31294A	Starting motor (Petrol)	1953-59	76423A	" (Engineer's cab) ..	1956-59	75299A/B
Heater plug (Diesel) ..	1958-59	31425B	Coupling ..	—	76442B	Wheelbox (offside) ..	1957-59	75146A/B
Knob ..	—	315042	Stop lamp ..	1953-59	31082D/H	(nearside) ..	1953-59	72624H
Horn push and dipper ..	1953-59	*31305A	Trafficator ..	1953-59	031296A/E	Crosshead and rack assy.	1953-59	72643A
Ignition ..	1953-55	31187D	Windshield wiper ..	1953-54	31192D	Outer casing ..	1953-59	73849F
" ..	1956-59	Serviced by G.P.O.	Knob ..	—	315062	Motor to wheelbox ..	1953-59	739870
Lighting ..	1953-55	31126B	Windshield wiper ..	1955	31201D	Wheelbox to wheelbox ..	1953-59	739972
Knob ..	—	315042	Knob ..	—	318385	End tube ..	1953-59	740031
Lighting ..	1956-59	*31251A	Windshield wiper ..	1956-59	*31557A	Ferrule, casing retaining ..	1953-59	738410
A/D			Knob ..	—	316388	Arm, left hand crank ..	1953-55	737639
Knob ..	—	*316117	Trafficators ..	1953-59	54050A	ditto ..	1956-59	737496
Panel ..	1953-54	31192D	Warning lights ..			ditto (Engineer's cab) ..	1957-59	737639
Knob ..	—	315062	Ignition ..	1953-55	38049A	Arm, right hand crank ..	1953-55	737640
Panel ..	1955	*31201D	" ..	1956-59	*38013B	ditto ..	1956-59	737640
Knob ..	—	*312850	Main beam ..	1953-59	38052B	Blade ..	1953-55	727803
Panel ..	1956-59	*31557A				" (Engineer's cab) ..	1956-59	732642
Knob ..	—	316132					1957-59	727803

§ FUEL INJECTION EQUIPMENT (B.M.C. 2.2 litre Diesel Engine)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump ..	1958-59	BPE4A65U210S6355EL	Nozzle holder ..	1958-59	BKB355668
Governor ..	1958	BEPAMZ80A131	Nozzle ..	1958-59	BDN12SP6A
Venturi ..	1959	BEPBMZ80A131	Filter ..	1958	F2-9
	1958-59	BEPK42-42-111S	" ..	1959	F2B-9

MORRIS COMMERCIAL 35/40, 45/55 and 60/70 cwt., 5 ton Forward Control, Tipper and ECV13/3 1946-48

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter ..	1946-47	*364510	LAMPS—continued			SWITCHES—continued		
" ..	1948	36047D	Head, Home ..			Ignition and lighting ..	1946-48	*344540
Battery ..	1946-48	SLT13A	R.H.D., dip left (L.H.) ..	1946-48	50440A	Solenoid, starting motor (Forward Control) ..	1946-48	76022B
" ..	1946-48	ST11A	" non-dip (R.H.) ..	1946-48	50441A	Solenoid operating (Forward Control) ..	1946-48	*317075
Coil, ignition ..	1946-48	*45020A	Head, Export ..	1946-48	*50427A	Starting motor ..	1946-48	76427A
Control box ..	1946-48	*37032A	Vertical dip (L.H.) ..	1946-48	*50464A	Stop lamp ..	1946-48	31281B
" ..	1948	37065E	" (R.H.) ..	1946-48	*52110A	Spring ..	—	315543
Distributor ..	1946-48	406354	Side ..	1946-48	*52105A	Warning light (ignition) ..	1946-48	*38013B
Generator ..	1946-48	238395	(ECV13/3 & Tipper) ..	1946-48	*53063B	Windshield wipers ..		
Horn ..	1946-48	069344	Stop tail and number plate ..	1946-48	*620601	Motor ..	1946-48	733071
Inspection lamp sockets ..	1946-48	*39511A	Mirror ..	1946-48	270468	Arm ..	1946-48	*735045
Junction box ..	1946-48	78266A	Starting motor ..	1946-48	*380150	Blade ..	1946-48	727802
LAMPS ..			SWITCHES ..					
Dash ..	1946-48	56031A	Horn push and dipper ..	1946-48				

MORRIS COMMERCIAL CV Ambulance 1947-51

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter ..	1947-49	*364510	LAMPS, Head, Home—continued			Starting motor ..	1947-48	270468
" ..	1950-51	36047D	R.H.D., dip left (L.H.) ..	1948-49	50440A	" ..	1949	26008A/B
Battery ..	1947-51	SLT13A	" non-dip (R.H.) ..	1948-49	50441A	" ..	1950-51	26038A
Coil, ignition ..	1947-51	*45020A	" dip left (L.H.) ..	1950	*50854A	Suppressor (distributor) ..	1951	78105A
Control box ..	1947	*37032A	" non-dip (R.H.) ..	1950	*50855A	" (plug) ..	1951	78106A
" ..	Later	1948-51	" dip left ..	1951	*50728D	SWITCHES ..		
Distributor ..	1947-48	406354	(L.H. and R.H.) ..	1951	*51014A/F	Horn push and dipper ..	1947-51	*31329A
Fuse box ..	1951	033240	ditto .. Later	1951	*51014A/F	Ignition and lighting ..	1947-51	*34018A
Generator ..	1947	*22446A	Head, Export ..	1950	*50854A	Starting motor ..	1947-51	76427A
" ..	1948-49	238395	R.H.D., dip left ..	1951	*50728D	Stop lamp ..	1947-51	31281B
" ..	1950-51	*22250E/F	" .. Later	1951	*51014A/F	Spring ..	—	315543
Horn ..	1947-51	22258D	L.H.D., dip right ..	1950	*A50834A	Trafficator ..	1947-51	31190A
Inspection lamp sockets ..	1947-51	*069213	" .. "	1951	*A50728D	Trafficators ..	1947-48	*539911
Junction box ..	1947-51	39507A	" .. "	1951	*51016A/F	Warning light (ignition) ..	1949-51	*54039A
LAMPS ..		78266A	Head, Export Europe (not France) ..	1950	*B50854A	Windshield wipers ..		
Dash ..	1950-51	56031A	ditto ..	1951	*B50728D	Motor ..	1947-48	*733107
Head, Home ..	1947	*50442A	ditto .. Later	1951	*51015A/F	Arm ..	1949-51	75089B
R.H.D., dip left (L.H.) ..	1947	*50443A	Side ..	1947-48	*52105A	Blade ..	1947-48	*735045
" .. non-dip (R.H.) ..	1947		" ..	1949-51	52154A	" ..	1949-51	735096
			Stop tail and number plate ..	1947-51	*53031D	" ..	1949-51	727803

MORRIS COMMERCIAL CVF13/5 1946-47: CVII/30 1946-48: CVII/40 1946-51 (Lorries): CV9/40 1950-51: CV10 1946-48 (Tippers)

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter ..	1946-48	*364428	Control box ..	1946	*37003A	Generator ..	1946-48	238395
" ..	1950-51	36047D	" ..	1947-48	*37032A	" (Export) ..	1946-48	*22446A
Battery ..	1946-48	SG11A	" ..	1950-51	37065E	" ..	1950-51	*22250E/F
" ..	1950-51	SLT13A	Distributor ..	1946-48	*37138A/B	" ..	Later	22258D
Coil, ignition ..	1946-51	*45020A	Fuse box ..	1946-48	406354	Horn ..	1946-51	*069213
			" ..	1950-51	40129D/F	Junction box ..	1946-51	78266A
				1951	033240			

* See Supersession Chart
R.H.D. ... Right hand drive

§ Serviced by C.A.V. Ltd.
Note. Before ordering Steering Column Controls refer to the detailed parts section (P)

continued



Equipment Specification

MORRIS COMMERCIAL

MORRIS COMMERCIAL

CVF13/5 1946-47: CV11/30 1946-48: CV11/40 1946-51 (Lorries): CV9/40 1950-51: CV10 1946-48 (Tippers)—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS			LAMPS—continued			SWITCHES—continued		
Dash	1950-51	56031A	Head, Export Europe (not France)	1951	*B50728D	Solenoid operating (CVF13/5) ..	1946-47	*317067
Head, Home			" ditto .. Later	1951	*51015E	Starting motor (except CVF13/5) ..		
R.H.D., dip left (L.H.)	1946-48	*50336A	Side	1946-48	52036A	Stop lamp ..	1946-51	76427A
" non-dip (R.H.)	1946-48	*50337A	"	1950-51	52154A	Spring ..	1950-51	31281B
" dip left (L.H.)	1950	*50854D	Stop tail and number plate ..	1946-48	*53028B	Trafficator (G.P.O.) ..	1951	315543
" non-dip (R.H.)	1950	*50855B	"	1950-51	*53063B	Trafficators (G.P.O.) ..	1951	*053830
" dip left ..	1951	*50728D	Mirror	1946-51	*620601	Warning light (ignition) ..	1946-48	*318505
(L.H. and R.H.)	1951	*51014E	Starting motor	1946-48	270468	"	1949-51	*38013B
ditto .. Later	1951		"	1950-51	26038A	Windshield wipers		
Head, Export			SWITCHES			Motor	1946-51	*75049A
Vertical dip (L.H.) ..	1946-48	50338A	Battery master (G.P.O.) ..	1951	76602B	" (CV10/5) ..	1946-48	733071
" .. (R.H.) ..	1946-48	*50339A	Horn push and dipper ..	1946-51	*380150	Arm	1946-48	*735045
R.H.D., dip left ..	1951	*50728D	" ditto (G.P.O.) ..	1951	*31321A	Blade	1950-51	735065
" Later	1951	*51014E	Ignition and lighting ..	1946-48	*344540	"	1946-48	727802
L.H.D., dip right ..	1951	*A50728D	Solenoid, starting motor (CVF13-5)	1946-47	76022B	Blade	1950-51	727803
" Later	1951	*51016E				"		

MORRIS COMMERCIAL ECV13/5 (Petrol) and ECVO13/5 (Diesel) 1949

Ammeter	1949	36047D	LAMPS—continued			SWITCHES—continued		
Battery (Petrol)	1949	SLT13A	Head			Ignition and lighting (Petrol) ..	1949	*344540
" (Diesel)	1949	LMCXB EW9A	Vertical dip (L.H.) ..	1949	*50427A	Lighting (Diesel) ..	1949	*34031A
Coil, ignition (Petrol) ..	1949	*45020A	" (R.H.) ..	1949	*50464A	Solenoid operating (Diesel) ..	1949	*31071A
Control box	1949	37065E	Side	1949	*52105A	Starting motor (Petrol) ..	1949	76427A
Distributor (Petrol) ..	1949	40129D	Stop tail and number plate ..	1949	*53063B	Stop lamp (Diesel) ..	1949	31281B
Generator (Petrol)	1949	*22446A	Mirror	1949	*620601	Spring	—	315543
" Later	1949	*22250E/F	Starting motor (Petrol) ..	1949	270468	Warning light (ignition) (Petrol) ..	1949	*38013B
" (Diesel)	1949	*22242A	"	1949	26008A/B	Windshield wipers		
Horn	1949	069344	" (Diesel)	1949	BS524K60	Motor	1949	733071
Inspection lamp sockets ..	1949	39507A	" serviced by C.A.V.)	1949		Arm	1949	*735096
Junction box	1949	78266A	SWITCHES			Blade	1949	727802
LAMPS			Fuel gauge (Diesel)	1949	*31071A			
Dash	1949	56031A	Horn push and dipper	1949	*380150			

§ FUEL INJECTION EQUIPMENT

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1949	BPE6A60Q320-3S338	Nozzle holder	1949	PNH1
Governor	1949	BEPMN80A59	Nozzle	1949	PN150-1
Coupling	1949	BZKG31-502	Filter	1949	BFA5P2
Venturi	1949	BEPK58-46-71			

MORRIS COMMERCIAL FV 1949-53: FVS 1954: FVS12/5 1955: Petrol Tanker 1951-52

Ammeter	1949-54	*36018B	LAMPS			Starting motor	1949	26008A/B
"	1955	36125B	Head, Home			" ditto (Petrol Tanker) ..	1950-55	26038A
Battery	1949-51	SG11A	R.H.D., dip left (L.H.) ..	1949-51	*50728D	" (Petrol Tanker) ..	1951-52	26066A
"	1952-55	GT11A	" non-dip (R.H.) ..	1949-51	*50729D	Suppressor (distributor) ..	1951-53	78105A
Bulb holder, panel light ..	1949-55	39007A	(L.H. and R.H.)	1951-54	*51017A	" (plug) ..	1954-55	78114A
"	1955	39010A	ditto	1955	51344A	" (plug) ..	1951-55	78106A
" Bulb	1949-55	987	Head, Export			SWITCHES		
Coil, ignition	1949-54	*45020A	R.H.D., dip left ..	1949-51	*50728D	Horn push and dipper ..	1949-54	*380191
" (Petrol Tanker)	1951-52	*45053A	"	1951-54	*51017A	"	1955	*31418A
Control box	1949-52	37065E	L.H.D., dip right ..	1949-51	*A50728D	Ignition	1949-54	31497A
" Later	1952-55	*37138A/D	"	1951-54	50873B	Ignition and lighting ..	1949-54	*34018A
Distributor	1949-53	40129D/F	"	1955	*51345B	Lighting	1955	31126B
" (Petrol Tanker)	1951-52	40228B/D	Head, Export Europe (not France)	1949-51	*B50728D	Knob	—	315042
Fuse box	1952-53	40241A/B	"	1951-54	*51018A	Panel	1949-54	*31276A
"	1954-55	033240	"	1955	51346A	Starting motor	1949-55	76427A/D
Generator	1949-52	033239	Number plate illumination	1949-55	53101E	(series-parallel, serviced by C.A.V.)	1949-55	1820410
" Later	1952-55	*22250E/F	Side	1949-54	52047A	Windshield wiper	1955	31201D
" (Petrol Tanker)	1951-52	*22258D	"	1955	52139B	Knob	—	*312850
Horn	1949-55	069213	Stop tail and number plate	1949-53	*53063B	Warning lights		
Inspection lamp sockets ..	1949-50	39507A	Stop tail	1954-55	53178D/E	Ignition	1949-55	*38013B
"	1951-52	39515A	" (Petrol Tanker, serviced by C.A.V.)	1951-52	*53169H	Main beam	1949-55	38052B
Junction box	1949-55	78265A	Mirror	1949-54	*062519	Windshield wipers		
"	1949-55	78266A	Reflex reflector	1955	57052A	Motor	1949-55	*75069B



Equipment Specification

MORRIS COMMERCIAL

MORRIS COMMERCIAL
FVO 1949-53: FVSO 1954: FVSO12/5 1955

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter ..	1949-54	*36018B	LAMPS			Starting motor (serviced by C.A.V.) ..	1949-55	BS524K60
" ..	1955	36125B	Head, Home					
Battery ..	1949-52	LMCXB	R.H.D., dip left (L.H.)	1949-51	*50728D			
		EW9A	" dip left	1949-51	*50729D			
Bulb holder, panel light ..	1953-55	MCX9A	(L.H. and R.H.) Later	1951-54	*51017A	SWITCHES	1949-54	*31071A
Bulb holder, flasher ..	1949-54	39007A	ditto ..	1955	51344A	Fuel gauge	1949-54	*380191
Bulb holder, speedo. ..	1955	39007A	Head, Export	1949-51	*50728D	Horn push and dipper ..	1949-54	*31418A
Bulb ..	1949-55	39010A	R.H.D., dip left	1951-54	*51017A	Lighting	1949-54	*34031A
Control box (Home) ..	1949-54	987	" .. Later	1955	51344A	Knob	1955	31126B
" (Export) ..	1949-52	*37076E	L.H.D., dip right ..	1949-51	*50728D	Panel	1949-54	*31276A
" .. Later	1952-54	*37076E	" .. Later	1951-54	50873E	Solenoid operating ..	1949-54	*31071A
" ..	1955	*37139D	" ..	1955	*51345B	" .. Later	1955	31107A
Fuse box ..	1952-55	033240	Head, Export Europe	1949-51	*50728D	Knob	1955	31253A
Generator ..	1949	*22424A	(not France) ..	1949-51	*51018A	Windshield wiper ..	1955	*317366
" ..	1950-52	*22441A	ditto .. Later	1951-54	51346A	Knob	—	*31201D
" .. Later	1952-55	*22458A/B	Number plate illumination	1954-55	53101E	Warning light (main beam)	1949-55	38052B
Horn ..	1949-55	*069213	Side	1949-54	52047A	Windshield wipers		
Inspection lamp sockets ..	1949-50	39507A	" ..	1955	52139B	Motor	1949-55	*75069B
" ..	1951-52	39515A	Stop tail and number plate	1949-53	*53063B	Arm	1949-55	735156
Junction box ..	1949-55	78265A	" ..	1954-55	53178D/E	Blade	1949-55	727803
" ..	1949-55	78266A	Mirror	1949-55	*062519			

§ FUEL INJECTION EQUIPMENT

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump ..	1949-50	BPE6A60Q320-3S338E	Venturi	1949-55	BEPK60-46-80
" Governor ..	1951-55	BPE6A60S320-3S6222E	Nozzle holder	1949-55	PNH2
" ..	1949-50	BEPMZ80A83	Nozzle	1949-55	PN150-2
Coupling ..	1951-55	BEPMZ80A96	Filter	1949-55	BFA5P2
	1949-55	BZKG31-502			

MORRIS COMMERCIAL NV 1954: NV12/3 1955

Ammeter ..	1954-55	36125A	LAMPS—continued			SWITCHES—continued		
Battery ..	1954-55	GT11A	Side	1954-55	52139B	Windshield wiper ..	1955	31201D
Bulb holder, panel light ..	1954-55	39010A	Stop tail ..	1954-55	53178D/E	Knob	—	318385
Bulb holder, speedo. ..	1954-55	39007A	Reflex reflector ..	1955	57052A			
Coil, ignition ..	1954	*45020A/B	Starting motor ..	1954-55	26038A			
" ..	1955	*45053A	Suppressor (distributor) ..	1954	78105A			
Control box ..	1954	37065E	" (plug)" ..	1955	78114A			
" .. Later	1954-55	*37138A/D		1954-55	78106A			
Distributor ..	1954-55	40129D/F	SWITCHES					
Fuse box ..	1954-55	033239	Horn push and dipper ..	1954-55	*31305A	Windshield wipers		
Generator ..	1954-55	22258D	Ignition	1954-55	31187D	Motor	1954-55	75146A
Horn ..	1954-55	*069213	Lighting	1954-55	31126B	Wheelbox	1954-55	72624H
LAMPS			Knob	—	315042	Crosshead and rack assy. (Left hand drive) ..	1954-55	738499
Head, Home			Panel	1954	31192A	(Right hand drive) ..	1954-55	738987
R.H.D., dip left ..	1954-55	51344A	Knob	1954	315062	Outer casing ..		
Head, Export			Panel	1955	31201D	Motor to wheelbox ..	1954-55	739870
R.H.D., dip left ..	1954-55	51344A	Knob	—	*312850	Wheelbox to wheelbox (Left hand drive) ..	1954-55	*739974
L.H.D., dip right ..	1954-55	*51345A & B	Starting motor ..	1954-55	76423A	End tube	1954-55	740031
Head, Export Europe (not France) ..	1954-55	51346A	Coupling	—	764428	Arm, left hand	1954-55	737639
Number plate illumination ..	1954-55	53101E	Windshield wiper ..	1954	31192A	" right hand	1954-55	737640

MORRIS COMMERCIAL NVS 1951-54: NVS12/3 and NVS13/5 1955

Ammeter ..	1951-55	36125A/B	LAMPS, Head, Export—continued			SWITCHES—continued		
Battery ..	1951-55	GT11A	L.H.D., dip right ..	1951	*A50799D	Starting motor	1951-55	76423A
Bulb holder, panel light ..	1951-55	39007A	" .. Later	1951-53	*50528M	Coupling	—	764428
" ..	1953-55	39010A	Head, Export Europe ..	1954-55	*51345A & B	Windshield wiper ..	1951-54	*31252A
Coil, ignition ..	1951-54	*45020A/B	(not France)	1951	*B50799D	Knob	—	*315094
" ..	1955	*45053A	ditto	1951-54	*50961A	Windshield wiper ..	1955	31201D
Control box ..	1951-52	37065E	ditto .. Later	1954-55	51346A	Knob	—	318385
" .. Later	1952-55	*37138B	Number plate illumination ..	1953-55	53101E	Warning lights		
Distributor ..	1951	40228A	Side	1951-55	52139B	Ignition	1951-54	*38049A
Fuse box ..	1951-55	40228B/D	Stop tail	1951-53	*53063B	Main beam	1951-55	38052B
Generator ..	1951-52	033239	ditto .. Later	1953-55	53178D			
" .. Later	1952-55	*22250E/F	Starting motor	1951-55	78114A			
Horn (low note) ..	1951-55	22258D	Suppressor (distributor)	1951-55	78106A			
LAMPS			ditto .. (plug)" ..	1951-55				
Head, Home			SWITCHES					
R.H.D., dip left (L.H.) ..	1951	*50799D	Horn push and dipper ..	1951-55	*31305A			
" non-dip (R.H.) ..	1951	*50579K	Ignition	1951-55	31187D			
" dip left ..	—		Lighting	1951-54	*31251A			
(L.H. and R.H.) Later	1951	*50959A	Knob	—	316117			
" ..	1952-53	*50992A	Lighting	1955	31126B			
ditto	1954-55	51344A	Knob	—	315042			
Head, Export			Panel	1951-54	312850			
R.H.D., dip left ..	1951	*50799D	Knob	—				
" .. Later	1951	*50959A	Panel	1955				
"	1952-53	*50992A	Panel	—				
"	1954-55	51344A	Knob	—				

* See Supersession Chart
R.H.D. ... Right hand drive

§ Serviced by C.A.V. Ltd.
L.H. ... Left hand
R.H. ... Right hand
L.H.D. ... Left hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

MORRIS COMMERCIAL

MORRIS COMMERCIAL NVO 1951-54: NVO12/3 and NVO11/5 1955

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter ..	1951-55	36125A/B	LAMPS, Head, Export— continued	1951	*A50799D	SWITCHES—continued	1955	*76411E
Battery ..	1951-52	LMCXB EW9A	L.H.D., dip right ..	1951-53	*50528M	Solenoid, starting motor	1951-52	31253A
" (NVO12/3) ..	1953-55	MCX9A	" " Later ..	1954-55	*51345A & B	Solenoid operating ..	1951-52	*317366
Bulb holder, panel light ..	1951-55	MT19E	Head, Export Europe (not France) ..	1951	*B50799D	Knob ..	1953-55	31107A
Control box ..	1951-55	39007A	ditto .. Later ..	1951-53	*50961A	Solenoid operating ..	1953-55	
" .. Later	1952-55	39010A	ditto ..	1954-55	51346A	Starting motor (series-parallel, serviced by C.A.V.) ..	1951-55	1820410
" (NVO12/3) ..	1955	*37076E	Number plate illumination ..	1953-55	53101E	Windshield wiper ..	1951-54	*31252A
Fuse box ..	1952-55	033239	Side ..	1951-55	52139B	Knob ..	1955	*315094
Generator ..	1951-52	*22441A	Stop tail and number plate ..	1951-53	*53063B	Windshield wiper ..	1955	31201D
" .. Later	1952-55	*22458A/B	Starting motor (serviced by C.A.V.) ..	1954-55	*53178D/E	Knob ..	—	*312850
Horn ..	1955	22258D	BS524K/L			Windshield wipers	1951-52	*75100D
LAMPS ..	1951-55	*069213	60			Motor ..	1953-55	75146A
Head, Home			Wheelbox ..			Wheelbox ..	1951-55	72624A/H
R.H.D., dip left (L.H.) ..	1951	*50799D	Crosshead and rack assy. (Left hand drive) ..			Crosshead and rack assy. (Right hand drive) ..	1951-55	738499
" non-dip (R.H.) ..	1951	*50579K	Lighting ..	1951-54	*31251A	Outer casing ..	1951-55	738987
" dip left ..			Knob ..	—	*316117	Motor to wheelbox ..	1951-55	739870
(L.H. and R.H.) .. Later	1951	*50959A	Lighting ..	1955	31126B	Wheelbox to wheelbox ..	1953-55	
ditto ..	1952-53	*50992A	Knob ..	—	315042	(Left hand drive) ..	1953-55	*739974
ditto ..	1954-55	51344A	Panel ..	1951-54	*31252A	End tube ..	1951-55	740031
Head, Export			Knob ..	—	*315098	Arm, left hand ..	1951-55	737639
R.H.D., dip left ..	1951	*50799D	Panel ..	1955	31201D	right hand ..	1951-55	737640
" Later	1951	*50959A	Knob ..	—	*312850	Blade ..	1951-55	727803
"	1952-53	*50992A						
"	1954-55	51344A						

§ FUEL INJECTION EQUIPMENT

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump ..	1951-55	BPE6A60S320-3S6222E	Nozzle holder ..	1951-55	PNH2
Governor ..	1951-55	BEPMZ80A96	Nozzle ..	1951-55	PN150-2
Coupling ..	1951-55	BZKG31-502	Filter ..	1951-52	BFA5P2
Venturi ..	1951-55	BEPK60-46-80	" ..	1953-55	F2-1

MORRIS COMMERCIAL OP Passenger Chassis 1949-50

Ammeter ..	1949-50	*36006B	Generator (24 volt, serviced by C.A.V.) ..	1949-50	1151020	SWITCHES	1949	*380150
Control box (12 volt) ..	1949	37065E	Horn (12 volt) ..	1949	069344	Horn push and dipper ..	1949-50	34054A
" (24 volt, serviced by C.A.V.) ..	1949-50	189-4	Junction box ..	1950	78266A	Ignition and lighting ..	1949-50	*314722
Fuse box ..	1950	*385211	Starting motor (serviced by C.A.V.) ..	1949-50	BS524K60	Panel ..	1949-50	*31071A
Generator (12 volt) ..	1949	*22424A				Solenoid operating ..	1949-50	

§ FUEL INJECTION EQUIPMENT

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump ..	1949-50	BPE6A60Q320-3S338E	Nozzle holder ..	1949-50	PNH2
Governor ..	1949-50	BEPMZ80A83	Nozzle ..	1949-50	PN150-2
Coupling ..	1949-50	BZKG31-502	Filter ..	1949-50	BFA5P2
Venturi ..	1949-50	BEPK60-46-80			

MORRIS COMMERCIAL PP Coach 1950-52

Ammeter ..	1950-51	*36006B	Horn ..	1950-51	*069213	LAMPS—continued	1950-52	52047A
Battery ..	1950-51	LMCXB EW9A	Inspection lamp sockets ..	1950-51	39507A	Side ..	1950-52	*53062B
Bulb holder, panel light ..	1950-51	39007A	Junction box ..	1950-51	78266A	Stop tail and number plate ..	1950-52	26038A
Bulb ..	—	987	LAMPS	1950-51	*50728D	Starting motor ..	1950-51	78105A
Coil, ignition ..	1950-51	*45020A	Head, Home	1950-51	*50729D	Suppressor (distributor) ..	1951	78106A
Control box ..	1950-51	37065E	R.H.D., dip left (L.H.) ..	1950-51		" (plug) ..	1951	
" .. Later	1951	*37138A/B	" non-dip (R.H.) ..	1950-51		SWITCHES	1950-51	
" (heavy duty, serviced by C.A.V.) ..	1950-51	202-1	(L.H. and R.H.) ..	1952	*51017E	Battery master ..	1950-51	*768061
Distributor ..	1950-51	40129D/F	Head, Export	1950-51	*50728D	Horn push and dipper ..	1950-51	*380234
Fuse box (standard) ..	1951	033240	R.H.D., dip left ..	1952	*51017E	Ignition and lighting ..	1950-51	*34018A
" (heavy duty) ..	1950-51	*385211	L.H.D., dip right ..	1950-51	*50728D	Panel ..	1950-51	*314722
Generator (standard) ..	1950-51	*22250E/F	Head, Export Europe ..	1952	*50873B	Starting motor ..	1950-51	76427A
" .. Later	1951	22258D	(not France) ..	1950-51	*B50728D	(series-parallel, serviced by C.A.V.) ..	1950-51	1820410
" (heavy duty, serviced by C.A.V.) ..	1950-51	H5512-7	ditto ..	1952	*51018E	Warning light (ignition) ..	1950-51	*38013B

MORRIS COMMERCIAL 10 cwt. 'J' Van 1949-57

Ammeter ..	1949-50	36047D	Control box ..	1949-54	37065E	Fuse box—continued ..	1954	033239
" ..	1951-54	*36113A	" ..	1955	*37138D	" ..	1955	033240
" ..	1955-57	36047E	" ..	1956-57	37182A/H	" ..	1956-57	033239
Battery ..	1949-57	GT9A	Distributor	40152B	Generator ..	1949-52	*22250E/F
Bulb (G.P.O.) ..	1951-57	GT11A	" ..	1951-53	*40237A/B	" ..	1952-56	22258D
Bulb holder, panel light ..	1949-57	39007A	" ..	1954-57	40358D/F	" ..	1956-57	22258E
Bulb ..	—	987	" ..			Horn ..	1949-57	*069213
Coil, ignition ..	1949-55	*45020A/B	" ..			Inspection lamp sockets ..	1949-55	39507A
" .. Later	1955-57	*45053A/H	1951-53	033240				

* See Supersession Chart § Serviced by C.A.V. Ltd. L.H. ... Left hand R.H. ... Right hand L.H.D. ... Left hand drive continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

MORRIS COMMERCIAL

MORRIS COMMERCIAL 10 cwt. 'J' Van 1949-57—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS			LAMPS—continued			Warning lights		
Head, Home			Stop tail	1949-50	*53151H/J	Ignition	1949-54	*38013B
R.H.D., dip left .. .	1949-50	*50854A	"	1951-57	53178F	Main beam	1955-57	38049A
"	1951	*50728D	Mirror	1949-53	62515A	Windshield wipers		
"	1951-55	*51014E	Reflex reflector (G.P.O.)	1951-57	57131A	Motor	1949-57	75097A
"	1956-57	51023E	Starting motor	1949-57	25021A/H	" (G.P.O.)	1951	75100D
Head, Export			Suppressor	1951-55	78105A	Wheelbox (G.P.O.)	1952-57	75146A/B
R.H.D., dip left .. .	1949-50	*50854A	"	1956-57	78106A	Crosshead and rack assy. (G.P.O.) Cut to 55 $\frac{1}{4}$ "	1951-57	72648A/B
"	1951	*50728D	SWITCHES			Outer casing		
"	1951-55	*51014E	Battery master (G.P.O.)	1951-57	76602B	Motor to wheelbox (G.P.O.)	1951-57	*739907
"	1956-57	51023E	Foglamp	1949-53	*31276A	Wheelbox to wheelbox (G.P.O.)	1951	739937
L.H.D., dip right .. .	1949-50	*A50728D	Horn push and dipper	1949-54	*380191	End tube (G.P.O.)	1952-57	739973
"	1951-55	*51016E	Ignition and lighting	1949-57	*34018A	Ferrule, casing retaining (G.P.O.)	1951-57	740031
"	1956-57	51025F	Panel	1949-57	*31276A	Arm	1951-57	738410
Head, Export Europe (not France)	1949-50	*B50854A	Starting motor	1949-57	76427A/D	Blade	1949-57	735065
ditto	1951	*B50728D	Stop lamp	1956-57	31082E	" (G.P.O.)	1951-57	738929
ditto	1951-55	*51015E	Trafficator (G.P.O.)	1951-53	031046	Blade	1949-57	727803
Head, Export Mexico	1956-57	51682A	Windshield wiper	1954-57	031296	" (G.P.O.)	1951-57	738930
Number plate illumination Side	1949-50	53101E/H	Trafficators (G.P.O.)	1951-53	*053830			
Side	1949-57	52149A	"	1954-57	54050A			
" (G.P.O.)	1951-55	52139B/E						
"	1956	52153A						
"	1957	*52154A						
"		52105A						

MORRIS COMMERCIAL 'J2' Light Van, Pick-up Truck and 'Minibus' 1957-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1957-60	*36225A/B	LAMPS—continued			SWITCHES—continued		
Battery	1957	GT9A	Number plate illumination	1957-60	53101H/J	Starting motor	1957-60	76423A
"	1958	GT9A-3	Roof			Knob	—	76446A
"	1959-60	BT9A	Cab	1957-59	56062B	Stop lamp	1957-60	31082E/H
Bulb holder, panel light	1958-60	554734	" Minibus" interior	1959-60	56062D	Windshield wiper	1957-60	*31557A
Bulb	—	987	" Later	1957-59	56063B	Knob	—	316393
Coil, ignition	1957-60	*45053H/M	Gasket	1957-60	56063D	" (special order, B.R.S.)	1960	54332711
Control box	1957-59	37182H	Side and reflex	1957-60	52298B	Warning lights		
"	1956	37183K & L	Side, flasher and reflex (U.S.A.)	1957	52374A	Flasher	1957-60	*38155A
Distributor	1957-58	40499A	ditto	1958-60	*52333B	Ignition, bulb holder	1959-60	863511
"	Later	40499B/D & F	Stop tail, flasher and reflex	1957-60	*53479D	Main beam, bulb holder	1959-60	554734
Flasher unit	1957-60	35010A	ditto (U.S.A. & Canada)	1957-60	53634A	Bulb	—	987
Fuse box	1957-60	033239	Mirror (hinged door)	1957-58	062620	Windshield wipers		
Generator	1957-59	22258E/F	"	1959-60	062639	Motor	1957-58	75300B
"	1960	22700D	" (sliding door)	1957-58	062619	Wheelbox	1958-60	75347A
"	(temporary alternative)		"	1959-60	062638	Crosshead and rack assy.	1957-60	*72665A
Horn	1957-60	*22704A	Sleeve, Lucas connector	1960	54190042	Outer casing		72711A
LAMPS			14 amp	1960	54190043	Motor to wheelbox (2 off)	1957-58	743920
Flasher, front	1957-60	53362B	35 amp	1960	54190043	Later	1958-60	54710280
Head, Home			Starting motor	1957-59	25022A/L & M	End tube	1957-60	740746
R.H.D., dip left	1957-58	51344B	Suppressor (when fitted)	1957-60	78106A	Arm, left hand	1957-58	744134
Head, Export	Later	51344D/F	SWITCHES			"	1958-59	54710233
R.H.D., dip left	1959-60	51344D/F	Dipper	1957-60	31284A/D	"	Later	54711531
L.H.D., dip right	1957-60	*51345D/F	Heater (when fitted)	1958-60	31126E	"	1958-59	744133
Head, Export Europe (not France)	1957-59	51346B/E	Knob	—	316162	"	right hand	1958-59
(except France & Sweden)	Later		Ignition and lighting	1957-60	31270B	"	Later	54711530
Head, Export France	1959-60	58272A/B	Knob	1957-59	*316724	"	1958-59	54710232
Head, Export Sweden	1959-60	51411B	Interior light	1960	316276	"	1960	54711530
Head, Export U.S.A.	1959-60	58273A/B	Cab	1957-60	*31557A	Blade	1957-58	*737907
"	1957-59	58451A/B	Knob	—	316144	"	Later	1958-59
"	1960	51467B	" Minibus"	1957-60	31544A/B	"	1960	*737940
"		*58499A/B						54711284

MORRIS COMMERCIAL 'JB' Van 1958-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1958-60	*36113A	Horn	1958	*069213	Reflex reflector	1958	57052B
Battery	1958-60	BT7A	"	1959-60	69046F	ditto	1959-60	57116A
"	1958-59	GT11A	Flasher, rear (optional)	1959-60	53362B	ditto (special order)	1959-60	57031D
"	1960	BT11A	Flasher, rear (optional)	1959-60	53359D	ditto (models with bumper bar)	1958	*57048B
Bulb holder, panel light	1958-60	39020A	Head, Home			ditto	1959-60	57131A
ditto (G.P.O.)	1958-60	39007A	R.H.D., dip left	1958-60	51023E	Starting motor	1958-59	25022M/Q
Bulb	—	987	R.H.D., dip left	1958-60	51023F	Suppressor (when fitted)	1958-60	78106A
Coil, ignition	1958-60	*45053J/M	Head, Export			SWITCHES		
Control box	1958-59	37182H	R.H.D., dip right	1958-60	51023F	Battery master (G.P.O.)	1958-60	76602B
"	Later	37182J	Head, Export Europe			ditto (alternative)	1960	76605B
"	1960	37182K	(not France)	1958-59	51024E	Flasher (when fitted)	1959-60	31476D/B
Distributor	1957-58	40499A	(except France & Sweden)	Later		Ignition (serviced by G.P.O.)	1958-60	31607A
"	1959-60	40499B/D & F	Head, Export Sweden	1958-60	58295A	Ignition and lighting	1958-60	*34018B
Flasher unit (optional)	1959-60	35010A	Head, Export U.S.A.	1958-60	58464A	Lighting (G.P.O.)	1958-60	34065B
Fuse box	1958-60	033239	Number plate illumination	1958-60	51682A	Solenoid, starting motor	1958-60	*76443A
Generator	1958-59	22258F	Side	1958-60	52139E	Solenoid operating	1958-60	*31071A/B
"	1960	22700D	Stop tail	1958-60	*52105A/B	Stop lamp	1958-60	31082E/J
"	(temporary alternative)		"	1958-59	53178F	Trafficator (G.P.O.)	1958-60	031296
"	1960	*22704A	"	1959-60	53178H	Windshield wiper (G.P.O.)	1958-60	*31276A/E

* See Supersession Chart

L.H.D. .. Left hand drive R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)

continued



Equipment Specification

MORRIS COMMERCIAL

MORRIS COMMERCIAL

'JB' Van 1958-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Trafficators (G.P.O. and optional) .. .	1958-60	54050A	Windshield wipers—cont'd			Windshield wipers (G.P.O.)—continued		
Arm .. .	1958-60		Arm .. .	1958-60	735065	Outer casing ..	1958-60	
Blade .. .	1958-60		Blade .. .	1958-60	727803	Motor to wheelbox ..	1958-60	*739907
Warning lights			Windshield wipers (G.P.O.)			Wheelbox to wheelbox ..	1958-60	739973
Ignition ..	1958-60	*38013B	Motor .. .	1958-60	75146A/B	End tube .. .	1958-60	740031
Main beam .. .	1958-60	38052B	Wheelbox .. .	1958-60	72648A/B	Ferrule, casing retaining ..	1958-60	738410
Windshield wipers			Crosshead and rack assy.	1958-60	738223	Arm .. .	1958-60	738929
Motor .. .	1958-60	75097B				Blade .. .	1958-60	738930

MORRIS COMMERCIAL LDI (1 ton Petrol) and LD2 (1½ ton Petrol) 1954-60; LDO (Diesel) 1956; LDO1 (1 ton Diesel) and LDO2 (1½ ton Diesel) 1957-60; LCFO (2 ton Diesel) 1958-59

Ammeter .. .	1954-60	36125A/B	LAMPS—continued			SWITCHES—continued		
Battery (Petrol) .. .	1954-59	GT11A	Head, Home			Panel .. .	1956-60	*31557A
" (Diesel) .. .	1960	MT19E	R.H.D., dip left ..	1954-55	51344A	Knob .. .	—	316132
Bulb holder, speedo, light ..	1954-60	39007A	Head, Export "	1956-60	51515F/J	Solenoid, starting motor (Diesel) .. .	1956-60	*76443A
Bulb holder, panel light ..	1954-60	39010A	R.H.D., dip left ..	1954-55	51344A	Starting motor (Petrol) .. .	1954-60	76423A
Coil, ignition ..	1954-55	*45020A/B	L.H.D., dip right ..	1956-60	51515F/J	Coupling .. .	—	764428
" .. . Later	1955	*45053A	ditto .. .	1954-55	*51345A & B	Stop lamp .. .	1954-60	31082B/J
" .. .	1956	*45054D	Head, Export Europe (not France) .. .	1956-60	51516H/K	Windshield wiper .. .	1954	31192A
" .. .	1957-60	*45053	ditto .. .	1954-59	51346A	Knob .. .	—	315062
Control box (Petrol) .. .	1954-55	*37138A/D	(except France & Sweden) .. .	1956-59	51517F/J	Windshield wiper .. .	1955	31201D
" .. .	1956-59	37182A/H	Later .. .	1959-60	58274A/B	Knob .. .	—	318385
" .. . Later	1959	37182J	Head, Export France .. .	1957-59	51518F/H	Windshield wiper .. .	1956-60	*31557A
(Diesel) .. .	1956-59	37183A/H	" .. . Later .. .	1959-60	58275A/B	Knob .. .	—	316388
" .. . Later	1959	37183K	Head, Export Sweden .. .	1959-60	58452A/B	Warning lights .. .		
(Petrol and Diesel) .. .	1960	37182K	Head, Export U.S.A. and Mexico .. .	1956-59	51784A/B	Ignition .. .	1954-60	38049A
Distributor .. .	1954-56	*40321E/F	Number plate illumination .. .	1954-55	53101E/J	Main beam .. .	1954-60	38052B
" .. .	1957-58	40496A	Side .. .	1954-55	52139B	Windshield wipers .. .		
" .. .	1959-60	40496B/D & F	Stop tail .. .	1956-60	*52274A/B	Motor .. .	1954	75145A
Flasher unit (when fitted) .. .	1956	*35003A	" .. .	1954-59	53178D/F	" .. .	1955	75146A
Fuse box .. .	1957-60	35010A	Starting motor (Petrol) .. .	1954	53178H	Wheelbox .. .	1954	72651A
Generator (Petrol) .. .	1954-55	22258D	22258E/F	1955-60	25521B/D	" .. .	1955	72624H
" .. .	1956-59	(2.2 litre Diesel)	(2.2 litre Diesel)	1956-60	26043A	Crosshead and rack assy .. .		
(Diesel) .. .	1956	*22483A	(3.4 .. .)	1956-60	26125A	Cut to 44 1/2" .. .	1954	736307
" .. .	1957-59	*22483D	Suppressor (when fitted) .. .	1958-59	26133D/E	L.H.D. .. .	1955	738499
(Petrol and Diesel) .. .	1960	22700D	Starting motor (Petrol) .. .	1954-60	78106A	R.H.D. .. .	1955	738987
ditto (temporary alternative) .. .	1960	*22700A	SWITCHES			Cut to 44 1/2" .. .	1956-60	736307
Horn .. .	1954-58	*069213	Flasher (when fitted) .. .	1956-60	31476A/D	Outer casing .. .		
" .. .	1959-60	69046F	Foglamp (when fitted) .. .	1960	*31557A	Motor to wheelbox .. .	1954	739844
Junction box .. .	1954-60	78265A	Knob .. .	—	315042	" .. .	1955	739870
" .. . (when flashers fitted) .. .	1956-60	78266A	Fuel gauge (Diesel) .. .	1956-60	*31294A/B	Wheelbox to wheelbox .. .	1954	739844
LAMPS			Heater (Diesel, serviced by C.A.V.) .. .	1959-60	1823420	ditto (L.H.D. only) .. .	1955	*739974
Flasher, front (when fitted) .. .	1956-60	53359D	Horn push and dipper .. .	1954-60	*31442A	End tube .. .	1954-60	739972
Flasher, rear (when fitted) (LCFO, when fitted) .. .	1956-60	53362B	Ignition or master .. .	1954-60	31187D/E	Ferrule, casing retaining .. .	1954-60	740031
" .. . (Alternative) .. .	1958-59	53367D	Lighting .. .	1954-55	31126B	Arm .. .	1954-55	*736411
Flasher, side (when fitted) .. .	1958-60	53457D	Knob .. .	—	315042	" .. .	1956-60	742293
			Lighting .. .	1956-60	*31251A/E	" .. . (special order) .. .	1960	*742311
			Knob .. .	—	*316117	Blade .. .	1954-57	741680
			Panel .. .	1954	31192A	" .. .	1958-59	*737683
			Knob .. .	—	315062	" .. .	1960	741680
			Panel .. .	1955	31201D	" .. . (special order) .. .	1960	732642
			Knob .. .	—	*312850			

§ FUEL INJECTION EQUIPMENT (B.M.C. 2.2 litre Diesel Engine)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump .. .	1955-57	BPE4A65S210S6355EL	Venturi	1955
" .. .	1958-60	BPE4A65U210S6355EL	" .. .	1956-60	BEPK40-40-102
Governor .. .	1955	BEPMZ80A129	Nozzle holder	BEPK42-42-111S
" .. .	1956	BEPMZ80A131	Nozzle	BKB35S668
" .. .	1956-58	BEPAMZ80A131	Filter	BDN12SP6A
" .. .	1959-60	BEPBMZ80A131	" .. .	1955-59	F2-9
			" .. .	1959-60	F2B9

MORRIS COMMERCIAL 3 ton 3KNC (G.P.O.) 1956-59

Ammeter .. .	1956-59	36125B	Distributor .. .	1956-57	40327B/F	LAMPS		
Battery .. .	1956-59	GT11A	" .. . (high speed engine) .. .	1958-59	*40472A/B	Head	1956-59
Bulb holder, panel light .. .	1956-59	39007A	" .. . (high speed engine) .. .	1958-59	40308D/J	Side	1956-59
" .. .	1956-59	39010A	" .. . (high speed engine) .. .	1958-59	033240	Stop tail and number plate .. .		53295B
Bulb .. .	—	987	" .. . (high speed engine) .. .	1959	*22483A	Reflex reflector	57033D/E
" .. . (high speed engine) .. .	1956-59	*45053K	" .. . (high speed engine) .. .	1959	*22483B/D	Starting motor	26043A
" .. . (high speed engine) .. .	1958-59	*45054J	" .. . (high speed engine) .. .	1959	78264A	Suppressor	78106A
Control box .. .	1956-59	37182H	Junction box .. .	1956-59				
" .. . (high speed engine) .. .	1958-59	37183H						



Equipment Specification

MORRIS COMMERCIAL

MORRIS COMMERCIAL 3 ton 3KNC (G.P.O.) 1956-59—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			SWITCHES—continued			Warning lights		
Battery master ..	1956-59	76602B	Solenoid operating ..	1956-58	31253A	Holder ..	1956-59	304994
ditto (alternative) ..	1956-59	76605B	" .. Later	1958	*31669A	Bulb holder ..	1956-59	39020A
Heater (when fitted) ..	1956-59	78260A	Knob ..	1959	31719A	" ..	1956-59	39007A
Horn push and dipper ..	1956-59	31438A	Stop lamp ..	1956-59	317378	Windshield wipers	—	987
Ignition and lighting ..	1956-59	31270A	Spring ..	—	31281B	Motor ..	1956-59	*75285B/F
Knob	*312813	Trafficator ..	1956-58	315746	Arm ..	1956-59	735072
Panel ..	1956-59	*31498A	Trafficators ..	1956-59	031296	Blade ..	1956-57	727803
Knob ..	—	312857			54050A	" ..	1958-59	*737799
Solenoid, starting motor	1956-59	*76411E						

MORRIS COMMERCIAL

2/3, 4 and 5 ton Trucks Series III 1956-60: Coach Series III 1957-59: Tanker Series III 1957-60:
Prime Mover Series III 1958-60 (N.B. Normal Control only in 1960; for Forward Control
in 1960 see Series IV)

Ammeter ..	1956-60	36125B	LAMPS—continued			SWITCHES—continued		
Battery ..	1960	36280A	Except Tanker:			Heater rheostat (Normal		
(Petrol) ..	1956-59	GT11A	Head, Home	1956-60	*51780A/E	Control) ..	1960	78356A
" ..	1960	BT11A	R.H.D., dip left	..		Knob ..	—	54333487
(Diesel, 2 off) ..	1956-60	MT19E	Head, Export	1956-60	*51780A/E	Heater (Forward Control)	1956-59	*31498A
Bulb holder, panel light ..	1956-60	39007A	R.H.D., dip right	1956-60	*51781A/E	Knob ..	—	312891
ditto ..	1956-60	39010A	Head, Export Europe	1956-59	*51782A/D	Horn push and dipper ..	1956-60	31438A/B
ditto (Tanker) ..	1958	863511	(not France) ..	1956-59	*51782A/D	Ignition or master	1956-59	*31484A/B
Bulb ..	1956-60	987	(except France & Sweden)	Later	58283A/B	(Forward Control) ..	1956-59	31484A/B
Coil, ignition ..	1956-60	*45053	Head, Export France	1956-59	*51783A/B	Lighting (Forward	1956-59	*31432A/E
" .. (Tanker) ..	1957-60	D/M	Head, Export Sweden	1956-59	*51787A/B	Control) ..	1956-59	31270A/F
" .. (high speed engine) ..	1959-60	*45054J/M	Head, Export ..	1956-59	*51782A/D	Knob ..	—	*312813
Control box (Petrol) ..	1956	37183A	Head, Export Mexico ..	1959	*51984A/B	Panel ..	1956-60	*31498A
" .. (Diesel) ..	1956	37182A	Tanker:			Knob ..	—	312857
" ..	1957-59	37182H & J	Head, Home	1957-60	51882A/B	Solenoid, starting motor	1956-58	*76411E
" .. (Coach) ..	1957-59	37226E/H	R.H.D., dip left	..		ditto (except Tanker) ..	1959-60	*76411E
" .. (high speed engine) ..	1959	37183H	Head, Export	1957-60	51882A/B	ditto (Tanker) ..	1959-60	76422D
engine) ..	1959	37183K	R.H.D., dip right	..		Solenoid operating ..	1956-58	31253E
ditto ..	Later	37183K	Head, Export Europe	1957-60	51883A/B	" .. Later	1958	*31669A
ditto ..	1960	37183L	(not France) ..	1957-60	51884A/B	Knob ..	—	31719A/B
Distributor (3 ton) ..	1956-57	40327B/F	Number plate illumination	1956-60	53101H/J	Stop lamp ..	1956-60	317378
(5 ton) ..	1956-57	*40472A/B	(except Tanker)	..		Spring (when fitted) ..	—	315746
(2/3/4 and 5 ton) ..	1958-60	*40472A/B	Side/flasher	1956-57	*52286A	Trafficator (when fitted)	1958-59	*31367B
Tanker) ..	1957-60	40556A	(Forward Control) ..	1958-59	*52286D	Windshield wiper	1956-59	*31498A
(High speed engine) ..	1959-60	40308D/J	" .. (Tanker)	1957-59	*52286D	(Forward Control) ..	1956-59	312873
Flasher unit (when fitted)	1959-60	35010A	(Normal Control) ..	1956-57	*52306B	Knob ..	1956-59	312873
Fuse box (Except Tanker) ..	1956-57	033240	" ..	1958-60	52260B/D	Warning lights (Forward		
(Tanker) ..	1957	033239	" .. (Tanker)	1957-60	52260E	Control) ..		
(Petrol) ..	1958	033240	" .. (Tanker)	1957-60	52307B	Ignition ..	1956-59	38091A
(Diesel, serviced by C.A.V.) ..	1958	1800700	" ..	1958-60	53178F	Main beam ..	1956-59	38127A
(Except Coach and Tanker) ..	1959-60	033240	Stop tail (except Tanker)	1956-59	53178F	Warning lights (Normal		
(Coach) ..	1959	*37137A	ditto ..	1959-60	53178H	Control)		
(Tanker, serviced by C.A.V.) ..	1959	1800700	Stop tail and number plate	1957-60	*53534D	Adaptor	304994
Generator (Petrol) ..	1956-57	*22483A	(Tanker) ..	1956-60	57045A	Bulb holder ..	1956-58	39020A
(Diesel) ..	1956	22258D	Reflex reflector (amber) ..	1956-60	57044A/B	" ..	1959-60	39007B
(Truck and Prime Mover) ..	1957-59	22258E/F	(red) ..	1956-60	*33116B	" ..	1956-60	987
ditto (temporary alternative) ..	1960	22700D	Relay, horn (when twins fitted) ..	1958-60		Windshield wipers		
(B.R.S.) ..	1960	*22704A	Relay, starter switch (used with C.A.V. starting motor) ..	1960	33229A	(Forward Control)		
(insulated return) ..	1960	22299D	1956-60	33229A	Motor (except Tanker) ..	1956	75251A	
(Coach) ..	1957	22300A	ditto ..	1957	1340030	" .. Later	1956-59	75298A/E
" ..	1958	22492D/E	ditto ..	1958-59	1320021	1957-59	75301A/E	
(Tanker) ..	1959	22492H/K	ditto ..	1960	1320023	Wheelbox ..	1956-59	72676A
(alternative) ..	1957-60	22268D/E	(Tanker, Petrol) ..	1957-58	26043A	Crosshead and rack assy.		
(High speed engine) ..	1959-60	22497B	" ..	1959-60	26066A	Cut to 45° ..	1956-59	743235
Horn Low note (when fitted) ..	1958-60	69046F	" .. (3.4 litre Diesel) ..	1957-60	26136A	Outer casing ..		
High note (when fitted) ..	1958-60	69047F	(5.1 litre Diesel), serviced by C.A.V.) ..	1958-59	1320031	Motor to wheelbox ..	1956-59	743777
Junction box 4 way ..	1956-60	78264A	ditto ..	1960	1320033	Wheelbox to wheelbox ..	1956-59	743778
6 way (alternative) ..	1960	78266A	SWITCHES			End tube ..	1956-59	740746
LAMPS Dash (Tanker) ..	1958-60	63000A	Battery isolation (Tanker, serviced by C.A.V.) ..	1958-60	1824890	Ferrule, casing retaining ..	1956-59	740715
Flasher, rear (when fitted) ..	1959-60	53358D	Flasher (when fitted) ..	1958-60	*31635B	Arm ..	1956-59	741810
			Heater rheostat (Normal Control) ..	1956-59	78260A	Blade (11") ..	1956	737883
			Knob ..	—	*768499	" (12") ..	Later	1956-59
						Windshield wipers (Normal Control) ..		
						Motor (except Tanker) ..	1956-60	*75285A/F
						" .. (Tanker) ..	1957-60	75130A/B
						Arm ..	1956-60	735072
						" .. (Tanker) ..	1958-60	*735055
						Blade ..	1956-60	727803
						" .. (Tanker) ..	1958-60	727802
						" .. (10", special order) ..	1960	*737799

§ FUEL INJECTION EQUIPMENT

(B.M.C. 5.1 litre Diesel Engine)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump ..	1955	AAR6A75-3E	Venturi	1955-57
" ..	Later	AAR6A75-72E	Nozzle holder	1957-60
Governor ..	1955	AAR6B75-72E	Nozzle	1955-60
" ..	1956-58	LP16	Filter	1955-59
" ..	1959-60	LPB16	"	1959-60
Coupling ..	1957-59	LPE14	"	F2-9
		BZKG31-9Z	"	F2B9

* See Supersession Chart

§ Serviced by C.A.V. Ltd.

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

MORRIS COMMERCIAL

MORRIS COMMERCIAL

1½, 2, 3 and 4 ton Forward Control Trucks Series IV FG 1960

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter ..	1960	36256A	LAMPS—continued			SWITCHES		
Battery (Petrol) ..	1960	BT11A	Head, Export	1960	*51780A/E	Heater ..	1960	31788B
" (Diesel) ..	1960	MT19E	R.H.D., dip left ..	1960	*51781A/E	Interior light ..	1960	31780D
Bulb holder, panel light ..	1960	554734	L.H.D., dip right ..	1960	*51782A/B	Lighting, horn push and flasher ..	1960	31791A/B
Bulb ..	—	987	Head, Export Europe (except France & Sweden)	1960	58286A/B	Panel ..	1960	31780D
Coil, ignition ..	1960	*45113D	Head, Export France	1960	58287A/B	Solenoid, starting motor	1960	*76465A
Control box ..	1960	37283D	Head, Export Sweden ..	1960	*51782A/D	Starting and heater or ignition ..	1960	31829B
" (special orders, used with Generator 22802B) ..	1960	37301B	" " Later	1960	58459A/B	Starting and heater (Diesel, from Chassis 104599) ..	1960	34299A
Distributor ..			Interior ..	1960	56062D	Starting and ignition (Petrol, from Chassis 99981) ..	1960	31973E
1½ ton Petrol ..	1960	40705B	Base ..	—	535380	Stop Lamp (1½ and 2 ton) ..	1960	31882A
2, 3 and 4 ton Petrol ..	1960	40673D	Number plate illumination ..	1960	53101H/J	Windshield wiper ..	1960	31802D
Flasher unit ..	1960	35020A	Side ..	1960	52466A	Warning lights ..		
Fuse box ..	1960	033285	Stop tail ..	1960	53178H	Ignition and oil pressure, bulb holders ..	1960	863511
Generator ..	1960	22700D	Reflex reflector (amber) ..	1960	57045A	Bulb ..	—	987
" (temporary alternative) ..	1960	*22704A	" " (red) ..	1960	57044B	Windshield wipers		
" (special orders) ..	1960	22802B	" " (optional) ..	1960	57033E	Motor ..	1960	75353A/B
Horn ..			Relay, horn (when twins fitted) ..	1960	*33116B	Link set ..	1960	745964
Low note ..	1960	69046F	Sleeve, Lucas connector ..			Arm, left hand crank ..	1960	54712111
High note (optional) ..	1960	69047F	1½ ton Petrol ..	1960	25521D	right hand crank ..	1960	54712110
Grommet ..	—	690995	2, 3 and 4 ton Petrol ..	1960	26043A	Blade ..	1960	54711074
Junction box ..	1960	78266A	Starting motor ..	1960	26166A/B			
LAMPS ..			1½ ton Diesel ..	1960	26167A/B			
Flasher, cab ..	1960	53744A						
Flasher, rear ..	1960	53358D						
Head, Home ..								
R.H.D., dip left ..	1960	*51780A/E						

§ FUEL INJECTION EQUIPMENT

(B.M.C. 2.2 litre Diesel Engine)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump ..	1960	BPE4A65U-210S6355EL	Nozzle holder	1960
Governor ..	1960	BEPBMZ80A131	Nozzle	1960
Venturi ..	1960	BEPK42-42-111S	Filter	1960

MORRIS COMMERCIAL 7 ton Truck and Tanker (Diesel) 1958: 5 ton Truck, Coach and Prime Mover (Petrol and Diesel) 1959–60, 7 ton Truck and Tanker (Diesel) Series IV FF Later 1958–60

Unit	Year	Part No.	Unit	Year	Part No.
Ammeter ..	1958	36212B	LAMPS—continued		
" (Petrol) ..	1959-60	*36225B	Head, Export		
" (Diesel) ..	1959	GT11A	R.H.D., dip left ..	1958-60	*51780A/E
" ..	1960	BT11A	L.H.D., dip right ..	1958-60	*51781A/E
Bulb holder, panel light ..	1958-60	MT19E	Head, Export Europe (not France) ..	1958-59	*51782A/D
ditto (Tanker) ..	1958	39007A	(except France & Sweden) ..	1958-59	58286A
Bulb holder, speedometer ..	1958	863511	Later	1959-60	*51783A
ditto vacuum gauge light, (earth return) ..	1958	554734	Head, Export France ..	1958-59	58287A
ditto vacuum gauge light, (insulated return) ..	1960	554734	" " ..	1959-60	*51782A/D
Bulb ..	1958-60	863511	Head, Export Sweden ..	1959-60	51782A/D
Coil, ignition ..	1959-60	*45053K/M	Tanker:		
Control box ..	1958-60	37182H & J	Head, Home		
" ..	Later	37182K	R.H.D., dip left ..	1957-60	51882A
" ..	(Coach) ..	37308B	Head, Export	1957-60	51882A
" ..	(used with Generator 22802B) ..	37301B	R.H.D., dip left ..	1957-60	51882A
Distributor ..	1959-60	*40472A/B	R.H.D., dip right ..	1957-60	51883A
Flasher unit (when fitted) ..	1958-60	35010A	Head, Export Europe (not France) ..	1957-60	51884A
Fuse box ..	1958-60	033240	Number plate illumination (except Tanker) ..	1958-60	53101H
Tanker (serviced by C.A.V.) ..	1958	1800700	Side (except Tanker) ..	1958	*52286A
Coach ..	1960	*37137A	" (Tanker) ..	1959-60	*52286B
Generator ..	1958-59	22258F	Stop tail (except Tanker) ..	1958-59	53178F
" ..	1960	22700D	ditto ..	1959-60	53178H
" ..	(temporary alternative) ..	*22704A	Stop tail and number plate (Tanker) ..	1958-60	*53534D
" ..	(Tanker) ..	22268D/E	(special order) ..	1960	53244D
" ..	(alternative) ..	22497A/B	Reflex reflector (amber) ..	1958-60	57045A
" ..	(Coach) ..	22492L	" (red) ..	1958-60	57044A/B
" ..	(B.R.S.) ..	22802B	Relay, horn (when twins fitted) ..	1958-60	*33116B
" ..	(B.R.S., insulated return) ..	22390A	Relay, starting switch (with C.A.V. starter) ..	1960	33229A
Horn ..	Low note (when fitted)	69046F	Sleeve, Lucas connector 14 amp. ..	1959-60	54190042
" ..	High note ..	69047F	Starting motor ..	1959-60	52043A
Junction box ..	1958-60	78266A	Petrol ..	1959-60	26043A
fitted) ..	(when flashers ..	78266A	Diesel (serviced by C.A.V.) ..	1958	1320020
Left hand ..	1960	53707A	ditto ..	1959	1320021
Right hand ..	1960	53706A	ditto ..	1960	1320023
Left hand (Tanker) ..	1960	53809A	Diesel Tanker (serviced by C.A.V.) ..	1960	1320033
Right hand ..	1960	53808A	SWITCHES		
Flasher, rear ..	1958-60	53358D	Battery isolator (Tanker, serviced by C.A.V.) ..	1958	1824890
Except Tanker: Head, Home ..			Heater (when fitted) ..	1958	*31498A
R.H.D., dip left ..	1958-60	*51780A/E	Knob ..	—	312892
			Relay ..	—	312893
			Starting motor ..	1958-60	58286A
			Stop lamp ..	1958-60	31082E
			Spring (when fitted) ..	1959-60	315746
			Trafficator (Tanker) ..	1958	*31367A
			Windshield wiper ..	1958	*31498A
			Knob ..	—	312872
			Windshield wiper ..	1958-60	31780B/D
			Warning lights ..		
			Ignition or no charge, bulb holder ..	1958-60	863511
			Main beam, bulb holder ..	1958-59	554734
			" ..	1960	863511
			Bulb ..	1958-60	987
			Windshield wipers		
			Motor ..	1958	75298D
			" (L.H.D.) ..	1958-60	75363A
			" (R.H.D.) ..	1958-60	75349A
			" (Tanker) ..	1958-59	75301D
			Wheelbox ..	1960	75377A
			" ..	1958	72676B
			Crosshead and rack assy. Cut to 45° ..	1958	743235
			Crosshead and rack assy. ..	1958-60	743957
			Outer casing ..		
			Motor to wheelbox ..	1958	743777
			" (left hand) ..	1958-60	54710142
			" (right hand) ..	1958-60	54710143
			Wheelbox to wheelbox ..	1958	743778
			End tube ..	1958-60	740746
			Ferrule, casing retaining ..	1958	740715
			Arm ..	1958	741810
			" left hand drive ..	1958-59	54710231
			" right hand drive ..	1958-59	54711540
			Blade ..	1958	737886
			" ..	1958	737890
			" ..	1958-59	54711284



Equipment Specification

MORRIS COMMERCIAL—NASH-HEALEY

MORRIS COMMERCIAL

7 ton Truck and Tanker (Diesel) 1958: 5 ton Truck, Coach and Prime Mover (Petrol and Diesel) 1959–60, 7 ton Truck and Tanker (Diesel) Series IV FF Later 1958–60—continued

§ FUEL INJECTION EQUIPMENT (B.M.C. 5.1 litre Diesel Engine)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump ..	1958-60	AAR6B75-72E	Nozzle holder ..	1958-60	BKBL67S668
Governor ..	1958	LPB16	Nozzle ..	1958-60	BDLL150S6194
Coupling ..	1959-60	LPE14	Filter ..	1958-59	F2-9
Venturi ..	1958-60	BZKG31-9Z	" ..	1959-60	F2B9
		BEPK50-50-120	Later		

MORRISON ELECTRICARS Battery Vehicle 1951–54

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Fuse box ..	1951-54	033240	LAMPS—continued			SWITCHES—continued		
Horn ..	1951-54	*069206	Side ..	1951-54	52102A	Stop lamp ..	1951-54	31281B
Horn push ..	1951-54	76205A	Stop tail and number plate ..	1951-54	*53076E	Spring ..	—	315543
" " (Model DPC)	1954	*31071A	Tail and number plate ..	1951-54	*53041B	Windshield wipers		
LAMPS			SWITCHES			Motor ..	1951-54	*75120A
Head ..	1951-54	50124E	Lighting ..	1951-54	34065A	Arm ..	1951-54	*735051
			" (Model DPC) ..	1954	*31276A	Blade ..	1951-54	727707

MORRISON ELECTRICARS 25 cwt. Austin Electricar BI/LH 1955–56

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Flasher unit ..	1955-56	*35003A	LAMPS—continued			SWITCHES—continued		
Flasher relay ..	1955-56	33117A	Side and flasher ..	1955-56	52240A	Horn push and dipper ..	1955-56	31262A
Horn ..	1955-56	069344	Stop tail ..	1955-56	53178E	Stop lamp ..	1955-56	31082D
LAMPS			SWITCHES			Warning lights		
Head ..	1955-56	*51337A	Flasher ..	1955-56	31476A	Flasher ..	1955-56	38125A
			" (alternative) ..	1955-56	31379A	Main beam ..	1955-56	38100A

MORRISON ELECTRICARS 1 ton D4 and 25 cwt. E 1955–60: 20 cwt. EH 1960

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Fuse box ..	1955-57	033240	LAMPS—continued			Windshield wipers		
" ..	1958-60	033259	Number plate illumination ..	1955	53093E	Motor ..	1955-58	*75126A
Horn ..	1955-56	069344	" ..	1956-60	53101H	" ..	1959-60	*75120A
" ..	1957	70141A	Side ..	1955	52102A	Arm ..	1955	735099
Horn push ..	1955-60	76205A/D	Stop tail ..	1956-60	52241B	" ..	1956-60	742313
LAMPS			" ..	1955-59	53178E/F	Blade ..	1955	727707
Head ..	1955-60	*55122D	SWITCH		53178H	" ..	1956-60	727759
			Stop lamp ..	1958-60	31082E/J	(except GT) ..	1958-60	727707
						" (GT) ..	1958-59	727759

MORRISON ELECTRICARS 10 cwt. BM, 20 cwt. DI and 30 cwt. F and FL 1955–60: 2 ton GT Tractor 1955–59

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Fuse box (GT only) ..	1956-57	033240	LAMPS—continued			Windshield wipers		
" (except BM) ..	1958-60	033259	Number plate illumination ..	1958-60	53101H	Motor ..	1955-60	*75120A
Horn ..	1955	069248	Side (except GT) ..	1955	52102A	Arm ..	1955	735099
" ..	1956	069344	Stop tail (except GT) ..	1956-60	52241B	" ..	1956-60	742314
Horn push ..	1957	70141A	ditto ..	1955-59	53178E/F	Blade ..	1955-57	727707
LAMPS			LATER	1959-60	53178H	" ..	1958-60	727707
Head ..	1955-60	76205A/D	SWITCH		31082E/J	(except GT) ..	1958-60	727707
			Stop lamp ..	1958-60		" (GT) ..	1958-59	727759

MORRISON ELECTRICARS 1 ton P90 1955–57

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Horn ..	1955-56	069248	LAMPS			SWITCH		
" ..	1957	70141A	Side ..	1955	52102A	Lighting ..	1955-57	*31276A
Horn push ..	1955-57	*31071A	Tail and number plate ..	1956-57	52241B			
			" ..	1955-56	*53007B			
			" ..	1957	*53513B			

NASH-HEALEY Sports 1951–54

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Steering column control ..	1951-54	32869A/D	Windshield wipers—cont'd			Windshield wipers—cont'd		
SWITCHES			Wheelbox ..	1951-54	72592A/K	Arm, left hand ..	1951-52	*737557
Solenoid, starting motor ..	1951	76421B	Crosshead and rack assy.	1951-54	736307	" ..	1953	*737596
Windshield wiper ..	1951-54	31334A	Outer casing ..	1951-54	739868	" ..	1953-54	*737625
Windshield wipers			Motor to wheelbox ..	1951-54	*739956	" ..	1951-52	*737453
Motor ..	1951-54	*75075K	Wheelbox to wheelbox ..	1951-54	740031	" ..	1953-54	*737595
			End tube ..	1951-54	734458	Later	1951-53	*737624
			Grommet, wheelbox ..	1951-54		Blade ..	1951-53	*738719
						" ..	1953-54	738724

* See Supersession Chart

§ Serviced by C.A.V. Ltd.



Equipment Specification

NASH METROPOLITAN—PEERLESS

NASH METROPOLITAN Series I-IV 1954-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1954-59	GT9A-2	LAMPS			SWITCHES—continued		
"	1960	BT9A	Head, Export U.S.A. (less	1954	*51426A	Ignition and lighting	1954-60	31416A/E
Bulb holder, panel light	1960	554734	light unit)	1954-60	51504A	Knob	316285	
Bulb, panel light	1960	987	ditto	Later		Starting motor	1954-60	76423A
Bulb, courtesy light	1960	222	Head, Export Europe	1956-60	51982A	Coupling	76442B	
Coil, ignition	1954-55	*45020B	(not France)	1956-57	51999A	Stop lamp	1954-60	31082D/J
"	1956-60	*45053H/M	Head, Export France	1956-57		Windshield wiper	1954-55	31201A
Control box	1954-55	*37138B	Number plate illumination	1954-56	*53266E	Knob	1956-60	31479A
"	1956-59	37182D/H		1957-60	53502B/D	Warning lights	1954-60	318350
"	1960	37183L	Side and flasher	1954-55	*52162A	Flasher	1954	*38070A
Distributor	1954-55	*40284A/K	Stop tail	1956-60	52240B	"	Later	38067A
" (high compression)	1956	40498A/B	Gasket	1957	53280B/F	Ignition and oil, bulb	1954-60	
" ditto	Later	40600A	Sleeve, Lucar connector	1958-60	53541B/D	holder	1960	863511
" ditto	1959-60	40600B/D & F	14 amp.	1960	54190042	Main beam, bulb holder	1960	554734
" (low compression)	1960	40600E & H	35 amp.	1960	54190043	Bulb	—	987
" ditto	1957-58	40499A	Starting motor	1954-57	25022A/L	Windshield wipers		
" ditto	Later	1958-60	"	1958-59	25022M	Motor	1954-60	75145A/B
Flasher unit	1954-55	*35003A	"	1960	25022N/Q	Wheelbox	1954-60	*72548L
"	1956-60	35010A	Steering column control	1954-60	32897A/D	Crosshead and rack assy.	1954-60	736364
Fuse box	1954	033240	Suppressor (when fitted)	1954-60	78106A	Outer casing		
"	Later	1954-60				Motor to wheelbox	1954-60	739844
Generator	1954-57	22258D	SWITCHES			Wheelbox to wheelbox	1954-60	739937
"	1958-59	22258F	Courtesy light	1958-60	31140B	End tube	1954-60	740031
" (alternative)	1960	22700D	Dipper	1954-58	*31372A	Ferrule, casing retaining	1954-60	738410
Horn		*22704A	" (alternative)	1958	31284A	Arm	1954	*737625
Low note	1954-56	*69011F/J	Heater	1959-60	31284A/D	"	Later	1954-55
"	1957-60	69046D/F	Knob	1954-60	78305A/E	"	1956-60	742282
High note	1954-56	*69012F/J			769016	Blade	1954-60	741543
"	1957-60	69047D/F						

PARAMOUNT CARS (See also Meynell) Roadster and Coupé 1951-54

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1951-53	*36072D	LAMPS—continued			Trafficators	1951-53	*54039A
"	1954	*36179A	Head, Export France	1953	*50978A	"	1954	54044A/D
Battery	1951-54	GT7A	Number plate illumination	1953-54	51009A	Warning lights		
Coil, ignition	1951-54	*45020A	Side	1951-53	53093E	Red	1954	*38065A
Control box	1951	37065E	Stop tail	1951-53	52139B	Amber	1954	38068A
"	1953-54	*37138A/B	Mirror	1951-54	53178D	Green	1954	38067A
Distributor	1951-54	40286A	(Coupé)	1951-54	062587	Holder	1951-53	304994
Fuse box (Roadster)	1953-54	033240	Starting motor	1951-54	26009A	Windshield wipers		
" (Coupé)	1953-54	033239	Steering column control	1951-54	32843D/F	Motor	1951	*75088M
Generator	1951	*22250E/F	Suppressor	1951-54	78105A	Wheelbox	1952-54	75151A
"	1953-54	22258D	SWITCHES			Crosshead and rack assy.	1951	72590A/K
Horn			Foglamp	1953-54	31248A	Cut to 47 $\frac{1}{2}$ "	1952-53	738006
Low note	1951-54	*69011F	Knob	—	316389	40 $\frac{1}{2}$ " Later	1953-54	736307
High note	1951-54	*69012F	Ignition	1951-54	31287A	Outer casing		
LAMPS			Interior light	1951-54	*31251A	Motor to wheelbox	1951-53	740482
Fog	1951-53	*55049B	Knob	—	315042	ditto	1953-54	*739855
Head, Home	Later	*55063B	Lighting	1951-54	*31251A	Wheelbox to wheelbox	1951-53	739973
R.H.D., dip left	1951	*50799D	Knob	—	316117	End tube	1951-54	740031
"	Later	*50959A	Panel	1951-54	31251A	ditto	1953-54	*739971
Head, Export	"	*50992A	Starting motor	1951-54	315042	Arm, left hand	1951	737445
R.H.D., dip left	1953-54	*50992A	Stop lamp	1953-54	*764150	" right hand	1951	737444
L.H.D., dip right	1953-54	*50993A	Spring	—	31281B	1952-54	1952-54	
Head, Export Europe (not France)	1953-54	*50994A	Windshield wiper	1951-54	315543	Blade	1951	727802
			Knob	—	316388	"	1952-54	727707

PEERLESS 'Gran Turismo' 1959-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1959-60	36174B	LAMPS—continued			SWITCHES—continued		
Battery (suitable replacement)	1959	GT9A	Head, Export U.S.A.	1959-60	58262A	Windshield wiper	1959-60	*31419A
" ditto	1960	BT9A	Number plate and reverse	1959-60	*53159B	Knob	—	317530
Bulb holder, panel light	1960	39007A	Side and flasher	1959-60	52338A	Warning lights		
Bulb	—	987	Stop tail and flasher	1959-60	53527A/B	Flasher	1959	38068A
Coil, ignition	1959-60	*45054J	" (U.S.A.)	1959-60	53689A/B	Ignition	1960	38192A
Control box	1959-60	37182H	Starting motor	1959-60	25541H	Main beam, bulb holder	1960	*38065A
" Later	1960	37182J & K	Steering column control	1959-60	32930A	Bulb	—	554734
Distributor	1959-60	*40480A/E & F	SWITCHES			Windshield wipers		987
Flasher unit	1959-60	35010A	Dipper	1959-60	31284D	Motor	1959-60	*75200D
Fuse box	1959-60	033240	Heater	1959-60	*31419A	Wheelbox	1959-60	75309B
Generator	1959-60	22258F	Ignition	1959-60	317531	Crosshead and rack assy.	1959-60	72686B
Horn			Lighting	1959-60	*31420D	Cut to 38 $\frac{1}{2}$ "	1959-60	743235
Low note	1959-60	69046F	Knob	—	316129	ditto (special orders)	1960	744256
High note	1959-60	69047F	Panel	1959-60	*31419A	Outer casing		
LAMPS			Knob	—	317532	Motor to wheelbox	1959-60	744306
Head, Home			Petrol change-over	1959-60	31878A	Wheelbox to wheelbox	1959-60	744307
R.H.D., dip left	1959-60	58181A	Knob	—	316645	End tube	1959-60	740746
Head, Export			Reverse lamp	1959-60	*31437B	Arm, left hand	1959-60	745083
R.H.D., dip left	1959-60	58181A	Solenoid, starting motor	1959-60	*76411E	" right hand	1959-60	745082
L.H.D., dip right	1959-60	58263B	Solenoid operating	1959-60	31253E	Blade	1959-60	738724
Head, Export Europe (not France)	1959-60	58265B	Knob	—	*317379			

* See Supersession Chart

L.H.D. ... Left hand drive R.H.D. ... Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

RELIANT

RELIANT 750 c.c. 4 cylinder 3-wheeler 1946-54

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter ..	1946-48	*36020A	LAMPS—continued			SWITCHES		
" ..	1949-54	*36024E	Head, Home	1946-50	*50292D	Horn push and dipper ..	1946-54	31262A
Battery ..	1946-54	SG9E	Vertical dip ..	1951-54	*50950A	Ignition and lighting ..	1946-54	*34020B
Coil, ignition ..	1946-54	*45016A	Head, Export	1949-52	50364B	Starting motor ..	1946-50	76428A
Control box ..	1946-47	*37034A	Vertical dip ..	1950	50569B	Stop lamp (Australia) ..	1951-54	76427A
" ..	1948-50	37081H	Head, Export Australia ..	1947-50	*A52003A	Spring ..	—	31281B
Distributor ..	1946-54	*40221A	Side ..	1951-54	*A52139B	Warning light (ignition) ..	1946-50	315746
Generator ..	1946-54	22008B	Tail and number plate ..	1947-50	*A53056A	" " "	1951-54	*38022B
Horn ..	1946-54	*70001D	Mirror ..	1951-54	*A53140B	Windshield wipers		38066A
Inspection lamp sockets ..	1951-54	*39511A	Starting motor ..	1946-51	*62060I	Motor ..	1946-54	
Junction box ..	1949-51	78265A	" ..	1946-50	*250405	Arm ..	1946-54	
LAMPS ..			" ..	1951-53	25032A	Blade ..	1946-53	
Dash ..	1947-54	*A56026A	" ..	1953-54	25037A	" ..	1954	
			Later					

RELIANT 'Regal' Car (6 volt) 1953-58: 5 cwt. Van (6 volt) 1955-58

Battery ..	1953-55	SG9E	LAMPS—continued	1953-55	*A52139B	SWITCHES—continued		
" ..	1956	STGX9E	Side ..	1956	*A52139E	Windshield wiper ..	1953-54	31201B
" ..	1957-58	STXW9E	" (Van) ..	1957-58	*A52139E	Knob ..	—	*317533
(Export) ..	1955-56	STGW9E	Side and flasher (Car) ..	1957-58	52363A	Trafficators ..	1953	*54042A
Coil, ignition ..	1953-57	*45016A	Stop tail ..	1953-54	*A53178D	" (Van only) ..	1953-56	54046D
" ..	1958	*45052H	Stop tail, number plate and reflex ..	1955-56	53432A	Warning lights		
Control box ..	1953-56	37062B/H	ditto ..	1956-58	53432B	Ignition ..	1953-58	38094A
" ..	1957-58	37247A/D	Mirror ..	1953	*062579	Main beam (when fitted) ..	1953	38095A
Distributor ..	1953-57	*40221E	" ..	1954-58	*062567	ditto ..	1953-58	38073A
" ..	1958	*40586A	Starting motor ..	1953-58	*62060I	Oil ..	1953-58	38095A
Flasher unit (Car) ..	1957-58	35013A	Steering column control ..	1953	32898A/E	Windshield wipers		
Fuse box ..	1953-54	033239	Suppressor ..	1954-58	78114A	Motor ..	1953	75167A
" ..	1957-58	033239	SWITCHES			" ..	1954	75229A
Generator ..	1953-58	22008B	Dipper ..	1953-54	31284A	Wheelbox ..	1953	*75003B
Horn ..	1953-55	*70001E	Ignition ..	1954	31287B	Crosshead and rack assy.		
" ..	1956-58	*70092A	Lighting ..	1955-58	*31449A/B	Cut to 26" ..	1953-54	736364
LAMPS ..			Ignition and lighting ..	1953	*34034B	Outer casing ..		
Flasher, rear ..	1957-58	52364A/B	Lighting ..	1957-58	31126E	Motor to wheelbox ..	1953-54	739870
Head, Home ..			Knob ..	—	316398	3", offside wheelbox ..	1953-54	740031
R.H.D., dip left ..	1953-55	51496A/B	Lighting and horn ..	1954-56	34074A	Arm ..	1953	*735050
Head, Export ..	1956-58	51496E/H	Panel ..	1953-56	31201B	" ..	1955	*735098
R.H.D., dip left ..	1953-55	51496A/B	Knob ..	—	*316214	" ..	1956	742312
L.H.D., dip right ..	1956-58	51496E/H	Starting motor ..	1953	76427B	" (Car) ..	1957	742314
Head, Export Europe (not France) ..	1953-55	51500A	1954-58	76427D	" (Van) ..	1957	742312	
ditto ..	1956-58	51500D/E	Stop lamp ..	1953-54	31281B	Blade ..	1958	742314
Head, Export France ..	1953-55	*51341A	Spring ..	—	315746	" ..	1953	727707
Number plate illumination ..	1955-58	*51341D	Stop lamp ..	1955-58	31082D/E	Later	1953-54	*741540
Later		A53093E	Trafficator ..	1954-56	31379A	" ..	1955-58	727707

RELIANT 'Regal' Car (12 volt) 1959-60: 5 cwt. Van (Home, 6 volt) 1959, (Home, 12 volt) 1960, (Export, 12 volt) 1959-60

Battery (12 volt) ..	1959-60	HOHTA/8	LAMPS	1959-60	52337A	SWITCHES—continued		
(6 volt) ..	1959	STGK9E	Flasher, front (12 volt) ..	1959	52364A	Flasher ..		
Bulb holder, panel light ..	1959-60	39020A	" .. (6 volt) ..	1959	52337A	12 volt ..	1959	*31635A
Bulb (12 volt) ..	1959-60	987	Flasher, rear (12 volt) ..	1959	52337A	" (Car only) ..	1959	*31932A
" .. (6 volt) ..	1959	990	" .. (6 volt) ..	1960	53773A	" ..	1960	31986A
Coil, ignition ..	1959-60	*45053K	Head, Home ..	1959-60	52364A	6" volt ..	1959	31675A
12 volt ..	1959-60	*45113A/D	R.H.D., dip left (12 volt) ..	1959	51336B/J	Horn push and dipper ..	1959	31438A
(Car only) ..	Later	*45052J	(6 volt) ..	1959	51496E	Ignition ..	1959	*31449E
Control box ..			Head, Export ..	1959-60	51336B/J	Lighting ..	1959	*31934A
12 volt ..	1959	37182J	R.H.D., dip left ..	1959	51336B/J	Knob ..	—	316398
" .. (Car only) ..	Later	37283A	L.H.D., dip right ..	1959-60	*51337F/K	Lighting (Car only) ..	1959	31933B
" ..	1960	37283D	Head, Export Europe (not France) ..	1959-60	51339B/H	Starting motor ..	1959-60	31887A
6" volt ..	1960	37290D/E	Head, Export U.S.A. ..	1959-60	*51341D	Windshield wiper ..	1960	31988A
37247E			Side (12 volt) ..	1959-60	52391A	Warning lights		
Distributor ..	1959-60	*40586A	(6 volt) ..	1959	52442A	Flasher ..	1959-60	38192A
(Car only) ..	Later	40678A	Stop tail, number plate and reflex ..	1959	53454A	Ignition ..	1959-60	38189A
Flasher unit ..	1959-60	35010A	12 volt ..	1959	53432B	Main beam ..	1959-60	38190A
12 volt ..	1959-60	35020A	6 volt ..	1959	53520D	Oil ..	1959-60	38191A
(Car only) ..	Later	35013A	Stop tail and reflex ..	1960	53520D	Windshield wipers		
Fuse box ..	1959-60	033239	Mirror (Car) ..	1959-60	*062567	Motor (12 volt) ..	1959	*75120A
" .. (Car only) ..	Later	033283	(Van) ..	1959-60	*62060I	" (6 volt) ..	1960	7371A/B
Generator ..	1959	22258F	Starting motor ..	1959	25050A	Wheelbox ..	1960	72736A
12 volt ..	1959	*22297A	12 volt ..	1959	25022N/Q	Crosshead and rack assy.		
" .. (Car only) ..	Later	22297A	Later	1959-60	25037A/B & D	Cut to 46" ..	1960	743235
" ..	1960	22700D	Starting motor ..	1959		Outer casing ..		
" .. (temporary alternative)	1960	*22704A	12 volt ..	1959		Motor to wheelbox ..	1960	745118
6 volt ..	1959	22008B	6" volt ..	1959		Wheelbox to wheelbox ..	1960	54711716
Horn (12 volt) ..	1959-60	70141B	Mirror ..	1959-60		End tube ..	1960	740746
" .. (6 volt) ..	1959	*70092A	Starting motor ..	1959-60		Ferrule, casing retaining ..	1960	740715
Horn push (12 volt) ..	1959-60	33547D	Dipper (later fitment, Car only) ..	1959-60	31800A	Arm ..	1959	742314
						Blade ..	1960	745089
						" ..	1960	727707
							1960	737681

* See Supersession Chart L.H.D. .. Left hand drive R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

RELIANT—RENAULT

RELIANT 6 cwt. Van and Truck (6 volt) 1954–55

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter ..	1954-55	36047D	LAMPS—continued			SWITCHES		
Battery ..	1954-55	SG9E	Head, Home and Export	1954-55	*50950A	Horn push and dipper ..	1954-55	31262A
(Export) ..	1955	STGW9E	Vertical dip ..	1954-55	*A52139B	Ignition and lighting ..	1954	*34020B
Coil, ignition ..	1954-55	*45016A	Side ..	1954-55		Starting motor ..	1954-55	34054A
Control box ..	1954-55	37062E	Stop tail, number plate and			Stop lamp ..	1955	76427B
Distributor ..	1954-55	*40221A	reflex ..	1955	53432A/B	Spring ..	1955	31281B
Generator ..	1954-55	22008B	Tail and number plate ..	1954	*A53140A	Warning light (ignition) ..	1954-55	315746
Horn ..	1954-55	70001E	Mirror ..	1954-55	*620601	Windshield wipers ..		38066A
Junction box ..	1954	78265A	Starting motor ..	1954-55	25037A	Motor ..	1954-55	*75003B
LAMPS			Suppressor (distributor) ..	1954-55	78114A	Arm ..	1954-55	*735096
Dash ..	1954-55	*A56026A	" (plug) ..	1954-55	78106A	Blade ..	1954-55	727803

RELIANT 10 cwt. 3-wheeler Van (later 'Regent') (12 volt) 1951–56

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter ..	1951-56	*36024E	LAMPS—continued			SWITCHES		
Battery ..	1951-56	GT7A	Head, Export			Horn push and dipper ..	1951-56	31262A
Coil, ignition ..	1951-56	*45020A/B	Vertical dip (Mk. I)	1951-56	*50950A	Ignition and lighting ..	1951-56	*34020A/B
Control box ..	1951-56	37065E/F	R.H.D., dip left (Mk. II)	1955-56	51336A & B/J	Starting motor ..	1951-54	76427A
Distributor ..	1951-53	*405616	R.H.D., dip right (Mk. II)	1955-56	*51337B & D/E	Stop lamp ..	1955-56	76427D
" ..	Later	*40221A	Head, Export Europe	1955-56	51339A & B/H	(Australia only) ..	1953	31281B
" ..	1953-55	*40221E	(not France) (Mk. II) ..	1955-56	51339A & B/H	Spring ..	1955-56	315746
Generator ..	1951-52	*22250E/F	Head, Export France (Mk. II) ..	1955-56	*51590A & B/E	Stop lamp ..	1955-56	31281B
" ..	Later	22258D	Head, Export U.S.A. (Mk. II) ..	1955-56	51343A & B/E	Spring ..	1955-56	315746
Horn ..	1956	*069213	Side ..	1955-56	52139B/F	Warning light (ignition) ..	1951-53	*38015B
Inspection lamp sockets ..	1951-54	*39511A	Stop tail, number plate and	1955-56		" " "	1954-56	38046A
" ..	1955-56	39507A	reflex ..	1955-56	53454A/B	Windshield wipers ..		
LAMPS			Tail and number plate ..	1955-56	*53140B	Motor ..	1951-56	75122B
Dash ..	1951	56031A	Mirror ..	1951-56	*620601	Arm ..	1951-54	*735061
" ..	1952-54	*56026A	Starting motor ..	1951-56	25022A/L	Starting motor ..	1955-56	*735096
Head, Home ..	1955-56	56031A	Suppressor (distributor) ..	1954-56	78114A	Blade ..	1951-53	727802
Vertical dip (Mk. I) ..	1951-56	*50950A	" (plug) ..	1954-56	78106A	" ..	1954-56	727803
Dip left (Mk. II) ..	1955-56	51336A & B/J						

RELIANT 'Regent Four' Van (Export only) 1959–60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery ..	1959	GLTW7A	LAMPS			SWITCHES—continued		
Bulb holder, panel light ..	1960	GLT7A	Head, Export			Starting motor ..	1959-60	76427D
Bulb ..	1960	39020A	R.H.D., dip left ..	1959-60	51336B/J	Stop lamp ..	1959-60	31082E/J
Bulb ..	—	987	L.H.D., dip right ..	1959-60	*51337F/K	Windshield wiper ..	1959-60	*31515A
Coil, ignition ..	1959-60	*45053K/M	Head, Export Europe			Knob ..	—	*316484
" ..	Later	*45113D	(not France) ..	1959	51339B/H	Windshield wiper ..	Later	31988A
Control box ..	1959	37182J	Head, Export France ..	1959	51341B/E	Warning lights ..		
" ..	Later	37182K	Head, Export U.S.A. ..	1959	51343B/E	Ignition ..	1959-60	38189A
" ..	1960	37290D/E	Side and flasher ..	1959-60	52338A	Main beam ..	1959-60	38190A
Distributor ..	1959-60	*40402N	Stop tail ..	1959-60	53520D	Oil ..	1959-60	38191A
" ..	Later	*40706A	Stop tail and number plate ..	1959-60	*53398A/B	Windshield wipers ..		
Flasher unit ..	1959-60	35010A	Mirror ..	1959	*620601	Motor ..	1959-60	75251A/E
" ..	Later	35020A	Starting motor ..	1959	25022M	Motor ..	Later	75251H
Fuse box ..	1959-60	033239	" ..	1959-60	25022N/Q	Wheelbox ..	1959-60	*72665A
" ..	Later	033283				Crosshead and rack assy ..	1959-60	743235
Generator ..	1959-60	22258E/H	SWITCHES			Outer casing ..		
" ..	(temporary alternative)	22700D	Flasher ..	1959-60	*31635A	Motor to wheelbox ..	1959-60	745118
Later	1960	22704A	" ..	1960	31986A	Wheelbox to wheelbox ..	1959-60	743317
Horn ..	1959	70141B	Horn push and dipper ..	1959-60	31438A/B	End tube ..	1959-60	740746
" ..	1960	69046F	Ignition ..	1959-60	*31449E	Ferrule, casing retaining ..	1959-60	740715
			Lighting ..	1959-60	31934A	Arm ..	1959-60	745084
			Knob ..	—	316398	Blade ..	1959-60	741543
			Lighting ..	Later	31987A			

RENAULT 760 c.c. 4CV Saloon 1952–55

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter ..	1955	*36202A	LAMPS			Suppressor		
Horn ..	1952-55	*069376	Side ..	1952-55	52139B	Trafficators	1952-55
			Stop tail ..	1952-55	53178D	" ..	1952-53	*54042A
							Later	1953-54
								54046A/D

RENAULT 8.3 h.p. Car 1947–51

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter ..	1947-51	36064F	Trafficators	1947-50	*54015B	Windshield wipers—cont'd	
Fuse box ..	1947-51	*385211	" ..	1951	*54042A	Arm, left hand	1947-51
Horn ..	1947-51	069343	Windshield wipers			" right hand	1947-51
Mirror ..	1947-51	062556	Motor	1947-51	Blade	1947-51
								735145

RENAULT 8.3 h.p. Van 1947–51

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter ..	1947-51	36064F	Windshield wipers			Windshield wipers—cont'd		
Fuse box ..	1947-51	*385211	Motor	1947-51	Arm, right hand	1947-51
Horn ..	1947-51	069343	Arm, left hand	1947-51	"	1947-51
Mirror ..	1947-51	062556				Blade	1947-51
								735144
								*735067
								727707

* See Supersession Chart

† When ordering, please quote voltage

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

RENAULT—RILEY
RENAULT 12 h.p. Car 1946-51

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1946-51	36084A	Trafficators	1946-50	*54015B	Windshield wipers—cont'd	1946-51	
Fuse box	1946-51	*385211	"	1951	*54042A	Bearing, passenger side	1946-51	731721
Horn	1946-51	*069376	Windshield wipers			Arm, left hand	1946-51	735145
Mirror	1946-51	*580651	Motor	1946-51	75056A	" right hand	1946-51	735144
SWITCH			Coupling bar	1946-51	*731809	Blade	1946-51	727707
Ignition	1951	*31163A						

RILEY 1½ litre 1946-55

Ammeter	1946-48	*364322	LAMPS, Head, Export			SWITCHES—continued		
"	1949	*36073B	—continued			Panel	1946-49	*31057A
"	1950-55	36078F	L.H.D., dip right ..	1949	*A50723H	Knob	1950-55	*78255A
Battery	1946	SG9A	"	1950	*A50445K	Knob	1950-54	768651
"	1947-49	SG11A	"	1951	*A50799D	Reverse lamp	1946-55	768378
"	1950-55	G79A	"	1952-53	*50528M	Solenoid, starting motor	1946-49	76022B
Bulb holder, panel light ..	1946-55	39015A	"	1953	*51409A	Solenoid operating ..	1946-48	*76411D
Bulb	—	987	"	1953-55	*51345A & B	Knob	1950-55	31253A
Coil, ignition	1946	*45039A	Head, Export Europe ..	1949	*B50723H	Knob	—	317357
"	1949-55	*45012A/D	(not France)	1949	*B50445K	Stop lamp	1946-52	31281B
Control box	1946	*37031A/B	ditto	1950	*B50799D	Spring	—	315543
"	1947-50	37057E	ditto	1952-53	*50961A	Stop lamp	1955	31082D
"	1951-52	37065E	ditto	1953	*51408A	Windshield wiper ..	1950-55	*31252A/B
Distributor	Later	1952-55	ditto	1953-55	*51346A	Knob	—	315075
Fuse box	1946	*404425	Head, Export France ..	1949-50	*50747B/D	Trafficators	1946-50	*54018D
"	1949-55	*40182A/E	"	1951-52	*50808D	"	1951-52	*54039A
"	1951-52	*37130A	"	1952	*50978A	"	1953-55	54044A/D
Generator	Later	032340	"	1955	51411A	Warning lights		
"	1946-49	*228240	Number plate and reverse			Heater	1950-54	39015A
"	1950	22449A	Later			Ignition	1950-54	*38057A
"	1951-52	*22250E/F	Reverse, tail and number	1955	*53434A	Main beam	1950-54	38044A
Horn	Later	22528D	plate	1946	*525133	Windshield wipers		
Low note	1946-52	*69021A	ditto	1949-55	53032B	Motor	1946-49	*75066A
"	Later	*69011F/J	Roof	1946-49	*532940	"	1950	*75075J
High note	1946-52	*69022A	Side	1946	*523531	"	1951	*75075K
Junction box	1946-55	*69012F/J	"	1949-53	*52059A	Stop tail and reflex ..	1946-49	75153A
LAMPS		78266A	"	1954-55	52217A	Clutch housing	1946-49	737013
Fog	1954-55	55043E	"	1954-55	52218A	Wheelbox	1950-55	72592A/K
Head, Home R.H.D., dip left (L.H.)	1946	*50144A	Stop tail and number plate ..	1946	*525123	Shaft	1946-49	737243
" non-dip (R.H.)	1946	*50264D	Starting motor	1946	*53027B	Coupling	1946-49	729036/S
" dip left (L.H.)	1949	*50723H	"	1949-55	53330D	Link primary	1946-49	737297
" non-dip (R.H.)	1949	*50724H	Suppressor	1951-53	62052A	" secondary	1946-49	737312
" dip left (L.H.)	1950	*50445K	SWITCHES			Crosshead and rack assy ..		
" non-dip (R.H.)	1950	*50446K	Dipper	1946	31284A	Cut to 44"	1950-55	736307
" dip left (L.H.)	1951	*50799D	"	1947-48	31073A	Outer casing		
" non-dip (R.H.)	1951	*50579K	"	1949-55	31260A	Motor to wheelbox	1950-55	739868
(L.H. and R.H.)	1952-53	*50959A	Foglamp	1946-49	*31060A	Wheelbox to wheelbox	1950-55	*739956
ditto	Later	*51407A	"	1950-55	31251A	End tube	1950-55	740031
ditto	1953-55	51344A	Knob	1950-55	316116	Grommet, housing	1946-49	735679
dito (alternative)	1954-55	51538A	Heater or fan	1950-55	—	" wheelbox	1950-51	734458
Head, Export R.H.D., dip left	1949	*50723H	Knob	—		"	1952-55	734652
"	1950	*50445K	SWITCHES			Arm	1946-49	*735077
"	1951	*50799D	Dipper	1946	31284A	" left hand	1950-55	*737596
"	1952-53	*50959A	"	1947-48	31073A	" right hand	1950-55	*737595
"	Later	*51407A	Ignition	1950-55	31187D	Blade	1946-49	727759
"	1953	51344A	Ignition and lighting	1946-49	*34015B	"	1950-52	*737482
"	1953-55	51344A	Lighting	1950-55	*31251A	Knob	1952-55	*737682

RILEY 'One-Point-Five' 1958-60

Battery	1958	GT9A-3	LAMPS—continued			SWITCHES—continued		
"	1959-60	BT9A	Head, Export			Foglamp	1958-60	31183H
Bulb holder, panel light ..	1959-60	554734	R.H.D., dip left	1958-60	58099D/F	Knob	—	316134
Bulb	—	987	L.H.D., dip right	1958-60	58100D/E	Ignition	1958-60	*31484B
Coil, ignition	1958	*45053J/K	Head, Export Europe ..	1958-59	58144B/D	Lighting	1958-60	31183H
"	1959-60	*45054M	(except France & Sweden)	1959-60	58276A/B	Knob	1958-60	*31554A
Control box	1958-59	37182J	Later	1959-60	58145B	Reverse	1958-60	*31077E
"	1960	37182K & L	Head, Export France	1958-59	58453A	Solenoid, starting motor	1958-60	*76441E
Distributor	1958	40510A	"	1959-60	58453A	Solenoid operating	1958-60	*31446D
"	1959-60	*40587B/D & F	ditto	1960	58146B	Knob	—	317371
Flasher unit	1958-60	35010A	ditto (indirect)	1958-59	*58495A/B	Stop lamp	1958-60	31082E/J
Fuse box	1958-60	033239	Number plate illumination	1958-60	58101D/E	Windshield wiper	1958-60	*31554A
Generator	1958-59	22258E/H	and reverse	1958-60	58146C	Knob	—	313690
"	1960	22700D	Stop tail and flasher	1958-60	53294D	Windshield wipers		
LAMPS			Left hand	1958-60	53664A	Motor	1958-59	75297B/D
Flasher, front Amber	1958-60	52392A/B	Right hand	1958-60	53663A	Knob	1959-60	75297E
White (U.S.A.)	1958-60	52393A/B	Left hand (U.S.A.)	1958-60	53666A	Wheelbox	1958-60	72673A/B
Head, Home R.H.D., dip left	1958-60	58143B/D	Right hand	1958-60	53665A	Crosshead and rack assy	1958-60	743221
			Starting motor	1958-59	25025M	Outer casing		
			"	1960	25022N/Q	Motor to wheelbox	1958-60	744463
			Suppressor (when fitted)	1958-60	78106A	Wheelbox to wheelbox	1958-60	744462
			SWITCHES			End tube	1958-60	740746
			Dipper	1958-60	31284A/D	Ferrule, casing retaining	1958-60	740715
			Flasher	1958-60	31760A	Grommet, wheelbox	1958-60	740811
						Arm, left hand drive	1958-60	745072
						" right hand drive	1958-60	745071
						Blade	1958-60	737897

* See Supersession Chart
L.H.D. ... Left hand drive

† No longer available—refer to Wiper Conversion Set Section
R.H.D. ... Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

RILEY

RILEY 2½ litre 1947-53; 'Pathfinder' 1954-57

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1947-48	*36051A	LAMPS—continued	1948-50	50747D	Warning lights	1950-53	39015A
"	1949	*36073B	Head, Export France ..	1951-52	*50808D	Heater, bulb holder ..	1950-53	39057A
"	1950-53	36078F	" " " Later	1952	*50978A	Ignition	1950-53	38048A
Battery	1954-57	*36183A/D	SG11A	1954	51411A	Main beam, bulb holder ..	1950-53	39015A
Coil, ignition	1947-49	GT11A	" " "	1955-56	*51341A & B/E			
Control box	1950-57	*45012A/D	Head, Export U.S.A. ..	1951-53	*50528M			
"	1947-55	*45054D	" " " Later	1953	*51409A			
Control box	1947-49	37065E	Number plate illumination	1953-57	51343A & B/E	Windshield wipers		
"	1950-52	*37076E	(Open Sports) ..	1949	53097E	Motor	1947-49	*75066A
"	Later	*37139D/E	Bulb holder bracket ..	1954-57	53314A/B	"	1950	*75075A
Distributor	1947-51	40081A/F	Reverse, tail and number	1947-53	53032B	"	1951	*75075K
"	1952	40277D	plate	1954-56	53210F/H	" (R.H.D.) ..	1952-53	75153A
"	1953-54	*40336A	Reverse	1955	*52246A	" (L.H.D.) ..	1954-55	*75187F
"	1955-56	*40419D	Side	1957	*52059A	"	1955	75177H
Flasher unit	1956-57	40503A	Side	1947-53	52139B	Clutch housing ..	1947-49	737013
Flasher relay	1954-57	*35003A	"	1954	*52238A	Wheelbox	1950-53	72592A/K
Fuse box	1951-52	37183A/D	Reverse	1955-56	*52143E/F	"	1954	72656A
"	Later	*37130A	Side flasher	1957	*52162B/E	Shaft	1947-49	*72670A
Generator	1947-49	*22447A	Stop tail and number plate	1954-56	52240B	Coupling	1947-49	737243
"	1950-52	*22435A/B	1947-53	*53027B	Link, primary	1947-49	729036/S	
"	Later	*22456A/D	1954-57	53178D/F	secondary	1947-49	737297	
Horn	1955-57	22483A & B/D	Mirror	1951-57	65052A	Crosshead and rack assy.	1950-53	736307
Low note	1947-51	*69021A	"	1955	062602	"	1954-55	741263
"	1952-55	*69011F	Starting motor	1947-49	*270299	"	1956-57	743221
High note	1956-57	69046A	"	1950-53	26043A	Outer casing	1950-53	
"	1947-51	*69022A	Suppressor (distributor) ..	1954-57	25521D	Motor to wheelbox ..	1950-53	739868
"	1952-55	*69012F	" (plug)	1951	78114A	"	1954-55	745037
Horn relay	1954-57	*33116B	SWITCHES	1951-53	78113A	"	1956-57	743652
Junction box	1948-53	78265A	Dipper	1949	31073A	Wheelbox to wheelbox	1950-53	*739956
"	1948-53	78266A	"	1950-53	31260A	End tube	1950-53	745030
LAMPS			"	1954-55	31277A/D	End tube	1950-53	740031
Fog	1954	55043E	Door light	1955-57	31494B/F	Ferrule, casing retaining	1955-57	740715
Head, Home	1955-57	55150A/B	Foglamp	1954-55	*31180A	Grommet, housing ..	1947-49	735679
R.H.D., dip left (L.H.)	1947-48	*50144A	"	1956-57	*31222D	wheelbox	1950-51	734458
non-dip (R.H.)	1947-48	*50264D	"	1947-49	*31060A	"	1952-53	734652
"	Later	*50723H	Knob	1950-53	*31251A	Circuit breaker	1956-57	7816A
"	non-dip (R.H.)	1948-50	Heater or fan	1954-57	*31420A	Arm	1947-49	*735077
"	Later	*50724H	Knob	1950-53	316116	" left hand	1950-53	*737596
"	1950	*50445K	Ignition	1950-55	316134	" right hand	1950-53	*737595
"	1950	*50446K	Ignition and lighting	1947-49	*34015B	Blade	1947-49	727759
"	1951	*50799D	Lighting	1950-53	*31251A	"	1950-52	*737482
"	1951	*50579K	Knob	1954-57	316115	"	1952-53	*737682
"	dip left (L.H. and R.H.)	*50959A	Lighting	1954-57	31183B/E	"	1954-56	738789
ditto	Later	*51407A	Knob	1955	316133	Windshield wipers		
ditto	1953	51344A	Map light	1955-57	*31420A	(Open Sports)		
ditto	1953	51358A	Knob	1955-57	316135	Motor	1949	*75075J
ditto	1955-56	51596A	Panel	1947-49	*314722	Wheelbox, with switch	1949	72605A
ditto	1957	51546D	Knob	1950-53	*78255A	Crosshead and rack assy.	1949	72604A
Head, Export	1947-48	*50144A	Panel	1956-57	768651	Outer casing	1949	738223
R.H.D., dip left	1948-49	*50723H	Knob	1956-57	*31420A	Motor to wheelbox ..	1949	739858
"	Later	*50445K	Reverse lamp	1947-57	*31077A/E	Wheelbox to wheelbox	1949	*739942
"	1950	*50799D	Solenoid, starting motor	1947-49	76022B	End tube	1949	740031
"	1951	*50595A	Rubber boot	1950-57	*76411D	Arm	1949	736430
"	Later	*51407A	Solenoid operating	1947-49	860556	Blade	1949	*737482
"	1953	51344A	"	1950-55	31253A	"	1952-53	
"	1953-54	*51336A & B/J	"	1956-57	*31446A	Windshield wipers		
L.H.D., dip right	1947-48	*A50144A	Knob	1950-53	*317357	(Open Sports)		
"	Later	*A50723H	Ignition	1954-57	317371	Motor	1949	*75075J
"	1950	*A50445K	Stop lamp	1947-52	31281B	Wheelbox, with switch	1949	72605A
"	1951	*A50799D	Spring	—	315543	" less switch	1949	72604A
"	1952-53	*50528M	Stop lamp	1953-57	31082A/E	Crosshead and rack assy.	1949	738223
"	Later	*51409A	Windshield wiper	1950-53	*31252A	Outer casing	1949	
"	1953	*51345A	Windshield wiper	1954	315075	Motor to wheelbox ..	1949	739858
"	1953-54	*51337B & D/E	Knob	1955-57	*31059B	Wheelbox to wheelbox	1949	*739942
Head, Export Europe (not France)	1949	*B50723H	Trafficators	1950	*54018D	End tube	1949	740031
"	1950	*B50445K	"	1950-52	*54039A	Arm	1949	736430
"	1951	*B50799D	"	1953-57	54044D/E	Blade	1949	*737482
"	1952-53	*50961A	"			Borg Warner overdrive equipment (optional)		
ditto	Later	*51408A				Relay	1957	33177A
ditto	1953	51346A				Switches	1957	31632A
ditto	1953-54	*22483D				Kick-down	1957	76112A
ditto	1955-57	51339A & B/H				Centrifugal	1957	
LAMPS—continued						Automatic transmission equipment (optional)		
Head, Home						Gear indicator quadrant		
R.H.D., dip left						L.H.D.	1957	56067A
Head, Export						R.H.D.	1957	56066A
R.H.D., dip right								
L.H.D.								
R.H.D.								

RILEY 'Two-Point-Six' 1958-59

Ammeter	1958-59	36239A/B	Horn	1958-59	69046F	LAMPS—continued		
Battery	1958-59	GT9A-3	Low note	1958-59	69047F	Head, Home	1958-59	58087A
Coil, ignition	1958-59	*45054J/K	High note	1958-59	690936	R.H.D., dip left	1958-59	58006B/E
Control box	1958-59	37183H	Grommet	—		Head, Export	1958-59	58007B/D
"	Later	37183K	LAMPS	1958-59	55081B	R.H.D., dip right	1958-59	58008A/D
Distributor	1958-59	*40581A/B	Driving	1958-59	*52278B	Head, Export Europe (not France) (except France & Sweden)	1958-59	58008A/D
Flasher unit	1958-59	35010A	Flasher, front	1958-59	*53378A	Later	1959	58268A
Fuse box	1958-59	033239	(U.S.A.)	1958-59	*55055D			
Generator	1958-59	*22483D	Fog	1958-59				

* See Supersession Chart
L.H.D. .. Left hand drive

† No longer available—refer to Wiper Conversion Set Section
R.H.D. .. Right hand drive

L.H. .. Left hand R.H. .. Right hand

continued



Equipment Specification

RILEY—ROLLS-ROYCE

RILEY 'Two-Point-Six' 1958-59—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS—continued			SWITCHES—continued	1958-59	*31554A	Windshield wipers—cont'd		
Head, Export France ..	1958-59	58009B	Foglamp ..	1958-59	313631	Outer casing	1958-59	743362
" " Later ..	1959	58269A	Knob ..	—	31497B	Motor to wheelbox ..	1958-59	745030
Head, Export Sweden ..	1959	58454A	Ignition ..	1958-59	31183F	Wheelbox to wheelbox ..	1958-59	740746
Head, Export U.S.A. ..	1958-59	58011B	Lighting ..	1958-59	313630	End tube ..	1958-59	740715
ditto (indirect) ..	1958-59	58010B/D	Panel ..	1958-59	31183F	Ferrule, casing retaining	1958-59	740811
Number plate illumination and reverse ..	1958-59	53159D	Knob ..	—	313632	Grommet ..	1958-59	741837
Side ..	1958-59	52139E	Reverse lamp ..	1958-59	*31077E	Circuit breaker ..	1958-59	78316A
Stop tail (when trafficators fitted) ..	1958-59	53670A	Solenoid, starting motor ..	1958-59	*76411E	Arm, left hand drive ..	1958-59	741836
Stop tail and flasher ..	1958-59	53669A	Solenoid operating ..	1958-59	*31446B/D	Arm, right hand drive ..	1958-59	741836
ditto (U.S.A.) ..	1958-59	53671A	Knob ..	—	313634	Blade ..	1958-59	737897
Mirror ..	1958-59	062615	Trafficators (optional) ..	1958-59	54044E	Borg Warner overdrive equipment (optional)	1958-59	33177A
Relay, horn ..	1958-59	*33116B	Warning lights ..			Relay ..	1958-59	
Starting motor ..	1958-59	25521D	Flasher and main beam bulb holder ..	1958-59	39007A	Switches ..	1958-59	
Suppressor (when fitted)	1958-59	78106A	Ignition bulb holder ..	1958-59	863511	Centrifugal ..	1958-59	76112D
SWITCHES			Bulb ..	—	987	Kick-down ..	1958-59	31632B
Dipper ..	1958-59	31646D	Windshield wipers ..			Solenoid, (L.H.D.) ..	1958	76508A
" (U.S.A.) ..	1958-59	31277D	Motor ..	1958-59	75296D	" (R.H.D.) ..	1958	76511A
Door light ..	1958-59	*31222D	Wheelbox ..	1958-59	*72670A	1959	76508A
Driving lamp ..	1958-59	*31554A	Crosshead and rack assy. Cut to 35 $\frac{1}{2}$..	1958-59	743221	Borg Warner automatic transmission (optional)		
Knob ..	—	313674				Gear indicator quadrant ..		
						Left hand drive ..	1958-59	56067A
						Right hand drive ..	1958-59	56066A
						Switch ..	1958-59	
						Cutout ..	1958-59	*31077E

RILEY 'Four Sixty-Eight' 1959-60

Ammeter ..	1959-60	36250A/D	LAMPS—continued	1959-60	53787A/D	Windshield wipers ..	1959-60	75358A
Battery ..	1959-60	BT9A	Reverse ..	1959-60	52431A/E	Motor, left hand drive ..	1959-60	75357A
Bulb holder, panel light ..	1959-60	554734	Side and flasher ..	1959-60	*52446A/E	" right hand drive ..	1959-60	
Bulb ..	—	987	ditto (N. America) ..	1959-60		Wheelbox ..		
Coil, ignition ..	1959	*45103A/D	Stop tail and flasher ..	1959-60	53792A/E	Driver side ..	1959-60	72713A/B
	1960	*45113D	Left hand ..	1959-60	53793A/E	Passenger side ..	1959-60	72707A
Control box ..	1959	37283A	Right hand ..	1959-60	53794A/E	Crosshead and rack assy. ..	1959-60	744254
	1960	37290D	Left hand (N. America) ..	1959-60	53795A/E	Outer casing ..		
Distributor ..	1959-60	40644A/B & E	Right hand ..	1959-60	57113A	Motor to wheelbox ..	1959-60	54710207
	Later	40644D & F	Reflex reflector ..	1959-60	33188A	Wheelbox to wheelbox ..	1959-60	54710208
Flasher unit ..	1959-60	35020A	Relay, horn ..	1959-60		End tube ..	1959-60	740746
Fuse box ..	1959	033239	Sleeve, Lucas connector ..			Ferrule, casing retaining ..	1959-60	740715
	1960	033285	14 amp ..	1959-60	54190042	Grommet, wheelbox ..	1959-60	740811
Generator ..	1959	*22297A	35 amp ..	1959-60	54190043	Arm, left hand drive ..	1959	744134
	1960	22700D	Twin ..	1960	54190119	" right hand drive ..	1959	744133
" (temporary alternative) ..	1960	*22704A	Starting motor ..	1959	25022M	54711539	1960	744133
Horn ..	1959-60	69046F	Suppressor (when fitted) ..	1959-60	25022N/Q	Blade ..	1959	*737907
Low note ..	1959-60	69047F		1959-60	78106A	"	1960	54711283
High note ..	1959-60		SWITCHES ..			Windshield wipers (from Chassis No. 5789) ..		
LAMPS ..			Dipper ..	1959-60	31800A	Motor, L.H.D. ..	1960	75357A
Head, Home R.H.D., dip left ..	1959-60	58251A/F	Flasher ..	1959-60	31885A	" R.H.D. ..	1960	75358A
Head, Export R.H.D., dip left ..	1959-60	58251A/F	Heater ..	1959-60	31828A	Wheelbox ..		
L.H.D., dip right ..	1959-60	58252A/F	Ignition and starting ..	1959	31781A/D	Driver side ..	1960	72707A/B
Head, Export Europe (except France & Sweden) ..	1959-60	58253A/E	1959-60	31973B	Passenger side ..	1960		
Head, Export France ..	1959-60	58254A/F	Lighting ..	1959-60	31841A/D	Crosshead and rack assy. ..	1960	
Head, Export Sweden ..	1959	58315A/D	Panel ..	1959-60	31956A	Cut to 35 $\frac{1}{2}$..	1960	744254
" "	Later	58446A/D	Reverse lamp ..	1959-60	31849A	Outer casing ..		
	1959	*58545B	Solenoid, starting motor ..	1959-60	*76465A	Motor to wheelbox ..	1960	54710207
Head, Export U.S.A. ..	1959	*58255A/B	ditto (automatic transmission) ..	1959	*76466A	Wheelbox to wheelbox ..	1960	54710208
Number plate illumination ..	1959-60	53763A	Stop lamp ..	1959-60	31882A	End tube ..	1960	740746
ditto .. Later	1960	53814A	Windshield wiper ..	1959-60	31836A/B	Ferrule, casing retaining ..	1960	740715
			Warning lights ..			Grommet, wheelbox ..	1960	740811
			Ignition, bulb holder ..	1959-60	863511	Arm, L.H.D. ..	1960	54711538
			Main beam, bulb holder ..	1959-60	554734	" R.H.D. ..	1960	54711539
			Bulb ..	—	987	Blade ..	1960	54711283

ROLLS-ROYCE 'Silver Wraith' 1956-59

Coil, ignition ..	1946-55	*45025B	Horn—continued	1946-51	*69005B	LAMPS—continued	1956-59	55151E
	1956-59	45066A/H	High note ..	1946-51	*69045A	Fog/Flasher (when fitted) ..	1956-59	55167A
Control box ..	1946-47	*37052H	" ..	1952-54	69077A	(France, when fitted) ..	1956-59	
	1948-52	*37089D	" ..	1955-59	69079A	Head, Home R.H.D., non-dip (L.H.) ..	1946-50	50731A
" "	Later	1952-55	" .. (special body) ..	1955-59	69079A	ditto .. (R.H.) ..	1946-50	50329A
	1956-59	37119F	(Export) ..	1953-59	70070A	ditto (L.H. and R.H.) ..	1951-53	50849A/B
Flasher unit (when fitted) ..	1956-59	35010A	Horn relay ..	1946-52	*33139A	ditto .. later	1953-55	50731A
	1948-50	*385200	" ..	1953-59	61416B	ditto (alternative) ..	1951-55	50329A
Fuse box ..	1948-50	22413D	Inspection lamp light unit ..	1956-59	78264A	ditto ..	1956-59	51730A/N
Generator ..	1946	22413D	Junction box ..	1946-54	78266A	Head, Export Vertical dip ..	1946-55	50428A
	1947-53	23000A/J	" ..	1946-59		R.H.D., dip left ..	1956-59	51730A/N
" ..	Later	23002A/D	Left hand (when fitted) ..	1956-59	52287A	L.H.D., dip right ..	1956-59	51752H/M
	1953-55	22481A/J	Right hand ..	1956-59	52288A	Head, Export Europe (not France) ..	1951-55	B50849A/B
	1956-57	22481M/T	(Park Ward) ..	1956-59	53294A	(except France and Switzerland) ..	1956-59	51604A/M
Horn ..	1946-51	*69004B						
Low note ..	1946-51	*69044A						
" ..	1952-54	69076A						
" ..	1955-59	69078A						
" .. (special body) ..	1955-59	70067A						
" .. (Export) ..	1953-59							

* See Supersession Chart L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

ROLLS-ROYCE

ROLLS-ROYCE 'Silver Wraith' 1956-59—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS—continued			Mirror			Trafficators	1953-55	54054D
Head, Export France ..	1947-55	50693A	Left hand ..	1946-55	062590	(Hooper Tourer and 7-seater) ..	1956-59	54054D
" " "	1956-59	51605A/N	Right hand ..	1946-55	062626	Windshield wipers		
Head, Export Switzerland	1956-59	51816D	Left hand ..	1946-55	062587	Motor	1946-47	*75075J
Head, Export U.S.A. ..	1947-55	50816B	Right hand ..	1946-55	062625	"	1948-50	*75087L
" " "	1956-59	51607A/L	Left hand (Canada) ..	1956-59	062628	"	1951-55	*75087M
Head, Export Canada and S. America ..	1956-59	51606M	Right hand ..	1956-59	062627	Wheelbox ..	1956-59	*75181J
Number plate illumination U.S.A. ..	1946-59	53080A	Reflex reflector			With switch ..	1946-55	72627A/H
" (special) ..	1952-59	53164D	Except France ..	1956-59	57093A	Less switch ..	1946-55	72598A/D
Pass ..	1947-55	53114A	Starting motor	1946-55	26023A/E	Crosshead and rack assy.	1946-47	738223
Reverse ..		*55030A	" (L.H.D.) ..	1951-55	26033A/B	ditto ..	1948-55	738499
Switzerland ..	1951-55	53128E	"	1956-59	26123A	ditto (Park Ward and special bodies)		
All destinations except France and Italy (Park Ward) ..	1956-59	52308A	SWITCHES			Cut to 58" ..	1948-55	738223
France (Park Ward) ..	1956-59	52309A	Bonnet light ..	1956-59	31201B	Crosshead and rack assy.	1956-59	741262
Italy (Park Ward) ..	1956-59	53501A/B	Dipper ..	1946-54	31284A	Outer casing		
Side ..	1946-59	52088F	Foglamp ..	1946-50	31201B	Motor to wheelbox ..	1946-47	*738221
Stop ..	1951-55	53113D	Heater or fan ..	1948-52	78210A	"	1948-55	*739907
" (Holland and Switzerland) ..	1951-54	53207B	Ignition	1953-59	78286F	Wheelbox to wheelbox ..	1946-55	*739979
Stop tail ..	1946-50	*53091E	Lighting	1946-59	31201B	ditto (special body) ..	1948-55	*739980
" ..	1951-55	*53192B	Map light	1946-51	31201B	ditto	1956-59	740781
(Except James Young) ..	1956-59	53460B	"	1957-59	31830A	End tube	1946-55	740031
(James Young) ..	1956-59	53339K	Panel	1952-59	31073A	"	1956-59	740746
France (James Young) ..	1956-59	53495B	Petrol/Oil	1952-59	*31074A	Ferrule, "casing retaining ..	1956-59	740715
U.S.A. ..	1951-55	53193A/B	Solenoid, starting motor ..	1946-49	*760080	Arm	1946-50	*738775
" (James Young) ..	1956-59	53522D	"	1950-55	*76013	"	1951-55	*738933
California (James Young) ..	1956-59	53416D	Windshield wiper	1956-59	*76411E	"	1956-59	*741481
			Trafficators	1946-51	31448D	(special orders)	1958-59	741486
			"	1952	54003E	Blade	1946-50	*738776
					053972	"	1951-52	*738934
						"	1953	*742079
						"	1954-59	738724

ROLLS-ROYCE 'Silver Dawn' 1953-55

Coil, ignition	1953-55	*45025B	LAMPS—continued			Windshield wipers		
Control box	1953-55	*37116A/B	Stop (Switzerland) ..	1953-55	53207B	Motor	1953	*75087M
Generator	1953-55	23002D	Stop tail (U.S.A.) ..	1953-55	53193B	Motor	1954-55	*75186A
Horn			Mirror			Wheelbox		
Low note	1953-55	*69044A	Exterior, right hand ..	1953-55	*580733	With switch	1953	72627H
" (Export)	1953-55	70067A	"	1953-55	*580736	Less Switch	1953	72598D
High note	1953-55	*69045A	Interior	1953-55	062577	Wheelbox	1954-55	72635B
" (Export)	1953-55	70070A	Starting motor	1953-55	26023A/E	Crosshead and rack assy. ..	1953	738499
Horn relay	1953-55	*33139A	" (L.H.D.) ..	1953-55	26033A/B	Outer casing	1954-55	741262
Junction box	1953-55	78264A	SWITCHES			Motor to wheelbox	1953	*739907
"	1953-55	78266A	Boot lamp	1953-55	31375A	"	1954-55	*739979
LAMPS			Heater and demister	1953-55	78286A/F	Wheelbox to wheelbox	1953	740780
Fog	1953-55	*55092A	Ignition	1953-55	31201B	End tube	1954-55	740781
Head, Home R.H.D., dip left	1953-55	*51089B	Lighting	1953-55	31201B	"	1953	740031
Head, Export R.H.D., dip left	1953-55	*51089B	Panel	Later	31073A	"	1954-55	740746
Head, Export France	1953-55	51423A	Petrol/Oil	Later	78301A	Blade	1953	*738933
Number plate illumination ditto (U.S.A.)	1953-55	53080A	Solenoid, starting motor	1953-55	*31074A	"	1954-55	*741481
Side	1953-55	53164D	Windshield wiper	1953-54	076013	Blade	1953	*738934
		52088F	Trafficators	Later	31302A	"	1954	*742079
					31448A	"	1954	738724
					54054A/D	"	Later	738724

ROLLS-ROYCE 'Silver Cloud' 1956-59

Actuator (special orders)	1957-59	78329A	LAMPS—continued			Screenjet	1958-59	077026
Coil, ignition	1956-59	45066A/H	Head, Export R.H.D., dip left	1956-58	51730A/N	Starting motor	1956-59	26123A
Control box	1956-57	37195A/F	1959	58334A/D	Automatic transmission	1956-59	26120A	
"	1957-58	37195H/J	1956-59	51752H/M	Synchromesh gears	1956-59	78128A	
"	1958-59	37277B/D & E	L.H.D., dip right	1956-59	51604A/M	Suppressor	1956-58	
Flasher unit	1956-59	35010A	Head, Export Europe (except France and Switzerland)	1956-59	58022A	SWITCHES		
Generator	1956-57	22481M/Q	Head, Export France	1956-59	58022A	Air conditioner	1956-59	31708A
"	1958-59	22800A/B	Head, Export Switzerland	1956-59	51816D/E	Demister and air valve	1956-59	31455F
Horn Low note	1956-59	69082D	Head, Export U.S.A.	1956-59	51607A/L	Dipper	1956-57	*31372A
Except France & U.S.A.	1956-59	*69080B	Head, Export Canada and S. America	1956-59	51606A/R	Panel and map light	1956-59	31800A
France	1956-59	69071A	Number plate illumination and reverse	1956-59	53603A/B	Petrol filler lid	1956-59	31456H
U.S.A.	1956-59	*69088A	ditto (France)	1956-59	53604A/B	Petrol/Oil change-over	1956-59	31644A
Special body	1956-59		Stop tail, flasher and reflex	1956-59	53339K	Petrol/pump (test, special)	1956-59	31579A
High note	1956-59		ditto (France)	1956-59	53495B	Pillar light (France)	1956-59	31570D
Except France & U.S.A.	1956-59	69077D	ditto (U.S.A.)	1956-59	53522D	Solenoid, starting motor	1956-59	*76411E
France	1956-59	*69081B	ditto (California)	1956-59	53516D	Windshield wiper and screenjet	1956-59	31457E
U.S.A.	1956-59	69070E	Relay, headlamp flasher (France)	1956-59		Window lift	1956-59	31650A
Special body	1956-59	*69089A	Relay, headlamp flasher	1956-59		Windshield wipers Motor	1956-57	*75249B
			Relay, horn	1956-59	*33116B	"	1957-59	75331A
LAMPS			Relay, flasher	1956-59	*33116B	Bracket, mounting	1957-59	745838
Fog/Flasher	1956-59	55151F	Relay, rear window demister and heater	1956-59	33169B	Wheelbox	1956-59	72661B
(France)	1956-59	55167B			33194A	Arm	1956-59	741483
Head, Home R.H.D., dip left	1956-58	51730A/N				Blade	1956-59	738734
"	1959	58334A/D						

* See Supersession Chart L.H.D. .. Left hand drive R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

ROLLS-ROYCE—ROVER

ROLLS-ROYCE 'Phantom' V (engine details only) and 'Silver Cloud' II 1960

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Actuator (heat control)	1960	78329D	LAMPS—continued			Relay, rear window demister	1960	33226A
Ammeter	1960	36260A	Head, Export France	1960	58542B	Screenjet	1960	077026
Control box	1960	37277E	Head, Export Switzerland	1960	58611B	Starting motor	1960	26162A
Flasher unit	1960	35010A	Head, Export Sweden	1960	58543B	" "	Later	26162B/E
Generator	1960	22800B	Head, Export U.S.A.	1960	58553A	" "	"	26175A
Horn			Head, Export Canada	1960	51606R			
Low note	1960	69108A	Head, Export Middle East	1960	51752M			
High note	1960	69109A	Indicator					
LAMPS			L.H. (Switzerland)	1960	52476A	Dipper	1960	31800A
Fog (Switzerland)	1960	55239A	R.H. "	1960	52475A	Flasher	1960	31915B
Fog/Flasher	1960	55151F	Number plate illumination and reverse	1960	53603D	Panel and map light	1960	31939A
(U.S.A.)	1960	55236A	Side	1960	52228N	ditto	Later	34328A
Head, Home R.H.D., dip left	1960	58334B	Stop tail and flasher	1960	53339K	Petrol door	1960	31363B
Head, Export R.H.D., dip left	1960	58334B	ditto (France)	1960	53495B	Petrol/Oil change-over	1960	31938A/B
Head, Export Europe (except France, Switzerland and Sweden)	1960	58541B	ditto (U.S.A.)	1960	53516D	Solenoid, starting motor	1960	76411E
			Relay, change-over	1960	33168B	Windshield wiper	1960	31940A
			Relay, fog/flasher	1960	33169B	Windshield wipers		
			Relay, horn	1960	*33116B	Motor	1960	75379A
						Wheelbox	1960	72661B
						Arm	1960	54711529
						Blade	1960	54711613

ROVER 10 h.p. and 12 h.p. 1946–47

Ammeter	1946-47	*364595	Mirror	1946-47	*580652	Warning lights		
Battery	1946-47	SG9A	Petrol reserve valve	1946-47	780025	Choke	1947	*38034B
Coil, ignition	1946-47	*45020A	10 h.p. Saloon	1946-47	780025	Ignition	1946-47	*38015B
Control arm	1946-47	*310818	12 "	1946-47	780060	Oil	1946	38018B
Control box	1946-47	*37002A	Starting motor	1946-47	*255666	Windshield wipers		
"	Later	37065E	Steering column control	1946-47	323761	Motor	1946-47	†75066A
Distributor	1946-47	*409629	SWITCHES			Clutch housing	1946-47	735691
Generator	1946-47	*22447A	Choke warning light	1947	*31109B	Bracket, with shaft and coupling (Coupé)	1946-47	737273
Horn	1946-47	*069207	Foglamp	1946-47	*31080A	dito (12 h.p.)	1946-47	737306
Low note (Sports)	1946-47	*69019A/B	Heater or fan	1946-47	768380	Shaft, short	1946-47	737243
High note "	1946-47	*69020A/B	Knob	1946-47	768378	Coupling	1946-47	729036/S
LAMPS			Ignition	1946-47	*312272	Link, primary (12 h.p. and Sports)	1946-47	737337
Fog	1946-47	*55039A	Interior light	1946-47	*314614	Link, secondary (12 h.p. and Sports)	1946-47	737336
Head, Home Left hand	1946-47	*50383A	Lighting	1946-47	359013	Grommet, housing	1946-47	735349
Right hand	1946-47	*50384A	Panel	1946-47	768380	" scuttle (12 h.p. and Sports)	1946-47	729378
Head, Export Vertical dip (left hand)	1946-47	*50314A	Knob	1946-47	*768374	Arm	1946-47	735052
" (right hand)	1946-47	*50315A	Petrol/oil	1946-47	*314231	Blade	1946-47	727759
Reverse, tail and number plate	1946-47	53035B	Petrol reserve valve	1946-47	*314144			
ditto (Export)	1946-47	53032B	Reverse lamp	1946-47	*31077A			
Side	1946-47	*52089A	Solenoid, starting motor	1946-47	*760080			
Stop tail and number plate ditto (Export)	1946-47	*53027B	Stop lamp	1946-47	31281B			
	1946-47	*53079B	Spring	1946-47	315543			
			Trafficators	1946-47	*539911			

ROVER 14 h.p. and 16 h.p. 1946–47

Ammeter	1946-47	*364595	LAMPS—continued			Trafficators	1946-47	*539911
Battery	1946-47	SG9A	Side	1946-47	*52089A	Warning lights		
Coil, ignition	1946-47	*45020A	Stop tail and number plate	1946-47	*53027B	Choke	1947	*38034B
Control arm	1946-47	*310818	ditto (Export)	1946-47	*53079B	Ignition	1946-47	*38015B
Control box	1946-47	*37002A	Mirror	1946-47	*580652	Oil	1946-47	38018B
"	Later	37065E	Petrol reserve valve	1946-47	780060	Windshield wipers		
Distributor (14 h.p.)	1946-47	*407345	Starting motor	1946-47	*255666	Motor	1946-47	†75066A
" (16 h.p.)	1946-47	*407348	Steering column control	1946-47	323762	Clutch housing	1946-47	735691
Generator	1946-47	*22447A	SWITCHES			Bracket, with shaft and coupling (Coupé)	1946-47	737273
Horn	1946-47	*069207	Foglamp	1946-47	*31080A	dito (12 h.p.)	1946-47	737306
LAMPS			Heater or fan	1946-47	768380	Shaft, short	1946-47	737243
Fog	1946-47	*55039A	Knob	1946-47	768374	Coupling	1946-47	729036/S
Head, Home Vertical dip (L.H.)	1946-47	*50741A	Ignition	1946-47	*312272	Link, primary	1946-47	737337
Non-dip (R.H.)	1946-47	*50742A	Interior light	1946-47	*314614	" secondary	1946	737338
Head, Export Vertical dip (L.H.)	1946-47	*50316A	Lighting	1946-47	359013	Petrol/Oil	1947	737336
" (R.H.)	1946-47	*50317A	Panel	1946-47	768380	Petrol reserve valve	1947	735349
Reverse, tail and number plate	1946-47	53035B	Knob	1946-47	*768374	Reverse lamp	1946-47	729378
ditto (Export)	1946-47	53032B	Petrol/Oil	1946-47	*314231	Solenoid, starting motor	1946-47	735052
			Petrol reserve valve	1946-47	*314144	Stop lamp	1946-47	727759
			Reverse lamp	1946-47	*31077A			
			Solenoid, starting motor	1946-47	*760080			
			Stop lamp	1946-47	31281B			

ROVER '60' 1948–49 and 1954–59

Ammeter	1948-49	*364595	Coil, ignition	1948-49	*45012A/B	Flasher unit	..	1954-56
"	1954-59	*36119A/B	"	1954-55	*45046A/B	Fuse box	..	1957-59
Battery	1948-49	SG9A	"	1956-59	*45054E/K	Generator	..	1954-59
"	1954-59	GT9A	Control box	1948-49	*37076E	"	..	033239
Bulb holder, panel light			"	1954-56	*37138A/D			
Instruments	1955-59	39010A	Distributor	1948	*40182H			
Speedometer	1955-59	39007A	"	1949	*40103D			
Bulb	—	987	"	1954-59	*40154A			
			"		40410A/D			

* See Supersession Chart
R.H.D. ... Right hand drive

† No longer available—refer to Wiper Conversion Set Section
Note. Before ordering Steering Column Controls refer to the detailed parts section (P)

continued



Equipment Specification

ROVER

ROVER '60' 1948-49 and 1954-59—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Horn			LAMPS—continued			SWITCHES—continued		
Low note	1948-49	*69006B	Stop tail, flasher and reflex	1955-59	53356H/J	Windshield wiper	1948-49	*31080A
" "	1954-55	*69011F/J	ditto (N.A.D.A.)	1957-58	53634A	" "	1954-55	31369A/B
" "	1956-59	69046A/F	ditto	1958-59	53660A	" "	1956-59	31564A/F
High note	1948-49	*69007B	Mirror	1948-49	*580652	Knob	1954-56	316632
" "	1954-55	*69012F/J	Reflex reflector, front	1954	062573	Terminal block	1957-59	*318181
" "	1956-59	69047A/F	(Home)	1954	57067A	Trafficators	1954-55	37101A/B
Horn relay	1954-59	*33116B	Petrol reserve valve	1948-49	78007A	" "	1948-49	*54018D
Cover, terminal	1955-59	340786	Starting motor	1948-49	78021A/E	Warning lights	1954	54044A/D
Horn gauze and rubber	1955	702717	" "	1954	25514B/E	Choke	1948-49	*38034B
ditto	1956-57	*702890	Steering column control	1948-49	25533A/D	" "	1954-59	*38083A/B
ditto (low note)	1958-59	707083	" "	1955-59	32767A/D	Flasher	1955-59	*38092A
ditto (high note)	1958-59	707085	Suppressor	1954-59	32874A/K	Ignition	1948-49	*38015B
Junction box	1948-59	78264A	" "	1955-59	*78114B	Main beam	1954-59	*38091A
" (N.A.D.A.)	1954-55	78265A	Suppressor	1955-59		Oil	1954-59	*38069A
LAMPS			SWITCHES			Windshield wipers		
Boot	1954-59	53235B	Choke warning light	1948-49	*31109B	Motor	1948-49	*75055L
Flasher, front	1957-59	*52346A	" "	1954-57	*31077A	" "	1954	75172B
" (N.A.D.A.)	1957-59	53627A	Dipper	1954-59	31469A	" "	1955-57	75234A
Fog	1948-49	*55055B	Door light	1954	*31272A/B	Wheelbox	1948-49	75325A
"	1954	55084B	" (front)	1955-56	31222A	" "	1954-55	72592A/K
"	1955-56	*55055D	" (rear)	1955-56	31404A	" "	1956-59	72631B
"	1957	*55183A	Flasher	1955-59	31244K	Crosshead and rack assy.	1948-49	736307
"	1958-59	55128B	Foglamp	1954-57	31201B/D	Cut to 40"	1948-49	741263
Head, Home	1948-49	*50741A	Knob	1954-55	314026	" 40"	1954-58	744256
Vertical dip (L.H.)	1948-49	*50742A	"	1956-57	314403	Crosshead and rack assy.	1959	
Non-dip (R.H.)	1948-49	51073A/B	Heater or fan	1958-59	316370	Outer casing		
Dip left (L.H. and R.H.)	1954-56	*51983A	"	1958-59		Motor to wheelbox	1948-49	739870
1957-59			Heater or fan	1948-49	*78212A	" "	1954-55	740778
Head, Export	"		Knob	1954-55	768473	" "	1956-59	745290
Vertical dip (L.H.)	1948-49	*50741A	Heater or fan	1954-59	31248A/B	Wheelbox to wheelbox	1948-49	739932
(R.H.)	1948-49	*50743A	Knob	1954-59	316352	" "	1954-59	740779
R.H.D., dip left	1954-56	51073B	Ignition	1948-49	*31557A	End tube	1948-49	740031
1957-59			"	1954	31187D	Grommet, wheelbox	1948-49	733874
L.H.D., dip right	1954	*51391A	Interior light	1948-49	*31484A/B	Arm	1948-49	*737509
"	1955-56	51247A	Lighting	1948-49	*314129	Blade	1948-49	737516
"	1957-59	*51781A/E	" (headlamp)	1954-59	34039A	" (left hand drive)	1954	*738723
Head, Export Europe	"		" (side lamp)	1954-59	31299A/B	" (right hand drive)	1954	*738719
(not France)	1954-56	*51392A	Oil level indicator	1948-49	314231	Laycock de Normanville		
ditto	1957-59	*51782A/D	Panel	1948-49	31355A	overdrive equipment		
ditto	Later	58286A/B	Knob	1954-59	31355A	(optional)		
Head, Export France	1954-56	*51393A	Panel	1948-49	316686	Relay	1956-59	33174A/B
"	1957-59	*51783A/B	Knob	1954-59	31422D	Cover	Later	340931
Head, Export N.A.D.A.	1954-56	*51394A	Panel	1954-59	31287A	Switches		
"	1957-59	*51984A/B	Knob	1954-59	768374	Control	1956	31551A
Number plate illumination	1948-49	53093E	Panel	1954-59	78291A/B	"	1957-58	31569E
Number plate and reverse	1954	53258A	Knob	1954-59	768883	"	Later	31623B
ditto (N.A.D.A.)	1954	53097E	Petrol reserve valve	1948-49	*314144	Interrupter	1956	31504A
ditto	1955-57	53097E	"	1954-59	31356A	Isolator	1957-59	*31077E
ditto	1958-59	53258A	Reverse lamp	1948-49	*31077A	Kick-down	1957-59	31642A/B
Side	1948-49	*52099A	Solenoid, starting motor	1948-59	*76411D/E	Solenoid, transmission		
" (left hand)	1954-56	*52219D	Adaptor plate	1948-59	78275A	gear	1956	*76500E
" (right hand)	1954-56	*52220D	Solenoid operating	1954-59	*31354A	ditto	1957	*76505B
1957-59		52250B	Stop lamp	1948-56	31281B	ditto	1958-59	76515A
Side flasher (N.A.D.A.)	1954	53210A	"	1957-59	31082E/H	Throttle	1956	31504A
Stop tail	" (N.A.D.A.)	53199B	Trafficator control arm	1948-49	*31155A	"	1957-59	31679A
Stop tail and reverse	1954	53153E	"	1954	31244B			
1948-49		*53123F						

ROVER '75' 1948-59; '90' 1954-59; '105' 1957-59

Ammeter	1948-49	*364595	Fuse box	1952-59	033239	LAMPS—continued		
"	1950	*36087A	" (overdrive)	1956	033263	Fog	1948-49	*55055B
"	1952-59	*36119A/B	Generator	1957-59	*37131A	"	1950	*55074B
Battery	1948-49	SG9A	"	1948	*22429A	"	1951	55080B
"	1950-59	GT9A	"	1949	*22429D/E	"	1952	*55055B
Bulb holder, panel light			"	1950-52	*22429F/H	"	1953	55084B
Instruments	1948-59	39010A	Later	1952-54	*22456A/B	"	1954-56	*55055B/D
Speedometer	1948-59	39007A	"	1955-56	*22483A	"	1957	*55183A
Bulb	—	987	Later	1956-59	*22483B/D	"	1958-59	55128B
Coil, ignition	1948-50	*45012A/B	Horn	1948-49	*69006B	Head, Home		
"	1951-52	*45039A	Low note	1948-49	*69011F/J	Vertical dip (L.H.)	1948-49	*50741A
"	1953-56	*45046A/B	" (Export)	1950-53	*69032A	Non-dip (R.H.)	1948-49	*50742A
"	1957-59	*45054H/K	"	1956-59	69046A/F	Dip left (L.H.)	1950-51	*50857B
Control box	1948-51	*37076E	High note	1948-49	*69007B	Non-dip (R.H.)	1950-51	*50858B
"	1952-55	*37139D/E	" (Export)	1950-53	*69012F/J	Dip left (L.H. and R.H.)	Later	*50974A
"	1956-57	37183H	"	1956-59	*69033A	ditto	1952-56	51073A/B
"	1958-59	37264A/B	Cover	1952-59	69047A/F	ditto	1957-59	*51983A
Distributor ('75')	1948	40105B	Horn relay	1955-59	*33116B	Head, Export		
"	1949	*40155A/B	"	1955	340786	Vertical dip (L.H.)	1948-49	*50741A
"	1950-53	*40200D	ditto	1956-57	*702890	(R.H.)	1948-49	*50743A
"	Later	40283F	ditto (low note)	1958-59	707083	R.H.D., dip left	1950-51	*50857B
"	1953-54		ditto (high note)	1958-59	707085	"	Later	*50974A
"	1955-59	*40459A/B	Junction box	1948-59	78264A	L.H.D., dip right	1950-51	*A50857B
"	(90')	40408A	"	1951-55	78265A	"	Later	1951
"	1954	40408E	LAMPS			"	1952	51391A
"	1955	40485A	Boot	1950-51	53163A	"	1954-56	51247A
"	1956-59	40485A	"	1952-59	53235B	"	1957-59	*51781A
"	(105')	1957-59	*40577A/B					
Flasher unit	1954-56	*35003A						
"	1957-59	35010A						



Equipment Specification

ROVER

ROVER '75' 1948-59; '90' 1954-59; '105' 1957-59—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS—continued			SWITCHES—continued			Warning lights—continued		
Head, Export Europe (not France) .. .	1950-51	*B50857B	Foglamp .. .	1951	31316A	Ignition .. .	1948-49	*38015B
ditto .. Later	1951	*50976B	Knob .. .	316370	" .. .	1950	38050A	
ditto .. .	1951	*50961A	Foglamp .. .	1952-57	31201B	" .. .	1951	*38065A
ditto .. .	1953-56	*51392A	Knob .. .	1952-55	314026	" .. .	1952-54	*38075A
ditto .. .	1957-59	*51782A/D	Foglamp ('105') .. .	1956-57	314403	Main beam .. .	1955-59	*38091A
ditto .. Later	1959	58286A/B	Knob .. .	1957-59	*31557A	Oil .. .	1952-59	*38052B
Head, Export France ..	1950-51	*50859B	Foglamp ('75' and '90') .. .	1958-59	*31557A	Windshield wipers		
" .. " .. Later	1951	50977A	Knob .. .	316370	Motor .. .	1948-49	*75055K	
" .. " ..	1952	*50978A	Heater or fan .. .	1948-49	*78212A	" .. .	1950	*75067K
" .. " ..	1953-56	*51393A	Knob .. .	768473	" .. .	1951	*75067L	
" .. " ..	1957-59	*51783A/B	Heater or fan .. .	1950-59	31248A/B	" .. .	1952-53	*75172B
Head, Export N.A.D.A. ..	1951	*50919B	Knob .. .	—	316352	" .. .	1954-57	*75234A
" .. " ..	1952	*50807B	Ignition .. .	1948-49	*312272	" .. .	1958-59	*75325A
" .. " ..	1953-56	*51394A	" .. .	1950-54	31187D	Wheelbox .. .	1948-49	*72592A/K
Number plate illumination ..	1948-49	*51984A/B	Interior light .. .	1948-49	*314129	" .. .	1950-51	*72560A/K
Number plate and reverse ..	1950	53093E	Lighting .. .	1948-49	34039A	" .. .	1952-55	*72631B
ditto .. .	1951	53097E	Knob .. .	1950	31249A	" .. .	1956-59	*72675A/B
ditto .. .	1952-54	53258A	Lighting (headlamp) .. .	1951-59	31299A	Crosshead and rack assy.		
ditto (N.A.D.A.) ..	1953-54	53097E	(side lamp) .. .	1951-59	31331A	Cut to 40° .. .	1948-51	*736307
ditto .. .	1955-57	53097E	Knob .. .	—	316686	" .. .	1952-58	741263
ditto .. .	1958-59	53258A	Oil level indicator .. .	1948-49	*31176A	Crosshead and rack assy.	1959	744256
Side .. .	1948-49	*52099A	" .. .	1950	31146A	Outer casing		
" (N.A.D.A.) ..	1950	*52143A	Knob .. .	—	*315260	Motor to wheelbox .. .	1948-51	*739870
" (N.A.D.A.) ..	1950	*52142A	Oil level indicator .. .	1951-59	*31355A	" .. .	1952-55	740778
" (N.A.D.A.) ..	1951	52160A	Panel .. .	1948-49	768380	Wheelbox .. .	1948-49	*739932
" (N.A.D.A.) ..	1951-53	*52162A	Knob .. .	—	*768374	" .. .	1950-51	*739935
" (N.A.D.A.) ..	1952-53	*52143A	Panel .. .	1950	78252A	" .. .	1952-59	740779
" (N.A.D.A.) ..	1954	53210A	Knob .. .	—	768642	End tube .. .	1948-51	740401
" (left hand) ..	1954-56	*52219A	Panel .. .	1951	*78268A	Blade .. .	1952-59	740746
" (right hand) ..	1954-56	*52220A	Knob .. .	—	*768679	Grommet, wheelbox .. .	1948-49	*733874
Stop tail .. .	1950-54	52250B	Panel .. .	1952-59	78291A/B	Arm .. .	1948-49	*737509
Stop tail .. (N.A.D.A.) ..	1950-54	53199B	Knob .. .	—	768883	" left hand .. .	1950-51	*737576
Stop tail and reverse ..	1948-49	*53123F	Petrol reserve valve .. .	1948-49	*314144	" right hand .. .	1950-51	*737524
Stop tail, flasher and reflex ..	1955-59	53356H/J	Reverse lamp .. .	1951-59	31356A	Relay .. .	1952-59	741450
ditto (N.A.D.A.) ..	1957-58	53634A	Solenoid, starting motor .. .	1948-59	*31077A	Cover .. .	1958-59	*340931
ditto .. Later	1958-59	53660A	Adaptor plate .. .	1948-59	31422A/B	Switches		
Mirror .. .	1948-49	*580652	Solenoid operating .. .	1950-51	78275A	Control .. .	1956	31551A
	1950-54	062573	Knob .. .	1950-59	*31253A	" .. .	1957-58	31569E
Reflex reflector, front (Home only) .. .	1954	57067A	Solenoid operating .. .	1952-59	*317363	Interrupter .. .	1956	31504A
Petrol reserve valve .. .	1948-49	78007A	Stop lamp .. .	1948-56	31281B	Isolator .. .	1957-59	*31077E
	1951-59	78021A/E	Trafficator control arm .. .	1948-49	31082E/H	Kick-down .. .	1957-59	31642A
Starting motor .. .	1948	25514A	Windshield wiper .. .	1948-49	*31155A	Manual ('105S') .. .	1958-59	*31368A
" .. .	1949-53	25514B/E	Knob .. .	1950-55	31244B	Solenoid, transmission gear .. .	1956	*76500E
" .. .	1954-59	25533A/D	Windshield wiper .. .	1950-54	*31080A	ditto .. .	1957	*76505B
Steering column control ..	1948-49	32767A/D	Knob .. .	1951-59	31113A	ditto .. .	1958-59	76515A
	1950-51	32807J/K	Windshield wiper .. .	1952-55	*315148	Throttle .. .	1956	31504A
Suppressor .. .	1952-59	32874A/K	Knob .. .	1952-56	31248A	" .. .	1957-59	31679A
	1955-59	*78114B	Windshield wiper .. .	1952-59	316371	Special equipment with torque converter on '105R'		
SWITCHES			Knob .. .	1952-59	31369A/B	Switches		
Choke warning light ..	1948-49	*31109B	Knob .. .	1952-56	31546A/D	Control .. .	1956	31551A
" .. .	1950	*31273A	Knob .. .	1952-57	316632	" .. .	1957-58	31569E
" .. .	1951-57	*31077B	Terminal block .. .	1951-59	*318181	Interrupter .. .	1956	31504A
Dipper .. .	1958-59	31469A	Trafficators .. .	1951-59	37101A/B	Isolator .. .	1957-59	*31077E
Door light .. .	1950-59	*31372A/B	" .. .	1948-50	*54018D	Kick-down .. .	1957-59	31642A
" (front)	1952-54	*31222A	" .. .	1951-52	*54039A	Manual ('105S') .. .	1958-59	*31368A
" (rear)	1955-56	31404A	" .. .	1953-54	54044A/D	Solenoid, transmission gear .. .	1956	*76500E
Flasher .. .	1955-56	*31222D	Warning lights			ditto .. .	1957	*76505B
	1957-59	31404A	Choke .. .	1948-49	*38034B	ditto .. .	1958-59	76515A
	1955-59	31244K	" .. .	1951	38068A	Throttle .. .	1956	31504A
Foglamp .. .	1950	31113A	" .. .	1952-59	*38083A	" .. .	1957-59	31679A
Knob .. .	—	*315149	Flasher .. .	1955-59	*38092A	Centrifugal .. .	1957-58	76116D
						Gear lever knob .. .	1957-58	31670A/H

ROVER '80' and '100' 1960

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.	
Ammeter .. .	1960	*36119B	LAMPS	1960	*53720B	SWITCHES	1960	31469A	
Battery .. .	1960	BT9A	Boot .. .	1960	55132B	Choke warning light .. .	1960	*31372B	
Bulb holder, panel light .. .	1960	554734	Driving (optional) .. .	1960	*52346A	Dipper .. .	1960	31244L	
Instruments .. .	1960	39010A	Flasher, front .. .	1960	53627A	Flasher .. .	1960	*31557A	
Speedometer .. .	1960	987	Fog (optional) .. .	1960	*55128B	Foglamp (when fitted) .. .	1960	—	
Bulb .. .	—		Head, Home .. .	1960	*51780A/E	Knob .. .	1960	316370	
Coil, ignition .. .	1960	*45053K	R.H.D., dip left ('80) .. .	1960	*51983A/E	Heater .. .	1960	31248B	
Control box ('80') .. .	1960	37307B	" .. . ('100') .. .	1960	*51781A/E	Knob .. .	1960	316352	
" .. . ('100') .. .	Later	1960	37332A	Head, Export .. .	1960	*51780A/E	Ignition and starting .. .	1960	31799A
Distributor ('80') .. .	1960	37297A/B	37297A/B	1960	*51780A/E	" .. .	1960	34264A	
" .. . ('100') .. .	1960	40609F	L.H.D., dip right ('100') .. .	1960	*51983A/E	Lighting (headlamp) .. .	1960	31299B	
Flasher unit .. .	1960	35010A	37332A	1960	*51781A/E	(side and tail lamp) .. .	1960	31331A	
Fuse box .. .	1960	033239	Head, Export Europe .. .	1960	58286A/B	Panel .. .	1960	78291B	
Generator ('80') .. .	1960	22700D	(except France & Sweden) .. .	1960	58287A/B	Knob .. .	1960	78358A	
" (alternative) .. .	1960	*22704A	Head, Export France .. .	1960	58459A/B	Petrol and oil level indicator ('100' only) .. .	1960	*31355A	
" ('100') .. .	1960	22489D	Head, Export Sweden .. .	1960	58474A/B	Petrol reserve valve .. .	1960	31356A	
Horn .. .	—		Head, Export N.A.D.A. .. .	1960	58617A	Reverse lamp .. .	1960	31422B	
Low note .. .	1960	69046F	L.H.D., dip left ('80) .. .	1960	53258A	Solenoid, starting motor .. .	1960	*76411E	
High note .. .	1960	69047F	Number plate illumination .. .	1960	52250B	Stop lamp .. .	1960	31440F	
Horn gauze and rubber .. .	—		Side .. .	1960	53356J	Windshield wiper .. .	1960	31546F	
Low note .. .	1960	707083	Stop tail and flasher .. .	1960	53660A	Knob .. .	—	*318181	
High note .. .	1960	707085	dito (N.A.D.A.) .. .	1960	25533D	Terminal block .. .	1960	37101B	
Horn relay .. .	1960	33188A	Starting motor .. .	1960	32874K				
Junction box .. .	1960	78264A	Steering column control .. .	1960					

* See Supersession Chart
R.H.D. ... Right hand drive

† Suitable replacement after 1956

N.A.D.A. ... North American Dollar Area

L.H.D. ... Left hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

ROVER

ROVER '80' and '100' 1960—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Warning lights			Windshield wipers— <i>cont'd</i>			Laycock de Normanville overdrive equipment (optional) — <i>continued</i>		
Choke	1960	*38083B	Outer casing	1960	745290	Relay	1960	33174B
Flasher	1960	*38092A	Motor to wheelbox ..	1960	740779	Switches		
Ignition	1960	*38091A	Wheelbox to wheelbox ..	1960	740746	Control	1960	31623B
Main beam	1960	*38069A	End tube	1960	741450	Gearbox	1960	*31077E
Oil	1960	*38082A	Arm	1960	738734	Isolator	1960	*31077E
Windshield wipers			Blade	1960	54711614	Kick-down	1960	31806B
Motor	1960	75325A	" Later	1960		Solenoid, transmission gear	1960	76515A
Wheelbox	1960	72675B	Laycock de Normanville overdrive equipment (optional)			Throttle	1960	31504D
Crosshead and rack assy. Cut to 44 $\frac{1}{2}$ "	1960	*744251	Fuse box	1960	*37131A			

ROVER 3 litre 1959–60

Ammeter	1959-60	36244B	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
Battery	1959-60	BT9A	Head, Export			Reverse lamp	1959-60	31807A
Bulb holder, panel light	1959-60	39010A	R.H.D., dip left	1959-60	58142B/D	Solenoid, starting motor ..	1959-60	*76465A
Clock illumination ..	1959-60	987	L.H.D., dip right	1959-60	58344A	Stop lamp	1959	*31884A
Bulb holder, panel light (4 off)	1959-60	*54940878	Head, Export Europe (except France & Sweden)	1959-60	58341A	Windshield wiper	1959-60	31757A
Bulb	—	281	Head, Export France ..	1959-60	58342A	Terminal block (2-way) ..	1959-60	54944091
Coil, ignition	1959-60	45102B	Head, Export Sweden ..	1960	58589A	" (6-way)	1959-60	54944092
Control box	1959-60	*37279A	Head, Export N.A.D.A. ..	1959-60	58343A	Warning lights		
" Later	1960	37304A	ditto Later	1960	*58476A/B	Choke	1959-60	38174A
Distributor	1959-60	*40613B	Number plate and reverse ..	1959-60	53719A	Flasher	1959-60	38175A
8.75 compression	1959-60	*40459B	Side	1959-60	52400E	Ignition	1959-60	38172A
7.5	1959-60	*40520A	Stop tail and flasher ..	1959-60	53711A/H	Main beam	1959-60	38176A
Flasher unit	1959-60	032383	ditto (N.A.D.A.)	1959-60	53815A/E	Oil	1959-60	38173A
Fuse box	1959-60	032287	Screenjet	1960	077026	Windshield wipers		
" (Overdrive)	1959-60	*54038007	Nozzle	—	54711672	Motor	1959-60	75356D
Generator	1959	*22529A	Sleeve, Lucas connector ..	1959-60	54190042	Wheelbox	1959-60	*72703A
Horn	1959-60	22530A	14 amp	1959-60	54190043	Crosshead and rack assy. ..		
Low note	1959-60	69046F	35 amp	1959-60	25533D	Cut to 49 $\frac{1}{2}$ "	1959-60	744257
High note	1959-60	69047F	Starting motor	1959	26164B	Outer casing		
Horn gauze and rubber	1959-60	707083	Steering column control ..	1959-60	33523A/B	Motor to wheelbox	1959	54710610
Low note	1959-60	707085	Slip ring (serviced by Rover)	1959-60	38267A	Wheelbox to wheelbox	1959-60	5471130B
Horn relay	1959-60	33188A	Suppressor (distributor) ..	1959-60	78114A	End tube	1959-60	740746
LAMPS			" (generator)	1959-60	†78112B	Ferrule, casing retaining ..	1959-60	54710542
Boot	1959-60	*53720B	" (coil)	1959-60	*†78110A	Arm	1959	*737907
Driving (optional)	1959-60	55132B	SWITCHES			Blade	1960	54711281
Flasher, front			Dipper	1959-60	31800A	Laycock de Normanville overdrive equipment		
Left hand	1959-60	52411B	Door light	1959-60	31804A	Relay	1959-60	33199B
Right hand	1959-60	52410B	Flasher	1959-60	31803A	Switches		
Left hand (N.A.D.A.)	1959-60	52458A	Foglamp (when fitted)	1959	*31729E	Isolator	1959-60	*31077E
Right hand	1959-60	52457A	Headlamp	1959-60	31727E	Kick-down	1959-60	31806A
Fog (optional)	1959-60	55128B	Ignition or starting	1959-60	31799A	Overdrive	1959-60	31727E
Head, Home			Lighting (auxiliary)	1959-60	31727E	Rotary	1959-60	31679A
R.H.D., dip left	1959-60	58142B/D	Panel	1959-60	78333A	Solenoid, transmission gear	1959-60	76515A
			Petrol/Oil level	1959-60	31702A			

ROVER 'Landrover' 1948–60: Station Wagon 1948–51

Ammeter	1948-50	*364595	Generator— <i>continued</i>			LAMPS, Head, Export — <i>continued</i>		
"	1951-54	*36114B	Diesel	1958-60	*22483D	L.H.D., dip right	1951	*A50799D
"	1955-60	36159B/D	Horn	1948-55	*069399	" Later	1951-52	*50528M
Battery (Petrol)	1948-56	GT9A	"	1958-60	69046F	"	1953	*51247A
"	1957-58	FT9A	Horn push	1957	*76228A	"	1953	*51380A
"	1959-60	BT9A	Inspection lamp sockets ..	1948-57	76205B	"	1954-56	*51247A
" (Diesel)	1958-60	MT19E	Junction box	1948-54	39517B	"	1957-60	*51781A/E
Coil, ignition	1948-55	*45012B	LAMPS		78266A	Head, Export Europe (not France)	1951	*B50799D
"	1956-60	*45054E/K	Flasher, front	1960	52438B	ditto Later	1951-52	*50961A
Control box			Flasher, rear	1960	53806D	ditto	1953	*51392A
Petrol	1948-50	*37098B	Head, Home			ditto	1953	*51382A
"	1951-52	37065E	Vertical dip (L.H. and R.H.)	1948-50	50124B	ditto	1954-56	*51392A
"	Later	*37138B/D	Dip left (L.H.)	1951	*50799D	"	1955-59	*51782A/D
"	1956-59	37182A/H	Non-dip (R.H.)	1951	*50579K	(except France & Sweden)		
"	Later	37182J	Dip left (L.H. and R.H.)	1951-52	*50959A	Later	1959-60	58286A/B
Diesel	1958-60	*37189J	ditto	1952	*50992A	"	1951	*50808D
"	Later	37297A	ditto	1953	*51246A	"	1953	*50978A
Distributor	1948-51	*40154B/D	ditto	1953	*51378A	"	1954-56	*51393A
"	1952-53	*40230E	ditto	1954-56	*51246A	"	1955-59	*51783A/B
"	Later	*40330A/E	ditto	1957-60	*51780B/E	Head, Export N.A.D.A.	1951-52	*50807B
"	1956-59	40504A	ditto			ditto	1953-56	*51240A
"	Later	40504B/D	ditto			ditto	1955-60	*58287A/B
"	1959-60	40609B/E	ditto			Head, Export Sweden	1951-52	*50807B
Flasher unit	1954-56	*35003A	ditto			ditto	1953-56	*51394A
"	1957-60	35010A	ditto			ditto	1957-60	*51984A/B
Fuse box	1949-50	*385175	Head, Export R.H.D., dip left	1951	*50799D	Number plate illumination (N.A.D.A.)	1951	53093E
"	1951-60	*37131A	"	1951-52	*50959A	dito	1952-59	53101E/J
Generator Petrol	1948-49	*22255A/H	"	1952	*50992A	dito	1960	53876A
"	1950-52	*22250F	"	1953	*51246A			
"	1952-56	22258D	"	1953	*51378A			
"	1956-60	22258E/H	"	1954-56	*51246A			
			"	1957-60	*51780B/E			

* See Supersession Chart † Special equipment N.A.D.A. North American Dollar Area L.H. Left hand R.H. Right hand

L.H.D. Left hand drive R.H.D. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

ROVER-SIMCA
ROVER 'Landrover' 1948-60: Station Wagon 1948-51—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS—continued			SWITCHES—continued			Windshield wipers		
Side	1948-51	52047A	Ignition and lighting	1948-53	34055A	Motor (Station Wagon)	1948-50	*75067K
" (Station Wagon)	1949-50	*52142D	ditto	1954-60	*31424A	" ("Landrover")	1951	*75067L
"	1951-59	52139B/F	(N.A.D.A.)	1954-60	31421A	"	1948-53	75096A
"	1960	52437D	Knob	1954-60	*316436	"	1954-56	75197A/B
" (U.S.A.)	1951	52160A	Panel	1948-54	*31199A	"	1957-58	75113E
" ('Tickford' only)	1951	*52162A	Knob	—	315069	"	1959-60	*75334A
Side flasher	1954	53210A	Reverse lamp	1951-54	*31077A	Wheelbox (Station		
" (N.A.D.A.)	1955-57	52240B	Starting motor	1948-53	*76401E	Wagon)	1948-51	72592A/K
Stop tail (N.A.D.A.)	1951-54	53178D	Knob	—	764505	Crosshead and rack assy.		
"	1955-56	53405E	Starting Motor	1954	76438A	(Station Wagon)	1948-51	738764
"	1957	53608A/B	Adaptor plate	—	78275A	Outer casing		
"	1960	53783E	Starting motor	1955-60	*076033	Motor to wheelbox		
Stop tail and number plate			Stop lamp	1948-59	31281B	(Station Wagon)	1948-51	739833
'Landrover'	1948-50	*53072B	Spring (when fitted)	—	315726	Wheelbox to wheelbox		
Station Wagon	1949	*53027B	Stop lamp	1960	31082J	(Station Wagon)	1948-51	*739962
Except N.A.D.A.	1951-54	*53072B	Trafficator control arm	1949-51	*31078A	End tube (Station		
"	1955-56	*53393F	ditto	1951-58	31379A	Wagon)	1948-51	740031
G.P.O.	1957	53574A/B	Later	1957-60	031296	Grommet, wheelbox		
"	1954-56	53295A/B	Trafficators	1948-53	*053830	(Station Wagon)	1948-51	729423
"	1957-60	53304B/D	ditto (G.P.O.)	1954	54052A	Arm (Station Wagon)	. . .	*737573
Mirror	1948-52	*62521D	"	1955-60	*54050A	"	1948-51	*735061
"	1952-60	62054A	Trailer plug and lead	1954-56	82011A	"	1948-56	735064
Reflex reflector (G.P.O.)	1955-58	57047D	(3-pin, when fitted)	1957	82033A	Blade (Station Wagon)	1948-51	727759
" (alternative)	1956-58	57079A	Trailer socket and lead	—	809069	"	1948-56	727803
Starting motor (Petrol) . . .	1948	25514A	(3-pin, when fitted)	1954-57	809069	Socket	1957-60	737673
"	1949-54	25514B/E	Trailer plug and lead	1958-60	82047A	A.C. charging system	1956-60	305514
"	1955-60	25533C/D	(4-pin, when fitted)	1958-60	82046A	(alternative equipment,		
" (Diesel)	1958	26147A/E	Trailer socket and lead	1958-60	82045A	special orders)		
"	Later	26147F/H	(4-pin, when fitted)	1958-60	809121	Alternator	1960	23500A
Steering column control . . .	1948-56	*32785E/J	Flasher plug and lead (when	1958-60	809121	Ammeter (serviced by		
SWITCHES			fitted)	1958-60	809121	C.A.V.)	1960	5539/233E
Battery master (G.P.O.)	1956-60	76600D	Dummy socket (when	1958-60	809121	Control box	1960	37296A
Choke warning light	1948-55	*31109B	fitted)	1958-60	809121	Relay	1960	33174A/B
"	1956-60	31540A	Warning lights	1948-51	38043A	Cover	—	340786
Dipper	1956	31438A	Choke	1952-60	*38086A/B	Conversion pack for Per-		
" (Petrol, L.H.D.)	1957-60	*31372A	Flasher	1955-60	38125A	kins P4 Diesel for Yugoslavia 1948-53		
"	Later	31800A	Ignition	1948-50	38046A	Control box	1948-53	37183A
Flasher (when fitted) . . .	1955-60	31509A/B	" ('Tickford')	1951	38059A	Fuse box	1948-53	37132D
Knob	—	312619	Main beam	1949-50	38052B	heater (serviced by C.A.V.)	1948-53	1800020
Foglamp	1951	31316A	"	1951-53	38052B	Generator	1948-53	22519A
Knob	—	316370	Oil	1951	38059A	Starting motor (serviced by C.A.V.)	1948-53	BS512K/L93
Foglamp	1952-54	31201B	"	1952	38018B	Switches		
Knob	—	314026	Trafficator	1953-60	*38085A/B	Heater (serviced by C.A.V.)	1948-53	1823420
Heater or fan	1951-53	*78212A	"	1949-50	38052B	Starting motor (serviced by C.A.V.)	1948-53	1823410
Knob	—	768473	Trafficator	1951-54	38059A	Starting motor (serviced by C.A.V.)	1948-53	1823410
Heater plug (Diesel)	1958-59	*31629F/J	" (G.P.O.)	1955-56	38125A			
" rheostat	1960	*78377A						

§ FUEL INJECTION EQUIPMENT

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1958	DPA3240091	Filter	1958-59	F4-2
"	1959	DPA3240095	" (when fitted)	1959	F2-9
Nozzle holder	1960	DPA3240097	"	1960	F4B2
Nozzle	1958-60	BKB40S5008D	" (when fitted)	1960	F2B9
	1958-60	BDNOSP6209			

SCOTT ELECTRIC Battery Vehicle 1951-55

Horn	1951-55	*069213	Mirror	1951-55	062562	SWITCH	Lighting	1951-55	31291A
------	---------	---------	--------	---------	--------	--------	--------------------	---------	--------

SIMCA 'ARONDE' De Luxe 1959

Battery (suitable replacement)	1959	FRLTZ9A	Warning light (main beam)	1959	38145A	Windshield wipers—cont'd		
LAMPS			Windshield wipers	1959	75295D	Arm, left hand	1959	745643
Head, Export U.S.A.	1959	51928B/D	Motor	1959	72681A	" right hand	1959	745644
Rear flasher (U.S.A.)	1959	53677A	Crosshead and rack assy.	1959	743221	Blade	1959	*737907
Side and flasher (U.S.A.)	1959	52338A	Cut to 32 $\frac{5}{8}$ "	1959	744007	Overdrive equipment		
Tail (U.S.A.)	1959	53678A	Outer casing	1959	744006	Switches		
Reflex reflector	1959	574749	Motor to wheelbox	1959	740746	Kick-down	1959	31632B
			Wheelbox to wheelbox	1959		Master	1959	31201D
			End tube	1959		Solenoid	1959	*76507A

SIMCA 'ARONDE' 'Chatelaine' Station Wagon 1959

Battery (suitable replacement)	1959	FRLTZ9A	LAMPS—continued			LAMPS—continued		
LAMPS			Rear flasher (U.S.A.) . . .	1959	53677A	Tail (U.S.A.)	1959	53678A
Head, Export U.S.A.	1959	58250A	Side and flasher (U.S.A.) . . .	1959	52338A	Reflex reflector	1959	574749

* See Supersession Chart

† G.P.O. only after 1958

§ Serviced by C.A.V. Ltd.

N.A.D.A. North American Dollar Area

L.H.D. Left hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

SIMCA—SINGER
SIMCA 'ARONDE' 'Océane' and 'Plein Ciel' 1959

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery (suitable replacement) .. .	1959	FRLTZ9A	Windshield wipers— <i>cont'd</i> Crosshead and rack assy. Cut to 41 $\frac{3}{8}$ " .. .	1959	743235	Windshield wipers— <i>cont'd</i> Arm, left hand .. .	1959	744140
Windshield wipers			Outer casing .. .			„ right hand .. .	1959	*744139
Motor .. .	1959	75295D	Motor to wheelbox .. .	1959	744529	Blade .. .	1959	*737907
Wheelbox .. .	1959	72692A	Wheelbox to wheelbox .. .	1959	744528	Circuit breaker .. .	1959	78316A
			End tube .. .	1959	740746			

SIMCA 'ARONDE' 'Elisée', 'Étoile' and 'Montlhéry' 1960

Coil, ignition .. .	1960	*45113D	LAMPS	Head, R.H.D., dip left .. .	1960	54052111	Windshield wipers— <i>cont'd</i>	Wheelbox .. .	1960	72743A
Control box .. .	1960	37290D/E	Side and flasher .. .	1960	52338A	Crosshead and rack assy. Cut to 47 $\frac{1}{2}$ "	1960	743238	
Distributor .. .	1960	40717A	SWITCHES	Ignition and starting .. .	1960	34258A	Outer casing		
Flasher unit .. .	1960	35020A	Stop lamp .. .	1960	34270A	Motor to wheelbox .. .	1960	54712198		
Fuse box .. .	1960	033283	Windshield wipers	Wheelbox to wheelbox .. .	1960	54712199	Wheelbox .. .	1960	54712199	
Generator .. .	1960	22700D	Motor .. .	End tube .. .	1960	740746	End tube .. .	1960	740746	
„ (alternative) .. .	1960	*22704A		Grommet, wheelbox .. .	1960	740811	Grommet, wheelbox .. .	1960	740811	

SIMCA 'VEDETTE' 'Beaulieu' and 'Chambord' 1959

Battery (suitable replacement) .. .	1959	FRLTZ9A	LAMPS— <i>continued</i>	Stop or flasher .. .	1959	53686D	Overdrive equipment (France only)— <i>continued</i>	Switches	Centrifugal .. .	1959
LAMPS			Tail .. .	1959	53679A
Head, Export U.S.A. ..	1959	58250A	Overdrive equipment (France only)	Relay .. .	1959	33205A
Side and flasher (U.S.A.)	1959	52338A				

SINGER 9 h.p. Roadster 1946–51

Ammeter .. .	1946	*364493	LAMPS, Head, Home	— <i>continued</i>			Steering column control ..	1946-49	*323870
" .. .	1947-51	*36055F	R.H.D., non-dip (R.H.) (horseshoe lens)	1947-49	*50491A	1950	32835A/F
Battery .. .	1946-49	SLG11A	" dip left (L.H.)	1950-51	*50869D	1951	32851A/F
Bulb holder, panel light ..	1950-51	GT7A	" non-dip (R.H.)	1950-51	*50870D		
Coil, ignition .. .	1946-51	*45020A	dip left (L.H.)		
Control box .. .	1946	*37031A	.. . and R.H.) Later	1951	*50985A		
" .. .	1947-49	37057E	Head, Export	Vertical dip (L.H.) .. .	*50458A	1946-50	31284A
" .. .	1950-51	37065E	" (R.H.) .. .	1947-49	*50459A	1951	31260A
Distributor .. .	1946	*405543	R.H.D., dip left	1946-50	*50869D	1946-49	34005B
" .. .	Later	1946-50	" Later	1951	*50985A	1950-51	*34006B
" .. .	1951	40192A/D	L.H.D., dip right	1950-51	*A50869D	1950-51	76428A
Fuse box .. .	1951	033239	Later	1951	50877B	1946-51	31281B
Generator .. .	1946-49	22449A	Head, Export Europe (not France) .. .	1950-51	*B50869A	1946-47	*539731
" .. .	1950-51	*22250F	ditto .. .	1951	50986A	1948-49	*54018D
" .. .	Later	22258D	Head, Export France .. .	1950-51	*50876B	1950-51	*54039A
Horn .. .	1946-51	*069213	Later	1951	50987A	1946-49	*318534
LAMPS			Head, Export U.S.A., Number plate illumination (U.S.A.) .. .	1950-51	50877B	1950-51	*38013B
Head, Home			Side .. .	1951	53093E		
R.H.D., dip left (L.H.) .. .	1946	*50103A	" .. .	1946	*52044A	1946-50	75120A
" non-dip (R.H.) .. .	1946	*50102A	" .. .	1947-49	*52067A	1951	*733147
" dip left (L.H.) .. .	1947-49	*50596A	" .. .	1950-51	52156A	1951	732693
" non-dip (R.H.) .. .	1947-49	*50490A	Stop tail and number plate .. .	1946-49	*53060A	1946-51	731721
" dip left (L.H.) .. .	1947-49	*50595A	Stop tail (U.S.A.) .. .	1951	53178D	1946-51	735119
(diamond lens) .. .			Starting motor .. .	1946-48	*250231	1946-51	735118
(diamond lens) .. .			" .. .	1948-49	25017A	1946-51	727707
(horseshoe lens) .. .			" .. .	1950-51	25022A/L		

SINGER 10 h.p. 1946–49

Ammeter .. .	1946-49	*36017A	LAMPS, Head, Home	— <i>continued</i>			Trafficators .. .	1946-47	*539731
Battery .. .	1946-49	SG9A	R.H.D., non-dip (R.H.) (horseshoe lens)	1947-49	*50491A	1948-49	*54018D
Coil, ignition .. .	1946-49	*45020A	.. .	1947-49	*50458A	1946-49	*38013B
Control box .. .	1946	*37031A	Vertical dip (L.H.) .. .	1947-49	*50459A		
" .. .	1947-49	37057E	" (R.H.) .. .	1947-49	*52044A	1946-49	†75066A
Distributor .. .	1946	*405543	Side .. .	1946-47	*52067A	1946-49	735691
" .. .	Later	1946-49	" .. .	1948-49	*53029A	1946-49	734453
Generator .. .	1946-49	22449A	Starting motor .. .	1946-47	*250231	1946-49	737243
Horn .. .	1946-49	069344	.. .	1948-49	25017A	1946-49	729036/S
LAMPS			Steering column control (Super) .. .	1946-49	*323871	1946-49	734458
Head, Home			SWITCHES			1946-49	733874
R.H.D., dip left (L.H.) .. .	1946	*50103A	Dipper .. .	1946-49	31284A	1946-49	729378
" non-dip (R.H.) .. .	1946	*50102A	Ignition and lighting .. .	1946-49	*34006B	1946-49	
" dip left (L.H.) .. .	1947-49	*50596A	Panel .. .	1946-49	*314124	1946-49	*735050
" non-dip (R.H.) .. .	1947-49	*50490A	Starting motor .. .	1946-49	76428A	1946-49	727707
" dip left (L.H.) .. .	1947-49	*50595A					
(diamond lens)		
(horseshoe lens)		

* See Supersession Chart
 L.H.D. .. Left hand drive † No longer available—refer to Wiper Conversion Set Section
 R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

SINGER

SINGER 12 h.p. 1946-49

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter ..	1946-49	*36017A	LAMPS, Head, Home —continued			Trafficators ..	1946-49	*54018D
Battery ..	1946-49	SG9A	R.H.D., dip left (L.H.) (horseshoe lens)	1947-49	*50595A	Warning light (ignition) ..	1946-49	*38013B
Coil, ignition ..	1946-49	*45020A	" non-dip (R.H.) (horseshoe lens)	1947-49	*50491A	Windshield wipers		
Control box ..	1946	*37032A	Number plate illumination ..	1947-49	*53034A	Motor ..	1946-49	*75066A
Distributor ..	1947-49	37065E	Side ..	1947-49	*52071A	Clutch housing ..	1946-49	737357
Generator ..	1946-49	40062A/E	Starting motor ..	1946-47	*250231	Bracket, with shaft and coupling ..	1946-49	*735446
Horn ..		*238311	Steering column control ..	1946-49	25017A	Shaft, short ..	1946-49	737243
Low note ..	1946-49	*69021A		1948-49	32737F	Coupling ..	1946-49	729036/S
High note ..	1946-49	*69022A				Link ..	1946-49	737312
LAMPS			SWITCHES			Grommet, housing ..	1946-49	73874
Head, Home			Dipper ..	1946-49	31284A	scuttle ..	1946-49	729378
R.H.D., dip left (L.H.) (diamond lens)	1947-49	*50596A	Ignition and lighting ..	1946-49	*34006B	Arm ..	1946-49	*735050
" non-dip (R.H.) (diamond lens)	1947-49	*50490A	Panel ..	1946-49	*314124	Blade ..	1946-49	727707
			Starting motor ..	1946-49	76428A			

SINGER 1,200 c.c. 4AC and 1,500 c.c. 4AD 1952-55

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter ..	1952-53	*36055F	LAMPS—continued			SWITCHES—continued	1952-55	*34006B
" .. Later	1953-55	*36167A	Head, Export			Ignition and lighting ..	1952-55	*314124
Battery ..	1952-55	GT7A	R.H.D., dip left ..	1952-53	*50985A	Panel ..	1952-55	76423A
Coil, ignition ..	1952-55	*45020A	L.H.D., dip right ..	1953-55	*50988A	Starting motor ..	1952-55	764428
Control box ..	1952-55	*37138A/D		1952-54	*50877B	Coupling ..	—	—
Distributor ..	1952-53	*40167F/H	Head, Export Europe ..	1953	*50989A	Stop lamp ..	1952-55	31281B
" .. Later	1953-55	*40363A	(not France) ..	1952-53	50986A	Spring ..	1952-55	315543
" (twin carburettor)	1953-54	40356A	ditto ..	1953-55	*50990A	Trafficator ..	1952-55	*31359A
Fuse box ..	1952-55	033239	Head, Export France ..	1952-54	50987A	Trafficators ..	1952-53	*54039A
Generator ..	1952-55	22258D	" ..	1955	50991A	" .. Later	1953-55	54044A/D
Horn ..	1952-55	*069213	" ..	1955	51651A	Warning lights ..		
Horn push ..	1952	76216A	Number plate illumination ..	1952-55	53101E	Ignition ..	1952-55	*38013B
"	1955	76216A	Side ..	1952-55	*52044A	Main beam ..	1952-55	38058A
LAMPS			Stop tail ..	1952-55	53178D/E	Windshield wipers		
Head, Home			Reflex reflector ..	1955	*57035A	Motor ..	1952-54	*733147
R.H.D., dip left ..	1952-53	*50985A	Starting motor ..	1952-55	25022A/L	" ..	1955	*75277A
" Later	1953-55	50988A	Steering column control ..	1953-55	32864A/D	Coupling bar ..	1952-54	732693
			Suppressor ..	1955	78114A	Bearing, passenger side ..	1952-54	731721
SWITCHES						Arm, left hand ..	1952-55	735119
Dipper ..	1952-54	31260A				" right hand ..	1952-55	735118
" Later	1954-55	31284A				Blade ..	1952-55	727707

SINGER 'SM1500' 1949-54

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter ..	1949-53	36077D	LAMPS, Head, Export ..			SWITCHES—continued		
" .. Later	1953-54	*36169A	—continued			Panel ..	1949-54	31154A
Battery ..	1949-54	GT9A	L.H.D., dip right ..	1949	A50793B	Knob ..	—	316483
Bulb holder, panel light ..	1949-54	39015A	ditto (from Chassis 301) ..	1949-51	*A50445K	Reverse lamp ..	1949-54	*31077A
Coil, ignition ..	1949-54	*45020A	ditto ..	1951-52	*50804D	Solenoid, starting motor ..	1949-54	*76411D
Control box ..	1949-51	37065E	ditto ..	1953-54	*51337A	Solenoid operating ..	1949-54	31153A
" .. Later	1951-54	*37138A/B	Head, Export Europe ..	1949	*B50793B	Knob ..	—	*317331
Distributor ..	1949	*40167A	(not France) ..	1949-51	*B50445K	Windshield wiper ..	1949-54	31154A
" .. Later	1949-51	*40167B/E	ditto (from Chassis 301) ..	1949-51	*50963A	Knob ..	—	*316484
"	1952-53	*40167F/H	ditto ..	1951-52	51339A	Terminal block ..	1949-51	304812
" Later	1953-54	*40363A	ditto ..	1953-54	51339A	Trafficators ..	1949	*54018D
Fuse box ..	1951-54	033239	Head, Export France ..	1949-51	*50790E	" .. Later	1950-53	*54039A
Generator ..	1949-51	*22250E/F	" ..	1951-52	*50962A	Windshield wipers		54044A/D
" Later	1951-54	22258D	" ..	1953-54	*51341A	Motor ..	1949-54	*75062J
Horn ..			Head, Export U.S.A. ..	1949-52	*50804D	" ..	1949	*75092B
Low note ..	1949-54	*69011F	1949-53	51343A	Panel ..	1949-54	316483	
High note ..	1949-54	*69012F	" ..	53097E	Knob ..	—	*316484	
LAMPS			Number plate illumination ..	1949-54	52139B	Reverse lamp ..	1949-54	*31077A
Head, Home			Side ..	1949	52139B	Solenoid, starting motor ..	1949-54	*76411D
R.H.D., dip left (L.H.) ..	1949-50	*50793B	" ..	1950	*52152B	Solenoid operating ..	1949-54	31153A
"	1949-50	*50362F	Stop tail ..	1951-54	52139B	Knob ..	—	*317331
"	1949-50	37065E	" ..	1951-54	53131B	Windshield wiper ..	1949-54	31154A
"	1949-50	*37138A/B	Starting motor ..	1951-54	53178D	Knob ..	—	*316484
Distributor ..	1949	*40167A	1949-54	25022A/L	Terminal block ..	1949-51	304812	
"	1949-51	*40167B/E	1949-54	32795A/M	Trafficators ..	1949	*54018D	
"	1952-53	*40167F/H	1954	78114A	" .. Later	1950-53	*54039A	
"	1953-54	*40363A						54044A/D
Fuse box ..	1951-54	033239	SWITCHES			Warning lights ..		
Generator ..	1949-51	*22250E/F	Dipper ..	1949-54	31284A	Ignition ..	1949-53	38047A
"	1951-54	22258D	Heater or fan ..	1949-50	*78258A	Main beam ..	1953-54	38049A
Horn ..			Knob ..	—	768378	Side lamp ..	1949-54	*38087A
Low note ..	1949-54	*69011F	Heater or fan ..	1951	*78273A	Windshield wipers		
High note ..	1949-54	*69012F	Heater ..	1952-54	31248A	Motor ..	1949	*75062J
LAMPS			Knob ..	—	316381	" ..	1949	*75092B
Head, Home			Ignition ..	1949-54	31216B	End tube ..	1949-54	*75064J
R.H.D., dip left (L.H.) ..	1949-50	*50793B	Lighting ..	1949-54	31198A	Grommet, wheelbox ..	1949-54	734181
"	1949-50	*50445K	Knob ..	—	*315241	Arm ..	1949-54	736423
"	1951-52	*50954A				Blade ..	1949-54	736412
Head, Export								
R.H.D., dip left ..	1949-50	*50793B						
"	1949-51	*50445K						
"	1951-52	*50954A						
"	1953-54	51336A						

SINGER 'Hunter' 1955-56: 'S' Model 1956

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter ('Hunter') ..	1956	*36221A	Coil, ignition—continued			Distributor		
" ('S') ..	1956	*36169A	Twin carburettor ..	1955	*45012B	Single carburettor ..	1955-56	*40167H
Battery ..	1955-56	GT9A	" ..	1955-56	*45054A	Twin carburettor ..	1955-56	*40363A
Coil, ignition ..			Control box ('Hunter') ..	1955	*37138D	Flasher unit ..	1955-56	*35003A
Single carburettor ..	1955	*45020A	" ..	1955-56	37182A/H	Fuse box ..	1955-56	033239
"	1955-56	*45053A	" ..	1956	*37138D	Generator ..	1955	22258D
"	1956	*45020A	" .. ('S') ..	1956		" ..	1956	22258E

* See Supersession Chart
L.H.D. ... Left hand drive

† No longer available—refer to Wiper Conversion Set Section
R.H.D. ... Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

SINGER

SINGER 'Hunter' 1955-56; 'S' Model 1956—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Horn			LAMPS—continued			SWITCHES—continued		
Low note ..	1955	*69011J	Stop tail and flasher ..	1955	*53372A	Solenoid, starting motor ..	1955-56	*76411E
" ..	1956	69046A	" .. ("S") ..	1956	*53372A	Solenoid operating ..	1955-56	31253A
High note ..	1955	*69012J	Reflex reflector (when fitted) ..	1955-56	*57035A/D	Knob ..	—	316399
" ..	1956	*69047A	Relay, flasher ..	1955-56	33117A	Stop lamp ..	1955-56	31082B/E
Inspection lamp sockets ..	1955-56	301187	Relay, horn (when fitted) ..	1955-56	33116B	Windshield wiper ..	1955	31248B
LAMPS			Starting motor ..	1955-56	25022A/L	ditto ('Hunter') ..	1956	*31581A
Flasher, rear ('Hunter') ..	1956	53359D	Steering column control ..	1955-56	32949A	ditto ('S') ..	1956	31248B
Fog ('Hunter') ..	1955-56	55160A	ditto .. Later	1956	32972A	Knob ..	1955-56	*316484
Head, Home			SWITCHES			Warning lights		
R.H.D., dip left ..	1955	51336A	Dipper ..	1955-56	31284A	Flasher ..	1955	*38082A
" ..	1956	51736B	Door light ..	1956	*31180A	" .. ("S") ..	1956	38133A
Head, Export "			Foglamp ..	1955-56	*31251A	Ignition ..	1955	*38075A
R.H.D., dip left ..	1955	51336A	Knob ..	1955	*316374	Main beam ..	1955	*38127A
" ..	1956	51736B	Heater ..	1955	31248B	" .. ("Hunter") ..	1956	*38075A
L.H.D., dip right ..	1955	*51337B	Knob ..	1956	*31581A	" .. ("S") ..	1956	*38127A
" ..	1956	51737B	Lighting ..	1955-56	316381	Windshield wipers		
Head, Export Europe (not France) ..	1955	51339A	Ignition ..	1955-56	31216B	Motor ..	1955-56	75145A
" ..	1956	51738B	" .. ("Hunter") ..	1956	*31575A	Wheelbox ..	1955-56	72592K
Head, Export France ..	1955	*51590A	" .. ("S") ..	1956	31216B	Crosshead and rack assy.		
" ..	1956	51886A	Panel ..	1955	31248B	Cut to 51½" ..	1955-56	738499
Head, Export U.S.A. ..	1955-56	51343A & B/E	Lighting ..	1955-56	*31251A	Outer casing		
Inspection ..	1955-56	060121	Knob ..	—	316398	Motor to wheelbox ..	1955-56	*739907
Number plate illumination and reverse ..	1955	53097D	Panel ..	1955	31248B	Wheelbox to wheelbox ..	1955-56	*739979
" ..	1956	*53462A	" .. ("Hunter") ..	1956	*31581A	End tube ..	1955-56	740031
Side and flasher ..	1955-56	*52236A	" .. ("S") ..	1956	31248B	Arm, left hand ..	1955-56	742143
Stop tail ('Hunter') ..	1956	53330D	Knob ..	1955-56	316483	right hand ..	1955-56	742142
			Reverse lamp ..	1955-56	*31077E	Blade ..	1955	*737682
						" ..	1956	741543

SINGER 'Gazelle' Series I-III 1957-59

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1957-59	*36228A	LAMPS—continued			SWITCHES—continued		
Battery	1957-58	GLTW7A	Number plate illumination ..	1957-59	53278B	Knob, choke control ..	1957-58	*313639
" ..	1959	BT7A	dito (Estate Car) ..	1958-59	53630A	" ..	1959	54330747
" .. (cold climates) ..	1957-58	GT7A	Side and flasher ..	1957	*52333B	Warning lights	1957-59	38157A/B
" ..	1959	BT9A	"	1958-59	52403A/B	Flasher ..	1957-59	38156A
Coil, ignition	1957-59	*45053H/K	Stop tail and flasher ..	1957-58	53540A/D	Windshield wipers		
Control box	1957-59	37182H	Except N. America ..	1958-59	*53648A/F	Motor ..	1957-58	75296A/B
Distributor			N. America .. Later	1958-59	53444D	" ..	1959	75296E
Low compression ..	1957-58	40564D	Stop tail and flasher ..	1957-58	53753A/B	Wheelbox ..	1957-58	72673A
" ..	1959	40492B	Except N. America ..	1958-59	25022A/L & M	Crosshead and rack assy.		
High compression ..	Later	40530A/B	N. America .. Later	1958-59	32987A	Cut to 43½" ..	1957-59	72709A
Flasher unit	1957-59	35011A	Starting motor ..	1957-59	31734A	Outer casing		
Fuse box	1957	033239	Steering column control ..	1957-59	31736A	Motor to wheelbox ..	1957-59	743235
" ..	1958-59	033277			31736A	Wheelbox to wheelbox ..	1957-59	743517
Generator	1957-59	22258E/H	SWITCHES		31736A	End tube ..	1957-59	743706
Horn			Dipper ..	1957-59	31284A/D	Ferrule, casing retaining ..	1957-59	740715
Low note	1957-59	69046E/F	Flasher ..	1957	31636A	Arm, left hand drive ..	1957	745072
High note	1957-59	69047E/F	Left hand drive ..	1957	31735A	ditto .. Later	1957-59	741845
Horn relay	1957-59	*33116B	Right hand drive ..	1957	31501B	" .. right hand drive ..	1957	745071
LAMPS			U.S.A.	1957	*31653A	" .. ditto .. Later	1957-59	741844
Head, Home			Ignition and starting ..	1957-59	31200E	Blade ..	1957	738724
R.H.D., dip left	1957	51971B/H	Lighting ..	1957-59	*313637	"	1958-59	737897
" ..	1958-59	58182B/D	Knob ..	1957-58	54330740	Laycock de Normanville overdrive equipment (optional)		
Head, Export Europe (not France)	1957	51989B/F	Solenoid, starting motor ..	1957-59	*76411E	Relay ..	1958-59	33157B/D
" ..	1958-59	51942A/B	Stop lamp ..	1957-59	31082E	Switches ..	1958-59	31470A
ditto	Later	58363A	Cap ..	—	316072	Interrupter ..	1958-59	31470A
Head, Export France	1957	51990B/F	Windshield wiper ..	1957-59	*31261D	Solenoid, transmission gear ..	1958	*76506B
"	1958-59	51796E	Knob ..	1957-58	*313638	ditto .. Later	1958-59	76516A/B
Head, Export U.S.A.	1957-59	51979B/E	"	1959	54330741			

SINGER 'Gazelle' Series IIIA 1959-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1959-60	36257A/B	Horn			Starting motor	1959	25022M
Battery	1959-60	BT7A	Low note	1959-60	69092A	"	1960	25022N/Q
" .. (cold climates) ..	1959-60	BT9A	High note	1959-60	69091A	Steering column control ..	1959-60	32987A
Coil, ignition	1959-60	45102E	LAMPS			Contact plate	1959-60	331610
Control box	1959-60	37290D	Flasher, rear .. (U.S.A.) ..	1959-60	*53841A	SWITCHES		
" .. ('Easidrive') ..	1959-60	37305A/B	Head, Home			Dipper	1959-60	31800A
"	Later	1960	R.H.D., dip left ..	1959-60	58550A	Cap, rubber ..	—	54331425
Distributor			Head, Export Europe (except France & Sweden) ..	1959-60	58361A	Flasher, L.H.D. ..	1959-60	31735B
High compression ..	1959-60	40681A	Head, Export France ..	1959-60	58362A	" .. R.H.D. ..	1959-60	31734B
" ..	Later	40681B	Head, Export Sweden ..	1960	58608A	Ignition and starting ..	1959-60	31971A
Low compression ..	1959-60	40682A	Head, Export U.S.A. ..	1959-60	58491A	Lighting ..	1959-60	31970A
" ..	Later	40682B	Number plate illumination ..	1959-60	53278B	Knob	—	54330740
Flasher unit	1959-60	35011A	Side and flasher ..	1959-60	52403B	Solenoid, starting motor ..	1959-60	*76465A
Fuse box	1959-60	033283	Stop tail ..	1959-60	*53840A/B	ditto throttle blipper ..	1959-60	76521A
Generator	1959-60	22700D	Reflex reflector ..	1959-60	57123A/B	("Easidrive") ..	1959-60	76528B
" .. (alternative) ..	1959-60	*22704A	Relay, horn ..	1959-60	33188A	ditto .. Later	1960	31802B
" .. ('Easidrive') ..	1959-60	22532A	Sleeve, Lucas connector ..	1959-60	54190042	Stop lamp ..	1959-60	*31261D
"	Later	22532B/D	14 amp.	1959-60	54190043	Windshield wiper ..	1959-60	54330741
			35 amp.	1959-60	54190043	Knob	—	

* See Supersession Chart

† Optional on 'S' Model

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

continued



Equipment Specification

SINGER-SMITH'S DELIVERY VEHICLES

SINGER 'Gazelle' Series IIIA 1959-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Warning lights			Windshield wipers—cont'd			Windshield wipers—cont'd		
Flasher	1959-60	38191A	Wheelbox, left hand ..	1959-60	72735A	Blade	1959-60	54711282
Ignition	1959-60	38189A right hand ..	1959-60	72742A			
Main beam	1959-60	38190A	Crosshead and rack assy.					
Oil	1959-60	38192A	Cut to 44"	1959-60	744256			
Windshield wipers			Outer casing					
Motor, left hand drive	1959-60	75389A	Motor to wheelbox ..	1959-60	54711609			
" right hand drive	1959-60	75388A	Wheelbox to wheelbox ..	1959-60	743706			
			End tube	1959-60	740746	Relay	1959-60	33157A/D
			Arm, left hand drive ..	1959-60	54711535	Switch	1959-60	31542A
		 right hand drive ..	1959-60	54711534	Interrupter	1959-60	76522A
						Solenoid	1959-60	

SMITH'S DELIVERY VEHICLES Standard Drive Model (Electric) 1953-55

LAMPS			LAMPS—continued			Windshield wipers—cont'd		
Dash	1953-55	56010A	Side	1953-55	*52142B/D	Crosshead and rack assy.	1953-55	736364
Flasher, front (special orders)	1955	53610A	Stop tail	1953-55	*53151H/J	Outer casing	1953-55	
Flasher, rear (special orders)	1955	53504A	Windshield wipers			Motor to wheelbox ..	1953-55	*739832
Number plate illumination	1954-55	53374A	Motor	1953-55	75179A	End tube	1953-55	740031
			Wheelbox	1953-55	72619A/F	Arm	1953-55	*735050
						Blade	1953-55	737800

SMITH'S DELIVERY VEHICLES 14, 20 and 30 cwt. (Electric) 1956-58

Horn	1956-58	*069213	SWITCHES			Windshield wipers—cont'd		
Horn push	1956-58	76205A	Lighting	1956-58	34065A	Outer casing	1956-58	*739832
LAMPS			Stop lamp	1956-58	31082D	Motor to wheelbox ..	1956-58	740031
Flasher, front (special orders)	1956-58	53610A	Windshield wipers			End tube	1956-58	
Flasher, rear (special orders)	1956-58	53504A	Motor	1956-57	75179A	Ferrule, casing retaining	1956-58	738410
Number plate illumination	1956-58	53374A	Wheelbox	Later	75324A	Arm	1956-57	*735050
Stop tail	1956-58	*53151H/J	Crosshead and rack assy.	1956-58	72619A	Later	1957-58	738929
					736364	Blade	1956-57	737800
						"	1958-58	738930

SMITH'S DELIVERY VEHICLES 1 ton (Diesel) 1953-55

Battery	1953-55	MX9A/2	LAMPS—continued			SWITCHES		
LAMPS			Number plate illumination	1954-55	53374A	Panel	1954-55	31120B
Dash	1953-55	56010A	Side	1953-55	*52142B/D	Solenoid, starting motor	1954-55	*76411D
Flasher, front (special orders)	1955	53610A	Stop tail	1953-55	53178B/D			
Flasher, rear (special orders)	1955	53504A	" (insulated return)	1953-55	*53151H/J	Windshield wipers	1953-55	738929
			Reflex reflector	1955	57116A	Arm	1953-55	738930
						Blade	1953-55	

SMITH'S DELIVERY VEHICLES 2 ton (Diesel) (CP80) 1953-55

Ammeter	1953-55	*36092A	LAMPS—continued			SWITCHES—continued		
Bulb holder, panel light	1953-55	39007A	Head	1953-55	51344A	Ignition and lighting ..	1953-55	31270A
Control box	1955	*37139E	Number plate illumination	1953	53101E	Knob (lighting) ..	1953-55	316285
Fuse box	1953-55	033239	Side	1954-55	53374A	" (ignition) ..	1953-55	316434
Generator	1955	*22456B	" (insulated return)	1953-54	52139B	Panel light	1953	*31276A
Horn	1953-55	*069399	" (flasher)	1953-54	*52142B/D	Solenoid, starting motor	1954-55	31120B
LAMPS			Stop tail	1953-54	*52162B/D	Stop lamp	1953-55	31082D
Dash	1953-55	56010A	" (insulated return)	1953-55	53178B/D	Warning light	1953-55	38059A
Flasher, front (special orders)	1955	53610A	Reflex reflector	1955	53151H/J	Windshield wipers	1953-55	75129A
Flasher, rear (special orders)	1955	53504A	Starting motor (serviced by C.A.V.)	1953-55	57116A	Motor	1953-55	*735049
						Arm	1953	738929
						"	1954-55	727802
						Blade	1953	738930
						"	1954-55	

§ FUEL INJECTION EQUIPMENT

(Perkins P4 Engine)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1953-55	BPE4A60S310S6319	Venturi	1954-55	
Governor	1953-55	BEPMZ80A100	Nozzle holder	1953	BEPK50-50-101
Feed pump	1953-55	BFPK22P68	"	1954-55	BKB35S87
Primer	1953-55	BFPUE2-54Z	Nozzle	1953-55	BKB32S630
Pre-filter	1953-55	BFJSJ1-501	Filter	1953-54	BDL110S6133
Coupling	1953-55	BZKG31-538	"	1955	BFA5P1
Venturi	1953	BEPK50-50-77			F2-8

SMITH'S DELIVERY VEHICLES Mobile Shop (Electric) 1953-55

LAMPS			LAMPS—continued		
Dash	1953-55	56010A	Flasher, rear (special orders)	1955	53504A
Flasher, front (special orders)	1955	53610A	Number plate illumination	1954-55	53374A
			Stop tail and number plate ditto (insulated return)	1953-55	*53063B
			Suppressor	1953-55	*53151H/J
				1953-54	78122A

* See Supersession Chart

§ Serviced by C.A.V. Ltd.



Equipment Specification

SMITH'S DELIVERY VEHICLES—STANDARD

SMITH'S DELIVERY VEHICLES Mobile Shop (Petrol or Diesel) 1956–58

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery (Petrol) ..	1956-58	GT11A	LAMPS—continued	1956-58		SWITCHES—continued		
(Diesel) ..	1956-58	STXT19E	Number plate illumination	1956-58	53093E	Solenoid operating		
Coil, ignition ..	1956-58	*45012B	Side ..	1956-58	52250A	(Diesel, serviced by		
Control box ..	1956-58	37183A	Stop tail ..	1956-58	53178E	C.A.V.)	1956-58	1823410
Distributor ..	1956-58	40360D	Width indication ..	1956-58	*52162D	Starting motor (Petrol)	1956-58	76423A
Fuse box ..	1956-58	033239	Reflex reflector ..	1956-58	57073B	Coupling ..	—	764428
Generator ..	1956-58	*22483A	Starting motor					
Horn ..	1956-58	*069213	Petrol ..	1956-58	26094A	Windshield wipers		
Low note (alternative) ..	1956-58	69046A	Diesel (serviced by	1956-58	1330930	Motor ..	1956-58	75289A
High note (optional) ..	1956-58	69047A	C.A.V.)	1956-58	1330670	Wheelbox ..	1956-58	72660A
LAMPS			Steering column control ..	1956-58	32937A/B	Crosshead and rack assy.	1956-58	743722
Flasher, front and rear ..	1956-58	53358D	SWITCHES			Outer casing		
Head, Home			Dipper ..	1956-58	31284A	Motor to wheelbox		
R.H.D., dip left ..	1956-58	51336B/J	Heater (Diesel, serviced			Left hand ..	1956-58	743708
Head, Export			by C.A.V.) ..	1956-58	1823420	Right hand ..	1956-58	743709
R.H.D., dip left ..	1956-58	51336B/J	Lighting and ignition or	1956-58	*31288A	End tube ..	1956-58	740746
L.H.D., dip right ..	1956-58	*51337E	main ..	1956-58	316285	Arm, left hand ..	1956-58	745081
Head, Export Europe (not France) ..	1956-58	51339B/H	Knob ..	—		„ right hand ..	1956-58	745080
						Blade ..	1956-58	741680

Note. The above is a typical specification. Mobile Shops are also supplied in small quantities with specially ordered equipment

§ FUEL INJECTION EQUIPMENT

(Perkins P6 Engine)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump ..	1956	BPE6A60S310S6321	Primer ..	1957-58	HPI-1
" "	1957	BPE6A60S310S6381	Pre-filter ..	1956-58	BFJS1-501
Governor ..	1958	BPE6A60U310S6381	Coupling ..	1956-58	BZKG31-538
	1956	BEPAMZ80A99	Venturi ..	1956-58	BEPK50-107
Feed pump ..	1956	BEPAMZ80A133	Nozzle holder ..	1956-58	BKB32S630
" "	1957-58	BFPK22P68	Nozzle ..	1956-58	BDL110S6133
Primer ..	1956	BFPK22P70	Filter ..	1956-58	F2-8
		BFPUE2-54Z			

STANDARD 8 h.p. 1946–48

Battery ..	1946-48	SG9E	Starting motor ..	1946-48	*250405	Windshield wipers—cont'd		
Coil, ignition ..	1946-48	*45014A	Steering column control			Bracket, with shaft and coupling ..	1946-48	734476
Control box ..	1946	*37034A	Home ..	1946-48	*323430	Shaft, short ..	1946-48	737243
" .. Later	1946-47	*37058A	Export ..	1946-48	*323440	Coupling ..	1946-48	729036/S
" ..	1948	37062E	SWITCHES			Link, primary (Coupé and Tourer) ..	1946-48	734463
Distributor ..	1946-48	40052B/H	Dipper ..	1946-48	31284A	Link, secondary ..	1946-48	733817
Generator ..	1946-48	22008B	" (Export) ..	1946-48	31001A	Driving shaft and crank (except Coupé and Tourer) ..	1946-48	*735628
Horn ..	1946-48	*70001D	Ignition and lighting ..	1946-48	*34009A	Bearing bracket (except Coupé and Tourer) ..	1946-48	733826
LAMPS			Panel ..	1946-48	*31051A	Grommet, housing ..	1946-48	733874
Head, Home			Starting motor ..	1946-48	76428A	scuttle (except Coupé and Tourer) ..	1946-48	729378
R.H.D., dip left (L.H.) ..	1946	50083B	Stop lamp ..	1946-48	31281B	Arm ..	1946-48	*735048
" non-dip (R.H.) ..	1946	50082B	Trafficators ..	1946-48	*539730	Blade ..	1946-48	727803
" dip left (L.H.) ..	1947-48	50171D	Warning light (ignition) ..	1946-48	*38012B	" (Coupé and Tourer) ..	1946-48	727801
Head, Export			Windshield wipers ..			Tourer) ..	1946-48	
Vertical dip (L.H.) ..	1946-48	50267D	Motor ..	1946-48	*75065A			
" (R.H.) ..	1946-48	50268D	Clutch housing ..	1946-48	737186			
Side ..	1946-48	*52091A						
Stop tail ..	1946-48	*53029A						
Mirror ..	1946-48	*620701						
" (Coupé and Tourer) ..	1946-48	*621306						

STANDARD 'Eight' and 'Ten' Saloons 1954–59

Battery ..	1954-57	GT7A	Horn ..	1954-56	*069399	LAMPS—continued		
	1958-59	BT7A	" (low note) ..	1956-57	69046A/E	Head, Export France ..	1954	*51341A
Bulb holder, panel light ..	1959	554734	" (high note, optional) ..	1956-57	69047A/E	" ..	1955	51342A
Bulb ..	—	987	1958-59	*069515		" ..	1956-57	51342B/D
Coil, ignition ..	1954-56	*45020B	Horn push ..	1954-55	76224B	Head, Export Switzerland ..	1954-57	*51341B/E
	1957-59	*45053H/M	'Family Eight' ..	1956	76224B	ditto ..	1957-59	51535A
Control box ..	1954-55	*37138B/D	'Super Eight' and 'Ten' ..	1956	76229A	Head, Export Norway and Sweden ..	1954-55	51535D/F
	1956-59	37182A/H	Family Models ..	1957	76224A	ditto ..	1955-59	51536A
" .. Later	1959	37182J	Other models ..	1957	76229A	Head, Export Poland ..	1958-59	51536B
Distributor 'Eight' ..	1954	*40395A	Phase II models ..	1958	76229A	Head, Export U.S.A. ..	1954-57	58038A/B
" .. Later	1955-56	*40434A	Horn relay (when pair fitted) ..	1956-57	*33116B	Head, Export Canada ..	1954-59	51509A/H
" (high comp.) ..	1956-57	40477A	LAMPS			Number plate illumination ..	1954-55	51343B/E
" ..	1958	40593B	Flasher, rear ..			'Eight' ..	1954-55	53320A/B
" (low comp.) ..	1958	40477A	Belgium ..	1956-57	53504A	Holland and Belgium ..	1956-59	53388A
" ..	1959	40477B/D	ditto ..	1958-59	52337A	Side ('Eight') ..	1954-55	52139B
" .. Later	1956-57	*40437A	N.A.D.A. ..	1958-59	53600A/D	Side and flasher ..	1955	52240A
" (high comp.) ..	1958-59	40598B	Head, Home and Export R.H.D., dip left ..	1954-55	51336A	'Super Eight' ..	1955	52240B/D
" ..	1959	40611B	" ..	1956-58	51336B/J	All models ..	1956-57	52338A
" ..	1958	40478A	" ..	1959	*58232A/B	" ..	1958-59	53564A/D
" .. Later	1958	40620A	Head, Export ..	1954	*51337A	Stop tail ..	1954-55	53178F
" ..	1959	40620B	L.H.D., dip right ..	1955	*51337B	'Eight' ..	1956-57	53178F
Flasher unit ..	1955	*35003A	" ..	1956-59	*51337D/E	Holland and Belgium ..	1956-59	53564A/D
	1956-59	35010A	" ..	1959	*51337F/K	Stop and number plate ..	1958-59	
Fuse box ..	1954	*37131A	Head, Export Europe (not France) ..	1954-55	51339A	'Super Eight' ..	1955	53426A
	1956-59	22258D	ditto ..	1956-59	51339B/H	All models ..	1956-59	53426A
Generator ..	1954-55	22258E/H						

* See Supersession Chart † Specially fitted with green lens ‡ No longer available—refer to Wiper Conversion Set Section § Serviced by C.A.V. Ltd.
N.A.D.A. .. North American Dollar Area L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

STANDARD

STANDARD 'Eight' and 'Ten' Saloons 1954-59—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS—continued			SWITCHES—continued	1959	*76411E	Windshield wipers—cont'd		
Tail and flasher (except Holland and Belgium) ..	1956-57	53178F	Solenoid, starting motor ..	1954-58	76423A	Arm, left hand drive ..	1954-56	*737837
ditto ..	1958-59	53564A/D	Coupling ..	1954-58	764428	Chrome, right hand ..	1957-59	745385
Reflex reflector ..	1954-59	57035A	Stop lamp ..	1954-59	31082B/H	Black, right hand ..	1954-56	737830
" .. Later	1959	57116A	Trafficator ('Eight') ..	1954-55	31311A	1957-59	745383	
Starting motor ..	1954-59	25022A/L	Windshield wiper ..	1954	*31389A	Arm, right hand drive ..	1954-56	*737840
" .. Later	1959	25022M	Knob ..	1955-59	*31419A	Chrome, left hand ..	1957-59	745384
Steering column control (Phase III models) ..	Later	33512A/B	Trafficator ('Eight') ..	1954-55	54045A/D	Black, left hand ..	1954-56	737831
Steering column control ..	1959	33538A/B	Windshield wipers			Chrome, right hand ..	1957-59	745382
Suppressor ..	1954-55	78118A	Motor ..	1954-56	75150A	Blade, chrome ..	1954-56	*737525
SWITCHES			" ..	1957	*75200B	Black, right hand ..	1954-56	745071
Dipper ..	1954-59	31284A/D	Wheelbox ..	1954-56	75296B/E	Chrome, right hand ..	1957-59	737780
Flasher ..			Crosshead and rack assy.	1957-59	72629A/D	Blade, black ..	1957-58	727759
'Super Eight' and 'Ten'	1955	*31508A	Cut to 31 $\frac{1}{2}$ " ..	1954-56	72686A/B	1959	*737682	
All models ..	1956-57	*31508A	Outer casing ..	1957-59	743221	1954-59	727803	
Phase II ..	1958	31664A	Motor to wheelbox ..	1954-56	738764	Overdrive equipment (when fitted)		
Phase III .. Later	1958-59	31765A	" ..	1957-59	743221	Relay ..	1958-59	33157D
Heater or fan ..	1954-55	*31389A	Outer casing ..	1954-56	738764	Switches		
Knob ..	1956-59	*31419A	Motor to wheelbox ..	1957-59	744249	Control ..	1958	31762A
Knob ..	1954-59	317531	" ..	1954-56	739937	Isolator ..	1959	31866A
Ignition			Wheelbox to wheelbox ..	1954-56	744280	Solenoid ..	1958-59	31504B/D
'Eight' and 'Family Eight' ..	1954-57	*31276A	End tube ..	1954-56	740031	Newton Bennet Clutch (when fitted)		
'Super Eight' and 'Ten' ..	1954-57	*31449A	Arm, left hand drive ..	1957-59	740746	Relay ..	1959	33192A
All models ..	1958	*31449B	Chrome, left hand ..	1954-56	740715	Switch ..	1959	31787A
" ..	1959	31543B	" ..	1957-59	737806	Choke ..	1959	
Lighting ..	1954-59	31444B/D	Black, left hand ..	1954-56	745381			
Knob ..	1954-59	316129	" ..	1957-59				
Panel (special orders) ..	1954-56	*31410A						
Knob ..	—	317532						

STANDARD 'Companion' Estate Car, 6 cwt. Van and Pick-up Truck 1956-60

Battery ..	1956-57	GT7A	LAMPS—continued	1956-57	51342B/D	SWITCHES—continued	1956-58	76423A
Bulb holder, panel light ..	1958-60	BT7A	Head, Export France ..	1958-60	*51341B/E	Starting motor ..	1959-60	76423A
Bulb ..	1959-60	554734	Head, Export Switzerland ..	1956-57	51535A	Coupling ..	1956-60	764428
Bulb ..	—	987	ditto .. Later	1957-60	51535D/F	Stop lamp ..	1956-60	31082B/H
Coil, ignition ..	1956	*45020B	Head, Export Norway and Sweden ..	1956-60	51536B	Windshield wiper ..	1956-60	31419A
Control box ..	1957-60	*45053H/M	Head, Export Poland ..	1958-59	58038A/B	Knob ..	1956-60	317530
ditto ..	1956-59	37182A/H	Head, Export U.S.A. ..	1956-57	51509A/H	Windshield wipers		
ditto (Van and Pick-up)	1959	37182J	" ..	1958-59	51343B/E	Motor ..	1956	75150A
ditto ..	1960	37182K	Head, Export Canada ..	1956-59	51509E/F	" ..	1957	*75200B
ditto ('Companion') ..	Later	37183L	Number plate illumination	1960	58412A	Wheelbox ..	1956	75296B/E
ditto ..	1960	37183L	Holland and Belgium ..			Crosshead and rack assy.		
Distributor ..	1956	*40437A	Van ..	1956-59	53320A	Cut to 31 $\frac{1}{2}$ " ..	1956	738764
ditto ..	1956-57	40478A	Pick-up ..	1956-60	53101H	" ..	1957-60	743221
ditto (high comp.) ..	1958-59	40598B	'Companion' ..	1956-60	53388A/B	Outer casing ..		
ditto (alternative) ..	1959	40611B	Home and Export ..	1958-60	53630A	Motor to wheelbox ..	1956	739870
ditto (low comp.) ..	1958	40478A	'Companion' and Van ..	1956-57	52240D	" ..	1957-60	744249
ditto ..	1958	40620A	Side and flasher ..	1956-60	52338A	Wheelbox to wheelbox ..	1956	739937
ditto ..	1959	40620D	Stop tail ..	1956-57	53178F	End tube ..	1956	744280
ditto (Van and Pick-up) ..	Later	40622A/B	Holland and Belgium ..	1956-57	53564A/D	'Companion,' casing retaining ..	1957-60	740746
ditto ('Companion') ..	1960	40622D	ditto (Pick-up) ..	1958-60	53564A/D	Arm, left hand drive ..	1956	740715
ditto ..	1959-60	40606D	ditto ('Companion')	1958	53564A/D	Chrome, left hand ..	1957-60	*737526
Flasher unit ..	1956-60	40606E	U.S.A. (Pick-up) ..	1958-60	53564A/D	Black, left hand ..	1956	745072
Generator ..	1956-59	35010A	'Companion' and Van ..	1958-60	53564A/D	Black, right hand ..	1957-60	737806
ditto (Van and Pick-up)	1960	22258E/H	Stop and number plate ..	1956-58	53426A	Chrome, right hand ..	1956	*737837
ditto ..	1960	22258E/H	'Companion' and Van ..	1957-60	53426A	Black, right hand ..	1957-60	745385
ditto ..	1960	22700D	Pick-up ..	1956-57	53178F	Black, right hand ..	1956	737830
Horn ..	1956	*069399	Tail and flasher ..	1958-60	53564A/D	Arm, right hand drive ..	1957-60	745383
" (Low note) ..	Later	*22704A	ditto (Pick-up) ..	1958	53564A/D	Chrome, left hand ..	1957-60	*737840
" (High note optional) ..	1956-57	69046A/E	ditto ('Companion') ..	1958-60	53564A/D	Black, left hand ..	1956	745384
" ..	1958-60	*69047A/E	Reflex reflector ..	1956-59	57035D	Black, right hand ..	1957-60	737831
Horn push ..	1956	76224B	Starting motor ..	1959-60	57116A	Chrome, right hand ..	1956	745382
Van and Pick-up ..	1957-58	76224A	" ..	1959-60	25022A/L	Black, right hand ..	1957-60	*737525
'Companion' ..	1957-58	76229A	Steering column control ..	1958	25022M	Chrome, right hand ..	1956	745071
Horn relay (when pair fitted) ..	1956-57	*33116A	Except Van and Pick-up ..	1959-60	25022N/Q	Black, right hand ..	1957-60	737780
LAMPS			Van and Pick-up ..	1958-60	33512A/B	Blade, chrome ..	1956-60	745380
Flasher, rear ..			SWITCHES			" ..	1957-60	727759
Holland and Belgium ..	1956-57	53504A	Dipper ..	1956-60	31284A/D	" ..	1957-58	741543
(Van)	1958	52337A	Flasher (all models) ..	1956-57	*31508A	" ..	1959-60	*737682
N.A.D.A. (all models) ..	1958-60	53600A/E	" ..	1958	31664A	" ..	1956-60	727803
'Companion' and Van ..			Heater or fan ..	1958-60	31765A	Black, black ..	1956-60	
Later	1958-60	52337A	Knob ..	1956-60	317531			
Head, Home and Export R.H.D., dip left ..	1956-58	51336B/J	Ignition ..	1956-57	*31419A	Overdrive equipment (when fitted)		
" ..	1959	*58232A/B	" ..	1958	*31449A	Relay ..	1958-60	33157D
Head, Export ..	1960	51336B/J	" ..	1959	31449B	Switches		
L.H.D., dip right ..	1956-59	*51337D/E	" ..	1960	31543E	Control ..	1958	31762A
Head, Export Europe ..	Later	*51337F/K	" ..	1960	*31449E	" ..	1959-60	31886A
Head, Export Europe (not France) ..	1956-60	51339B/H	Solenoид, starting motor ..	1959-60	*76411E	" ..	1958-60	31761A
			ditto .. Later	1960	*76445A	Isolator ..	1958-60	31504B/D
						Solenoid ..	1958-60	*76506B
						Newton Bennet Clutch (when fitted)		
						Relay ..	1959	33192A
						Switch ..	1959	
						Choke ..	1959	31787A

* See Supersession Chart N.A.D.A. .. North American Dollar Area L.H.D. .. Left hand drive R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

STANDARD

STANDARD 12 h.p. 1946-48

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1946-48	*36020A	LAMPS—continued			SWITCHES—continued		
" (Holland and Belgium)	1946-48	*369295	Head, Export Vertical dip ..	1946	50124B	Panel ..	1946-48	*31051A
Battery	1946-48	SG9A	" (L.H.) ..	1946	50634A	(Holland and Belgium) ..	1946-48	*314129
Bulb holder, panel light	1946-48	39007A	" (diamond lens) ..	1947-48		Reverse lamp (Saloon) ..	1946-48	*31077D
Coil, ignition	1946-48	*45012A/D	" (R.H.) ..	1947-48		Roof lamp (Saloon) ..	1946-48	*314547
Control box	..	37051B	" (diamond lens) ..	1947-48		Solenoid, starting motor (Holland and Belgium) ..	1946-48	76022B
" " (Export)	1946-48	C.A.V.	" (L.H.) ..	1947-48		Solenoid operating (Holland and Belgium) ..	1946-48	*317075
Distributor	1946-47	*40052A	" (R.H.) ..	1947-48		Starting motor ..	1946-48	76428A
" " (Holland and Belgium)	1948	*409639	Number plate illumination ..	1947-48		Stop lamp ..	1946-48	31281B
Fuse box (Export)	1946-48	40027A/B	dito (Export) ..	1947-48		Spring ..	—	315543
Generator	1946-48	*385221	Side ..	1946		Trafficators ..	1946-48	*539663
" " (Holland and Belgium)	1946-48	22449A	" (Belgium) ..	1946		Warning lights ..		
Junction box	1946-48	*238464	Stop tail and number plate ..	1946-48		Ignition (Holland and Belgium) ..	1946-48	*318505
LAMPS			(Coupé) ..	1946		Ignition, bulb holder ..	1946-48	39007A
Head, Home			dito (Holland) ..	1946		Windshield wipers ..		
R.H.D., dip left (L.H.)	1946	*50095A	Tail and number plate ..	1946		Motor ..	1946-48	*75066A
" non-dip (R.H.)	1946	*50096A	(Belgium) ..	1946		Clutch housing ..	1946-48	*75048A
" dip left (L.H.)	1947-48	*50155A	Mirror ..	1946-48		With switch ..	1946-48	737038
" non-dip (R.H.)	1947-48	*50156A	" (Coupé) ..	1946-48		Less switch ..	1946-48	737039
" dip left (L.H.)	1947-48	*50624A	(Export) ..	1946-48		Bracket, with shaft and coupling ..	1946-48	734678
" (horseshoe lens)	1947-48	*50625A	Starting motor ..	1946-48		Shaft, short ..	1946-48	737243
" non-dip (R.H.)	1947-48	*50625A	Steering column control ..	1946-48		Coupling ..	1946-48	729036/S
(horseshoe lens)			Home ..	1946-48		Link, primary ..	1946-48	735697
LAMPS			Export ..	1946-48		" secondary ..	1946-48	735683
Head, Home			Holland and Belgium ..	1946-48		Grommet, housing ..	1946-48	735679
R.H.D., dip left (L.H.)			SWITCHES			Arm ..	1946-48	*735078
" non-dip (R.H.)			Dipper ..	1946-48	31284A	Blade ..	1946-48	727707
" dip left (L.H.)			" (Export) ..	1946-48	31001A			
" (horseshoe lens)			Ignition and lighting ..	1946-48	*34009A			
" non-dip (R.H.)			dito (Holland and Belgium)	1946-48	*344920			
(horseshoe lens)								

STANDARD 14 h.p. 1946-48

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1946-48	*36020A	LAMPS—continued			SWITCHES—continued		
" (Holland and Belgium)	1946-48	*369295	Number plate illumination ..	1946-48	*53075B	Solenoid operating (Holland and Belgium) ..	1946-48	*317075
Battery	1946-48	SG9A	Side ..	1946-48	*52092A	Starting motor ..	1946-48	76428A
Bulb holder, panel light	1946-48	39007A	" (Belgium) ..	1946	52034A	Stop lamp ..	1946-48	31281H
Coil, ignition	1946-48	*45012A/D	Stop tail and number plate ..	1946	*53081A	Spring ..	—	315543
Control box	1946-48	37057E	(Holland) ..	1946	*53029A	Trafficators ..	1946-48	*539663
" " (Holland and Belgium)	1946-48	C.A.V.	(Australia) ..	1946	*53031D	Warning lights ..		
Distributor	1946	40053A	(Coupé) ..	1947-48		Ignition (Holland and Belgium) ..	1946-48	*318505
" .. Later	1946-47	40053B/H	Mirror ..	1946-48		Ignition, bulb holder ..	1946-48	39007A
" " (Holland and Belgium)	1948	40076E	" (Coupé) ..	1946-48		Windshield wipers ..		
Fuse box (Holland and Belgium)	1946-48	40027B	" (Export) ..	1946-48		Motor ..	1946-48	*75066A
Generator	1946-48	*385221	Starting motor ..	1946-48		Clutch housing ..	1946-48	*75048A
Horn			Steering column control ..	1946-48		With switch ..	1946-48	737038
Low note	1946-48	*69021A	Home ..	1946-48		Less switch ..	1946-48	737039
High note	1946-48	*69022A	Export ..	1946-48		Bracket, with shaft and coupling ..	1946-48	734678
Horn (Holland and Belgium)	1946-48	*069206	Holland and Belgium ..	1946-48		Shaft, short ..	1946-48	737243
Junction box	1946-48	78264B	SWITCHES			Coupling ..	1946-48	729036/S
LAMPS			Dipper ..	1946-48	31284A	Link, primary ..	1946-48	735697
Head, Home			" (Export) ..	1946-48	31001A	" secondary ..	1946-48	735683
R.H.D., dip left (L.H.)	1946-48	*50155A	Ignition and lighting ..	1946-48	*34009A	Grommet, housing ..	1946-48	735679
" non-dip (R.H.)	1946-48	*50156A	dito (Holland and Belgium)	1946-48	*344920	Arm ..	1946-48	*735078
Head, Export			Panel ..	1946-48	31051A	Blade ..	1946-48	727707
Vertical dip (L.H.) ..	1946-47	50634A	" (Holland and Belgium)	1946				
" " (R.H.) ..	1946-47	*50635A	Reverse lamp (Saloon) ..	1946-48	314129			
" " (L.H.) Later	1947-48	*50304A	Roof lamp (Saloon) ..	1946-48	*31077D			
" " (R.H.) ..	1947-48	*50305A	Solenoid, starting motor (Holland and Belgium)	1946-48	52034A			

STANDARD 'Vanguard' Saloon Phases I and II 1948-55: Estate Car Phases I and II (Petrol) 1948-56, (Diesel) 1954-56: 12 cwt. Van and Pick-up Truck (Petrol) 1948-57, (Diesel) 1955-57

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter (Phase II)	1953-57	36172A	Distributor	1948-49	*40144A/B & D/E	
Battery (Petrol)	1948-57	GT9A	" ..	1950-53	*40201A/B			
" (Diesel)	1954-57	T/TX19/T	Later	1953-55	*40365A/D			
Bulb holder, panel light	1948-55	39015A	" ..	1956-57	40479A & B/D			
Petrol	1955	39020A	Fuse box ..	1951-57	033240			
Diesel	1955		Generator ..	1948	*22250A			
Bulb holder, panel light ..	1956-57	39020A	" ..	1949-51	*22250F			
Bulb ..	—	987	Later	1951-55	*22258D			
Coil, ignition ..	1948-55	*45012B	" ..	1956-57	*22258E			
" ..	1956-57	*45054D/H	Horn ..	1956-57	" dip left (L.H. and R.H.) ..	1951-54		
Control box ..	1948-51	37065E	Low note ..	1948-55	*69011F/J	ditto (Phase II) ..	1954-57	
" .. Later	1951-55	*37138B	" ..	1956-57	69046A			
" ..	1956-57	37182A/H	High note ..	1948-55	*69012F/J			
			" ..	1956-57	69047A			
			Horn relay ..	1951-57	*33116B	" ditto (Phase II) ..	1954-57	
						R.H.D., dip left ..	1948-49	*50550E
						" ..	1950-51	*50835A
						Later	1951-54	*51010A
						" ..	1954-57	51417A

* See Supersession Chart † No longer available—refer to Wiper Conversion Set Section

L.H. .. Left hand R.H. .. Right hand

continued



Equipment Specification

STANDARD

STANDARD 'Vanguard' Saloon Phases I and II 1948-55; Estate Car Phases I and II (Petrol) 1948-56, (Diesel) 1954-56; 12 cwt. Van and Pick-up Truck (Petrol) 1948-57, (Diesel) 1955-57—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS—continued			Starting motor	1948-49	*25511D/E	Trafficators		
L.H.D., dip right	1948-49	*A50550E	" "	1949-52	25526A/J	(Saloon and Estate Car)	1948-50	*54018D
" " "	1950-51	*A50835A	" "	1953-54	25541A/D	ditto	1951-53	*54039A
" " Later	1951-52	*50795B	" "	1954	25541E	ditto	1953-56	*54044D
" ditto (Phase II)"	1952-54	*51012A	" "	1955-56	25541F/H	(Van and Pick-up)	1948-50	*54017B
" ditto (Phase II)"	1954-57	51418A	" "			ditto	1951-53	*54040A
Head, Export Europe (except countries listed)	1948-49	*B50550E	Engine No. V277808E)	1957	25550A	ditto	1953-57	*54045D
ditto	1950-51	*B50835A	" (Diesel)	1954-55	26071A/B	Warning lights		
ditto	1951-52	*50968A	" "	1956-57	26071H	Ignition (holder) (bezel)	1948-57	304994
ditto	1952-54	*51011A	Steering column control (Saloon and Estate Car)	1948-49	32779L	Main beam	1949-53	38052A
ditto (Phase II)"	1955-57	51419A	ditto	1949-50	32812J	Windshield wipers		
Head, Export France	1948-49	*50700E	ditto	1951-52	32826J	Motor	1948-51	*75074H
ditto	1950-52	*50837A	ditto	1953	32846F	"	1952-57	75146A
ditto (Phase II)"	1953-54	*51329A	ditto	1953-54	32895A/B	Wheelbox	1948-57	72590A/K
ditto	1955-57	51420A	Export Iraq	1953-55	32899A/B	Crosshead and rack assy.	1948-57	736307
Head, Export Holland	1954	51419A	(Van and Pick-up)	1948-49	32802H	Outer casing		
Head, Export Switzerland	1954-57	51537A	ditto (Export)	1948-49	32846F	Motor to wheelbox	1948-51	*739907
Head, Export U.S.A.	1950-52	*50795B	ditto	1949-54	32818L	Wheelbox to wheelbox	1948-51	*739979
ditto	1953-54	*51012A	Steering column control	1955-56	32884A/F	End tube	1948-57	*739930
ditto (Phase II)"	1954-57	51530A	" Pawl release knob"	1955-56	*32818L	Ferrule, casing retaining	1957	738410
Head, Export Persia	1954-57	51529A	Suppressor	1951-54	78114A	Grommet, wheelbox	1957	734181
Number plate illumination (Saloon)	1948-53	53097E	SWITCHES			Arm		
(Pick-up)	1948-57	53101E/H	Choke control knob	1951-54	325369	Chrome, left hand	1948-50	*737526
(Saloon, U.S.A.)	1950-51	53093E	Dipper	1948-57	31284A	" "	1951-54	*737603
(Van)	1948-49	53101E	Heater or fan	1948-50	*78238A	Black, left hand	1948-57	742149
"	1950-57	53171B	Knob	1948-57	768526	Chrome, right hand	1948-50	*737525
(Saloon)	1954-55	53093E	Heater or fan	1951-57	31113A	" "	1951-54	*737602
(Estate Car)	1954	53093E	Knob	1948-57	315121	Black, right hand	1948-57	742148
" "	1955-56	53097D/E	Ignition	1948-53	31287A	Blade, chrome	1948-50	737495
Side	1950	*52152D	"	1953-54	*31163A	" "	1955-56	737497
" (U.S.A.)	1950-52	*52162D	Ignition or master	1955-57	31287A/B	Blade, black	1948-57	727759
"	1951-57	52139B/F	Lighting	1948-57	31114A	" "	1951-52	*737482
Stop tail (Saloon, U.S.A.)	1950-51	53183B	Knob	1948-57	315215	" black	1952-57	741543
(Estate Car)	1950-56	53179B	Panel	1948-57	31114A	Laycock de Normanville overdrive equipment (optional)		727803
(Van and Pick-up)	1950-57	53180B/E	Knob	1948-57	315215	Relay	1955-57	33157A/B
Stop tail and reverse	1948-49	*53098A	Reverse lamp	1948-56	*31077D/E	Switches		
" " "	1950-51	53179A	Solenoid, starting motor	1948-49	76022B	Control	1955-56	*31485A
" " "			ditto (Petrol)	Later	*76411D/E	"	1957	*31572A
Stop tail, reverse and reflex (Saloon, U.S.A.)	1953	*53271B	ditto (Diesel)	1949-57	*76443A	Interrupter	1955-57	*31077E
ditto	Later	53290B	Solenoid operating	1948-57	31115A	Solenoid, transmission gear	1955-56	*76505A/B
Reflex reflector (Van)	1955-56	57031D	Knob	1948-57	31082A/E	ditto	1955-56	*76507A
(Pick-up)	1955-56	*57035D	Windshield wiper	1948-57	31113A/D		1957	*76507A
			Knob	1948-57	315121			

§ FUEL INJECTION EQUIPMENT

(20C Diesel Engine 1954-55)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1954	BPE4A60S120S6341EL	Nozzle holder— <i>continued</i>	1955	BKB50S675
" Governor	1955	BPE4A60S120S6342EL	Nozzle	1954	BDN4S1
Nozzle holder	1954-55	BPMZ80A128	"	1955	BDNOSD21
	1954	BKB50S622			
(23CV Diesel Engine 1956-57)					
Fuel pump	1956	DPA3246020	Nozzle	1956-57	BDN4SP6188
"	1957	DPA3246070	Filter	1956-57	F4-1
Nozzle holder	1956-57	BKB40S697	Thermostart	1956-57	285-2A

STANDARD 'Vanguard' Saloon Phase III 1956–60 (Export only in 1959–60): Estate Car Phase III 1957–60: 'Vanguard Sportsman' 1957–58: 'Vignale Vanguard' (Home only) 1959–60

Battery .. .	1956-57	GT9A	Distributor			Fuse box .. .	1956-60	033263
	1958-60	BT9A	Low compression	..	1956	40479A	Generator..	1956-59
" ('Sportsman')	1957	GTW9A-2	" "	..	1959	40479B/D		22258E/H
	1958	BT9A	" "	Later	1959-60	40479E	" (temporary	22700D
Bulb holder, courtesy light	1960	863511	High compression	..	1957-58	40559A	alternative)	1960
Bulb holder, panel light	1960	554734		..	1959-60	40559D/E & F	Horn	*22704A
Bulb		987	" "Sportsman"	..	1957-58	40548B	Low note	1956-60
Coil, ignition	.. .	1956-60	*45054D/M			*35003A	High note	1956-60
Control box	.. .	1956-1959	37182A/H	" "	..	35010A	Horn relay	1956-60
" "	1960	37183L		Later	1956-60			*33116B

* See Supersession Chart

§ Serviced by C.A.V. Ltd.

L.H.D. . . Left hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

STANDARD

STANDARD 'Vanguard' Saloon Phase III 1956-60 (Export only in 1959-60): Estate Car Phase III 1957-60: 'Vanguard Sportsman' 1957-58: 'Vignale Vanguard' (Home only) 1959-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS								
Flasher, front .. .	1959-60	52337A	LAMPS—continued			SWITCHES—continued		
Head, Home R.H.D., dip left .. .	1956	51670B/F	Number plate illumination and reverse Saloon .. .	1956-60	53452A	Windshield wiper .. .	1956-60	31526A
ditto .. .	1957	*58024A/D	" (France) .. .	1957-60	53558A	Knob (black) .. .	1956-60	318476
ditto .. .	1958-60	51901B/E	Estate Car .. .	1957-60	53097E	" (stone) .. .	1956	316695
ditto (alternative)	1958	58041A/F	" ("Sportsman") .. .	1957-58	53606A	Windshield wiper (2-speed, when fitted) .. .	1958-60	31430D/E
Head, Export R.H.D., dip left .. .	1956	51670B/F	Side .. .	1959-60	52391A	Knob .. .	—	318476
ditto .. .	1957	*58024A/D	Side and flasher			Wiper and screenjet ("Sportsman")		
ditto .. .	1958-60	51901B/E	Left hand .. .	1956-58	52262B	Cars 1-260 .. .	1957	*31588A
ditto (alternative)	1958	58041A/E	Right hand .. .	1956-58	52263B	Knob .. .	—	*318495
L.H.D., dip right .. .	1956	*51844A/D	("Sportsman") .. .	1957-58	52312A	Car 261 onward .. .	1957-58	31578A
ditto .. .	1957	*58025A/D	Stop tail, flasher and reflex	1956-57	53407E/H	Knob .. .	—	*313327
ditto .. .	1958-60	*51933A/D	ditto (Saloon) .. .	1958	53639A/B	2-speed wiper (when fitted) .. .	1958	*31710A
ditto (alternative)	1958	58042A/D	ditto (Estate Car) .. .	1958	53407E/H	Knob .. .	—	313062
Head, Export Europe (except countries listed)	1956	*51894A/D	ditto (Australia) .. .	1958	53407E/H	Warning lights		
ditto .. .	1957	*58026A/D	ditto (N.A.D.A.) .. .	1959-60	53762A	Flasher and main beam, bulb holder .. .	1960	54944812
ditto .. .	1958-60	51937A/D	Screenjet .. .	1956-60	077011	Ignition, bulb holder .. .	1960	863511
ditto (alternative)	1958	58043A/D	Tubing, 60" long .. .	—	295229	Bulb .. .	—	987
Head, Export France .. .	1956	51896A/B	Tee piece .. .	—	295091	Oil .. .	1959	38059A
ditto .. .	1957	*58028A/B	Sleeve, Lucas connector			Windshield wipers		
ditto .. .	1958-60	51936A/B	35 amp .. .	1960	54190043	Motor .. .	1956-57	*75200B
ditto (alternative)	1958	58045A/B	Starting motor .. .	1956	25541H	" (2-speed, special orders) .. .	1958-60	75296B
Head, Export Holland ..	1956	51897A/D	ditto (from Engine No. 300437E) .. .	1956-60	25550A	Wheelbox .. .	1956	75309A
Head, Export Switzerland ..	1956	51898A/D	Later .. .	1956-60	25541H	" .. . Later .. .	1956-60	*72682B
ditto .. .	1957	*58029A/D	Steering column control .. .	1956	32960B/E	Crosshead and rack assy, Cut to 42" .. .	1956-60	743235
ditto .. .	1958-60	51938B/D & E	ditto (grey) .. .	1957	32982A	ditto (2-speed motor) .. .	1958-60	744256
ditto (alternative)	1958	58046A/D	ditto (black) .. .	1957-58	32995A	Outer casing		
Head, Export Norway and Sweden .. .	1956	51895A/D	ditto .. .	1959	33539A	Motor to wheelbox .. .	1956-60	743710
ditto .. .	1957	*58027A/D	ditto .. .	1960	33541B	Wheelbox to wheelbox .. .	1956-60	743711
ditto .. .	1958-60	51935A/D	ditto ('Sportsman') .. .	1957-58	32979A	End tube .. .	1956-60	740746
ditto (alternative)	1958	58044A/D	SWITCHES			Ferrule, casing retaining	1956-60	740715
Head, Export U.S.A. and Canada .. .	1956	51899A/D	Choke knob			Arm, left hand drive .. .	1956-57	741837
ditto .. .	1957	*58030A/D	R.H.D. (black) .. .	1956	327737	" right hand drive .. .	1956-57	741836
ditto .. .	1958	51939A/D	(stone) .. .	1956	328655	" left hand .. .	1958-60	741837
ditto .. .	1959-60	58402A/B	L.H.D. (black) .. .	1956	328675	" right hand .. .	1958-60	741836
ditto (alternative)	1958	58047A/D	Dipper .. .	1956-60	31284A/D	Blade .. .	1956	737784
Head, 'Sportsman'			Ignition and starting .. .	1956-60	31543A/E	" .. .	1957	*738735
Home			Lighting .. .	1956-60	31426B/H	" .. .	1958-60	737897
R.H.D., dip left .. .	1957-58	51901A	Knob (black) .. .	1956-60	318475	Laycock de Normanville overdrive equipment (optional)		
Export			(stone) .. .	1956	*318489	Relay .. .	1956-60	33157A/D
R.H.D., dip left .. .	1957-58	51901A	Panel .. .	1956-60	*78302A	Switches		
L.H.D., dip right .. .	1957-58	*51933A/D	Knob .. .	1956	768913	Control .. .	1956-60	31284A
Export Europe (except countries listed)	1957-58	51937A/D	Reverse lamp .. .	1956-60	*31077E	Interrupter .. .	1956-60	31765A
Export France .. .	1957-58	51936A/B	Screenjet (when fitted) .. .	1956-60	31513A	Solenoid, transmission gear .. .	1956-58	*31419A
Export Switzerland .. .	1957-58	51938A/D	Solenoid, starting motor .. .	1956-60	*76411E	Knob .. .	1959-60	31077E
Export Norway and Sweden .. .	1957-58	51935A/D	ditto .. .	1960	*76445A	Panel .. .	1959	*76507A
Export U.S.A. and Canada .. .	1957-58	51939A/D	Later .. .	1960	*76443A	Knob .. .	—	*76500B/E
			ditto (Borg Warner transmission) .. .	1960	31082D/H	Stop lamp .. .	1958-59	
			Stop lamp .. .	1956-60		Windshield wiper .. .	1958-59	
						Knob .. .	—	

STANDARD 'Pennant' 1958-59

Battery .. .	1958-59	BT7A	LAMPS—continued			SWITCHES		
Coil, ignition .. .	1958-59	*45053J	Head, Export Europe (except countries listed)	1958-59	51339B/H	Dipper .. .	1958-59	31284A
Control box .. .	1958-59	37182H	Head, Export France .. .	1958-59	*51341B/E	Flasher .. .	1958-59	31765A
Distributor			Head, Export Switzerland .. .	1958-59	51535D/F	Heater (when fitted) .. .	1958-59	*31419A
High compression .. .	1958-59	40598A/D & E	Head, Export Norway and Sweden .. .	1958-59	*51536B	Knob .. .	—	317531
Low compression .. .	1958	40478A	Head, Export Poland .. .	1959	58038A/B	Ignition .. .	1958	31449B
" .. . Later	1958	40620A	Head, Export U.S.A. .. .	1958-59	51343B/E	" .. .	1959	31543B
" .. .	1959	40620B & D	Head, Export Canada .. .	1958-59	51509A/H	Lighting .. .	1958-59	31444D
Twin carburettor .. .	1959	40611B	Number plate illumination .. .	1958-59	53630A	Knob .. .	—	316129
Flasher unit .. .	1958-59	35010A	Side and flasher .. .	1958-59	52338A	Panel .. .	1959	*31419A
Generator .. .	1958-59	22258E/F	Stop tail, flasher and reflex .. .	1958-59	53596D	Knob .. .	—	317532
Horn .. .	1958-59	*069515	ditto (N.A.D.A.) .. .	1958-59	53694D	Solenoid, starting motor .. .	1959	*76411E
LAMPS			Starting motor .. .	1958-59	25022L	Starting motor .. .	1958	76423A
Head, Home R.H.D., dip left .. .	1958-59	51336B/J	" .. .	1959	25022M	Coupling .. .	—	764428
Head, Export R.H.D., dip left .. .	1958-59	51336B/J	Steering column control .. .	1958-59	33514A/D	Stop lamp .. .	1958-59	31082E
L.H.D., dip right .. .	1958-59	*51337D/E	Contact brush .. .	—	380833	Windshield wiper .. .	1958-59	*31419A
" .. . Later	1959	*51337F/K				Knob .. .	—	317530



Equipment Specification

STANDARD

STANDARD 'Pennant' 1958-59—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Windshield wipers			Windshield wipers—cont'd			Overdrive equipment (optional)—continued		
Motor	1958-59	75296B	Arm, left hand drive	1958-59	745072	Switches		
Wheelbox	1958-59	72686B	Left hand	1958-59	745385	Control	1958-59	31768A/B
Crosshead and rack assy. Cut to 33 $\frac{1}{2}$ "	1958-59	743221	Right hand	1958-59	745384	Isolator	1958-59	31504B
Outer casing			Arm, right hand drive	1958-59	745071	Solenoid, transmission gear	1958-59	*76505B
Motor to wheelbox	1958-59	744249	Left hand	1958	741543	Newton Bennet clutch (optional)		
Wheelbox to wheelbox	1958-59	744280	Right hand	1958	*737682	Relay	1959	33192A
End tube	1958-59	740746	Blade	1959		Switch		
Ferrule, casing retaining	1958-59	740715	Overdrive equipment (optional)			Choke	1959	31787A
			Relay	1958-59	33157D			

STANDARD 'Ensign' 1958-60

Battery	1958-60	BT9A	LAMPS—continued			SWITCHES—continued		
Bulb holder, panel light	1960	554734	Head, Export Norway and Sweden	1958-60	58131A/D	Solenoid, starting motor ditto	1958-60	*76411E
Bulb	—	987	ditto (C.P., alternative)	1958	58139A	ditto (Borg Warner transmission)	1960	*76445A
Coil, ignition	1958-60	*45053J/M	Head, Export U.S.A.	1958	58134A	Stop lamp	1958-60	*76443A
Control box	1958-59	37182H	ditto (C.P., alternative)	1958	58189A	Windshield wiper	1958-60	31082E/H
.. . . .	1960	37183L	ditto	1959-60	58240A/B	Knob	—	31252A
Distributor	1958-59	40588A	Number plate illumination	1958-60	53630A	Warning lights		318476
(76 mm. Engine)	1960	40588B/D & E	Side and flasher	1958-60	52338A	Flasher and main beam, bulb holder	1960	54944812
(85 mm. Engine)	1958	40559A	Stop tail, flasher and reflex	1958	53639A/B	Ignition and oil, bulb holder	1960	863511
" Later	1958-59	40559B/E	ditto	1959-60	53762A	Bulb	—	987
Flasher unit	1958-60	40559F	(N.A.D.A.)	1959-60	53769A	Windshield wipers		
Fuse box	1958-60	35010A	Screenjet (optional)	1958-60	077011	Motor	1958-60	75296B
Generator	1958-59	033263	Tubing, 60" long	—	295229	Wheelbox	1958-60	72685E
.. . . .	1960	22258E/F	Tee piece	—	295091	Crosshead and rack assy. Cut to 42 $\frac{1}{2}$ "	1958-60	*743236
" (temporary alternative)	1960	22700D	Sleeve, Lucas connector 35 amp.	1960	54190043	Outer casing		
Horn	1959-60	*22704A	Starting motor	1958-60	25550A	Motor to wheelbox	1958-60	743710
LAMPS			ditto (Borg Warner transmission)	1959-60	25541H	Wheelbox to wheelbox	1958-60	743711
Head, Home			Steering column control	1958	32995A	End tube	1958-60	740746
R.H.D., dip left	1958-60	58128B/E	" " "	1959	33539A	Ferrule, casing retaining	1958-60	740715
dito (C.P., alternative)	1958	51670D	1960	33541B	Arm	1958	741836	
Head, Export			SWITCHES			" left hand	1959-60	741837
R.H.D., dip left	1958-60	58128B/E	Dipper	1958-60	31284A/D	" right hand	1959-60	741836
dito (C.P., alternative)	1958	51670D	Ignition and starting	1958-60	31543B/E	Blade	1958-60	737897
L.H.D., dip right	1958-60	58129A/D	Lighting	1958-60	31426E/H	Overdrive equipment (optional)		
dito (C.P., alternative)	1958	*51844A	Knob	—	318475	Relay	1959-60	33157D
Head, Export Europe (except countries listed)	1958-60	58130A/D	Panel light	1958-60	*78302A	Switches		
dito (C.P., alternative)	1958	*51894A	Knob	—	768913	Control	1959-60	*31572A
Head, Export France	1958-60	58132A/B	Reverse lamp	1959-60	*31077E	Interrupter	1959-60	*31077E
dito (C.P., alternative)	1958	51896A	Screenjet (when fitted)	1959-60	31513A	Solenoid, transmission gear	1959-60	*76507A
Head, Export Switzerland	1958-60	58133A/D						
dito (C.P., alternative)	1958	51898A						

STANDARD 'Atlas' 10/12 cwt. Forward Control Van and Pick-up Truck 1959-60

Battery	1959-60	BT7A	LAMPS—continued			Windshield wipers		
Bulb holder, panel light	1960	554734	Side	1959-60	52421A	Motor	1959-60	75359A
Bulb	—	987	Stop tail and reflex	1959	53520B	Wheelbox	1959-60	72720A
Coil, ignition	1959-60	*45053K/M	" Later	1959-60	†53520D	Crosshead and rack assy. Cut to 44 $\frac{1}{2}$ "	1959-60	743235
Control box	1959	37182H	Sleeve, Lucas connector 14 amp.	1960	54190042	Outer casing		
.. . . .	1960	37290D/E	Starting motor	1959	25022M	Motor to wheelbox	1959-60	54710706
Distributor	1959	40622B	Steering column control	1960	25022N/Q	Left hand drive	1959-60	54710707
.. . . .	1960	40622D & E		1959-60	33522B	Right hand drive	1959-60	745713
Flasher unit	1959-60	35010A	SWITCHES			Wheelbox to wheelbox	1959-60	740746
Generator	1959	22258F	Dipper	1959-60	31284A/D	End tube	1959-60	740715
.. . . .	1960	22700D	Heater	1959-60	31444D	Ferrule, casing retaining	1959-60	740715
" (temporary alternative)	1960	*22704A	Knob	—	54330885	Arm, left hand	1959	*54710231
Horn	1959-60	*069515	Ignition	1959-60	*31276B	" right hand	1960	54711541
LAMPS			Lighting	1959	*31420A	Blade	1959	54710230
Flasher, front	1959-60	52337A	Knob	1960	54331190	Overdrive equipment (optional)		54711540
Flasher, rear	1959-60	53773A	Starting motor	1959-60	76423A	Relay	1959-60	33157D
Head, Home			Knob	—	764467	Switches		
R.H.D., dip left	1959-60	51336B/J	Stop lamp	1959-60	31082H	Control	1959	*31572A
Head, Export			Windshield wiper	1959-60	*31419A	Interrupter or isolator	1960	*31419A
R.H.D., dip left	1959-60	51336B/J	Knob	—	54331189	Solenoid, transmission gear	1959	*76507A
L.H.D., dip right	1959-60	*51337F/K	Warning lights			ditto	1960	*76506B
Head, Export Europe (except countries listed)	1959-60	51339B/H	Flasher	1959-60	38179A			
Head, Export France	1959-60	*51341B/F	Ignition and oil, bulb holder	1960	38102A			
Head, Export Switzerland	1959-60	51535E/F	Bulb	—	863511			
Head, Export Norway and Sweden	1959-60	51536B			987			
Head, Export Poland	1959	58038A/B						
Head, Export U.S.A.	1959-60	51343B/E						
Number plate illumination	1959-60	53630A						

* See Supersession Chart
C.P. .. Chromium plated

† From 1st April 1959
L.H.D. .. Left hand drive

N.A.D.A. .. North American Dollar Area
R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

SUNBEAM

SUNBEAM 'Alpine' 1953-55: 'Alpine Special' 1955: Saloon Mk. III 1955-57: Coupé 1955

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery .. .	1953-56	GT9A	LAMPS—continued			SWITCHES—continued		
" .. .	1957	GTW9A-2	Side and flasher .. Later	1955-57	52240A/B	Windshield wiper ..	1953-54	*31261A
Coil, ignition ('Alpine') .. .	1953-55	*45046B	Stop tail and reverse ..	1953-54	53175B	Knob (ivory) ..	—	315061
(Saloon and Coupé) .. .	1955-56	*45012B	Stop tail ..	1955-57	53226A/D	" (black) ..	—	315069
(Saloon) .. .	1957	*45054H	Stop tail and flasher(U.S.A.)	1953-54	53174B	Windshield wiper ..	1955-57	*31297B
Control box .. .	1953-54	*37076E	Mirror ('Alpine') ..	1953-54	062577	Knob (ivory) ..	1955-57	318169
" .. .	1955-56	*37139E	ditto (left hand) ..	1955	*580736	" (black) ..	1955	*316630
" .. .	1957	37183H	ditto (right hand) ..	1955	*580733	Trafficators .. .	1953	*54041A
Distributor .. .	1953	*40380A	Reflex reflector ..	1953-54	65424A	" .. . Later	1953-54	54044A/D
" .. .	Later	*40396A/D	" .. .	1955-56	*57048A/B	Warning lights		
" .. .	1955-56	*40430A/B	" .. .	1957	*65441A	Flasher ..	1953-54	*38092A
" .. .	Later	40491A	Starting motor ..	1953-57	25521B/D	" .. .	1955-57	38119A
" .. .	1955	*40425B	Steering column control ..	1953	32832B	Ignition ..	1953-54	*318534
Flasher unit .. .	1953-57	*35003A	ditto ..	1954	32832D/E	" .. .	1955	318604
Flasher relay .. .	1953-57	33117A	ditto (ivory) ..	1955-57	32920A/D	Main beam ..	1953-54	*38069A
Generator .. .	1953-54	*22456A/B	ditto (black) ..	1955	32921A/D	" .. .	1955-57	38118A
" .. .	1955-57	*22483A	ditto (ivory, with overdrive) ..	1955-57	32944A/D	Windshield wipers		
Horn .. .			ditto (black, with overdrive) ..	1955	32945A/D	Motor ..	1953-54	75152A
Low note .. .	1953-54	*69011F	ditto (ivory, 'Special') ..	1955	32931A	" (left hand drive) ..	1955-57	*75232A
" .. .	1955-57	69046A/E	ditto (black, 'Special') ..	1955	32932A	" (right hand drive) ..	1955-57	*75246A
High note .. .	1953-54	*69012F				Wheelbox ..	1953-54	72629A/D
" .. .	1955-57	69047A/E				" .. .	1955-57	72664A
Junction box .. .	1953-57	78266A				Crosshead and rack assy.		
LAMPS						Cut to 50 $\frac{1}{2}$ " ..	1953-54	738499
Head, Home .. .						" 43 $\frac{1}{2}$ " ..	1955-57	741264
R.H.D., dip left .. .	1953	51336A	SWITCHES			Outer casing		
ditto .. .	1954-55	51546A	Air control knob ..	1953-54	325349	Motor to wheelbox ..	1953-54	739858
ditto .. .	1956-57	51736B	Dipper ..	1955-57	31284A	" .. .	1955-57	745065
ditto (alternative) .. .	1956-57	51742B	Foglamp ..	1953-54	31201B	Wheelbox to wheelbox ..	1953-54	739932
Head, Export .. .			Heater or fan ..	1953-54	*78232A	" .. .	1955-57	745066
R.H.D., dip left .. .	1953	51336A	Knob ..	—	768522	End tube ..	1953-54	740031
ditto .. .	1954-55	51546A	Ignition and lighting ..			" .. .	1955-57	740746
ditto .. .	1956-57	51736B	Black ..	1953-55	*34084A	Ferrule, casing retaining ..	1955-57	740715
ditto (alternative) .. .	1956-57	51742B	Ivory ..	1953-57	*34066A	Arm, left hand drive ..	1953-54	*737588
L.H.D., dip right .. .	1953-54	*51337A	Panel (black) ..	1953-54	*31204A	" .. .	1955-57	745076
" .. .	1955	*51337B	" (ivory) ..	1953-54	*31118A	" .. .	1953-54	*737428
" .. .	1956-57	*51337D/E	" .. .	1955	31201D	Blade ..	1953	745077
Head, Export Europe (not France) .. .	1953-55	51339A	Knob (ivory) ..	1955-57	*31538A	" .. .	1953-57	738719
ditto .. .	1956-57	51738B	" (black) ..	1955	*318386	Blade .. .	1953-57	738724
Head, Export France .. .	1953-55	*51341A	Reverse lamp ..	1957	31281B	Laycock de Normanville overdrive equipment (optional)		
" .. .	1956-57	51739B	Solenoid, starting motor ..	1953-57	*76411D	Relay ..	1955-57	33157A/D
Head, Export U.S.A. .. .	1953-55	51343A	Solenoid operating ..			Switches		
" .. .	1956-57	51741B	Black ..	1953-55	*31394B	Interrupter ..	1955-57	31478A
Interior (Saloon) .. .	1955-57	56046A	Ivory ..	1953-57	31141B	Cover ..	1957	303046
(Coupé) .. .	1955	56047A	Stop lamp ..	1955-56	31281B	Solenoid ..	1955-57	*76505A/B
Number plate illumination .. .	1953-54	53277A	Spring (when fitted) ..	—	*315714			
Number plate illumination and reverse .. .	1955-57	53376E	Stop lamp ..	1956-57	31082E			
Side .. .	1953-54	52139E	Ventilator control knob ..	1953-54	325721			
" (U.S.A.) .. .	1953-55	*52162B	Water valve control knob ..	1953-54	325347			

SUNBEAM 'Alpine' Sports 1959-60

Ammeter .. .	1959-60	36254A	LAMPS—continued		56010A	Windshield wipers		
Battery (Home) .. .	1959-60	BT7A	Map reading ..	1959-60	56010A	Motor, left hand drive ..	1959-60	75393A
" .. .	Later	BT9A	Number plate illumination ..	1959-60	53278B	" .. .	1959-60	75392A
" .. .	1960	BT9A	Side and flasher ..	1959-60	52403B	Wheelbox ..	1959-60	72732A
Coil, ignition .. .	1959-60	45102A/E	Stop tail and flasher ..	1959-60	53779A/B	Crosshead and rack assy. (R.H.D.) Cut to 29 $\frac{1}{2}$ " (L.H.D.) " 35 $\frac{1}{2}$ "	1959-60	744254
Control box .. .	1959	37290A/B	ditto (U.S.A.) ..	1959-60	53801A	Outer casing ..	1959-60	744254
Distributor .. .	1959-60	40683A/B	Relay, horn ..	1959-60	32029A/B	Motor to wheelbox ..		
Flasher unit .. .	1959-60	35011A	Starting motor ..	1959	25022M	Left hand drive ..	1959-60	54710952
Fuse box .. .	1959	033282	Steering column control ..	1959-60	33544B	Right hand drive ..	1959-60	54711648
" .. .	1960	033283	SWITCHES			Wheelbox to wheelbox ..		
Generator .. .	1959-60	22700D	Dipper ..	1959-60	31800A	Left hand drive ..	1959-60	54710952
" .. .	(temporary alternative) 1959-60	*22704A	Flasher ..	1959-60	31907B/D	Right hand drive ..	1959-60	54711648
Horn .. .			Foglamp (when fitted) ..	1959-60	31947A	Left hand drive ..	1959-60	54710952
Low note .. .	1959-60	69046F	Escutcheon plate ..	—	54850085	Right hand drive ..	1959-60	54711648
High note .. .	1959-60	69047F	Ignition and starting ..	1959-60	31947A	End tube ..	1959-60	740746
LAMPS			Lighting ..	1959-60	31946A	Arm, left hand drive ..	1959	*744139
Head, Home .. .			Map light ..	1959-60	31947A	" .. .	1960	54711553
R.H.D., dip left .. .	1959-60	58403B/D	Escutcheon plate ..	—	54850086	" .. .	1960	54711552
Head, Export .. .			Panel light ..	1959-60	31947A	Blade .. .	1959-60	54711281
R.H.D., dip left .. .	1959-60	58403B/D	Escutcheon plate ..	—	54850082	Laycock de Normanville overdrive equipment (optional)		
Head, Export Europe (except France & Sweden) .. .	1959-60	58406A/B	Reverse lamp ..	1959-60	31849A	Relay ..	1959-60	33213B
Head, Export France .. .	1959-60	58405A/B	Solenoid, starting motor ..	1959-60	*76465A	Switches		
Head, Export Sweden .. .	1960	58655A/B	Stop lamp ..	1959	31802B	Interrupter ..	1959-60	31849A
Head, Export U.S.A. .. .	1959	58407A/B	Windshield wiper ..	1959-60	31947A	Overdrive ..	1959-60	31925A/D
" .. .	1960	58549A	Escutcheon plate ..	—	54850084	Solenoid ..	1959-60	76522A

* See Supersession Chart

L.H.D. .. Left hand drive R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

SUNBEAM—SUNBEAM-TALBOT

SUNBEAM 'Rapier' 1956-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter (Series II optional)	1959	*36255A	LAMPS—continued	1956-57	53465B/E	SWITCHES—continued		
(Series III)	1959-60	36259A	Stop tail and flasher	Later	53539A/D	Windshield wiper	1959-60	31870A
Battery	1956-58	GT7A	" " "	1957	53540A/D	(Series III)	54330741
" (temperate zones)	1959-60	BT7A	" " "	1958	*53648A/F	Knob	—
" (cold climates)	1959-60	BT9A	" " "	1958	53695A/B	Warning lights		
Bulb holder, ammeter			" " "	1958-60	53753A/B	Flasher	1956-59	38142A
(Series III)	1959-60	54944812	Reflex reflector (Series III)	1959-60	57123A	" (Series III)	1959-60	38191A
Choke control knob	1956-58	327623	Relay, horn	1956-59	*33116B	Ignition	1956-59	38140A/B
"	1959	54330758	" (Series III)	1959-60	33188A	" (Series III)	1959-60	38189A
Cigar lighter knob	1956-58	316161	Sleeve, Lucar connector			Main beam	1956-59	38141A/D
Coil, ignition	1956-59	*45053D/J	(Series III)			" (Series III)	1959	38190A
" (Series III)	1959-60	45102A/E	14 amp.	1959-60	54190042	1960	54360500	
Control box	1956-59	37182A/H	35 amp.	1959-60	54190043	Oil (Series III)	1959-60	38192A
" (Series III)	1959-60	37290D/E	Starting motor	1956-58	25022A/L	Windshield wipers		
Distributor	(High compression)	1956-58	"	1959	25022M	Motor left hand drive	1956-57	*75235A
	1959	40490A/B	"	1960	25022N/Q	" "	1958	75310A
(Low compression)	1957-59	40490D	Steering column control	1956-57	*32963A	" right hand drive	1959-60	75310B
(Series III)	1959-60	40552A/B & D	ditto	1958-59	33502A	1956-57	*75236A	
Flasher unit	1956	40683A/B	ditto (Series III)	1959-60	33544B	1958	75311A	
"	1957-60	*35004A	SWITCHES			" "	1959-60	75311B
Fuse box	1956-57	35011A	Dipper	1956-59	31284A	Wheelbox	1956-60	72673A/B
"	1958-59	033239	" (Series III)	1959-60	31800A	Crosshead and rack assy.		
" (Series III)	1959-60	033277	Cap, rubber	1959-60	54331425	Cut to 46" "	1956-57	741264
Generator	1956	033283	Flasher	1956-57	*31560A	" 43" "	1958-60	744256
" (Series III)	1959-60	22258D	" (L.H.D.)	1957	*31621A	Outer casing		
ditto (temporary alternative)	1959-60	22700D	" (R.H.D.)	1958-59	31732A	Motor to wheelbox	1956-60	743517
Horn		*22704A	" (U.S.A.)	1958-59	31731A	Wheelbox to wheelbox	1956-60	743706
Low note	1956-59	69046A/F	" (Series III)	1959-60	31733A	End tube	1956-60	740746
" (Series III)	1959-60	69091A	ditto (R.H.D. when overdrive fitted)	1959-60	31979A	Arm, left hand drive	1956-57	745072
High note	1956-59	69047A/F	Ignition and starting	1956-58	31980A	ditto	1957-59	741845
" (Series III)	1959-60	69092A	ditto	1959	31501A/B	Arm, right hand drive	1956-57	745071
LAMPS			ditto (Series III)	1959-60	31637A	ditto	1957-59	741844
Head, Home R.H.D., dip left	1956-57	51794B/H	Lighting	1956	*31126B	Blade	1956-57	738735
"	1958-60	58107A/E	"	1957-59	*31200E	" (Series III)	1957-59	737897
Head, Export L.H.D., dip right	1956	51795B/F	Knob	1956	31995A	1959-60	54711535	
Head, Export Europe (not France)	1957	51942A/B	"	1956-58	*316160	Blade	1959-60	54711534
ditto (except France & Sweden) Later	1958-59	58139B/D	Panel (Series III)	1959-60	31869A	Switches		
	1959-60	58361A	Knob	—	54332509	Control, L.H.D. (Series III)	1959-60	31992A
Head, Export France	1956-57	51796A/B	Reverse lamp (when fitted)	1956-58	31281B	Position indicator	—	54332423
"	1958-59	58140B	Solenoid, starting motor	1956-59	*31077E	Control, R.H.D. (Series III)	1959-60	31983A
"	Later	58362B	ditto (Series III)	1959-60	*76411E	Position indicator	—	54332407
Head, Export Sweden	1960	58080A	Terminal cover	1956-57	*76465A	Inhibitor	1956-58	31478A
Head, Export U.S.A.	1956-57	51797B/E	Stop lamp	1956-59	238576	" (Series III)	1959-60	*31077E
ditto (Series III) Later	1958-59	58141B	Cap	—	31082D/E	Cover	1956-58	31542A
Number plate illumination	1956-60	58491A	Stop lamp (Series III)	1959-60	316072	Solenoid, transmission gear	1956-58	303046
Side and flasher	1956	52236A	Windshield wiper	1956	*31297B	ditto	1959	*765350
"	1957-60	*52333B/D	"	1957	*31602A	ditto	1959	76516B
			Knob	1958-59	*31668A	ditto	1960	76522A
			"	1956-58	318178	Windshield wipers—cont'd		
			"	1959	54330757	Bracket, with shaft and coupling	1946-47	*735628

SUNBEAM-TALBOT 10 h.p. 1946-47

Battery	1946-47	SG9A	Steering column control	1946-47	*32740A	Windshield wipers	
Coil, ignition	1946-47	*45012B	SWITCHES			Bracket, with shaft and coupling	1946-47
Control box	1946-47	*37031B	Ignition and lighting	1946-47	*344887	737243
Distributor	1946-47	40054A/E	Reverse lamp	1946-47	*315507	Shaft, short	1946-47
Generator	1946-47	22449A	Solenoid, starting motor	1946-47	76022B	Coupling	1946-47
Horn				Solenoid operating	1946-47	*317063	Link	1946-47
Low note	1946-47	*69021A	Stop lamp	1946-47	31281B	Grommet, housing	1946-47
High note	1946-47	*69022A	Spring	—	315543	" scuttle	1946-47
LAMPS				Trafficators	1946-47	*539735	Arm	1946-47
Head, Home R.H.D., dip left (L.H.)	1946-47	*50174A					Blade	1946-47
" non-dip (R.H.)	1946-47	*50175A						727759
Reverse tail and number plate	1946-47	53032B	Warning light (ignition)	1946	*318526	Windshield wipers (Tourer)	
Roof	1946-47	*540092	" " " Later	1946-47	*38030B	Motor
Side	1946-47	*52026A	Windshield wipers (Saloon and Coupé)			Coupling bar	1946-47
Stop tail and number plate	1946-47	*53027B	Motor			Bearing, passenger side	1946-47
Mirror	1946-47	*621601	Clutch housing	1946-47	†75066A	Arm, left hand	1946-47
Starting motor	1946	*250231			737357	" right hand	1946-47
"	Later	1946-47	*250603				Blade	1946-47

* See Supersession Chart
L.H.D. .. Left hand drive

† No longer available—refer to Wiper Conversion Set Section
R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)

L.H. .. Left hand R.H. .. Right hand



Equipment Specification

SUNBEAM-TALBOT

SUNBEAM-TALBOT 2 litre 1946-47

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery .. .	1946-47	SG9A	LAMPS—continued			SWITCHES—continued		
Coil, ignition .. .	1946-47	*45012A/B	Head, Export France ..	1947	50675E	Solenoid, starting motor	1946-47	76022B
Control box .. .	1946-47	*37032A	Reverse, tail and number plate .. .	1946-47	53032B	Solenoid operating ..	1946-47	*317063
Distributor .. .	1946	40061A/D & E	Roof .. .	1946-47	*56027D	Stop lamp .. .	1946-47	31281B
" .. .	1947	40114A/B	Side .. .	1946-47	*52068A	Spring .. .	—	315543
Fuse box .. .	1947	*385221	Stop tail and number plate .. .	1946-47	*53027B	Trafficators .. .	1946-47	*539735
" (cigar lighter) .. .	1947	*385184	Stop tail and reverse .. .	1947	*53092B	Warning light (ignition) ..	1946-47	318604
Generator .. .	1946-47	*22446A	Mirror .. .	1946-47	*621601	Windshield wipers		
Horn .. .			Starting motor .. .	1946-47	*255378	Motor .. .	1946-47	†75066A
Low note .. .	1946-47	*69019A	Steering column control .. .			Clutch housing .. .	1946-47	737357
High note .. .	1946-47	*69020A	Home .. .	1946	32713A	Bracket, with shaft and coupling .. .	1946-47	*735628
LAMPS			Export .. .	1947	*32740A	Shaft, short .. .	1946-47	737243
Head, Home R.H.D., dip left (L.H.) .. .	1946-47	*50174A	SWITCHES			Coupling .. .	1946-47	729036/S
" non-dip (R.H.) .. .	1946-47	*50175A	Foglamp .. .	1946-47	*314442	Link .. .	1946-47	733817
Head, Export R.H.D., dip left .. .	1947	50794B	Ignition and lighting .. .	1946-47	*344887	Grommet, housing .. .	1946-47	729313
Vertical dip (L.H.) .. .	1946-47	50507A	Reverse lamp .. .	1946-47	*31077D	" scuttle .. .	1946-47	729378
" (R.H.) .. .	1946-47	*50508A	Roof lamp .. .	1946-47	359357	Arm .. .	1946-47	*735076
						Blade .. .	1946-47	727759

SUNBEAM-TALBOT '80' 1948-50

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery .. .	1948-50	GT9A	LAMPS—continued			SWITCHES—continued		
Coil, ignition .. .	1948-50	*45012A/B	Roof .. .	1948-50	*56027D	Windshield wiper .. .	1948-50	*31108A
Control box .. .	1948-49	37057E	Side (U.S.A.) .. .	1948-50	52134B	Knob .. .	—	315061
" .. .	1950	*37076E	Stop tail and reverse .. .	1948-50	*53092B	Trafficators .. .	1948-49	*54010A
Distributor .. .	1948-50	40123A/D	Mirror .. .	1948-50	*62021A	" .. .	1950	*54035A
Generator .. .	1948-50	*22411A	Starting motor .. .	1948-49	25016A	Warning lights		
Horn .. .			" .. . Later	1949-50	25022A/L	Ignition .. .	1948-50	*318534
Low note .. .	1948-50	*69021A	Steering column control .. .	1948	*32740A	Main beam .. .	1950	38052A
High note .. .	1948-50	*69022A	" .. .	1949-50	32796B	Windshield wipers		
Junction box .. .	1948-50	78266A	SWITCHES			Motor .. .	1948-50	*75055K
LAMPS			Foglamp .. .	1948-50	*31119A	Wheelbox .. .	1948-50	*72548A/K
Fog .. .	1948-50	55043E	Heater or fan .. .	1948-50	*78232A	Crosshead and rack assy. Cut to 50 $\frac{1}{2}$ " .. .	1948-50	738499
Head, Home R.H.D., dip left (L.H.) .. .	1948-50	50794B	Knob .. .	—	768522	Outer casing		
" non-dip (R.H.) .. .	1948-50	*50444D	Ignition and lighting .. .	1948-50	*34034B	Motor to wheelbox .. .	1948-50	739858
Head, Export R.H.D., dip left .. .	1948-50	50794B	Panel .. .	1948-50	*31118A	Wheelbox to wheelbox .. .	1948-50	739932
Head, Export France .. .	1948-50	50675E	Roof lamp .. .	1948-50	31120B	End tube .. .	1948-50	740031
Head, Export U.S.A. .. .	1948-50	50812A	Solenoid, starting motor ditto .. . Later	1949-50	*76411D	Arm, left hand .. .	1948-50	*737588
Number plate illumination .. .	1948-50	*53104B	Solenoid operating .. .	1948	31141B	" right hand .. .	1948-50	*737428
ditto (Export) .. .	1948-50	*53112B	Stop lamp .. .	1948-50	31281B	Blade .. .	1948-49	*737433
			Spring .. .	—	315543	" .. . Later	1949-50	*738719

SUNBEAM-TALBOT '90' 1948-54

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery .. .	1948-54	GT9A	LAMPS			LAMPS—continued		
Coil, ignition .. .	1948-54	*45012A/D	Clock illumination .. .	1951-52	56041A	L.H.D., dip right .. .	1948-49	A50794B
Control box .. .	1948-49	37065E	Head, Home R.H.D., dip left (L.H.) .. .	1948-50	50794B	" .. .	1950-51	*A50445K
" .. .	1950-54	*37076E	" non-dip (R.H.) .. .	1948-50	*50444D	" .. .	1951-52	*50804D
Distributor .. .	1948-50	40114A/B	" dip left (L.H.) .. .	1951	*50445K	" .. .	1953	50973A
" .. .	1951	40217A	" non-dip (R.H.) .. .	1951	*50446K	" .. .	1953-54	*51337A
" .. .	Later	40217B/E	" dip left .. .	1951	(L.H. and R.H.) .. .	Later	1948-49	Head, Export Europe (not France) .. .
" .. .	1951-53	40377A	ditto .. .	1952	*50954A	ditto .. .	1950-51	*B50794B
" .. .	1953-54	*40396A/D	ditto .. .	1953	*51010A	ditto .. .	1951-52	*B50445K
" .. .	1954	*35003A	ditto .. .	1953	50941A	ditto .. .	1953	*50963A
Flasher unit .. .	1953-54	33117A	ditto .. .	1954	51336A	ditto .. .	1953-54	50967A
Flasher relay .. .	1953-54	33117A	Head, Export R.H.D., dip left .. .	1948-50	*51546A	Head, Export France .. .	1948-49	51339A
Generator .. .	1948-49	*22446A	ditto .. .	1952	50794B	ditto .. .	1950-51	50675E
" .. .	1950-53	*22435A/B	ditto .. .	1953	*50445K	ditto .. .	1951-52	*50790E
" .. .	1953-54	*22456A/B	ditto .. .	1954	*50954A	ditto .. .	1953	*50962A
Horn .. .			Head, Export R.H.D., dip left .. .	1948-50	*51010A	Head, Export U.S.A. .. .	1948-50	51341A
Low note .. .	1948-50	*69021A	ditto .. .	1951	*50954A	" .. .	1951-53	50812A
" .. .	1951-54	*69011F	ditto .. .	1952	*51010A	" .. .	1953-54	50811A
High note .. .	1948-50	*69022A	ditto .. .	1953	*50941A	" .. .	1954	51343A
" .. .	1951-54	*69012F	ditto .. .	1953-54	51336A	Map reading .. .	1951-52	56047A
Junction box .. .	1948-54	78266A	ditto .. .	1954	51546A			

* See Supersession Chart

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

SUNBEAM-TALBOT-TORNADO

SUNBEAM-TALBOT '90' 1948-54—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS—continued			SWITCHES			Trafficators		
Number plate illumination	1948-53	*53104B	Air control knob	1951-54	325349	" ..	1948-49	*54010A
ditto .. Later	1953-54	*53276A	Demister control knob	1951-54	325348	" ..	1950-51	*54035A
ditto (Export) ..	1948-53	*53112B	Foglamp ..	1948-50	*31119A	" ..	1952-53	*54041A
ditto .. Later	1953-54	53277A	Heater or fan ..	1948-54	*78232A	" ..	1953-54	54044A/D
Pass	1948-49	55043E	Knob ..	—	768522			
Roof	1948-49	*56027D	Ignition and lighting ..	1948-50	*34084A	Warning lights		
" ..	1950	56046A	Panel (ivory) ..	1951-54	*34066A	Flasher ..	1951-53	*38069A
" (Coupe) ..	1951-52	56048A	(black) ..	1948-54	*31118A	..	1954	38053B
" (Saloon)	1951-54	56046A	Roof lamp ..	1948-54	*31024A	Ignition ..	1948-54	*31853A
Side	1951-54	52139E	Solenoid, starting motor	1948-49	76022B	Main beam ..	1950	38052A
" (U.S.A.) ..	1948-50	52134A/B	Solenoid operating ..	1950-54	*76411D	" ..	1951-54	*38069A
Stop tail ..	1953-54	*52162B/D	Ivory ..	1948-54	31141B	Windshield wipers		
Stop tail .. (U.S.A.)	1950	53174B	Black ..	1953-54	*31394A	Motor ..	1948-51	*75055K
Stop tail and reverse ..	1954	53183B	Stop lamp ..	1948-52	31281B	Wheelbox ..	1948-54	*72548A/K
Stop tail and reverse ..	1948-49	*53092B	Spring ..	1948-50	315543	Crosshead and rack assy.		
Tail and flasher (U.S.A.)	1951-54	53175B	Ventilator control knob	1951-52	*315714	Cut to 50° ..	1948-54	738499
Mirror ..	1948-50	53174B	Water valve control knob	1951-54	325721	Outer casing		
Reflex reflector ..	1950	65424B	Windshield wiper ..	1948-50	*31108A	Motor to wheelbox ..	1948-54	739858
Starting motor ..	1948-49	*255378	Knob ..	—	315061	Wheelbox to wheelbox ..	1948-54	739932
Steering column control ..	1950-54	25521B/D	Windshield wiper ..	1951-54	*31261A	End tube ..	1948-54	740031
Steering column control ..	1948	*32740A	Knob (ivory) ..	—	315061	Arm, left hand ..	1948-54	*737588
ditto ..	1949-50	32796B	Knob (black) ..	—	315069	" right hand ..	1948-54	*737428
ditto ..	1951-53	32832B				Blade ..	1948-49	*737433
ditto (ivory) ..	1954	32906A				" ..	1949-53	*738719
ditto (black) ..	1954	32885A				Later	1953-54	738724

SWALLOW COACHBUILDING 'Doretti' 1954-55

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter ..	1954-55	36174A	LAMPS—continued			SWITCHES—continued		
Battery ..	1954-55	GT9A	Head, Export U.S.A. and Canada ..	1954-55	51533A	Stop lamp ..	1954-55	31082B
Coil, ignition ..	1954-55	*45012A/D	Number plate illumination ..	1954-55	53093E	Windshield wiper ..	1954-55	*31389A
Control box ..	1954-55	*37138B	Side ..	1954-55	*52162D	Knob ..	—	317530
Distributor ..	1954-55	*40365A/D	Stop tail ..	1954-55	53178D	Warning lights		
Flasher unit ..	1954-55	*35003A	Starting motor ..	1954-55	25541D	Flasher ..	1954-55	38068A
Flasher relay ..	1954-55	33117A	Steering column control ..	1954-55	32933A	Ignition ..	1954-55	38059A
Fuse box ..	1954-55	033240	SWITCHES			Windshield wipers		
Generator ..	1954-55	22258D	Dipper ..	1954-55	31284A	Motor ..	1954-55	75150A
Horn ..			Ignition ..	1954-55	31403A	Wheelbox ..	1954-55	72629A/D
Low note ..	1954-55	*69011F/J	Lighting ..	1954-55	*31251A	Crosshead and rack assy.		
High note ..	1954-55	*69012F/J	Knob ..	—	316129	Cut to 29° ..	1954-55	738764
Horn relay ..	1954-55	33135A	Panel ..	1954-55	*31419A	Outer casing		
LAMPS			Knob ..	—	317532	Motor to wheelbox ..	1954-55	739833
Head, Home R.H.D., dip left ..	1954-55	51538A	Solenoid, starting motor ..	1954-55	*76411D	Wheelbox to wheelbox ..	1954-55	*739971
Head, Export R.H.D., dip left ..	1954-55	51538A	Solenoid operating ..	1954-55	31253A	End tube ..	1954-55	740031
			Knob ..	—	326345	Arm, left hand ..	1954-55	742145
						" right hand ..	1954-55	742144
						Blade ..	1954-55	738724

TIPPEN, FRANK Invalid Carriage 1955-56 and 1960

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery ..	1955-56	SLG11E	LAMPS—continued			SWITCHES—continued		
Flasher unit ..	1955-56	*35005A	Side and flasher ..	1955-56	52244B	Panel light ..	1960	*31851A
" ..	1960	35020A	Stop tail and number plate ..	1955-56	53432B	Stop lamp ..	1960	*31437B
Fuse box ..	1955-56	033283	SWITCHES			Warning lights		
" ..	1960	033283	Dipper ..	1955-56	31561B	Flasher ..	1960	54360193
Horn ..	1955-56	*70092B	1960	31743D	Ignition ..	1960	54360102	
LAMPS			Horn push and dipper ..	1955-56	31438B	Reverse ..	1960	54360192
Flasher, front ..	1960	52337A	1960	31563D	Windshield wipers			
Head ..	1955-56	51769A	Lighting ..	1955-56	*31432A	Motor ..	1955-56	*75121A
Panel ..	1960	52405B	1960	31788B	Arm ..	1955-56	735065	
					Blade ..	1955-56	727803	

TORNADO 'Typhoon' 1959-60 (Special Lucas Kit)

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter ..	1959-60	36123A	SWITCHES			Warning light (ignition) ..	1959-60	54360102
Flasher unit ..	1959-60	35010A	Flasher ..	1959-60	*31635B	Windshield wipers		
Fuse box ..	1959-60	033239	Horn push and dipper ..	1959-60	31262B	Motor ..	1959-60	75297E
Horn ..	1959-60	69046F	Ignition ..	1959-60	31403H	Wheelbox ..	1959-60	72693D
LAMPS			Lighting ..	1959-60	*31251D	Crosshead and rack assy.	1959-60	743235
Flasher, front and rear ..	1959-60	52337A	Knob ..	—	316154	Outer casing		
Head ..	1959-60	51592H	Panel ..	1959-60	*31557A	Motor to wheelbox ..	1959-60	54711270
Number plate illumination ..	1959-60	53093H/J	Knob ..	—	54331172	Wheelbox to wheelbox ..	1959-60	54711271
Stop tail ..	1959-60	53564A/D	Stop lamp ..	1959-60	31281B	End tube ..	1959-60	740746
Reflex reflector ..	1959-60	57052A	Spring ..	—	315543	Arm ..	1959-60	54711536
			Windshield wiper ..	1959-60	*31515A	Blade ..	1959-60	54711281
			Knob ..	—	312865			

* See Supersession Chart

R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

TRIUMPH

TRIUMPH '1800' (18T and 18TR) Saloon and Roadster 1946-48

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1946-48	SG11A	Steering column control			Windshield wipers—cont'd		
Coil, ignition	1946-48	*45012B	Home			Bracket, with shaft and coupling	1946-48	734747
Control box	1946-47	*37031B	Saloon (beige)	1946-48	32714K	Shaft, short	1946-48	737243
" . . . Later	1947-48	*37055A	(grey)	1946-48	32742E	Coupling	1946-48	729036/S
Distributor	1946-48	40074A/F	Roadster (beige)	1946-48	32719H	Link, primary	1946-48	737166
Generator	1946-48	22449A	" (grey)	1946-48	32744E	" secondary	1946-48	737167
Horn			Export			Grommet, housing	1946-48	729313
Low note (Saloon)	1946-48	*69021A	Saloon (beige)	1946-48	32728F	Arm" scuttle	1946-48	729378
" (Roadster)	1946-48	*69019A	" (grey)	1946-48	32743D	Blade	1946-48	*735078
High note (Saloon)	1946-48	*69022A	Roadster (beige)	1946-48	32729A			727759
" (Roadster)	1946-48	*69020A	" (grey)	1946-48	32745E	Windshield wipers (Roadster)		
Junction box (Roadster)	1946-48	78266A	SWITCHES			Motor	1946-48	†75066A
LAMPS			Ignition and lighting	1946-48	*34016B	Clutch housing		
Head, Home			Panel	1946-48	*31067B	With switch	1946-48	737065
R.H.D., dip left (L.H.)	1946-48	50540B	" . . . Later	1948	*31072A	Less switch	1946-48	737066
" non-dip (R.H.)	1946-48	50541B	Reverse lamp	1946-48	*31077D	Centre	1946-48	737266
Head, Export			Solenoid, starting motor	1946-48	76022B	Bracket, with shaft and coupling	1946-48	734476
Vertical dip (L.H.)	1947-48	50542B	Solenoid operating	1946-48	*31066B	Shaft, short	1946-48	737243
" (R.H.)	1947-48	50543B	Trafficators (Saloon)	1946-48	*539731	Coupling	1946-48	729036/S
Number plate illumination (Saloon)	1946-48	*53074B	" (Roadster)	1946-47	*539669	Link, primary	1946-48	737067
(Roadster)	1946-48	*53064A	" . . . Later	1947-48	*539694	" secondary	1946-48	737071
Side	1946-48	*52042A	Warning light (ignition)	1947-48	*318612	Grommet, housing	1946-48	735349
Mirror	1947-48	*62008A	Windshield wipers (Saloon)			Arm" scuttle	1946-48	729378
Starting motor	1946-48	*255986	Motor	1946-48	†75066A	Blade	1946-48	*735050
			Clutch housing	1946-48	737357			727707

TRIUMPH '2000' Saloon and Roadster 1949

Battery	1949	SG11A	Starting motor	1949	25526J	Windshield wipers—cont'd		
Coil, ignition	1949	*45012B	Steering column control	1949	32805E	Link, primary	1949	737166
Control box	1949	37065E	ditto . . . Later	1949	32806E	" secondary	1949	737167
Distributor	1949	*40144A/B & D	SWITCHES			Grommet, housing	1949	729313
" . . . Later	1949	*40201A	Foglamp	1949	31201B	Arm" scuttle	1949	729378
Generator	1949	*22250A	Knob	1949	314026	Blade	1949	*735078
" . . . Later	1949	*22250E/F	Ignition and lighting	1949	*34016B			727759
Horn			Panel	1949		Windshield wipers (Roadster)		
Low note (Saloon)	1949	*69021A	Reverse lamp	1949	*31072A	Motor	1949	†75066A
" (Roadster)	1949	*69019A	Solenoid, starting motor	1949	*31077D	Clutch housing	1949	737357
High note (Saloon)	1949	*69022A	Solenoid operating	1949	*76411D	Centre	1949	737266
" (Roadster)	1949	*69020A	Trafficators (Saloon)	1949	*54018D	Bracket, with shaft and coupling	1949	734476
Junction box	1949	78266A	" (Roadster)	1949	*54023D	Shaft, short	1949	737243
LAMPS			Warning light (ignition)	1949	*318612	Coupling	1949	729036/S
Head, Home			Windshield wipers (Saloon)			Link, primary	1949	737067
R.H.D., dip left (L.H.)	1949	50540B	Motor	1949	†75066A	" secondary	1949	737071
" non-dip (R.H.)	1949	50541B	Clutch housing	1949		Grommet, housing	1949	735349
Head, Export			With switch	1949	*737176	Arm" scuttle	1949	729378
Vertical dip (L.H.)	1949	50542B	Less switch	1949	*737177	Blade	1949	*735050
" (R.H.)	1949	50543B	Bracket, with shaft and coupling	1949	734747			727707
Number plate illumination (Saloon)	1949	*53074B	Shaft, short	1949	737243			
(Roadster)	1949	*53064A	Coupling	1949	729036/S			
Side	1949	*52092A						

TRIUMPH 2-seater Sports 1954: TR2 1955-56: TR3 1956-60

Ammeter	1954-59	36174A	Horn			LAMPS—continued		
"	1960	36264A	Low note	1954-55	*69011F/J	Head, Export Europe (except countries listed)	1954-55	51339A
Battery	1954-57	GT9A	"	1956-60	*69046A/F	ditto	1956-57	51339B/H
"	1958-60	BT9A	High note	1954-55	*69012F/J	ditto	1958	50967A
Bulb holder, panel light	1955-60	39007A	"	1956-60	69047A/F	ditto	1959-60	58265B
Bulb		987	LAMPS			Head, Export France	1954	51341A
Coil, ignition	1954-56	*45012D	Flasher, rear (Holland)	1957	53504A	" " "	1955	51342A
"	1957-59	*45054H/J	" " (N.A.D.A.)	1958-60	52337A	" " "	1956-57	51342B/D
Control box	1954-55	*45102E	Head, Home			" " "	1958	*50966A
"	1956-59	*37138B	R.H.D., dip left	1954-55	51336A	" " "	1959-60	58261A
"	1960	37182A/H	ditto	1956-57	51336B/J	Head, Export Switzerland	1954-57	51535A
"	1960	37283D	ditto (alternative)	1954-57	51546A	ditto	1955-57	51536B
Distributor	1954-56	37290D	ditto	1958	58188A	ditto	1958	58266B
"	Later	1956	ditto	1959-60	58181A	Head, Export Norway and Sweden	1954-55	*51536A/D
"	1957-58	*40403A/D	Head, Export			ditto	1955-57	51536B
"	1959	*40480A	R.H.D., dip left	1954-55	51336A	ditto	1956-60	58264B
"	1960	*40480B/E	ditto	1956-57	51336B/J	Head, Export U.S.A. and Canada	1954-57	51509A/H
"	1960	*40480F	ditto	1954-57	51546A	ditto	1958	50811A
"	1960	40698A	ditto	1958	50941A	ditto	1959-60	58412A
Flasher unit	1954-56	*35003A	ditto	1959-60	58260A/D	Number plate (Holland)	1957	53093H
"	1956-59	35010A	ditto	1956-57	*51337A & B	" "	1958-60	53093H/J
Fuse box	1954-59	033240	ditto	1958	*51337D/E			
Generator	1954-55	22258D	ditto	1959-60	58263B			
"	1956-59	22258E/F	L.H.D., dip right	1954-55				
"	1960	22700D	" " "	1956-57				
" (temporary alternative)	1960	22704A	" " "	1958	50973A			
			" " "	1959-60	58263B			

* See Supersession Chart † No longer available—refer to Wiper Conversion Set Section N.A.D.A. North American Dollar Area
 L.H. Left hand R.H. Right hand L.H.D. Left hand drive R.H.D. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

TRIUMPH

TRIUMPH 2-seater Sports 1954: TR2 1955-56: TR3 1956-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Side and flasher ..	1954	*52162D	SWITCHES—continued	1954-59	*76411D/E	Windshield wipers—cont'd		
" " "	1955-57	52240A/B	Solenoid, starting motor	1960	*76465A	Crosshead and rack assy.		
" " "	1958-60	52338A	ditto .. Later	1960	*76445A	2-speed wiper		
Stop and number plate ..	1955-57	*53398A/B	Solenoid operating	1954-60	31253A/E	Cut to 35 $\frac{1}{2}$ "	1955-56	741263
Stop tail ..	1954	53318A	Knob ..	1954	326345	2-speed wiper		
" (Holland) ..	1957	53330D	Stop lamp ..	1955-60	317379	Cut to 42 $\frac{1}{2}$ "	1958-60	744256
Stop tail and number plate ..	1954	53244B/D	Windshield wiper	1954-59	31082B/E	Outer casing		
ditto (Holland) ..	1955-56	53395A	Knob ..	1954-60	31882A	Motor to wheelbox ..	1954-56	739870
Tail and flasher ..	1955-57	53330D	2-speed, when fitted	1955-57	*31419A	ditto ..	1957-60	744306
Rear reflector ..	1954	65424A	2-speed ..	1958-60	317530	Wheelbox to wheelbox ..	1955-56	745170
Sleeve, Lucas connector ..	1960	54190042	Knob ..	1955-60	*31427A	ditto (2-speed wiper)	1957-60	744307
14 amp. ..	1960	54190043	Windshield wiper	1958-60	31568D/F	ditto (2-speed wiper)	1955-56	745168
35 amp. ..	1960		2-speed ..	1958-60	*318168	End tube ..	1954-56	740031
Starting motor ..	1954	25541D & E	Knob ..	1955-60		" " (2-speed wiper)	1957-60	740746
" " .. Later	1955-59	25541F/H	Warning lights	1956-60	38068A	Ferrule, casing retaining	1955-60	740715
Steering column control ..	1954-60	25550A	Flasher ..	1954-55	*319081	Arm, left hand drive ..	1954	*737808
Fixed ..	1957-60	32903A/B	Ignition ..	1956-60	38065A	" " " " ..	1955-56	742147
Telescopic (alternative) ..		32930A	Main beam ..	1954-55	*319082	" left hand ..	1957	745083
SWITCHES			Bulb .. bulb holder	1958-60	554734	" right hand ..	1958-60	737575
Dipper ..	1954-60	31284A/D	Bulb ..	—	987	" " " " ..	1954	737146
" " .. Later	1960	31800A	Windshield wipers			" right hand ..	1955-56	745082
Heater (when fitted) ..	1955-59	*78262B	Motor ..	1954-56	75150A	Blade ..	1954	741543
Knob ..	1960	768473	" ..	1957	*75200D	" 2-speed wiper ..	1955-56	*741456
Heater ..	1960	78362A	" ..	1958-59	75296B	Blade ..	1955-60	737681
Knob ..	—	54332086	" ..	1960	75371A/B	Overdrive equipment (optional)		
Ignition ..	1954-60	*31449A/E	" (2-speed, alternative)	1955-56	*75199D	Relay ..	1955-60	33157A/D
Lighting ..	1954-56	31444B	" ..	1958-60	75309A/B	Switches ..	Later	33213A
Knob ..	1957-60	*31420A/D	Wheelbox ..	1954-56	72629A/D	Control ..	1955	*31419A
Panel ..	1954-60	316129	" ..	1957-60	72686A/B	Gear lever or interrupter ..	1956-60	*31485A
Panel ..	1954-59	*31419A	" (2-speed wiper)	1955-56	72639D	Solenoid, transmission gear ..	1955-56	*31077E
Knob ..	—	317532	Crosshead and rack assy.	1954	738764	gear ditto ..	1957-60	*76505A
Panel rheostat ..	1960	78359A	Cut to 31 $\frac{1}{2}$ " ..	1955-56	736177			*76507A
Knob ..	—	54332327	" 34 $\frac{1}{2}$ " ..	1957-60	743235			
Reverse lamp ..	1954	*31077D	" 38 $\frac{1}{2}$ " ..					

TRIUMPH 'Mayflower' 1950-53

Battery ..	1950-53	GT7A	LAMPS—continued			SWITCHES—continued		
Coil, ignition ..	1950-53	*45020B	Head, Export Europe (not France) ..	1950-51	*B50835A	Panel ..	1950-53	31114A
Control box ..	1950-52	*37048E	ditto .. Later	1951-52	*50968A	Knob ..	—	315215
" .. Later	1952-53	*37138B	ditto ..	1952-53	*51011A	Starting motor ..	1950-53	76423A
Distributor ..	1950-53	40232A/B	Head, Export France ..	1950-52	*50837A	Coupling ..	1950-53	764428
Fuse box ..	1950-52	37134A	Head, Export U.S.A. ..	1953	*51329A	Stop lamp ..	1950-53	31082B
" .. Later	1952-53	033240	Number plate illumination ..	1950-52	*50795B	Windshield wiper ..	1950-53	31113A
Generator ..	1950-52	*22250F	Panel light bulb holder ..	1950-53	*51012A	Knob ..	—	315121
" ..	1953	22258D	Starting motor ..	1950-53	53101E	Trafficators ..	1950-53	*54039A
Horn ..	1950-53	*69011F	1951-53	53093E	53093E	" .. Later	1953	54044D
Low note ..	1950-53	*69012F	Side ..	1950-53	52139B	Warning lights ..		
High note ..	1950-53		Stop tail ..	1950	53178D	Ignition ..	1950-53	38048A
LAMPS			Panel light bulb holder ..	1951-53	53211H/J	Bezel ..	—	304862
Head, Home R.H.D., dip left (L.H.) ..	1950-51	*50835A	Starting "motor ..	1950-53	39070A	Main beam ..	1950-53	38052A
" non-dip (R.H.) ..	1950-51	*50836A	1952-53	530910A	Windshield wipers ..			
" dip left (L.H. and R.H.) ..	1951-53	*51010A	Steering column control ..	1950-53	25022A/L	Motor ..	1950	*75064J
Head, Export R.H.D., dip left ..	1950-51	*50835A	Suppressor ..	1951-53	32827L	" ..	1951	*75064K
L.H.D., dip right ..	1951-53	*51010A	SWITCHES		78105A	Wheelbox ..	1952-53	75145A
L.H.D., dip right ..	1951-52	*50795B	Dipper ..	1950-53	31284A	Crosshead and rack assy.	1950-53	72616A
"	1952-53	*51012A	Heater or fan ..	1950-53	*31202A	Cut to 36 $\frac{1}{2}$ " ..	1950-53	736177
			Knob ..	—	316221	Outer casing ..		
			Ignition and lighting ..	1950-53	31194A	Motor to wheelbox ..	1950-53	739870
			Knob ..	—	316276	Wheelbox to wheelbox ..	1950-53	*739978
			Interior light ..	1950-53	31114A	End tube ..	1950-53	740031
			Knob ..	—	315215	Arm ..	1950-53	*737525
						left hand drive ..	1953	*737526
						Blade ..	1950-53	727759

TRIUMPH 'Renown' 1950-54

Ammeter ..	1953-54	36173A	Horn ..	1950-54	*69011F	LAMPS—continued		
Battery ..	1950-54	GT9A	Low note ..	1950-54	*69012F	Head, Export Europe (not France) ..	1950-54	*B50892A
Coil, ignition ..	1950-54	*45012A/D	High note ..	1950-54	78266A	Left hand ..	1950-54	*B50894A
Control box ..	1950-52	37065E	Junction box ..	1952-54		Right hand ..	1950-54	
" .. Later	1952-54	*37138B	LAMPS			Number plate illumination ..	1950-54	*53074B
Distributor ..	1950-53	*40201A/B	Head, Home R.H.D., dip left (L.H.) ..	1950-54	*50892A	Side ..	1950-54	*52092A
" .. Later	1953-54	*40365A	" non-dip (R.H.) ..	1950-54	*50893A	Panel light bulb holder ..	1950-53	39015A
Fuse box ..	1952-54	033240	Head, Export R.H.D., dip left (L.H.) ..	1950-54	*50892A	Starting motor ..	1950-52	25526A/J
Generator ..	1950-52	*22250F	" (R.H.) ..	1950-54	*50894A	" ..	1953-54	25541A/D
" .. Later	1952-54	22258D	L.H.D., dip right (L.H.) ..	1950-54	*A50892A	Steering column control ..	1950-54	32828K
			" (R.H.) ..	1950-54	*A50894A	Suppressor ..	1951-53	78114A

* See Supersession Chart † No longer available—refer to Wiper Conversion Set Section
L.H.D. .. Left hand drive R.H. .. Right hand drive

L.H. .. Left hand R.H. .. Right hand

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

TRIUMPH-TROJAN

TRIUMPH 'Renown' 1950-54—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			SWITCHES—continued			Windshield wipers—cont'd		
Boot	1950-54	*31222A	Solenoid operating ..	1950-54	31115A	Wheelbox	1950-51	72616A
Dipper	1950-54	31284A	Knob	1950-54	*317326	"	1952-54	72592A/K
Heater or fan	1950-54	*78262A	Stop lamp	1950-54	31082B	Crosshead and rack assy.	1950-51	736177
Knob	—	768473	Windshield wiper ..	1950-54	31113A	Cut to 36 $\frac{1}{2}$ "	1950-51	736307
Ignition	1950-54	31187D	Knob	1950-54	*316475	" 42 $\frac{1}{2}$ "	1952-54	
Interior	1950-54	31114A	Trafficators	1950-54	*54039A	Outer casing		
Knob	—	*315239	" Later	1954	54044D	Motor to wheelbox ..	1950-54	739870
Lighting	1950-54	31114A	Warning light (ignition) ..	1950-54	38048A	Wheelbox to wheelbox ..	1950-51	*739978
Knob	—	*315236	Bezel	—	304084	End tube	1952-54	*739956
Panel	1950-54	31114A	Windshield wipers ..			Arm	1950-54	740031
Knob	—	*315239	Motor	1950	*75064J	" Later	1952-54	*737600
Reverse lamp	1950-54	*31077D	"	1951	*75064K	Blade	1950-52	*737453
Solenoid, starting motor	1950-54	*76411D	"	1952-54	75145A	" Later	1952-54	727759
								741543

TRIUMPH 'Herald' 1959-60

Battery	1959-60	BT7A	LAMPS—continued			SWITCHES—continued		
Bulb holder, panel light	1959-60	54944812	Head, Export N.A.D.A.; Number plate illumination and boot	1959-60	58469A	Panel (N.A.D.A.) ..	1959-60	*31419A
Bulb	1959-60	554734	dito Later	1960	53786A/B	Knob	—	54331118
Coil, ignition	1959-60	45111A/D	dito (N.A.D.A.)	1960	53093J	Solenoid, starting motor	1959-60	*76465A
Control box	1959-60	37283B/D	Side and flasher	1959-60	53836B	dito Later	1960	76464A
Distributor			dito (N.A.D.A.)	1959	52312B	Stop lamp	1959-60	31882A
High compression	1959	40637A	dito	1960	52478A	Windshield wiper ..	1959-60	*31419A
"	1960	40637B & D	Stop tail and flasher	1959-60	52493B	Knob	—	54330878
Low compression	1959	*40658A	dito (N.A.D.A.)	1959-60	53772A/B	Knob (heater)	—	54330883
"	1960	*40658B & D	Reflex reflector	1959-60	53816A/B	" (screen, car)	—	54330882
Twin carburetters	1959	40638A	Sleeve, Lucar connector	1960	57111A	Warning lights		
"	1960	40638B & D	14 amp	1959-60	54190042	Flasher	1959-60	*54360247
Flasher unit	1959-60	35020A	35 amp	1959-60	54190043	Flasher Later	1960	*54360552
Fuse box	1959-60	033283	Starting motor	1959	25022M	Bulb holder	1959-60	863511
Generator	1959-60	*22297A	" Later	1959-60	25022N/Q	Flasher	1959-60	863511
" (alternative)	1960	22700D	Steering column control	1959-60	33540A	Ignition and oil	1959-60	543734
Horn	1959-60	*22704A	Brush	1959-60	54300325	Main beam	1959-60	987
Low note	1959-60	69087A	Slip ring (serviced by Triumph)	1959-60	38268A	Bulb	—	
High note (optional)	1959-60	69090A	SWITCHES			Windshield wipers		
Horn relay (when twins fitted)	1959-60	33188A	Dipper (N.A.D.A.)	1959-60	31800A	Motor	1959	75371A
LAMPS			Flasher	1959-60	31867D	"	1960	75371B
Head, Home R.H.D., dip left	1959-60	58319A/B	Headlamp (N.A.D.A.)	1959-60	31874A/D	Crosshead and rack assy.	1959-60	72722A
Head, Export R.H.D., dip left	1959-60	58319A/B	Heater	1959-60	31909A	Cut to 35 $\frac{1}{2}$ "	1959-60	743221
L.H.D., dip right	1959-60	58327A/B	Ignition	1959-60	31543B/E	Outer casing	—	
Head, Export Europe (except countries listed)	1959-60	58330A/B	Lighting	1959-60	31961A/B	Motor to wheelbox ..	1959-60	54710692
Head, Export France	1959-60	58329A	Left hand drive (except N.A.D.A.)	1959-60	31855A/E	Wheelbox to wheelbox ..	1959-60	54710693
Head, Export Switzerland	1959-60	58331A/B	Right hand drive	1959-60	*31420A/D	End tube	1959-60	740746
Head, Export Norway and Sweden	1959-60	58332A/B	Lighting master and panel	1959-60	31952A	Ferrule, casing retaining	1959-60	740715
			dito Later	1960	54330880	Arm, left hand drive	1959	741845
			Knob	1959-60		" right hand drive	1960	54711558
						Blade	1959-60	54711557
								737897

TROJAN 15 cwt. 'Electrojan' 1951-53

Horn	1951-53	*069399	LAMPS			SWITCH		
Junction box	1951-53	78264A	Head	1951-53	50929A	Horn push and dipper.. . .	1951-53	*31040E

TROJAN 15/20 cwt. Van (Petrol) 1946-60

Ammeter	1946-51	*369001	Distributor	1946-60	40094A/D	LAMPS		
"	1952	*36151A	Flasher unit	1954-57	*35003A	Head, Home Vertical dip (L.H.) ..	1946-50	50364B/D
Battery	1946-50	*36117A	"	1958-60	35010A	Non-dip (R.H.) ..	1946-50	50319B
"	1951-53	GT9A	Flasher relay	1954	33117A	Vertical dip	1951-53	50364B/D
Control arm	1946-50	GT11A	Fuse box	1946-50	*385221	(L.H. and R.H.)	1954-55	51344A
Control box	1951-53	GT11A	"	1951-56	*37137A	Dip left	1956-59	51344B
Coil, ignition	1946-58	*45020A/B	"	1957	37257A	"	Later	51344D/F
"	Later	*45053J/K	"	1958-60	*37137A	Head, Export Europe (not France)	1958-60	51346B
Control arm	1946-55	31184B/K	"			Side	1954	52139B
Control box	1946-47	*37031B	"			Side and flasher	1954	*52162D
"	1948-49	37057E	Generator	1946-49	22449A	"	1955-60	52240B
"	1950-53	37065E	"	1950-52	*22250F			
"	1954-55	*37138B/D	"	1952-56	22258D			
"	1956-58	37182F/H	"	1956-60	22258E/H			
"	1959	*37187L	"					
"	1960	37307B	Horn	1946-57	*069399			

* See Supersession Chart
L.H.D. .. Left hand drive

N.A.D.A. .. North American Dollar Area
R.H.D. .. Right hand drive

L.H. .. Left hand
R.H. .. Right hand

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

TROJAN—VAUXHALL

TROJAN 15/20 cwt. Van (Petrol) 1946-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS—continued			SWITCHES			Warning lights		
Stop tail and number plate (Export)	1946-54	*53027B	Horn push, dipper and flasher	1956-60	*31094A	Flasher	1955-56	*38013B
Tail and number plate	1946-53	*53007B	Ignition and lighting . .	1946-60	*34022B	Ignition	1946-60	*38013B
" " " " "	1958	53615A	Panel	1946-50	*314090	Windshield wipers		
Mirror	1952-53	062562	"	1951-60	*31276A	Motor	1946-48	*733068
Panel light bulb holder	1952-57	39007A	Starting motor	1946-60	76428A	"	1949-55	*75126A
Bulb	—	987	Stop lamp	1946-60	31281B	"	1956	*75244A
Reflex reflector	1955-60	57047A/D	Trafficator or flasher . .	1946-55	*310396	Arm	1957-60	*75304D
Starting motor	1946-55	*255376	Trafficators	1946-54	*54013B	"	1946-54	*735061
" " " " "	1956-60	25551A	" Later	1954-57	54044D	Blade	1955-56	*735096
Suppressor	1951-60	78113A					1957	737900
							1958-60	735060

TROJAN 15/20 cwt. Van and Truck (Diesel) 1954-60; 25 cwt. Van, Truck and Bus (Diesel) 1959-60

Ammeter	1954-57	*36117A	LAMPS—continued			SWITCHES—continued		
Battery		1954-60	GT11A	Head, Export Europe (not France) ..	1958-60	51346B/E	Lighting and main ditto (20 and 25 cwt.)	1954-60	*34022B
" (20 and 25 cwt.)		1959-60	BT11A	Number plate illumination (20 and 25 cwt.) ..	1959-60	53101H	ditto (20 and 25 cwt.)	1959-60	*31251D
Control arm	1954-55	3184B	Side ..	1954	52139B	Knob	316154
Control box ..		1954	37065E	Side and flasher ..	1954	*52162D	Panel	*31276A
" " .. Later	1954-55	*37138D		" " ..	1955-60	52240B	Solenoid, starting motor	1959-60	*76411E
" " ..	1956-58	37182F/H		Stop tail and number plate (Export) ..	1954	*53027B	Solenoid operating (serviced by C.A.V.) ..	1955-56	1823410
" " ..	1959	*37187L		Stop tail and reflex (20 and 25 cwt.) ..	1959-60	53520D	Starter/Heater (20 and 25 cwt.) ..	1959-60	*31629J
" " ..	1960	37307B		Tail and number plate ..	1958	53615A	Stop lamp ..	1954-60	31281B
Demister (Bus only) ..		1960	78005D	Panel light bulb holder ..	1954-57	39007A	cwt.) ..	1959-60	31082E
Flasher unit ..		1954-57	*35003A	Bulb ..	—	987	Trafficator	*310396
Fuse box	1954-56	*37137A	Starting motor (serviced by C.A.V.) ..	1954-56	BS512L66	Trafficators	54044D
"	1957	37257A	Starting motor ..	1957-60	26112A/F	Warning lights		
"	1958-60	*37137A	ditto (20 and 25 cwt.) ..	1959-60	26148B	Auxiliary	1954-60
" (20 and 25 cwt.)	1959-60	37322A	ditto ..	1960	26148D	Flasher	1955-60
Generator	1954-56	22258D	SWITCHES			Windshield wipers		
Horn	Later	1956-60	Dipper (20 and 25 cwt.) ..	1959-60	31284D	Motor	1954-55
Horn	1954-57	*069399	Heater (Diesel, serviced by C.A.V.) ..	1955-60	1823420	"	1956
LAMPS				Horn push, dipper and flasher ..	1956-60	*31094A	"	1957-60
Flasher, rear (20 and 25 cwt.)	1959-60	53359D	Horn push and flasher (20 and 25 cwt.) ..	1959-60	31974A	Arm	*735061
Head, Home				ditto ..	1960	31756F	"	1955-56
R.H.D., dip left	1954-55	51344A				"	*735096
ditto	1956-59	51344B				"	1957
ditto	1959-60	51344D/F				"	1958
ditto (20 and 25 cwt.)		1959-60	057458				Blade	1954-58
Head, Export									727803
R.H.D., dip left	1954-55	51344A						
ditto	1956-59	51344B						
ditto	1959-60	51344D/F						
ditto (20 and 25 cwt.)		1959-60	057458						

FUEL INJECTION EQUIPMENT

(Perkins P3 Diesel Engine 1954-58)

(Perkins P3-144 Diesel Engine 1958-60)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump (P3) ..	1954-58	BPE3A60S310-3S6318	Governor (P3-144)—continued		
" (P3-144) ..	1958	BPE3A60S320-3S6432	Later	1958-60	RPE10
" " " .. Later	1958	BPE3A60S320-3S6449	Coupling (P3 only) ..	1954-58	BZKG31-538
Governor (P3) "	1959-60	BPE3A60U320-3S6449	Nozzle holder ..	1954	BKB35S87
" ..	1954-56	BEPMZ80A100	" ..	1955-60	BKB32S630
" .. Later	1956-58	BEPMZ80A144	Nozzle ..	1954-60	BDL110S6133
" (P3-144) ..	1958	RPE7	Filter (P3 only)	1954	BFA5P1
			" ..	1955-57	F2-7

VAUXHALL 10 h.p. 1946-47

Battery	1946-47	SG11E	LAMPS, Head, Home —continued			LAMPS—continued			
Coil, ignition	1946-47	*45014E	R.H.D., dip left (L.H., primer) ..	1947	*50215D	Side	1946-47
Control arm	1946	*310754	" non-dip (R.H., primer) ..	1947	*50216D	" (primer)	1946-47
" "	1947	310757				Stop tail and number plate	1946-47
Control box	Later	1946	*334551				ditto (primer)	1946-47
" "	..	Later	1946-47	*37033A				Mirror	1946-47
Distributor	1946-47	*410041	Head, Export			Starting motor	1946-47
Generator	1946-47	22451A	Vertical dip (L.H.) ..	1947	50219D	SWITCHES			
Horn	1946-47	*70025D	" " (R.H.) ..	1947	50220D	Dipper	1946-47
LAMPS					" " (L.H., primer) ..	1947	*50221D	Ignition and lighting	1946-47
Head, Home								Terminal block	1946-47
R.H.D., dip left (L.H.)			1946-47	50199D				Trafficators	1946-47
" non-dip (R.H.)			1946-47	50200D							

* See Supersession Chart.

§ Serviced by C.A.V. Ltd.

L.H. . . Left hand

R.H. ... Right hand

L.H.D.

left hand drive

R.H.D. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

VAUXHALL

VAUXHALL 12 h.p. 1946-47

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1946-47	SG11E	LAMPS, Head, Home			LAMPS—continued		
Coil, ignition	1946-47	*45014A	—continued			Side .. .	1946-47	*52052A
Control arm	1946-47	310757	R.H.D., dip left (L.H.,	1947	*50215D	“ (primer) .. .	1946-47	*52058A
Control box	1946	*334551	“ primer) .. .			Stop tail and number plate	1946-47	*53063B
”	Later	*37033A	“ non-dip (R.H.,	1947	*50216D	ditto (primer) .. .	1946-47	*53066D
Distributor	1946-47	*410042	“ primer) .. .			Mirror .. .	1946-47	*580796
Generator	1946-47	22451A				Starting motor .. .	1946-47	*255998
Horn	1946-47	*70025D	Head, Export			“ .. . Later	1947	25515B/D
LAMPS			Vertical dip (L.H.) .. .	1946	*50227A			
Head, Home			“ (R.H.) .. .	1946	*50228A	SWITCHES		
R.H.D., dip left (L.H.)	1946	*50217A	“ (L.H.) .. .	1947	50219A/F	Dipper .. .	1946-47	31284A
“ non-dip (R.H.)	1946	*50218A	“ (R.H.) .. .	1947	50220D	Ignition and lighting .. .	1946-47	*34011A
“ dip left (L.H.)	1947	50199D	“ (R.H.,	1947		Panel .. .	1946-47	*359350
“ non-dip (R.H.)	1947	50200D	“ primer) .. .			Starting motor .. .	1946-47	*764236

VAUXHALL 14 h.p. 1946-48

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Coil, ignition	1946-48	*45039A	LAMPS, Head, Home			LAMPS—continued		
Control box	1946-48	*37031B	—continued			Side .. .	1946-48	*52052A
Distributor	1946-48	*410501	R.H.D., dip left (L.H.)	1947-48	*50555A	“ (primer) .. .	1946-48	*52058A
Generator	1946-48	228306	“ non-dip (R.H.)	1947-48	*50556A	Stop tail and number plate	1946-48	*53067B
Horn			“ dip left (L.H.,			ditto (primer) .. .	1946-48	*53068B
Low note	1946-48	*69021A	“ primer) .. .	1948	*50557A	Mirror .. .	1946-48	*580796
High note	1946-48	*69022A	“ non-dip (R.H.,	1948	*50558A	Starting motor .. .	1946-48	*250542
LAMPS			“ primer) .. .			Steering column control .. .	1946-48	323655
Head, Home			Head, Export			SWITCHES		
R.H.D., dip left (L.H.)	1946	*50194A	Vertical dip (L.H.) .. .	1946	*50235A	Dipper .. .	1946-48	31284A
“ non-dip (R.H.)	1946	*50195A	“ (R.H.) .. .	1946	*50236A	Ignition and lighting .. .	1946-48	*34011A
“ dip left (L.H.,	1946	*50233A	“ (R.H.,	1946	*50237A	Panel .. .	1946-48	*359350
“ primer)	1946	*50234A	“ primer) .. .	1946	*50238A	Starting motor .. .	1946-48	*764374
“ non-dip (R.H.,	1946		“ (L.H.) .. .	1947-48	*50561A	Terminal block .. .	1946-48	*354021
“ primer)			“ (R.H.) .. .	1947-48	*50562A	Trafficators .. .	1946-48	*539731

VAUXHALL 'Wyvern' 1948-57: 'Velox' 1948-60: 'Cresta' 1955-60: 'Grosvenor' Estate Car and 'Dormobile' 1957: 'Friary' Estate Car 1960

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery ('Wyvern') ..	1948-57	GT7A	LAMPS			LAMPS—continued		
“ (other models) ..	1948-60	GT9A	Boot ('Cresta')	1955-57	53396B	Head, Export France ..	1960	58231A/E
Coil, ignition ..	1948-54	*45012A/D	“ ('Velox' and 'Cresta')			Head, Export Austria ..	1960	58613A
Control box ..	1948-52	37065E	De Luxe .. .	1958-60	53396B	Head, Export U.S.A. ..	1950-52	*50804D
“ .. . Later	1952-54	*37138B	Flasher, front .. .	1958	*53503E	“ .. .	1953-54	51337A
“ .. .	1955-59	*37187E/L	“ .. . (Canada) .. .	1959-60	*53721A	Number plate illumination .. .	1948-51	53093E
“ .. . Later	1959-60	37307A/B	“ .. .	1959-60	52440B	“ .. .	1958-60	53595A
“ .. .	1960	37299B	Flasher, rear .. .	1956	*53503D/E	Bulb .. .	1952-57	989
Distributor ('Velox') ..	1948	*410501	Left hand .. .	1958	*53645D	Reverse (special orders) .. .	1952-54	53210F/H
“ .. . Later	1948-52	40165A/E	“ .. .	1959-60	53718B	“ .. .	1955-56	52285A
“ .. .	1952-53	*40297A/D	“ .. . (Canada) .. .	1959-60	53765A	Side .. .	1950-54	52160A
“ .. .	1953	40290A/D	Right hand .. .	1958	*53644D/E	“ .. .	1958	52367A
“ .. .	1953-54	40290E/K	“ .. .	1959-60	53717D/E	“ .. .	1959-60	*52412A
“ ('Velox' and 'Cresta') ..	1955-56	40290E/K	“ .. . (Canada) .. .	1959-60	53764D/E	Side and flasher .. .	1955	52240A
“ (All models except 'Wyvern') ..	1957	40464B	Head, Home			“ .. .	1956-57	*52310A
“ ('Wyvern') ..	1948	*410042	R.H.D., dip left (L.H.)	1948-49	50613E	Stop tail .. .	1950-51	*53166B
“ .. . Later	1948-52	40164B	“ non-dip (R.H.)	1948-49	*50614E	“ .. .	1952-56	53218A/B
“ .. .	1953-54	*40289A/J	“ dip left (L.H.)	1950-51	*50445K	“ .. .	1958-59	*53642D
“ .. .	1954-55	*40289K	“ non-dip (R.H.)	1950-51	*50446K	“ .. .	1960	53702D
“ .. .	1956	40463A	“ dip left (L.H.,	1951-52	*50954A	Stop tail and flasher .. .		
“ .. .	1956-57	40463B	and R.H.) .. .	1953-55	51336A	Left hand .. .	1957	53553B/D
“ .. .	1957	40527A	ditto .. .	1956-60	51336B/J	Right hand .. .	1957	53554B/D
Flasher unit .. .	1958-60	35011A	ditto .. .			Stop tail and number plate .. .	1948-49	*53118A
Fuse box .. .	1952-54	033239	Head, Export			Reflex reflector .. .	1955-56	57074A
Generator .. .	1948	*22250A	R.H.D., dip left .. .	1948-49	50613E	Starting motor .. .	1948	25014A
“ .. .	1949-52	*22250F	“ .. .	1950-51	*50445K	“ .. .	1948-50	25014B
“ .. .	1952-56	22258D	“ .. .	1951-52	*50954A	“ .. .	1951-52	25014D/E
“ .. .	1957-60	22258E/H	“ .. .	1953-55	51336A	“ .. .	1952-57	25022A/K
“ .. .	1957-60	22700D	L.H.D., dip right .. .	1948-49	A50613E	“ .. .	1958-59	25061B
“ .. .	1957-60	22704A	“ .. .	1950-51	*A50445K	“ .. .	1960	25061E/F
“ (temporary alternative) .. .	1960	22704A	“ .. .	1951-52	*50804D	Steering column control .. .	1948-49	32762F
Horn ('Wyvern') .. .	1948-51	*069213	“ .. .	1953-55	*51337A & B	“ .. .	1950-51	32819E
“ .. .	1952-55	*69011F/J	“ .. .	1956-59	*51337D/E	“ .. .	1950-51	32820E
“ Low note ('Velox') .. .	1948-55	*69011F/J	“ .. .	1959-60	*51337F/K	“ .. .	1950-51	32821F
“ High note ('Velox') .. .	1948-55	*69046A/F	Head, Export Europe (not France) .. .	1948-49	B50613E	“ .. .	1952-54	32852F
“ .. .	1956-60	*69046A/F	ditto .. .	1950-51	*B50445K	Horn ring .. .	1958-59	333164
Horn relay (when twins fitted) .. .	1956-60	*69047A/F	ditto .. .	1951-52	*50963A	“ ('Cresta') .. .	1960	*33551A
			ditto .. .	1953-55	51339A	“ ('Velox') .. .	1960	*33552A
			ditto .. .	1956-60	51339B/H	Motif (black) .. .	1958-59	3397168
			ditto .. .	1960	58230A/E	“ (grey) .. .	1959	54850019
			ditto .. .			“ (Cresta) .. .	1960	54300326
			ditto .. .			“ ('Velox') .. .	1960	54300327

* See Supersession Chart † Suitable replacement after 1954 ‡ Suitable replacement after 1957 § Optional on 'Wyvern' || Serviced by Vauxhall
¶ Serviced by Lucas L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive

continued



Equipment Specification

VAUXHALL—WALES & EDWARDS

VAUXHALL 'Wyvern' 1948-57: 'Velox' 1948-60: 'Cresta' 1955-60: 'Grosvenor' Estate Car and 'Dormobile' 1957: 'Friary' Estate Car 1960—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			SWITCHES—continued			Terminal block	1955	305436
Courtesy	1957	31663A	Lighting	1948-51	*31159A	Trafficators	1949	*54017B
Dipper	1948-50	31284A	Knob	—	315031	"	1950-51	*54040A
"	1955-57	31284A	Lighting	1958-60	*31772A/D	"	1951-52	*54048A
Direction indicator	1958-60	†31647D/F	Mercury ('Friary')	1960	31942A	"	1952-54	*54049A
Heater	1956-57	78216B	Panel	1948-51	31161A	Laycock de Normanville overdrive equipment (optional)		
Knob	—	768473	Solenoid, starting motor	1953-54	*78278A	Relay	1960	33213B
Ignition	1951	*31163A	Starting motor	1948-51	76411E	Switches		
"	1952-54	31187D	"	1951-52	76412E	Gear	1960	*31824A
"	1955	*31484A	"	1952-53	76423A	Overdrive	1960	34305A
"	1956-57	*31534A	"	1954	76431B	Solenoid	1960	*76517B
Instrument bezel			"	1955-57	76438A			
Black	1958-59	†305728A	Coupling	—	76423A			
Charcoal grey	1958-60	†305729A	Stop lamp	1953-54	764428			
Green	1960	*54360394	"	1955-57	31082B			
Brown	1960	†54360395	"	1958	31486A			
			"	1959-60	31692A			
			"		31865A			

VAUXHALL 'Victor' 1958-59: Series II 1960: 'Envoy' Station Wagon (Export Canada only) 1960

			LAMPS, Head, Export —continued			Steering column control		
Battery	1958-60	BT7A	L.H.D., dip right	1958-60	58097B/K	Horn ring	1958-59	†333060
Control box	1958-59	37187L	ditto	1960	58434A/B	Motif	1960	‡33555A
"	Later	37307A/B	Later	1960	58098B/K	SWITCHES	1958-60	†397155
Flasher unit	1960	37299B	Head, Export Europe (not France)	1958-60	58435A/B	Courtesy	1958	31663A
Generator	1958-60	35011A	ditto	1960	58438A/B	Direction indicator	1958-60	†31647D/F
"	Later	22258F/H	ditto	1960	58120B/H	Lighting	1958-60	31662A/E
"	(temporary alternative)	22700D	Head, Export France	1958-60	58437A/B	Bezel	—	317535
Horn	1960	22704A	"	1960	58436A/B	Knob	—	313667
Low note	1958-60	*\$69083B	Head, Export Austria	1960	58612A	Rubber cushion	—	312777
High note (De Luxe)	1958-60	*\$69084B	Head, Export U.S.A.	1958-60	58163A/F	Mercury (rear door, Station Wagon)	1960	31942A
Horn relay (De Luxe)	1958-60	*33116B	Number plate illumination	1958-60	58440A	Solenoid, starting motor	1958-60	*76411E
LAMPS			Side and flasher	1958-60	53595A	Stop lamp	1958-59	31638A
Flasher, rear (U.S.A.)	1958-60	53607E/F	Left hand	1958-59	52352E	Newton Bennet Clutch (optional)	1958-59	33196A
Head, Home R.H.D., dip left	1958-60	53688A	Right hand	1959-60	52409A	Relay	1958-59	33196A
Head, Export R.H.D., dip left	Later	58096B/L	Later	1958-59	52351E	Switches	1958-59	31778A
"	Later	58433A/B	Stop tail	1959-60	52439A	Choke	1958-59	31504D
			(U.S.A.)	1958-60	53599E/F	Starting motor	1958-59	
			Starting motor	1958-59	53693B/D	"	1958-59	
			"	1960	25061B	Windshield wipers—cont'd	1951-54	
			"		25061E/F	Arm	1951-54	*735049
			"			"	1955	735065
			"			Blade	1951-54	727802
			"			"	1955	727803

VERNON'S INDUSTRIES Invalid Carriage 1951-54

			LAMPS			SWITCHES		
Battery	1951-54	PUW7E	Head	1951-54	51076A	Dipper	1951-54	*31278A
Horn	1951-54	*70001D	Side	1951-54	*A52105A	Lighting	1951-54	31268B
Horn push	1951-54	76210A	Stop tail and number plate	1951-54	*A53140B			
Junction box	1951-54	78266A						

VICTOR ELECTRIC Battery Vehicle 1951-55

			LAMPS—continued			Windshield wipers—cont'd		
Horn	1951-55	*069213	Side	1952-55	52102A	Arm	1951-54	*735049
Horn push	1951-55	76205A	Tail and number plate	1952-55	*53041B	"	1955	735065
LAMPS			Windshield wipers Motor	1951-55	75120A	Blade	1951-54	727802
Head	1952-55	*50974A/B	"	1960		"	1955	727803

WALES & EDWARDS 1 ton Electric Van 1953-55

			LAMPS			Warning light		
Fuse box	1953-55	*37131A	Side	1953-55	52034A	...	1955	38134A
Horn	1953-55	*069213	Tail and number plate	1953-55	*53241B			
Horn push	1953-55	31272A	SWITCH					
Junction box	1953-55	78264A	Lighting	1953-55	*31276A			
"	1953-55	78265A						

* See Supersession Chart
L.H.D. ... Left hand drive

† Serviced by Vauxhall
R.H.D. ... Right hand drive

‡ Serviced by Lucas

§ Suitable replacement after 1958

|| 'Super' only in 1960

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

WESSEX INDUSTRIES—WOLSELEY

WESSEX INDUSTRIES Delivery Van 1952–55

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1952-55	36084F	Horn	1952-55	*70001D	SWITCH	1952-55	
Battery	1952-55	GU11E	Low note	1952-55	76204A	Lighting	1952-55	34065A
Control box	1952-53	37097B	Horn push	1952-55		Windshield wipers		
" "	Later	*37127F/K	LAMPS	1952-55	*A52003A	Motor	1952-55	*75121A
Generator	1952	*20009A	Side	1952-54	*A53140A	Arm	1952-55	*735049
" "	Later	*20009B/F	Tail and number plate	1955	53256A	Blade	1952-55	727802

WOLSELEY 8 h.p. 1946–48

Ammeter	1946-48	*364634	LAMPS—continued			Trafficators	1946-47	*539670
Battery	1946-48	SG13E	Side	1946	52057A	"	1948	*54011B
Coil, ignition	1946-48	*45016D	"	1947-48	*52029A	Windshield wipers		
Control box	1946-47	*37033A	Stop tail and number plate	1946-48	*53029A	Motor	1946-48	*75065A
" "	1948	37081H	Mirror	1946-48	*620708	Clutch housing	1946-48	735471
Distributor	1946-48	*409642	Starting motor	1946-47	*250405	Bracket, with shaft and coupling	1946-48	734747
Generator	1946-48	*228365	"	1947-48	*25001A/B	Shaft, short	1946-48	737243
Horn	1946-48	069343	Later			Coupling	1946-48	729036/S
Junction box	1946-48	78264A	SWITCHES			Link, primary	1946-48	737285
LAMPS			Dipper	1946-48	*360020	" secondary	1946-48	735501
Head, Home			Ignition and lighting	1946-48	*344889	Grommet, housing	1946-48	733874
R.H.D., dip left (L.H.)	1946	*50250A	Panel	1946-48	*314631	" scuttle	1946-48	729378
" non-dip (R.H.)	1946	*50251A	Starting motor	1946-48	*764401	Arm	1946-48	*735050
" dip left (L.H.)	1947-48	50146D	Adaptor plate	—	78275A	Blade	1946-48	727707
" non-dip (R.H.)	1947-48	50147D	Stop lamp	1946-48	31281B			
			Spring	—	*315737			

WOLSELEY 10 h.p. 1946–48

Ammeter	1946-48	*369283	LAMPS—continued			Trafficators	1946-47	*539733
Battery	1946-48	SLG11A	Number plate illumination	1946-47	*53064A	"	1948	*54017B
Coil, ignition	1946-48	*45020A/B	"	1948	*53111A	Warning light (ignition)	1946-47	*318612
Control box	1946-47	*37031B	Side	1946-48	52057A	"	1948	*318534
" "	1948	37057E	Starting motor	1946-48	*255378	Windshield wipers		
Distributor	1946-48	*409615	Dipper	1946-48	31284A	Motor	1946-48	*75066A
Generator	1946-48	22449A	Ignition and lighting	1946-48	*344851	Bracket, with shaft and coupling	1946-48	734625
Horn	1946-48	069344	Panel	1946-48	*768379	Shaft, short	1946-48	737243
Junction box	1946-48	78266A	Knob	—	768378	Coupling	1946-48	729036/S
" "	1946-48	78264A	Reverse lamp	1946-48	*31077D	Link	1946-48	734787
LAMPS			Solenoid, starting motor	1946-48	76022B	Grommet, housing	1946-48	734652
Head, Home			Solenoid operating	1946-48	*317089	" scuttle	1946-48	729378
R.H.D., dip left (L.H.)	1946-48	*50087D	Stop lamp	1946-48	31281B	Arm	1946-48	*735050
Head, Export			Spring	—	*315714	Blade	1946-48	727784
Vertical dip (L.H.)	1948	*50223D						
" " (R.H.)	1948	*50224D						

WOLSELEY 12 h.p. 1946–48

Ammeter	1946-48	*369274	LAMPS—continued			SWITCHES—continued		
Battery	1946-48	SLG11A	Head, Export			Stop lamp	1946-48	31281B
Coil, ignition	1946-48	*45020A/B	Vertical dip	1948	50476A	Spring	1946-48	*315714
Control box	1946-47	*37031B	Number plate illumination	1946-47	*53064A	Trafficators	1946-47	*539733
" "	1948	37057E	"	1948	*53111A	"	1948	*54017B
Distributor	1946-47	40064A	Side	1946-48	52030A	Warning light (ignition)	1946-48	*38013B
" "	1948	40064B/F	Mirror	1946-48	*620200	"		
Generator	1946-48	22449A	Panel light bulb holder	1946-48	39007A	Windshield wipers		
Horn	1946-48	*069207	Starting motor	1946-48	*255378	Motor	1946-48	*75066A
Junction box	1946-48	78264A	SWITCHES			Clutch housing	1946-48	
" "	1946-48	78266A	Dipper	1946-48	31284A	With switch	1946-48	*734771
LAMPS			Foglamp	1946-48	359671	Less switch	1946-48	*734772
Head, Home			Ignition	1946-48	*312151	Bracket shaft, short	1946-48	737243
R.H.D., dip left (L.H.)	1946-47	*50213A	Lighting	1946-48	*359670	Bracket coupling	1946-48	729036/S
" non-dip (R.H.)	1946-47	*50210A	Panel	1946-48	*768379	Link, primary	1946-48	733996
" dip left (L.H.)	1948	50472A	Knob	—	768378	" secondary	1946-48	734787
" non-dip (R.H.)	1948	50473A	Reverse lamp	1946-48	*31077D	Grommet, housing	1946-48	734748
			Solenoid, starting motor	1946-48	76022B	" scuttle	1946-48	729378
			Solenoid operating	1946-48	*317067	Arm	1946-48	*735078
						Blade	1946-48	727707

WOLSELEY 14 h.p. 1946–48

Ammeter	1946-48	*369274	Horn			LAMPS—continued		
Battery	1946-48	SLG11A	Low note	1946-48	*69021A	Head, Export		
Coil, ignition	1946-48	*45020A/B	High note	1946-48	*69022A	Vertical dip	1948	50476A
Control box	1946-47	*37032B	Junction box	1946-48	78264A	Number plate illumination	1946-47	*53064A
" "	1948	37065E	"	1946-48	78266A	Side	1946-48	52030A
Distributor	1946-47	40063B	LAMPS			Mirror	1946-48	*620200
Generator	1946-47	*22447A	Head, Home			Starting motor	1946-47	*255857
" "	1948	*22446A	Non-dip	1948	50473A	"	1947-48	25512A

* See Supersession Chart
R.H.D. Right hand drive

† No longer available—refer to Wiper Conversion Set Section

L.H. ... Left hand R.H. ... Right hand

continued



Equipment Specification

WOLSELEY

WOLSELEY 14 h.p. 1946-48—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES								
Dipper	1946-48	31284A	SWITCHES—continued	1946-48	*317067	Windshield wipers—cont'd	1946-48	737243
Foglamp	1946-48	359671	Solenoid operating	1946-48	31281B	Bracket shaft, short	1946-48	729036/S
Ignition	1946-48	*312151	Stop lamp	1946-48	*315714	Bracket coupling	1946-48	734787
Lighting	1946-48	*359670	Spring	—	—	Link	1946-48	734748
Panel	1946-48	*768379	Trafficators	1946-47	*539733	Grommet, housing	1946-48	734748
Knob	—	768378	Warning light (ignition)	1948	*54017B	" scuttle	1946-48	729378
Reverse lamp	1946-48	*31077D	Windshield wipers	1946-48	*38013B	Arm	1946-48	*735077
Solenoid, starting motor	1946-48	76022B	Motor	1946-48	†75066A	Blade	1946-48	727707

WOLSELEY 18 h.p. 1946-48

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES								
Ammeter	1946-48	*369274	LAMPS—continued	1946-48	*53064A	SWITCHES—continued	1946-48	31281B
Battery	1946-48	SLG11A	Number plate illumination	1946-48	52030A	Stop lamp	1946-48	*315714
Coil, ignition	1946-48	*45020A/B	Side	1946-48	*620200	Spring	1946-47	*539733
Control box	1946-47	*37032B	Mirror	1946-48	*255857	Trafficators	1948	*54017B
”	1948	37065E	Starting motor	1946-48	25512A	”	—	—
Distributor	1946-48	40051A/B	“ ” Later	1948		Warning lights	1946-48	*38019B
Generator	1946-48	*22447A	SWITCHES	1946-48	31284A	Choke	1946-48	*38013B
Horn	—		Dipper	1946-48	*768379	Ignition	1946-48	
Low note	1946-48	*69021A	Heater or fan	1946-48	768378	Windshield wipers	1946-48	
High note	1946-48	*69022A	Knob	—	—	Motor	1946-48	†75066A
Junction box	1946-48	78266A	Ignition	1946-48	312151	Bracket shaft, short	1946-48	737243
LAMPS	—		Lighting	1946-48	*359674	Bracket coupling	1946-48	729036/S
Head, Home	—		Panel	1946-48	*314722	Grommet, housing	1946-48	734748
Non-dip	—		Reverse lamp	1946-48	*31077D	” scuttle	1946-48	729378
Head, Export	—		Solenoid, starting motor	1946-48	76022B	Arm	1946-48	*735078
Vertical dip	—		Solenoid operating	1946-48	*317067	Blade	1946-48	727707

WOLSELEY 25 h.p. 1948

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES								
Ammeter	1948	*369274	Mirror	1948	*620200	Trafficators	1948	*539973
Battery	1948	SLG11A	Starting motor	1948	*270299	Warning lights	1948	
Coil, ignition	1948	*45020A/B	SWITCHES	1948	31284A	Choke	1948	*38019B
Control box	1948	*37032B	Dipper	1948	*359216	Ignition	1948	*38013B
Distributor	1948	*40113B	Door light	1948	*768379	Windshield wipers	1948	
Generator	1948	*22446A	Heater or fan	1948	768378	Motor	1948	†75066A
Horn	—		Knob	—	—	Clutch housing	1948	737357
Low note	1948	*69021A	Ignition	1948	312151	Bracket shaft, short	1948	737243
High note	1948	*69022A	Lighting	1948	*359674	Bracket coupling	1948	729036/S
Junction box	1948	78266A	Panel	1948	31201B	Link	1948	733996
LAMPS	—		Knob	—	316205	Grommet, housing	1948	734748
Head, Home	—		Reverse lamp	1948	*31077D	” scuttle	1948	729378
Non-dip	—		Solenoid, starting motor	1948	76022B	Arm	1948	*735098
Head, Export	—		Solenoid operating	1948	*317067	Blade	1948	727707
Vertical dip	—		Stop lamp	1948	31281B		—	—
Number plate illumination	1948	*53111A	Spring	1948	*315714		—	—
Side	—							

WOLSELEY 'Four Forty-Four' 1953-56

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES								
Battery	1953-56	GT9A	LAMPS—continued	1953	*51407A	SWITCHES—continued	1953-56	31113A
Bulb holder, panel light	1955-56	39015A	Head, Export	1953	51344A	Panel	1953-56	31113A
Bulb	—	987	R.H.D., dip left	1953	51344B	Knob	—	317524
Coil, ignition	1953-54	*45020B	” ” Later	1953-55	51344B	Reverse lamp	1953-56	*31077D
Control box	1953-55	*45053A/D	L.H.D., dip right	1956	*51345A/D	Solenoid, starting motor	1953-56	*76411D/E
”	1956	*37138B/D	Head, Export Europe	1953	*51408A	Solenoid operating	1953-56	31115A
Distributor	1953-56	37182A/H	(not France)	1953	51346A	Knob	—	317338
”	Later	1956	ditto	1953-55	51346B	Stop lamp	1953-56	31082B
Flasher unit (L.H.D.)	1956	*35003A	ditto	1956	51411A	Ventilation knob	1953-56	317529
Flasher relay	1956	33117A	Head, Export France	1953	51411B	Windshield wiper	1953-56	31113A
Fuse box	1953-56	033239	” ” Later	1953-55	51411B	Knob	—	317526
Generator	1953-56	22258D	Head, Export U.S.A.	1956	51467B	Trafficators	1953-55	54044D
”	Later	22258E	Number plate illumination	1953-56	53275A	Warning light (ignition)	1953-56	38044A
Horn	—		Radiator badge	1953-56	534539	Windshield wipers	1953-55	
Low note	1953-55	*69011F/J	Side	1953-56	52139B/F	Motor	1953-55	*75192D
”	1956	69046A	Stop tail	1953-56	53178B/F	” ”	1956	75296A
Fuse box	1953-56	*69012F/J	Reflex reflector	1955-56	57086A	Wheelbox	1953-56	72645D
Generator	1953-56	69047A	Starting motor	1953-56	25022F	Crosshead and rack assy.	1953-55	
”	1956	*33116B	SWITCHES	1953-56		Cut to 33½”	1953-55	*743220
LAMPS	—		Dipper	1953-56	31284A	” 32½”	1956	743221
Flasher	1956	52240D	Foglamp	1953-54	31114A	Outer casing	1953-55	
Fog	1953-56	*55055B	Knob	—	315224	Motor to wheelbox	1953-56	740916
” (France)	1956	55089B	Foglamp	1955	*31231A	Wheelbox to wheelbox	1953-56	740917
Head, Home	—		”	1956	31114E	End tube	1953-56	740746
R.H.D., dip left	1953	*51407A	Knob	—	317663	Arm, left hand	1953-56	741837
” ” ”	Later	1953-55	Ignition	1953-56	31114A	” left hand drive	1953-56	741839
” ” ”	1956	51344A	Lighting	1953-56	31114A	” right hand	1953-54	741836
” ” ”	1956	51344B	Knob	—	317662	” right hand drive	1953-56	741838
						Blade	1953-56	*738735

* See Supersession Chart

† No longer available—refer to Wiper Conversion Set Section

L.H.D. ... Left hand drive

R.H.D. ... Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

WOLSELEY

WOLSELEY 'Four Fifty' 1949-53

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter ..	1949-53	36068E	LAMPS, Head, Export	—		SWITCHES	—	
Battery ..	1949-53	GT9A	—continued			Boot ..	1951-53	*31180A
Coil, ignition ..	1949-53	*45020B	L.H.D., dip right ..	1949	*A50734D	Dipper ..	1949-53	31284A
Control box ..	1949-52	37065E	" .. "	1950-51	*A50793B	Foglamp ..	1949-53	31114A
" .. Later	1952-53	*37138B	" .. "	Later	*A50445K	Knob ..	—	*315220
Distributor ..	1949-53	40158A/D	" .. "	1951-52	*50804D	Foglamp (New Zealand)	1949-53	*31231A
Fuse box ..	1949-52	*37107A	" .. "	1953	*51338A	Heater or fan ..	1949-51	*78238A
" .. Later	1952-53	033239	" .. "	Later	*51337A	Knob ..	—	*768539
Generator ..	1949-50	22253F/H	Head, Export Europe	—		Heater or fan ..	1952-53	31113A
" .. Later	1950-52	*22250F	(not France) ..	1949	*B50734D	Knob ..	—	*316488
Horn ..	1952-53	22258D	ditto ..	1950-51	B50793B	Ignition ..	1949-53	31187D
Low note ..	1949-53	*69011F	ditto ..	Later	*B50445K	Lighting ..	1949-53	31114A
High note ..	1949-53	*69012F	ditto ..	1951-52	*50963A	Knob ..	—	315224
Horn relay ..	1949-53	*33116B	ditto ..	1953	*51340A	Panel ..	1949-53	78279A
Junction box ..	1949-53	78266A	Head, Export France	—	*51339A	Knob ..	—	768540
LAMPS	—		" .. "	1949	*50802A	Reverse lamp ..	1949-53	*31077D
Boot ..	1949-53	56035E	" .. "	1950-51	50679F	Root lamp ..	1951-53	*31180A
Fog ..	1949-53	*55029E	" .. "	Later	*50790E	Solenoid, starting motor	1949-53	*76411D
Head, Home	—		" .. "	1951-52	*50962A	Solenoid operating ..	1949-53	31115A
R.H.D., dip left (L.H.)	1949	*50734D	" .. "	1953	*51342A	Knob ..	—	317316
" .. non-dip (R.H.)	1949	*50735D	" .. "	Later	*51341A	Windshield wiper ..	1949-53	*31217A
" .. dip left (L.H.)	1950-51	*50793B	" .. "	1953	*50803A	Knob ..	—	*315076
" .. non-dip (R.H.)	1950-51	*50362F	Number plate illumination	1949-53	*50804D	Trafficators ..	1949	*54013B
" .. dip left (L.H.)	Later	*50445K	Radiator badge ..	1949-53	*51337A	" ..	1950	*54036A
" .. non-dip (R.H.)	Later	*50446K	Side (U.S.A.) ..	1949	*5130D	" ..	1951-52	*54041A
dip left ..	1951	*50446K	" .. "	1950-52	*534539	Radiator badge ..	1949-53	54044D
(L.H. and R.H.) .. Later	1951-52	*50954A	" .. "	1953	*52142D	Side (U.S.A.) ..	1953	38044A
dip left ..	1951	*51335A	Stop tail ..	1949	*52139B	Windshield wipers ..	—	
dip left ..	1951	*51336A	" .. "	1950	*53151H/J	Motor ..	1949-50	*75084K
Head, Export	—		" .. "	Later	*53102D	" ..	1951	*75084L
R.H.D., dip left ..	1949	*50734D	" .. "	1950	*53197A	Wheelbox ..	1949-52	75143A
" .. Later	1950-51	*50793B	" .. "	Later	*53200A	" ..	1952-53	72590A/K
Starting motor ..	1951-52	*50445K	Mirror ..	1949-53	*53288A	Crosshead and rack assy.	—	
" .. Later	1951-52	*50954A	" .. "	Later	*53288A	Cut to 39 $\frac{1}{2}$ " ..	1949-53	736307
" .. Later	1951-52	*51335A	Panel light bulb holder ..	1949-53	39015A	Outer casing ..	—	
" .. Later	1951-52	*51336A	Starting motor ..	1949	*25015A/D	Motor to wheelbox ..	1949-53	74048Z
LAMPS	—		" .. "	Later	25021A/F	Wheelbox to wheelbox ..	1949-53	73997Z
Boot ..	1949-54	56035E	Suppressor (distributor) ..	1949-53	78105A	End tube ..	1949-53	74003I
Fog ..	1949-54	*55029E	" (plug) ..	1951-53	78113A	Arm, left hand ..	1949-53	*737526
Head, Home	—		SWITCHES	—		" ..	1949-53	*737525
R.H.D., dip left (L.H.)	1949	*50734D	Boots ..	1951-54	*31180A	Blade ..	1949-53	727759
" .. non-dip (R.H.)	1949	*50735D	Choke ..	1949-54	31113A			
" .. dip left (L.H.)	1950-51	*50793B	Choke warning light ..	1949-54	31113A			
" .. non-dip (R.H.)	1950-51	*50362F	Knob ..	—	315123			
" .. dip left (L.H.)	Later	*50445K						
" .. non-dip (R.H.)	Later	*50446K						
dip left (L.H. and R.H.) .. Later	1951-52	*50954A						
dip left ..	1951	*51335A						
dip left ..	1951	*51336A						
Head, Export	—							
R.H.D., dip left ..	1949	*50734D						
" .. Later	1950-51	*50793B						
" .. Later	1951	*50445K						
" .. Later	1951-52	*50954A						
" .. Later	1951-52	*51335A						
" .. Later	1951-52	*51336A						

WOLSELEY 'Six Eighty' 1949-54

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter ..	1949-54	36068E	LAMPS, Head, Export	—		SWITCHES—continued	—	
Battery ..	1949-54	GT9A	—continued			Dipper ..	1949-54	31284A
Coil, ignition ..	1949-53	*45039A	L.H.D., dip right ..	1949	*A50734D	Foglamp ..	1949-54	31114A
" ..	1954	*45012D	" .. "	1950-51	*A50793B	Knob ..	—	*315220
Control box ..	1949-52	*37076E	" .. "	Later	*A50445K	Foglamp (New Zealand)	1949-53	*31231A
Distributor ..	1949-54	40157B/D	" .. "	1951	*50804D	Heater or fan ..	1949-51	*78238A
Fuse box ..	1949-52	*37107A	" .. "	1953	*51338A	Knob ..	—	768539
" .. Later	1952-54	033239	Head, Export Europe	—	*51337A	Heater or fan ..	1952-54	31113A
Generator ..	1949-50	22434D	(not France) ..	1949	*B50734D	Knob ..	—	*316488
" .. Later	1950-52	*22435A/B	ditto ..	1950-51	B50793B	Ignition ..	1949-54	31187D
Horn ..	1952-54	*22456A/B	ditto ..	Later	*B50445K	Lighting ..	1949-54	31114A
Low note ..	1949-54	*69011F	ditto ..	1951	*50963A	Knob ..	—	315224
High note ..	1949-54	*69012F	ditto ..	1951-52	*51340A	Panel ..	1949-54	78279A
Horn relay ..	1949-54	*33116B	ditto ..	1953	*51342A	Knob ..	—	768540
Junction box ..	1949-54	78266A	ditto ..	Later	*51341A	Windshield wiper ..	1949-54	31217A
LAMPS	—		dito ..	1953-54	*51338A	Knob ..	—	*315076
Boot ..	1949-54	56035E	Head, Export France ..	1949	*50803A	Trafficators ..	1949	*54013B
Fog ..	1949-54	*55029E	" .. "	1950-51	*50804D	" ..	1950	*54036A
Head, Home	—		" .. "	Later	*51337A	Radiator badge ..	1951-52	*54041A
R.H.D., dip left (L.H.)	1949	*50734D	" .. "	1953	*5130D	Side (U.S.A.) ..	1953	40440D
" .. non-dip (R.H.)	1949	*50735D	Number plate and reverse	1949-54	*534539	Windshield wipers ..	—	
" .. dip left (L.H.)	1950-51	*50793B	Radiator badge ..	1949-54	*52142D	Motor ..	1949-50	*75084K
" .. non-dip (R.H.)	1950-51	*50362F	Side (U.S.A.) ..	1949-54	*52139B	" ..	1951	*75084L
" .. dip left (L.H.)	Later	*50445K	Stop tail ..	1949	*51315D	Wheelbox ..	1949-52	75143A
" .. non-dip (R.H.)	Later	*50446K	" .. "	1950	*53102D	" ..	1952-54	72590A/K
dip left (L.H. and R.H.) .. Later	1951-52	*50954A	" .. "	Later	*53197A	Crosshead and rack assy.	—	
dip left ..	1951	*51335A	Mirror ..	1949-54	*53288A	Cut to 39 $\frac{1}{2}$ " ..	1949-54	736307
dip left ..	1951	*51336A	Panel light bulb holder ..	1949-54	39015A	Outer casing ..	—	
Head, Export	—		Starting motor ..	1949-54	25518A/E	Motor to wheelbox ..	1949-54	74048Z
R.H.D., dip left ..	1949	*50734D	Suppressor (distributor) ..	1951-54	78105A	Wheelbox to wheelbox ..	1949-54	73997Z
" .. Later	1950-51	*50793B	" (plug) ..	1951-54	78113A	End tube ..	1949-54	74003I
" .. Later	1951	*50445K	SWITCHES	—		Arm, left hand ..	1949-54	*737526
" .. Later	1951-52	*50954A	Boots ..	1951-54	*31180A	" ..	1949-54	*737525
" .. Later	1951-52	*51335A	Choke ..	1949-54	31113A	Blade ..	1949-54	727759
" .. Later	1951-52	*51336A	Choke warning light ..	1949-54	315123			
" .. Later	1951-52	*51336A	Knob ..	—				

WOLSELEY 'Six Ninety' 1955-59

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter ..	1955-59	*36183D	Bulb holder, speedo. light ..	1955	39007A	Distributor ..	1955-57	40442A/E
Battery ..	1955-59	GT9A	Bulb ..	—	987	" ..	1958-59	40580A/B
Bulb holder, courtesy light (L.H.D.) ..	1959	39007A	Coil, ignition ..	1955-59	*45054B/K	" .. (Export, special orders)	40470A
Bulb ..	—	987	Control box ..	1955	*37138D			
			" .. "	Later	37183A/H			

* See Supersession Chart

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

WOLSELEY

WOLSELEY 'Six Ninety' 1955-59—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Flasher unit (L.H.D. and optional R.H.D.) ..	1955-56	*35003A	LAMPS—continued	1957	*53591A	Warning lights	1956-59	39007A
ditto ..	1957-59	35010A	Stop tail and flasher ..	1958-59	53669A	Bulb holder, flasher and/or main beam ..	1956-59	987
Fuse box ..	1955-59	033239	ditto (U.S.A.) ..	1957	*53593A	Bulb ..	—	
Generator ..	1955-56	*22483A	ditto ..	1958-59	53671A			
Horn ..	1957-59	*22483D	Tail (Home) ..	1955-56	53397D/E			
" Low note ..	1955-56	*69011J	Mirror ..	1955	062602	Windshield wipers	1955	*75200B
" High note ..	1957-59	69046A/F	Reflex reflector ..	1956-59	062615	Motor ..	1956-59	75296A/D
" Grommet ..	1955-56	*69012J	Starting motor ..	1955-59	57086A	" .. Later	1959	75296E
Horn relay ..	1955-59	69047A/F	Suppressor (when fitted)	1955-59	25521D	Wheelbox ..	1955-59	*72670A
LAMPS		690936			78106A	Crosshead and rack assy.	1955	*743220
Flasher, rear (L.H.D. and optional R.H.D.) ..	1955-56	53359D/E				Cut to 35° ..	1956-59	743221
Fog ..	1955	*55159A	SWITCHES			Outer casing	1955-59	743362
Head, Home R.H.D., dip left ..	1955-56	55128B	Dipper ..	1955-56	*31493D	Motor to wheelbox ..	1955-59	743030
Head, Export R.H.D., dip left ..	1955-56	51336A & B/J	" (U.S.A.) ..	1957-59	31646A/D	Wheelbox to wheelbox ..	1955-59	740746
Head, Export L.H.D., dip right ..	1957-59	51736B/D	Door light ..	1955-59	31277D	End tube ..	1955-59	740715
Head, Export Europe (not France) ..	1955-56	51339B/H	Foglamp ..	1955-59	*31222D	Ferrule, casing retaining	1955-59	740811
ditto ..	1957-59	51738B/D	Knob ..	—	*31251A	Grommet, wheelbox ..	1958-59	741837
ditto .. Later	1959	58270A	Foglamp ..	1957-59	316147	Arm, left hand drive ..	1955	741837
Head, Export France ..	1955-56	51341A & B/E	Knob ..	—	31183E/F	" " "	1958-59	741837
" .. Later	1957-59	51739B	Ignition ..	1955-57	31187D	" right hand drive ..	1955	741836
Head, Export U.S.A. ..	1955-56	51343A & B/E	Lighting ..	1955-56	31497B	" " "	1956-57	*743521
Head, Export N. America, except U.S.A. ..	1957-59	51987A/B	Knob ..	—	316146	Lighting ..	1958-59	741836
Number plate and reverse	1955-59	*53414A	Knob ..	—	31183E/F	Blade	1955-56	*738735
Radiator badge ..	1955-59	534539	Panel ..	1955-56	*31251A	Circuit breaker ..	1957-59	737897
Side (R.H.D.) ..	1955-59	*52269A/B	Knob ..	—	317524		1956-59	78316A
Side and flasher (L.H.D. and optional R.H.D.) ..	1955-59	52236A	Panel ..	1957-59	*31554A	Borg Warner overdrive equipment (optional)	1957-59	33177A
Stop (Home) ..	1955-56	53315A	Knob ..	—	313632	Relay ..	1957-59	33177A
Stop tail ..	1955-56	53178A	Reverse lamp ..	1955-59	*31077E	Switches	1957-59	76112A/D
" .. (when trafficators fitted) ..	1957	*53592A	Solenoid, starting motor ..	1955-59	*76411E	Centrifugal ..	1957-59	31632A
" .. ditto ..	1958-59	53670A	Solenoid operating ..	1955-56	31253A	Kick-down ..	1957-59	
			Knob ..	—	317373	Borg Warner automatic transmission (optional)	1957-59	
			Solenoid operating ..	1957-59	*31446A/D	Gear indicator quadrant ..	1957-59	56067A
			Knob ..	—	313634	L.H.D. ..	1957-59	56066A
			Stop lamp ..	1955-59	31082D/H	R.H.D. ..	1957-59	
			Windshield wiper ..	1955	31434B	Switch ..	1957-59	
			" ..	1956	*31515A	Centrifugal ..	1957-59	
			Knob	1957-59	*31554A	Kick-down ..	1957-59	
			Knob	1955-56	317526			
			Knob	1957-59	313633			
			Trafficators (R.H.D.) ..	1955-59	54044D/E			

WOLSELEY 'Six Ninety-Nine' 1959-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter .. (Police Cars) ..	1959-60	36253A/B	LAMPS—continued	1959-60	534539	Warning lights	1959-60	38204A
Battery ..	1959-60	36270A	Radiator badge ..	1959-60	53789A	Brake booster ..	1959-60	863511
" (cold climates) ..	1959-60	BT9A	Reverse ..	1959-60	52423A/D	Bulb holder (ignition, main beam and vacuum switch) ..	1959-60	987
Bulb holder, panel light (2 off) ..	1959-60	BT11A	ditto (N. America) ..	1959-60	52430A/E	Bulb ..	—	
Bulb (2 off) ..	1959-60	554734	Stop tail and flasher ..	1959-60	53776A/B			
Coil, ignition ..	1959-60	987	ditto (N. America) ..	1959-60	53777A/B			
Control box ..	1959	—	Reflex reflector (Switzerland) ..	1960	57136A	Windshield wipers	1959-60	75366A
Distributor .. Later	1959-60	40661A/D	Relay, driving lamp ..	1960	33223A	Motor, left hand drive ..	1959-60	75365A
Flasher unit ..	1959-60	45102A/E	Relay, horn ..	1959-60	33214A	" right hand drive ..	1959-60	72724A
Fuse box ..	1959-60	37290A/B	Sleeve, Lucas connector ..	1959-60	54190042	Wheelbox ..	1959-60	
Generator ..	1959-60	37290D/E	14 amp ..	1959-60	31840B/D	Crosshead and rack assy.	1959-60	
Horn ..	1959-60	22530A	35 amp ..	1959-60	31838B	Left hand drive ..	1959-60	744256
Low note ..	1959-60	69046F	14 amp. twin ..	1959-60	31838BB	Right hand drive ..	1959-60	744254
High note ..	1959-60	69047F	Starting motor ..	1959-60	25521D	Outer casing	1959-60	
LAMPS			SWITCHES					
Driving ..	1959-60	55215A/D	Brake booster warning light ..	1959-60	31921A	Motor to wheelbox ..	1959-60	54710838
Gear Indicator (automatic transmission)			Dipper ..	1959-60	31800A	Left hand drive ..	1959-60	54710837
Left hand drive ..	1959-60	38205B	Driving lamp ..	1959-60	31840B/D	Right hand drive ..	1959-60	54710839
Right hand drive ..	1959-60	38202B/D	Heater ..	1959-60	31838B	Wheelbox to wheelbox ..	1959-60	
Head, Home R.H.D., dip left ..	1959-60	58443A/D	Ignition and starting ..	1959	31781D	End tube ..	1959-60	740746
Head, Export R.H.D., dip left ..	1959-60	58443A/D	Later	1959-60	31973A/B	Ferrule, casing retaining	1959-60	740811
Head, Export L.H.D., dip right ..	1959-60	58444B/D	Lighting ..	1959-60	31841B/D	Grommet, wheelbox ..	1959-60	7410870
Head, Export Europe (except France & Sweden) ..	1959-60	58445A/D	Panel ..	1959-60	31841B/D	Arm, left hand drive ..	1959	54711544
Head, Export France ..	1959-60	58447A/D	Reverse lamp ..	1959-60	31849A	" right hand drive ..	1960	54710869
Head, Export Sweden ..	1959-60	58446A/D	Solenoid, starting motor ..	1959-60	*76465A	Blade	1959-60	54711283
Head, Export U.S.A. ..	1959-60	*58527A	ditto (automatic transmission) ..	1959-60	76464A	Borg Warner overdrive equipment	1959-60	33177A
ditto (indirect) ..	1959	58449A	Starter circuit safety (automatic transmission) ..	1959-60	*76466A	Relay ..	1959-60	33217A
Number plate illumination ..	1959-60	53518A	Stop lamp ..	1959-60	31882A	Switches	1959-60	76112D
ditto .. Later	1960	53814A	Windshield wiper ..	1959-60	31918A	Centrifugal ..	1960	76122A
			ditto (special orders) ..	1959-60	31975A	Kick-down ..	1959-60	31632B
			Knob	—	312644	Solenoid ..	1959-60	34261A
						"	1960	76508A
								76529A

WOLSELEY 'Fifteen Hundred' 1958-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery .. (cold climates) ..	1958-60	BT7A	Control box	1958-59	37182H	Flasher unit	1958-60	35010A
" ..	1959-60	BT9A	"	1960	37183K	Fuse box	1958-60	033239
Bulb holder, panel light ..	1959-60	554734	Later	1960	37183L	Generator	1958-59	22258F
Bulb	—	987	Distributor	1958-60	40499B/D & F	"	1960	22700D
Coil, ignition	1958-60	*45053/M	"	1960	40499E & H	"	1960	22704A

* See Supersession Chart

L.H.D. .. Left hand drive R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

WOLSELEY

WOLSELEY 'Fifteen Hundred' 1958-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Horn			LAMPS—continued			SWITCHES—continued		
Low note	1958-60	69046F	Radiator badge ..	1958-60	534539	Solenoid operating ..	1958-60	*31446D
High note	1958-60	69047F	Side and flasher ..	1958-60	52342E	Knob ..	—	313634
LAMPS			Stop tail, flasher and reflex	1958-60	53586B	Stop lamp ..	1958-60	31082E/J
Head, Home			ditto (U.S.A. and Canada)	1958-60	53587B	Windshield wiper ..	1958-60	*31554A
R.H.D., dip left	1958-60	*51780A/E	Starting motor ..	1958-59	25022M	Knob ..	—	313633
Head, Export			" "	1960	25022N/Q	Windshield wipers		
R.H.D., dip left	1958-60	*51780A/E	SWITCHES			Motor ..	1958-59	75297B/D
L.H.D., dip right	1958-60	*51781A/E	Dipper ..	1958-60	31284A/D	" .. Later	1959-60	75297E
Head, Export Europe (not France)	1958-59	*51782A/D	Flasher ..	1958-60	31760A	Wheelbox ..	1958-60	72673A/B
(except France & Sweden)	1960	58286A/B	Foglamp (when fitted) ..	1958-59	31183F	Crosshead and rack assy.		
Head, Export France	1958-59	*51783A/B	Knob ..	—	313631	Cut to 35° ..	1958-60	743221
	1960	58287A/B	Ignition ..	—	31497B	Outer casing ..		
Head, Export Sweden	1960	58459A/B	Lighting ..	1958-60	31183F/H	Motor to wheelbox ..	1958-60	744463
Head, Export U.S.A.			Knob ..	—	313630	Wheelbox to wheelbox ..	1958-60	744462
ditto (via Great Britain)	1958-59	58078A/D	Panel ..	1958-60	*31554A	End tube ..	1958-60	740746
ditto (via Canada)	1958-59	*58070A/D	Knob ..	—	313632	Ferrule, casing retaining ..	1958-60	740715
ditto (via Europe)	1958-59	58121A/D	Solenoid, starting motor	1958-60	*76411E	Grommet, wheelbox ..	1958-60	740811
ditto	1960	*58474A/B				Arm, left hand drive ..	1958	*741835
Number plate illumination	1958-60	53093H/J				ditto ..	1958-60	745072
						Arm, right hand drive ..	1958	*741834
						ditto ..	1958-60	745071
						Blade ..	1958-60	737897

WOLSELEY 'Fifteen Fifty' 1957-59

Battery	1957-59	GT9A	LAMPS—continued			SWITCHES—continued		
Bulb holder, panel light	1957-59	39015A	Head, Export Europe (not France) ..	1957-59	51346B/E	Reverse lamp ..	1957-59	*31077E
Bulb	—	987	ditto .. Later	1959	58272A/B	Solenoid, starting motor ..	1957-59	*76411E
Coil, ignition	1957-59	*45053H/L	Head, Export France ..	1957-59	51411B	Boot, rubber ..	—	860556
Control box	1957-59	37182H	Head, Export U.S.A. ..	1957-59	51467B	Solenoid operating ..	1957-59	31115E
Distributor			Head, Export N. America (except U.S.A.) ..	1957-59	51533D/E	Knob ..	—	317338
High compression ..	1957-58	40570A	Number plate illumination and reverse ..	1957-59	53275A	Stop lamp ..	1957-59	31082E/H
" ..	1959	40570B/D & F	Radiator badge ..	1957-59	534539	Windshield wiper ..	1957-59	31113D
Low compression ..	1957-58	40499A	Side ..	1957-59	52139E	Knob ..	—	317526
Flasher unit (L.H.D. and optional R.H.D.) ..	Later	35010A	Side and flasher (L.H.D. and optional R.H.D.) ..	1957-59	52240B	Ventilator knob ..	1957-59	317529
Flasher relay (L.H.D. and optional R.H.D.) ..	1957-59	33117D	Stop tail ..	1957-59	53178F	Trafficators ..	1957-59	54044E
Fuse box ..	1957-59	033239	Reflex reflector ..	1957-59	57086A	Warning lights ..		
Generator ..	1957-59	22258E/H	Starting motor ..	1957-58	25022L	Flasher and main beam bulb holders ..	1959	39015A
Horn			" .. Later	1958-59	25022M	Ignition ..	1957-59	38044A
Low note ..	1957-59	69046E/F	Suppressor (when fitted) ..	1957-59	78106A	Bulb ..	—	987
High note ..	1957-59	69047E/F	SWITCHES			Windshield wipers ..		
Grommet ..	1957-59	690936	Dipper ..	1957-59	31284A/D	Motor ..	1957-59	75296D/A
LAMPS			Foglamp ..	1957-59	31114E	Wheelbox ..	1957-59	75296E
Fog ..	1957	55055D	Knob ..	—	317663	Crosshead and rack assy. Cut to 32° ..	1957-59	72645D
" (France) ..	1957	55089B	Ignition ..	1957	31187D	Outer casing ..		
" ..	1958-59	55128B	" ..	1958-59	*31484B/D	Motor to wheelbox ..	1957-59	740916
Head, Home ..			Lighting ..	1957-59	31114E	Wheelbox to wheelbox ..	1957-59	740917
R.H.D., dip left ..	1957-59	51344B	Knob ..	—	317662	End tube ..	1957-59	740746
Head, Export ..			Panel light ..	1957-59	31113D	Ferrule, casing retaining ..	1957-59	740715
R.H.D., dip left ..	1957-59	51344B/E	Knob ..	—	317524	Grommet, wheelbox ..	1957-59	740811
L.H.D., dip right ..	1957-59	*51345E	Suppressor (when fitted) ..	1957-59		Arm, left hand drive ..	1957-59	741839
			SWITCHES			ditto ..	1957-59	741838
			Dipper ..	1957-59	31800A	Blade ..	1957-59	737897
			Flasher ..	1957-59	31885A	Windshield wipers (from Chassis 13781 onwards)		
			Heater ..	1957-59	31838A/B	Motor, left hand drive ..	1959-60	554734
			Ignition and starting ..	1959	31781B/D	right hand drive ..	1959-60	987
			" ..	1960	31793B	Wheelbox ..		
			Lighting ..	1959-60	31841A/D	Driver side ..	1959-60	72713A/B
			Panel ..	1959-60	31838A/B	Passenger side ..	1959-60	72707A
			Reverse lamp ..	1959-60	31849A	Crosshead and rack assy. Outer casing ..	1959-60	744254
			Solenoid, starting motor ..	1959-60	*76465A	Motor to wheelbox ..	1959-60	54710207
			ditto ..	1960	76464A	Wheelbox to wheelbox ..	1959-60	54710208
			ditto (automatic transmission) ..	1959	*76466A	End tube ..	1959-60	740746
			Stop lamp ..	1959-60	31882A	Ferrule, casing retaining ..	1960	740715
			Windshield wiper ..	1959-60	31839A/D	Grommet ..	1959-60	740811
			Warning lights ..	1959-60	863511	Arm, left hand drive ..	1959	744134
			Ignition, bulb holder ..	1959-60		ditto ..	1959	54711539

WOLSELEY 'Fifteen Sixty' 1959-60

Battery	1959	BT7A	LAMPS—continued			Warning lights—continued		
Bulb holder, panel light	1960	BT9A	Radiator badge ..	1959-60	534539	Main beam, bulb holder ..	1959-60	554734
Bulb	—	987	Side and flasher ..	1959-60	52432A/E	Bulb ..	—	987
Coil, ignition	1959	*45103A/D	Left hand ..	1959-60	52433A/E	Windshield wipers ..		
Control box	1959	*45113D	Right hand ..	1959-60	52434A/E	Motor, left hand drive ..	1959-60	75358A
Distributor	1959	37283A	Left hand (N. America) ..	1959-60	52435A/E	right hand drive ..	1959-60	75357A
High compression ..	1959-60	40643A/D	Stop tail, flasher and reverse ..	1959-60	53770A/B	Wheelbox ..		
" ..	1960	40643H	Left hand ..	1959-60	53790A/B	Driver side ..	1959-60	72713A/B
Low compression ..	1959-60	40624A/D	Right hand ..	1959-60	53771A/B	Passenger side ..	1959-60	72707A
" ..	1960	40624H	Left hand (N. America) ..	1959-60	53791A/B	Crosshead and rack assy. Outer casing ..	1959-60	744254
Flasher unit ..	1959-60	35020A	Right hand (N. America) ..	1959-60	33188A	Motor to wheelbox ..	1959-60	54710207
Fuse box ..	1959-60	033285	Relay, horn ..	1959-60		Wheelbox to wheelbox ..	1959-60	54710208
Generator ..	1959	*22297A	Sleeve, Lucas connector ..	1959-60		End tube ..	1959-60	740746
" .. (temporary alternative)	1960	22700D	14 amp. ..	1959-60	54190042	Ferrule, casing retaining ..	1959-60	740715
Horn		*22704A	35 amp. ..	1959-60	54190043	Grommet ..	1959-60	740811
Low note ..	1959-60	69046F	14 amp. twin ..	1959-60	54190119	Arm, left hand drive ..	1959	744134
High note ..	1959-60	69047F	Starting motor ..	1959	25022M	ditto ..	1959	54711539
LAMPS			" ..	1960	25022N/Q	Blade ..	1959	54711283
Head, Home ..			Suppressor (when fitted) ..	1959-60	78106A	Windshield wipers (from Chassis 13781 onwards)		
R.H.D., dip left ..	1959-60	58251A/F	SWITCHES			Motor, left hand drive ..	1960	75357A
Head, Export ..			Dipper ..	1959-60	31800A	right hand drive ..	1960	75358A
R.H.D., dip left ..	1959-60	58251A/F	Flasher ..	1959-60	31885A	Wheelbox ..		
L.H.D., dip right ..	1959-60	58252A/F	Heater ..	1959-60	31838A/B	Driver side ..	1960	72707A
Head, Export Europe (except France & Sweden) ..	1959-60	58253A/E	Ignition and starting ..	1959	31781B/D	Passenger side ..	1960	72713B
Head, Export France ..	1959-60	58254A/E	" ..	1960	31793B	Crosshead and rack assy. Outer casing ..	1960	744254
Head, Export Sweden ..	1959	58315A/D	Lighting ..	1959-60	31841A/D	Motor to wheelbox ..	1960	54710207
" ..	1960	*58254A/B	Panel ..	1959-60	31838A/B	Wheelbox to wheelbox ..	1960	54710208
" ..	1960	*58446A	Reverse lamp ..	1959-60	31849A	End tube ..	1960	740746
Head, Export U.S.A. ..	1959	58255A/B	Solenoid, starting motor ..	1959-60	*76465A	Ferrule, casing retaining ..	1960	740715
" ..	1960	*58488A/B	ditto ..	1960	76464A	Grommet, wheelbox ..	1960	740811
Number plate illumination ..	1959-60	53763A	ditto (automatic transmission) ..	1959	*76466A	Arm, left hand drive ..	1960	54711538
ditto ..	Later	*53814A	Stop lamp ..	1959-60	31882A	ditto ..	1960	54711539
			Windshield wiper ..	1959-60	31839A/D	Blade ..	1960	54711283
			Warning lights ..	1959-60				
			Ignition, bulb holder ..	1959-60	863511			

* See Supersession Chart

L.H.D. .. Left hand drive R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)