



-A2912

SERVICE PARTS LIST

THE M.G. Series MGA TWIN CAM

Item No.	DESCRIPTION	Commencing (C) 501		Qty. per Vehicle		Unit of Issue	Type of Vehicle	MODIFICATIONS			REMARKS
		Part Number	Illus. No.	RHD	LHD			New Part Number	Change Point	Amdt. No.	
	STEERING										
1	Rack assembly	AHH6038		1							
2	Rack assembly	AHH6039			1						
3	Housing assembly	AHH6042	J1	1							
4	Housing assembly	AHH6043			1						
5	Seal for pinion	126922	J2	1	1						
6	Rack—steering	AHH6020	J3	1	1						
7	Pad—rack damper	ACA5244	J4	1	1	12					
8	Spring—rack damper	ACA5248	J5	1	1	6					
9	Shim	ACA5249	J6	A/R	A/R						
10	Housing—rack damper	ACA5245	J7	1	1						
11	Pad—rack damper secondary	ACA5284	J8	1	1	6					
12	Spring—rack damper secondary	ACA5286	J9	1	1						
13	Washer—rack damper secondary	ACA5283	J10	1	1						
14	Housing—rack damper secondary	ACA5285	J11	1	1						
15	Rod—tie	AHH6019	J12	2	2						
16	Housing—male ball	ACA6031	J13	2	2						
17	Seat—ball	ACA5246	J14	2	2						
18	Housing—female ball	ACA5304	J15	2	2						
19	Shim—ball housing (.003")	ACA5301	J16	A/R	A/R						
20	Shim—ball housing (.005")	ACA5302		A/R	A/R						
21	Locknut for tie-rod	AJB6025	J17	2	2						
22	Washer for tie-rod (lock)	ACA5247	J18	2	2	12					
23	Pinion—steering	AHH6036	J19	1							
24	Pinion—steering	AHH6037			1						
25	Washer for upper pinion (thrust)	130795	J20	1	1						
26	Washer for lower pinion (thrust)	126926	J21	1	1						
27	Bearing—pinion tail	AHH6023	J22	1	1						
28	Shim—tail bearing (.005")	126920	J23	A/R	A/R						
29	Shim—tail bearing (.007")	126921		A/R	A/R						
30	Screw—bearing to steering box	HZS0506	J24	2	2						
31	Washer for screw (spring)	LWZ205	J25	2	2	24					
32	Seal—rack to tie-rod	130801	J26	2	2						
33	Clip for seal (large)	ACA6030	J27	2	2						
34	Clip for seal (small)	ACA5118	J28	2	2						
35	Socket assembly—ball	ACH6168	J29	2	2						
36	Boot for ball socket	7H3571	J30	2	2						
37	Clip for boot	7H3565	J31	2	2						Correction. Was 7H3564
38	Ring—boot clip	ACA6004	J32	2	2						
39	Washer for ball socket	PWZ107	J33	2	2						
40	Nut for ball socket	FNZ407	J34	2	2						
41	Greaser—pinion	UHN305	J35	1	1						
42	Greaser—rack	UHN205	J36	1	1						

SERVICE PARTS LIST

THE M.G. Series MGA TWIN CAM

Item No.	DESCRIPTION	Commencing (C) 501		Qty. per Vehicle		Unit of Issue	Type of Vehicle	MODIFICATIONS			REMARKS
		Part Number	Illus. No.	RHD	LHD			New Part Number	Change Point	Amdt. No.	
	Steering—continued										
1	Greaser—ball socket	UHN405	J37	1	1						
2	Washer for ball socket (cup)	ACH6170	J38	2	2						
3	Washer for ball socket (fibre)	ACH6173	J39	2	2	12					
4	Shim—rack to bracket	AHH6007	J40	4	4						
5	Rivet for shim	6K9714	J41	4	4						
6	Bolt—rack to bracket (front)	HZS0509	J42	2	2						
7	Nut for bolt	LNZ205	J43	2	2						
8	Bolt—rack to bracket (rear)	HZS0508	J44	2	2						
9	Nut for bolt	FNZ105	J45	2	2						
10	Washer for nut (spring)	LWZ205	J46	4	4	24					
11	Joint—universal—steering-column	AHH6000	J47	1	1						
12	End yoke	17H3925	J48	2	2						
13	Journal assembly	17H3873	J49	1	1						
14	Joint for journal	17H3874	J50	4	4						
15	Retainer for joint	17H3875	J51	4	4						
16	Circlip	17H3811	J52	4	4						
17	Bolt for universal joint	17H3839	J53	2	2						
18	Nut for bolt	17H3840	J54	2	2						
19	Washer for nut (spring)	17H3841	J55	2	2						
20	Column assembly	AHH6011	J56	1	1						
21	Tube (outer)	AHH6025	J56	1	1						
22	Bush—upper end (felt)	7H6255	J57	1	1						
23	Bush—lower end (felt)	AHH6027	J58	1	1						
24	Tube assembly (inner)	AHH6028	J59	1	1						
25	Wheel—steering	AHH6003	J60	1	1						
26	Cover for steering-wheel	AHH6004	J61	1	1						
27	Clip for cover (spring)	AHH6085	J62	4	4						
28	Nut for steering-wheel	ACH6001	J63	1	1						
29	Clamp for steering-column	AHH6005	J64	2	2						
30	Distance piece for clamp	AHH6006	J65	2	2						
31	Bolt—clamp	HBZ0518	J66	2	2						
32	Nut for clamp bolt	FNZ105	J67	2	2						
33	Bracket for steering-column (lower)	AHH6008	J68	1	1						
34	Screw—bracket to frame	HZS0506	J69	2	2						
35	Washer for screw (spring)	LWZ205	J70	2	2	24					
36	Washer for screw (plain)	PWZ105	J71	2	2						
37	Washer—lower bracket to frame (plain)	PWZ205	J72	2	2						
38	Washer—lower bracket to clamp (spring)	LWZ205	J73	2	2	24					
39	Bracket for steering-column (upper)	AHH6030	J74	1	1						
40	Screw—bracket to body rail	HPZ0505	J75	2	2						
41	Washer for screw (plain)	PWZ205	J76	2	2						
42	Washer for screw (spring)	LWZ205	J77	2	2	24					

SERVICE PARTS LIST

THE M.G. Series MGA TWIN CAM

Item No.	DESCRIPTION	Commencing (C) 501		Qty. per Vehicle		Unit of Issue	Type of Vehicle	MODIFICATIONS			REMARKS
		Part Number	Illus. No.	RHD	LHD			New Part Number	Change Point	Amdt. No.	
	Steering—continued										
1	Seal for column (rubber)	AHH6009	J78	1	1						
2	Retainer for seal	AHH6010	J79	1	1						
3	Screw—retainer to dash	HZS0505	J80	1	1						
4	Screw—retainer to dash	HZS0506	J81	1	1						
5	Nut for screw	FNZ105	J82	2	2						
6	Washer for nut (spring)	LWZ205	J83	2	2	24					
7	Plate—blanking	AHH6024	J84	1	1						
8	Seal for blanking plate	AHH6009	J85	1	1						
9	Screw—blanking plate to dash	HZS0505	J86	2	2						
10	Nut for screw	FNZ105	J87	2	2						
11	Washer for nut (spring)	LWZ205	J88	2	2	24					
12	Screw—column bracket blanking holes	PMZ0508	J89	2	2						
13	Washer for screw (spring)	LWZ205	J90	2	2	24					
	ADJUSTABLE STEERING-COLUMN										
14	Column assembly—adjustable	AHH6012		1	1						
15	Tube (outer)	AHH6031	J91	1	1						
16	Bush—upper (felt)	AHH6032	J92	1	1						
17	Bush—lower (felt)	AHH6027	J93	1	1						
18	Tube—inner (top)	ACC6042	J94	1	1						
19	Key for tube	47330	J95	1	1						
20	Collar—clamping	47327	J96	1	1						
21	Bolt for clamping collar	AJC6014	J97	1	1						
22	Washer for bolt	47325	J98	1	1						
23	Nut for bolt	FNP205	J99	1	1						
24	Tube assembly—inner (bottom)	AHH6033	J100	1	1						
25	Cover—spring	130463	J101	1	1						
26	Cup—spring cover	130462	J102	1	1						

Optional extra